

LE•MEGA LIFE & ALOUD

MINI GO SPORT RADIO



Owner's Manual

Introduction Safety Instructions

PLEASE READ THIS OWNER'S MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND STORE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE.

1. If you do not follow the operating instructions provided, it may compromise the safety of your product and this may invalidate the warranty.
2. Do not expose the product to dripping or splashing . Do not place objects filled with liquids, such as vases on the product. If liquid or water spills onto the product, switch it off immediately and contact your dealer. If you are using a mains-powered adapter, do not touch the product with wet hands.
3. The internal battery in this product is not user replaceable .Do not expose the battery to excessive heat or naked flames. Ensure adequate ventilation and airflow around the product, particularly when charging. Dispose of the product in accordance with local environmental rules.
4. Using the product in rooms or climates with high humidity and temperatures may cause condensation to form inside the product, which can damage the product. Use the product immoderate climates only.
5. Do not use your product in extremely hot or cold temperature. Keep the device away from heat sources, such as radiators or gas/electric fires. Do not expose your product to naked flames, such as lighted candles.
6. To charge your product, only connect it to a supply source that meets the safety Isolation requirements of EN 60065 or EN 60950-1 for an accessible safety extra low voltage circuit. For this connection, use either the supplied USB cable or a suitably CE approved power adapter with the correct USB output rating.
7. Power the product using an external 5 V DC 2A power supply. The maximum output current is 2 A, protected by an internal circuit.
8. Before you charge your product, ensure that the available supply voltage corresponds with the required operation al voltage of the product.
9. Disconnect your product from the charging power supply if you will not use your product for a long period of time (for example, if you are going on holiday).
10. Always unplug your product from the charging power supply before cleaning. When cleaning the product, do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the product's surface.
11. To reduce the risk of electric shock, do not remove any screws. The product does not contain any user-service able parts inside. Product repairs should only be carried out by authorized personnel.


EU Compliance Information

Eligible to bear the CE mark; Conforms to European Union Low Voltage Directive 2014/35/EU; European Union EMC Directive 2014/30/EU; European Union Restriction of Hazardous Substances Recast (RoHS) Directive 2011/65/EU; European Union WEEE Directive 2012/19/EU;European Union Eco-Design Directive 2009/125/EC; European Union Registration,Evaluation, Authorization and Restriction of Chemicals (REACH) Directive 2006/121/EC;European Union Radio Equipment Directive (RED), 2014/53/EU.



To prevent possible hearing damage, do not listen at high volume levels for long periods of time. Consistent exposure to high volumes when using headphones can damage your hearing. Always check the volume level before you insert headphones into your ears. Use of headphones other than those supplied by Pure may expose you to hearing damage, as the high level volume warning on the device may be inaccurate. Use of headphones while operating a vehicle is not recommended and is illegal in some areas. If you find that listening to is distracting while operating any type of vehicle or performing an activity that requires your full attention, stop listening.

Controls, connectors product overview

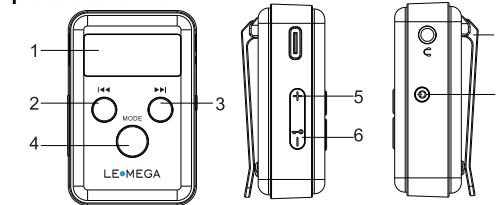

1. LCD Display	2. Previous /TUNE- Button
3. Next/TUNE+ Button	4. MODE/SELECT Button
5. Volume + Button	6. Volume - /Lock Button
7. Power Button	8. Clip

Next/ Previous button

Choosing radio stations or options

1. If the MINI GO SPORT RADIO is in DAB mode, press Next/ Previous button to cycle through the radio station list when you are listening. Or press Next/ Previous button to cycle through the menu list for options.
2. If the MINI GO SPORT RADIO is in FM mode, press next/ previous button to manual adjust the frequency by 0.05MHz. Or you can Press and hold the Previous and next button to auto-scan stations. Or press Previous/Next button to cycle through the menu list for options.

VOLUME +/- button

Adjusting volume

Press the Volume button to increase or decrease the volume.

MODE/SELECT button

Short press the MODE button to choose DAB mode or FM mode. Long press the MODE button to enter the menu list, press the Next/Previous button to select option through the list of the menu, then press the MODE/SELECT button to confirm your choosen.

POWER button


Long press the POWER button to turn on the MINI GO SPORT RADIO, short press to Standby mode, Long press the POWER button again to turn off the MINI GO SPORT RADIO.

Wake up the screen


When the MINI GO is working, the display will be darkened to enter into the power-saving mode. Press any button except POWER button to wake up the screen, press again to adjust the function.

Clip Installation

Align the clip with the slots in the back panel of MINI GO Sport Radio, then push it in. Remove the clip in the opposite direction.

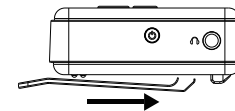


Connections

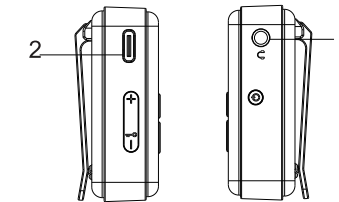

1. 3.5 mm headphone socket	2. Type C USB socket
----------------------------	----------------------

Charging your MINI GO

1. Connect the Type C USB cable to the Type C-USB port .

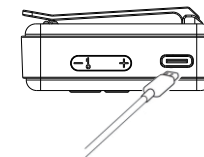


2. Connect the other end of the Type C USB cable to a power outlet, using a USB power adapter. You can also charge the battery by connecting MINI GO to a computer's USB port.

Switching on for the first time

Before you switch on the first time, charge the battery for at least 3 hours.

1. Connect the headphones into the headphone socket .
The headphones are also the aerial.

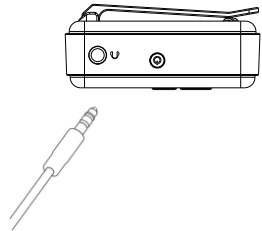

2. Long Press the Power button,MINI GO switches on and starts tuning to digital radio stations. After the auto tune is complete, you can start listening to digital radio.

Locking and unlocking MINI GO

You can lock the buttons, so you don't accidentally press a button.


1. To lock the buttons, Long press the Volume-/Lock button till the LCD display shows 'Locked'.
2. To unlock the buttons, Long press the Volume-/Lock button till the LCD display shows 'Unlocked'.



Mode button

Switching to DAB+/FM mode


1. When powered on for the first time, it will start up DAB mode.
2. If the MINI GO is in DAB mode, press the MODE button repeatedly until FM is shown on the display.
3. Once in FM mode,MINI GO will tune to the start of the available FM range (87.50MHz) or the last FM station listed to fig.1.
4. To manually change the FM frequency, make sure that you have not selected any other sub-menus.Press the Previous and next button to change the frequency by 0.05 MHZ.

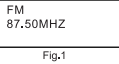




DAB mode – choosing menu options

1. If the MINI GO is in DAB mode, press and hold MODE button to enter the menu list to fig.2. Press the Next/ Previous button to select option through the list of menu. Then stop at your preferred option and Push the SELECT button to confirm. The menu options are: Store Mode, Favourite Mode, Scan, DRC, Prune, Manual tune, Exit.

Store Mode - On MINI GO radio, you can save 10 Favourite DAB radio stations. To store a radio station as a Favourite, select your radio station that you would like to save on the list. Press and hold SELECT button for seconds until the LCD display "Store Mode" to Fig.2 then press SELECT to save radio stations. Press PREVIOUS/ NEXT to select your desired station number from P1-P10 to Fig.3, push on the SELECT button to confirm your selection, the display will show"Stored" to Fig.4.

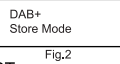


  Favourite Mode - Recall a Radio Station from the Favourite Mode. To recall a Favourite Station, enter Favourite Mode memu, then using NEXT/ PREVIOUS button to view your stored Favourite stations. When the display shows your desired station, press SELECT to confirm. Long press the SELECT to back to the Normal Mode.

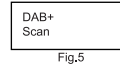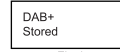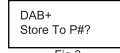


2. **Scan** – under menu list, press the Next/ Previous button to select “ scan” through the list of menu, Push SELECT button to confirm and full scan starts automatically to fig.5. Once a scan is completed the radio returns to play the previously-selected station or first station on the station list. Note: if no radio station found, it shows “No Signal”. For a better reception, do the full scan again in another place.


3. **Manual tune** – as well as the normal method of scanning, you can also manually tune to a particular channel/frequency. This can be useful for adjusting your antenna to achieve the best possible reception and scanning a particular channel to update the station list. Under menu list, press the Next/ Previous button to select “Manual tune” through the list of menu, Push Select button to confirm. Then press the Next/ Previous button to select a particular channel/frequency and then Push SELECT button to confirm the setting to fig.6. The display shows a live indication of the received signal strength on the selected frequency. Adjustments to your antenna will be manifested in the received signal strength displayed.

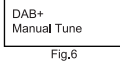

4. **DRC (Dynamic range compression)** – this function reduces the difference between the loudest and quietest audio being broadcast. Effectively, this makes quiet sounds comparatively louder and loud sounds comparatively quieter. Options: off (default)/high/low under menu list, press the Next/ Previous button to select “DRC” through the list of menu, Push SELECT button to confirm. Then press the Next/ Previous button to select a particular setting and Push SELECT button to confirm the setting to fig.7. Note: DRC only works if it is enabled by the broadcaster for a specific station.

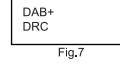

5. **Prune** – this removes all invalid stations indicated in the station list with a ‘?’ in front of the station name. Under menu list, press the Next/ Previous button to select “Prune” through the list of menu, Push SELECT button to confirm to fig.8. Then press the Next/ Previous button to select <Yes>, and Push SELECT button to confirm.

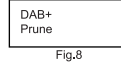

FM mode – choosing menu options


1. If the MINI GO Digital Radio is in FM mode, press and hold MODE button to enter the menu list to fig.9. Press the Next /Previous button to select option through the list of menu. Then, stop at your preferred option and Push the SELECT button to confirm. The menu options are: Store Mode Favourite Mode, Exit

2. Store Mode: Same operation as in DAB mode to save FM radio stations.
3. Favourite Mode: Same opeartion as in DAB mode to recall a FM radio stations.
4. Exit: Exit the current menu list.



System Settings

Enter to Standby mode, press and hold MODE button to enter the menu list to Fig.10. Press the Next/Previous button to select option in the menu. Press SELECT to confirm. The menu options are: Select Language, Set Time/Date, Factory Reset, SW version, Exit.

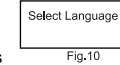

Language – the language used for display messages can be selected from below options: English | Francais | Deutsch | Norsk | Suomi | Dansk | Espano | Italiano Under the system menu, press the Next/ Previous button to select “Language” through the list of menu, Push the SELECT button to confirm to fig.10. Press the Next/Previous button to find your preferred language, press SELECT button to confirm.

Set Time/Date

Set Time: Set Hour (0-23) > Set Minutes (00-59)
Set Date: Set Date (1-31) > Set Month (1-12) > Set Year (2024-2099) > Time Saved.

Enter to the Set Time/Date menu list, The Hour number is flashing, press Next/Previous button to select your preferred option, press SELECT to confirm then turn to the Minutes setting, after the Year setting, the display will show 'Time Saved'.

Factory Reset – this function clears all user defined settings, replacing them with the original default values, so time/date, preferences/settings, DAB station list and preset stations are all lost. Under the system menu, press the Next/ Previous button to select “Factory Reset” through the list of menu, Push the SELECT button to confirm to fig.11. Then, use the Next/ Previous button to choose <Yes> and Push the SELECT button to start the factory reset.



Software version – this is used to display the current software version. Under the system menu, press the Next/ Previous button to select Software version” through the list of menu fig.12, Push the SELECT button to confirm. Then, the existing SW version will be showed.



SPECIFICATIONS

Model:	MINI GO
Type:	Portable DAB & FM Sport Radio
Headphones:	32 ohm 14mm diameter driver
Power Supply:	5V DC (2A) Type C-USB power socket
Battery:	Li-ion Battery 3.7V/600mAh
Dimension (mm):	55 (H) x37 (W) x24 (D)
Weight:	30G

Specifications are subject to change without notice.

If you have any questions or suggestions ,please contact with us freely.

HuiZhou LEMEDIA Technology Co.,Ltd

No. 2 Lv Hua Bei Road, YuanZhou Town,

BoLuo County, HuiZhou City, GD Province,

516100 CN

info@lemegaaudio.com

www.lemegaaudio.com



Scan me on your smartphone camera for more information