

 


# DJ Mixer

Lithium battery charging

Bluetooth connection  
HDL-DJ

REALIZING ROCK DREAMS

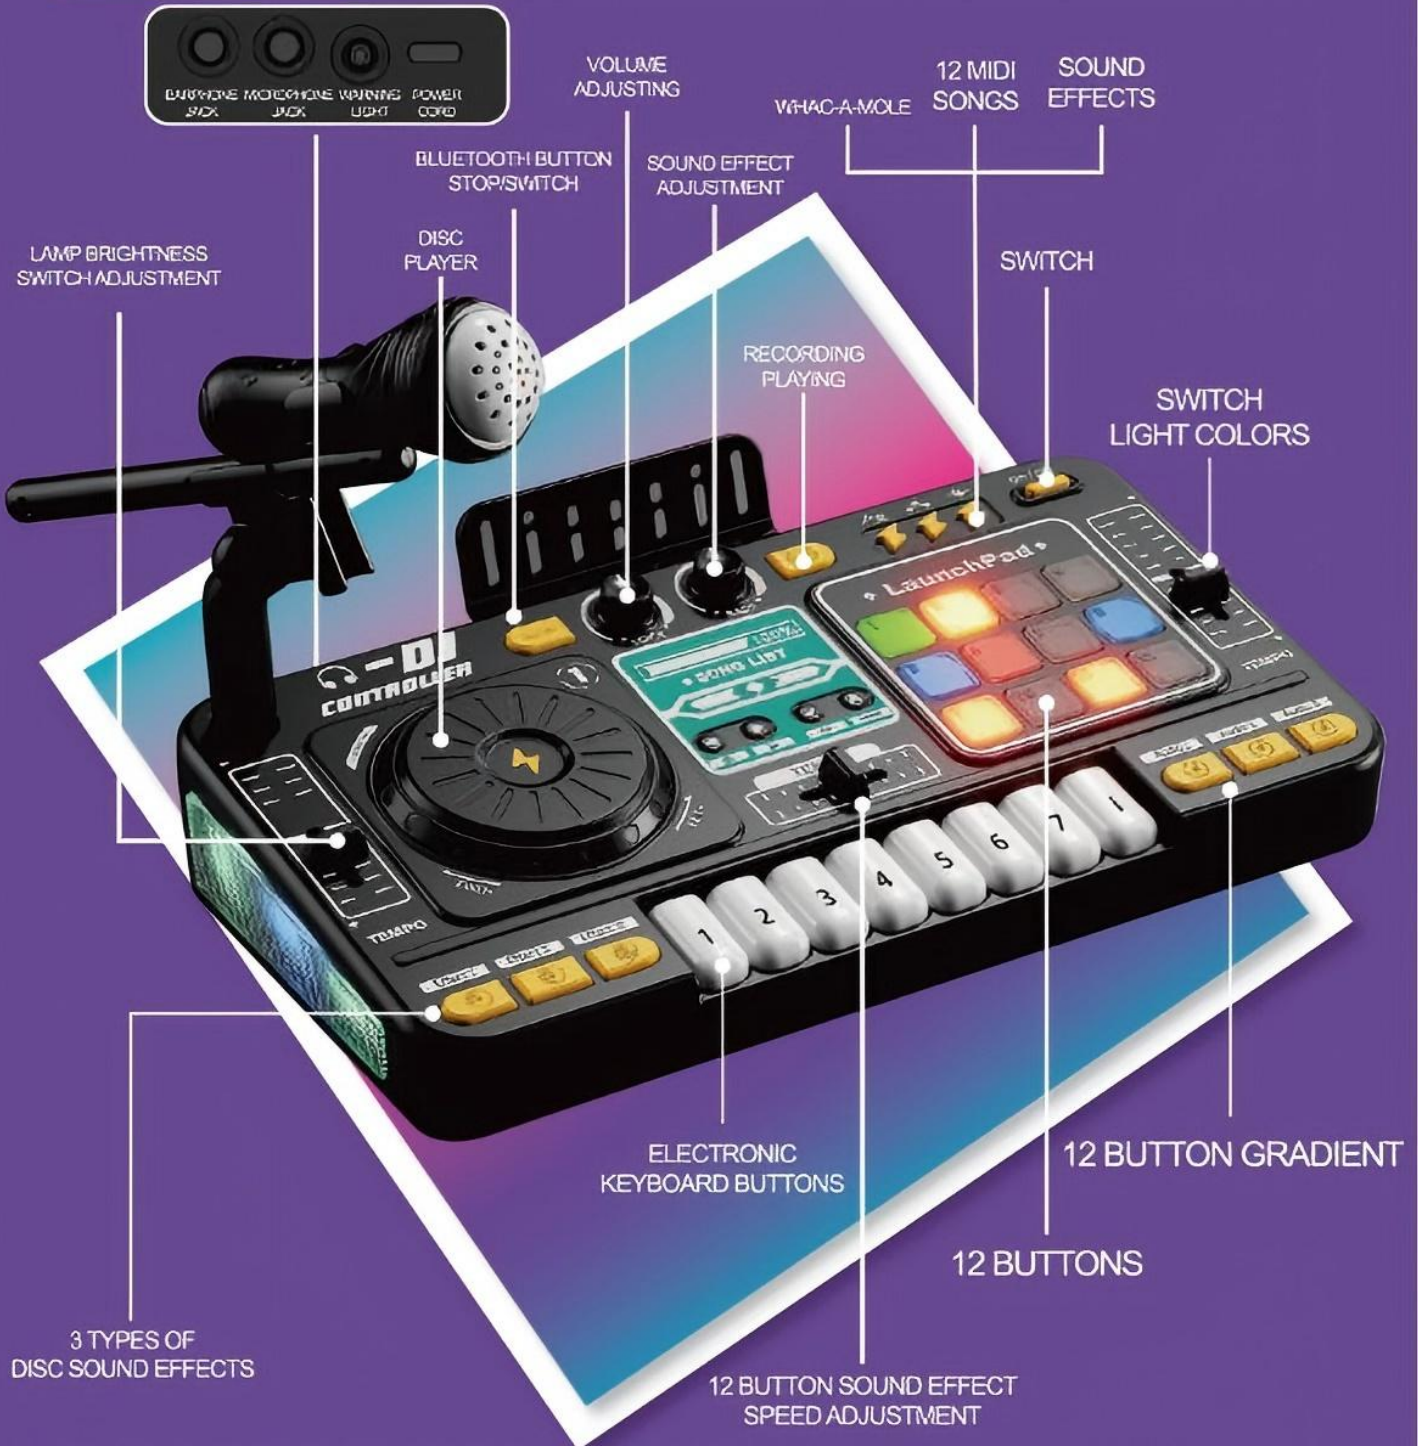

No sound playback, standby for 5 minutes to enter sleep mode  
 Long press Bluetooth for 2 seconds to enter and exit  
 The product runs out of battery and automatically exits via Bluetooth  
 Bluetooth will exit if there is no connection within 5 minutes after starting  
 The product will sound a beep when it runs out of power, and the light is not very bright


NO.8D-8A ■

NO.8D-8B ■



By using the **12 BUTTON GRADIENT** button below, you can unlock more MIDI track libraries, with a maximum of 120 MIDI tracks!

 
1. Press the **SOUND EFFECTS** button. The **12 BUTTON GRADIENT** corresponds to 12 different sound effects. If you switch to **12 MIDI SONGS**, there will be 12 MIDI tracks. By using the **12 BUTTON GRADIENT** button below, you can unlock more MIDI track libraries, with a maximum of 120 MIDI tracks!

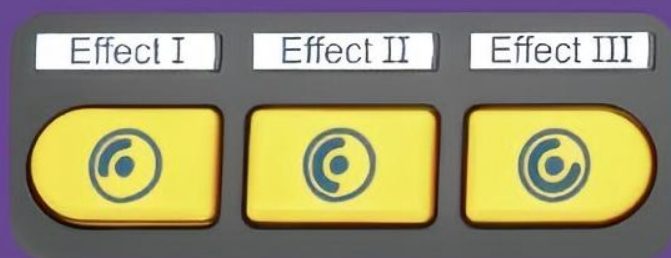

There are a total of 3 disc sound effects available for switching. Add them to your music!

2. Rotate the **DISC PLAYER** to get the disc - mixing sound effect. Use the **3 TYPES OF DISC SOUND EFFECTS** button below. There are a total of 3 disc sound effects available for switching. Add them to your music!

 3. The cool designs of the **LAMP BRIGHTNESS SWITCH ADJUSTMENT** and **SWITCH LIGHT COLORS** on both sides can change your creative atmosphere. The **ELECTRONIC KEYBOARD BUTTONS** below inject piano tones of 8 scales, which can provide more possibilities for your music!

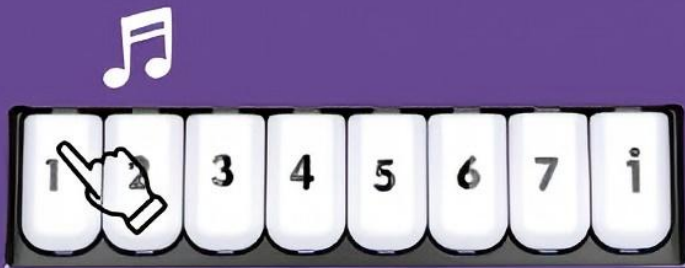

LAMP BRIGHTNESS SWITCH ADJUSTMENT

SWITCH LIGHT COLORS



4. If it's too noisy, you can rotate the **VOLUME ADJUSTING** knob to lower the volume. The adjacent **SOUND EFFECTS** knob is more like a single MIDI, enriching the sound effects. The **12 BUTTON SOUND EFFECT SPEED ADJUSTMENT** is used to adjust the speed of MIDI performance, enhancing creative details (it cannot adjust the playback speed of **SOUND EFFECTS**).



5. The DJ mixer also has a recording function. First, press the **RECORDING PLAYING** button. Then, select the button sound effects (cannot record MIDI), disc sound effects, and piano tones in your preferred order. Press the **RECORDING PLAYING** button again, and the machine will automatically play the sound sequence you selected. Go and create your own unique sound!)

6. Additionally, the DJ mixer has a game function. Press the **WHAC - A - MOLE** button, and color blocks will randomly pop up on the LaunchPad. Quickly press the lit buttons. Succeeding in this challenge can train hand - eye coordination and rapid response abilities.



8D-8A



8D-8B




7. Long - press the **BLUETOOTH BUTTON STOP SWITCH** for two seconds to trigger the Bluetooth connection function. The device will instantly turn into a karaoke station. Set up the microphone and start singing! The functions of the device will be temporarily disabled after Bluetooth connection.

## BATTERY PRECAUTIONS

 - The product uses one non replaceable 3.7V lithium battery;
  - Rechargeable batteries must be charged under adult supervision;
  - When charging a rechargeable battery, the toy switch should be turned off;
  - The power terminal must not be short circuited;
  - Cannot connect to more than the recommended number of power sources;
- During the use of USB cables, their wires, plugs, casings, and other components should be regularly checked for damage. If any damage is found, the use should be stopped until it is repaired.
- Connect the provided USB charging cable to a USB charger with an output DC voltage of 5V and a current of 1A to 2A for charging. The product can only be charged using the recommended charger, and non-standard or fast charging chargers are prohibited. The recommended charger and the provided USB charging cable are not toys.

## WARNING!

- This product must be used under direct adult supervision.
- This product contains small balls and components. Please do not swallow to avoid choking hazards. It is not suitable for children under three years old.

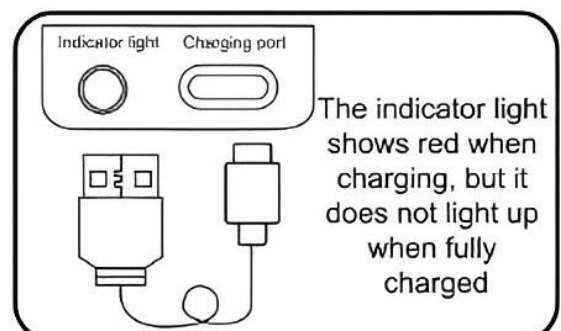

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment, This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.