 


Smartphone

S8310

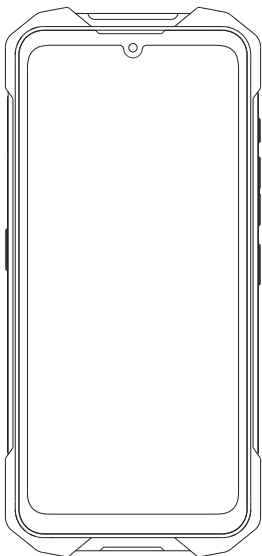

Quick Start Guide

Register your product and get support at
www.philips.com/support

Congratulations on your purchase and welcome to Philips!
To get the most of your product and enjoy all Philips has to offer, register your product at:
www.philips.com/support

Note:

- Please read the safety instructions in the "Safety & Precaution" section before use.

Tips:

- Philips continuously strives to improve its products. Due to software upgrading, some contents in this user guide may be different from your product. Philips reserves the rights to revise this user guide or withdraw it at any time without prior notice. Please take your product as standard.


Trademark Declaration

Philips	PHILIPS and PHILIPS' Shield Emblem are registered trademarks of Koninklijke Philips N.V. manufactured by TPV Audio and Visual Technology (Shenzhen) Co., Ltd. Under license from Koninklijke Philips N.V.
----------------	---

Note:

- This guide is protected under copyright law, reproduction in whole or in part without permission is prohibited.

 
Your Phone

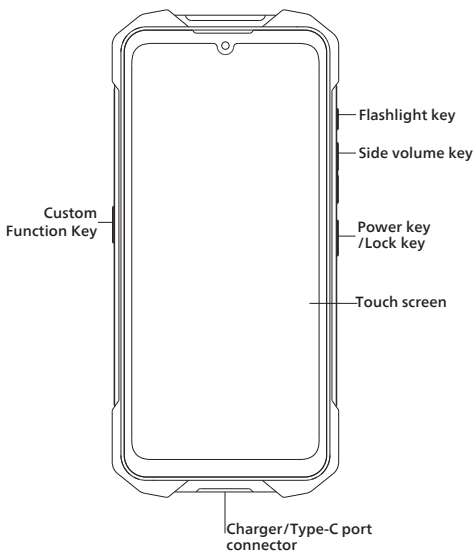


Installation and Charging

SIM card holder extraction method

 
Find the position of the SIM card holder on the phone firstly, then gently pull the SIM card holder with your hand, and it will immediately pop out.



 1. Find the position of the SIM card holder on the phone firstly (indicated by the arrow).


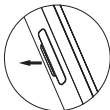


 2. Gently pull the SIM card holder with your hand (indicated by the arrow), it will pop out.

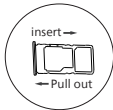


3. Insert or remove the SIM card holder as the direction indicated by the arrow.

  Figure of SIM card installed on holder

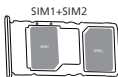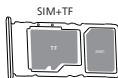

Charge the battery

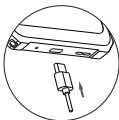 

*Tips:

- You can use the phone while it is charging.
- Keeping the charger plugged to the mobile phone when the battery is fully charged will not damage the battery.
- If you do not intend to use your phone for several days, we recommend that you remove the battery.
- If a fully charged battery left unused, it will lose its charge over time.
- If a battery is being used for the first time or the battery has not been used for a prolonged period, it may take longer time to recharge.

Using your phone

Turn your phone on and off

- 1 Press and hold power key to turn on your phone.
- 2 To turn off your phone, press and hold power key and then select **Power off**.

Keys

Learn about the main keys.

Key	Definition	Function
	Power key	Press and hold to power on/off. Press to turn on/off the screen display. Hold to access the Phone options, choose Emergency, Power off, or Restart.
	Home key	Return to the home screen. Hold to open the 'Gemini' function.
	Option key	Open the options list for recent applications.
	Back key	Return to the previous screen or exit.
	Volume key	Adjust the volume in standby mode or during a call. when answering a call, press any volume key to mute the ringtone.
	Flashlight key	Long press to turn on/off the flashlight function on any interface.
	Custom Function key	Long press to enter camera by default, or users can customize other optional functions.

Home screen

From the Home screen, you can view your device's status and access applications.

The Home screen has multiple panels. Scroll left or right to view the panels on the Home screen.

Notifications panel

When you get a new notification, you can open the Notifications panel to see what event notification or new information you have received.

- To open the Notifications panel, press and hold the status bar, then slide one finger downward. If you have several notifications, you can scroll down the screen to see them all.
- To hide the panel, drag the bottom of the panel upwards.

Access applications

- Scroll left or right to another screen, select an application.
- Press  to return to the previous screen, press  to return to the Home screen.

Manage applications

- In idle screen, tap **Settings**  > **Apps**
- Tap **Running**, you can view all the running apps, tap this app to enter it, you can tap **Stop** to choose stop running.
- Tap **Downloaded**, you can view all the downloaded apps, tap app to enter it, you can check the detailed information of this app, tap **Uninstall** to unloading it.

Make a call

1. In the application list, tap 

- 2 Dial the number directly or choose one number from the filtered list that have matching digits.
- 3 Make a voice call.
- 4 Tap  to end the call.

Send a message

- 1 In the application list, tap .
- 2 Tap New message .
- 3 Enter the number or tap to select the number from phonebook.
- 4 Select the text field and enter your message text.
- 5 Press  to add a subject for the message or attach a file (Pictures, Videos, Audio or Slideshow).
- 6 Tap  to send the message.

Note:

- Copyright protected pictures and sound cannot be sent by MMS.

Safety & Precaution

Precaution

Keep your phone away from small children

-  Keep your phone and all accessories out of the reach of small children. Small parts may cause choking or serious injury if swallowed.

Radio Waves

-  Your phone operates with the following frequency bands and maximum radio-frequency power limitation:
GSM/WCDMA/TDD-LTE/FDD-LTE
-  Check with the vehicle manufacturer that electronic equipment used in your vehicle will not be affected by radio energy.

Switch off your phone

-  Turn off the phone when in an aircraft. The use of mobile phones in an aircraft may be dangerous for the operation of the aircraft, disrupt the mobile phones network and may be illegal.
-  In hospitals, clinics, other health care centers and anywhere else where you may be in the close vicinity of medical equipment.
-  In areas with a potentially explosive atmosphere (e.g. petrol stations and also areas where the air contains dust particles, such as metal powders). In a vehicle transporting flammable products or a vehicle powered by liquefied petroleum gas (LPG). In quarries or other areas where blasting operations are in progress.

Your mobile phone and your car

-  Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands free accessories to increase your safety when possible. Ensure that your phone and car kit do not block any air bags or other security devices fitted in your car.

Handle your phone carefully and sensibly

-  For the optimal and satisfactory operation of the phone you are recommended to use the phone in the normal operating position.
 - Do not expose your phone to extreme temperatures.
 - Do not immerse the phone in any liquid; if your phone is damp, switch it off, remove the battery and let them dry for 24hrs before using them again.
 - To clean the phone, wipe it with a soft cloth.
 - In hot weather or after prolonged exposure to the sun (e.g., behind a window or a wind screen), the temperature of your phone's casing might increase. Be very careful in this case when picking up your phone and also avoid using it with an ambient temperature over 35°C or under 0°C.

Protect batteries from damage

 You should only use Manufacturer Authentic Accessories, as the use of any other accessories may damage your phone and may be dangerous, and will make all guarantees for your Philips phone null and void. The use of an unspecified type of battery may also cause an explosion. Make sure damaged parts are replaced immediately by a qualified technician and that they are replaced with genuine manufacturer replacement parts.

- Your phone is powered by a rechargeable battery.
- Use specified charger only.
- Do not incinerate.
- Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Avoid exposure to excessive cold or heat (under -20°C or over 60°C), moisture or caustic environments.

Environmental care

 Remember to observe the local regulations regarding the disposal of the packaging materials, exhausted batteries and old phone and please promote their recycling. Manufacturer has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.

 :The labeled packaging material is recyclable.

 :A financial contribution has been made to the associated national packaging recovery and recycling system.

 :The plastic material is recyclable (also identifies the type of plastic).

Hearing Protection

 When listening to music, adjust the volume to a moderate level. Continuous exposure to high volume may impair your hearing. It is recommended to keep it away from your body and head at least 15mm during operation.

WEEE Marking in the DFU: "Information to the Consumer"

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

 Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Warranty Statement

We warrant the product to be free from defects in materials and workmanship, arising under normal use from the date of original purchase when brand new.

This warranty is subject to the following terms and conditions:

1. The Warranty is given only to the original purchaser of the Product ("Customer").
2. The Warranty will be valid for twelve (12) months from the date of original purchase for mobile handset. Customer should present the proof of purchase/invoice for claiming this Warranty.
3. For the entire Warranty period, Philips authorized service centre / personnel will/personnel will, at their discretion, without any charges and subject to Clause 6 repair or replace a defective Product. Repair or replacement may involve the use of same or equivalent reconditioned unit. We will return the repaired handset or can replace with another same or equivalent handset to the Customer in full working condition. All replaced faulty parts or components will become the property of our authorized service centre.
4. For the handsets available beyond the municipal limits of the available service centre, it is the responsibility of the Customer to bring the handset to the nearest service centre at his/her own risk and expenses.
5. For any handset repaired or replaced during the warranty period, the repaired or replaced handset shall continue to be within warranty period for the remaining time of the original warranty period of original handset.
6. The warranty will be declared void under the following circumstances:
 - (a) The handset IMEI number/ serial number, water indicator or the warranty seal has been removed, erased defaced, altered or is illegible;

- (b) Deterioration of the product due to normal wear and tear;
 - (c) Usage other than accordance with the user manual, rough handling ingress or exposure to any kind of liquid (water, sweat, beverages, oils etc.), exposure to moisture, dampness or exposure to extreme thermal or environmental conditions, corrosion, oxidation, unauthorized repairs, unauthorized spare parts usage, accidents, forces of nature, or other beyond the reasonable control of warrantor unless the defect was caused directly by defects in material or workmanship. The Warranty will also not cover any physical damage to the surface of the handset including but not limited to cracks or scratches on the LCD or camera lens;
 - (d) Any defects caused by the fact that the battery has been short-circuited or by the fact that the seals of the battery casing or the cells are broken or show evidence of tampering or by the fact that battery has been used in equipment other than those for which it has been specified;
 - (e) The defect was caused by a defective function of the service provider cellular network or other system.
7. Any claim under the warranty is subject to notification to an Philips authorized service centre for the alleged defect within a reasonable time of its occurrence and in no event later than the expiry of the warranty period. Philips Authorized service centres will not be responsible for any kind of direct or indirect loss of customer's data stored/saved in the handset (including phone book contacts, SMS, emails, pictures, ring tones other downloaded software, etc.) due to any kind of incidental failure of the handset and also at the time of service. It is advised that before bringing the handset for service, kindly make proper backup of the entire personal data, and remove any confidential, proprietary, or personal information from the handset.
8. Our authorized service centre reserves the right to charge a

service fee for repair/ service of any nature that is not covered by this warranty.

9. Our obligation under this warranty shall be limited to repair or provide replacement of parts only. The maximum claim entertained by the warrantor will be subject to maximum retail price of the handset purchased or the purchase price, whichever is lower.
10. In event of any unforeseen circumstances, there is unavailability of certain spare parts; prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.

Customer Service Care details

Address	Contact Tel	Contacts Person

Customer Details

(This Warranty Card should be retained by the customer for availing warranty services)

Model Name _____

Product Serial No. _____

IMEI No. /MEID No. _____

Date of purchase DD /mm /yyyy

Dealer's Details

Name& Address _____

Customer Details

Name

Address

Contact No.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement

the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device

types: device has also been tested against this SAR limit. This device

was tested for typical body-worn operations with the back of the device kept 10mm

from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 10mm separation distance between the user's body and

the back of the device. The use of belt clips, holsters and similar accessories should

not contain metallic components in its assembly. The use of accessories that do not

satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



Register your product and get support at
www.philips.com/support

TPV Audio and Visual Technology (Shenzhen) Co., Ltd.

All rights reserved.

Philips and the Philips Shield Emblem are registered trademarks
of Koninklijke Philips N.V. and are used under license

This product has been manufactured by and is sold under the responsibility of
TPV Audio and Visual Technology (Shenzhen) Co., Ltd. and Shenzhen TPV Audio and
Visual Technology (Shenzhen) Co., Ltd. is the warrantor in relation to this product.



502.F105.11000

