

成品尺寸 53*80MM 128g双铜黑白正反面印刷

Kids AI Printer (A68)



Please read the product manual carefully before using the product.

Button/Interface Description



- ① Record button ② Screen ③ Ambient lighting
- ④ Reset button ⑤ Lighting control button ⑥ Power button /Back button
- ⑦ Printing compartment ⑧ Horn hole ⑨ Charging port

Interface Description



Quick Start Guide



- ① Press and hold the [Power button] for 3 seconds First boot enters setup automatically.
- ② Select "Please set Wi-Fi" to enter the network connection interface automatically.
- ③ The device scans nearby WiFi. Select and enter password to connect.
- ④ Once connected, choose image style, voice chat and start using.

Product Functions and Operation

1. Network Connection instructions

- ① Press and hold the [Power button] for 3 seconds to turn on the device and enter the main menu.
- ② Click [Settings] to enter the settings interface, then select "Wi-Fi".
- ③ The device will automatically search for nearby Wi-Fi signals.
- ④ Select a Wi-Fi name and enter the password to complete the connection.

Notes:

- *The device saves the password automatically after first network setup and reconnects on power-on.
- *Only 2.4G WiFi is supported.

2. Instructions for printing images

- ① Select an image style [Doodle, Sketch, Cartoon] from the main menu.
- ② Press the [Record Button] and start recording after the prompt, the [Ambient Light] flashes while recording.
- ③ After AI generates the image, the [Screen] displays and prints it automatically.

3. Voice Chat Operation Instructions

- ① Select [Voice Chat] from the main menu.
- ② Press the [Record button] to start a conversation with the AI.
- ③ The AI will respond with its voice, and the text of the conversation will be displayed on the [screen].
- ④ To start a conversation again, press the [Record button] again.
- ⑤ The conversation history will be automatically cleared after exiting the chat.

4. Lighting Status Description

Light Switch:

- ① The lighting effects can be turned off in the [Settings].
- ② Press and hold the [Lighting Control Button] to temporarily turn off the lighting function.

scene	Light Status
No network connection	Breathing light flashing
Network connection successful	Always on
Start recording	Light flashing
Recording ends	Always on
Printing complete	Flashing with the prompt tone

Specifications

Item	Parameter
Screen	3.5-inch touch screen
Battery capacity	2000mAh
Charging interface	Type-c
Charging voltage	5V/1A
Language	Multi-language
Product dimensions	94*97*103mm

Troubleshooting

Q: Unable to power on; pressing the [Power button] has no effect.

A: Please check if the device has sufficient battery power. Charge the device and try again.

Q: Excessive printing noise and unclear print quality.

A: Please check if the paper is installed correctly. Ensure the smooth side is firmly against the thermal print head and that the paper edges are not crooked or jammed by the paper tray cover.

Q: No response to the touchscreen, or the [screen] freezes or displays a distorted image.

A: Please press and hold the [power button] to turn off and then turn it back on. If the problem persists, press the [reset button] to force restart the device.

Q: Displays "Can't understand" or "Pic can't be made".

A: Check if the device is correctly connected to the network. Check if a network signal icon appears in the upper right corner of the [screen]. If the icon is not present, reconnect to the network in the [settings]. If the network connection is normal, press the [record button] again to input voice information. Please wait for the prompt tone before speaking.

Q: Slow printer rotation, unclear print quality, or printer not working.

A: Please check if the device has sufficient battery power and charge it if necessary.

Precautions

- *Suitable for children aged 3 and up. Children under 3 years old should not operate this device. Take precautions to prevent accidental injury.
- *Do not swallow small parts to avoid the risk of accidental ingestion.
- *Use only compatible consumables specified for the printer. Do not use incompatible consumables to avoid damaging the device.

*This device is not waterproof. Do not use outdoors in rain or allow it to come into contact with liquids. If it gets wet, immediately turn off the machine, wipe it dry, and place it in a dry place to air dry.

*The equipment should be placed in a stable, well-ventilated, cool, and dust-free location, away from heat sources, flammable and explosive materials, and water sources, and protected from direct sunlight.

*Do not connect to a power supply exceeding the recommended values to avoid equipment damage or safety hazards.

*Disassembly and modification of the equipment are strictly prohibited. In case of malfunction, please contact official after-sales service; do not attempt to disassemble it yourself.

*Avoid prolonged continuous operation of the equipment. Single continuous printing sessions should not exceed 3 hours to prevent over heating and extend its lifespan.

Product maintenance methods

*Before cleaning, turn off the machine and wipe it with a dry, soft cloth. Do not use wet cloths or corrosive cleaning agents, as these may damage the equipment.

*Regularly inspect the printing and paper feeding mechanisms, promptly removing foreign objects and residual consumables to ensure print quality.

*When the equipment is not in use, cover it with the dust cover to prevent dust from entering.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ① Reorient or relocate the receiving antenna.
- ② Increase the separation between the equipment and receiver.
- ③ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ④ Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- ① This device may not cause harmful interference.
- ② This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



Made in China