

Key introduction

EN



AI button:

On the main menu, a short press of the AI button allows you to select different print modes, while a long press allows you to speak your desired content to generate a print output. To cancel printing, simply press the button once.
On the main menu screen, quickly press the AI button 5 times to reset or reconnect to the network.



Power on/off push button:

Press and hold for 3 seconds to turn the device on or off.
If the device freezes, press and hold for more than 8 seconds to restart it.

1. Download the APP:

1. Scan the QR code on the screen to download the App.
2. Search "Fun Print" in iOS/Android market to download the App.



2. Connection method:

(Note: 5G WiFi is not supported currently)



Step 1: Enter the App

Launch the "Fun Print" App and tap "Search Device"

01



Step 2: Select Your Device

Choose your device from the list of available devices.

Step 3: Connect to Wi-Fi

Select your current Wi-Fi network (2.4G), input the password, and then click "configuration".

Step 4: Connection Complete

Once connected successfully, your printer is ready to use. Start creating and printing!

→ Press and hold the [AI] button on the top of the device to start. While holding the button, speak your command clearly.

For example: "Print a picture of a dog running in a field."
Release the button once you finish speaking.

→ AI generated image will be displayed & printed instantly!

→ When printing, a short press of the [AI] button will cancel printing.

Tip: This product is suitable for children 3+.

- Operating Frequency Band:
Bluetooth: 2402-2480MHz, Wi-Fi: 2412-2462MHz
- Maximum Radio-Frequency Power:
Bluetooth: 1.581dBm, Wi-Fi: 7.837dBm

02

Matters needing attention

EN

1. When charging, please gently insert or unplug the charging cable to prevent excessive force from damaging the port;
2. After charging, please unplug the charging cable in time;
3. To avoid danger, do not use or charge in environments with high temperature, high humidity, excessive smoke and dust, such as: bathrooms, steam rooms, open flames, etc.;
4. Improper charging may cause damage to the print head;
5. Do not touch the print head to prevent overheating and burns;
6. The tearing blade is sharp, be careful not to touch

Certificate



03

Battery Warning Note:

EN

1. Please use DC 5V/1A charger. Fast charging is strictly prohibited to avoid damaging the machine. The device should be charged under adult supervision.
2. Do not impact or squeeze; keep this device away from high-temperature environments or sources of fire.
3. After the battery is immersed in water, it is strictly forbidden to use it if battery leakage is found;
4. Regularly check the power cord, plug, housing or other parts for damage. If damage is found, do not use it until it is repaired.
5. If the battery is found to be damaged, please contact the merchant or customer service for repair.
6. Please be sure to dispose of used batteries in accordance with local laws and regulations.

04

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

05

IC Caution:

English:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

French:

Cet appareil est conforme aux normes RSS exemptées de licence

d'innovation, sciences et développement économique Canada. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Le matériel a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences. Le dispositif peut être utilisé dans des conditions d'exposition portables illimitées.

06