




LED PUCK LIGHT

Model Numbers: 0005-0236, 0005-0235,
0005-0234



Questions, problems, missing parts?
Before returning to your retailer, call our customer service at
1-844-255-9692 Monday – Friday 8:00 a.m. – 5:00 p.m. CST

PACKAGE CONTENTS

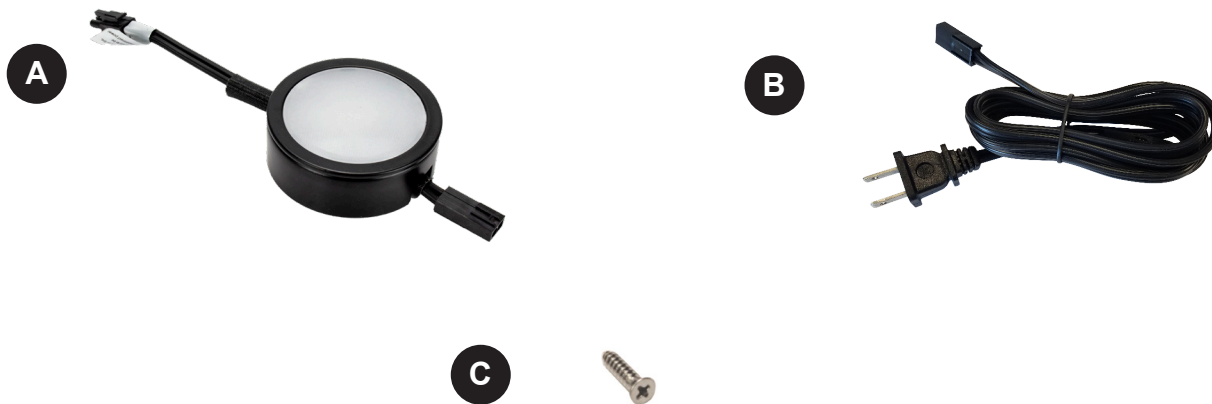

PART	DESCRIPTION	QUANTITY
A	LED Puck Light	3
B	5 ft power cord	1
C	Mounting screw	2

Note: Hardware not shown to actual size.

SAFETY INFORMATION

WARNING: These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with these instructions, current electrical codes, and/or the current National Electric Code (NEC). Disconnect power to the unit prior to installation.

WARNING: To reduce risk of fire, electric shock, or injury to persons,

- Always be sure that power supply is turned off at fuse box or circuit breaker before installing, cleaning, or servicing the fixture.
- Do not turn on fixture with missing or damaged lens.
- There are no serviceable parts inside the fixture.
- If attached to a movable cabinet, route and secure cords so that they will not be pinched or damaged when the cabinet is pushed to the wall.
- Suitable for surface or recessed cabinet installation. Not intended for recessed installations in ceilings or soffits.
- Suitable for indoor dry locations only. Do not install over a sink.
- Use only with 120V AC plug-in power cord and linking cables supplied with the light. Do not alter cords in any manner.
- The National Electric Code (NEC) does not permit cords to be concealed where damage to the cord's insulation may go unnoticed. To prevent fire damage, do not run cord behind walls, ceilings, soffits, or cabinets where it may be inaccessible for examination. Cords should be visually examined periodically and immediately replace when any damage is noted.
- Do not touch hot lens.
- Keep fixtures away from curtains and other combustible materials.

WARNING: Injury to persons and damage to the fixture and/or mounting surface may result if the fixture is pulled from the surface. To reduce the likelihood of such injury or damage, mount to a surface that is mechanically sound. The mounting surface must be at least 1/2 inch thick. This product is designed to be mounted to the underside of a horizontal surface such as the bottom of a cabinet or shelf.

SAVE THESE INSTRUCTIONS. For safest operation, read and become familiar with complete installation instructions prior to use. Pay close attention to this manual and stay within its guidelines when using this product.

CAUTION:

- If you have any doubts about how to install this lighting fixture, or if the fixture fails to operate completely, contact a qualified licensed electrical contractor.
- All parts must be used as indicated in this manual. Do not substitute any parts, leave parts out, or use parts that are worn out or broken. Failure to obey this instruction could invalidate the ETL certification.
- This fixture has a polarized plug (one blade is wider than the other) as a safety feature. This plug can be used in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.
- Not for use with plastic furniture.
- Do not mount over a sink or stove.
- LEDs emit bright light. Avoid looking directly at the light source.
- This fixture is linkable with other puck light kits of the same model number, do not exceed 20 puck lights in a single run.


PREPARATION

Before beginning assembly, installation, or operation of product, make sure all parts are present. Compare parts with package and hardware contents list on page 1. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.


Tools Required for Assembly (not included): Philips screwdriver or screwgun with Philips bit (surface mount) or power drill with 2-3/8" hole saw (recess mount), measuring tape, pencil and safety glasses. Estimated assembly time: 35 minutes

INSTALLATION INSTRUCTIONS For surface mount applications, start at Step 1. For recess mount applications, start at Step 7.


1. Separate the surface ring from the LED puck light housing. Holding the surface ring of the puck firmly with your fingers with the lens facing away from you, press the back of the puck housing with your thumbs.

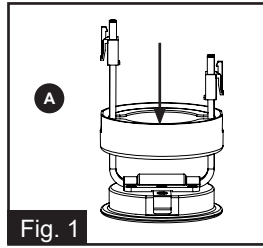


2. Using the surface rings as templates, mark the locations of the mounting holes on the mounting surface. Be sure to orient the side openings for routing lead wires toward adjacent pucks and/or the nearest receptacle.

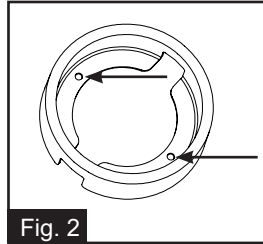


3. Secure surface rings to mounting surface using mounting screws (C) provided. Use an awl or nail to start screws if needed.

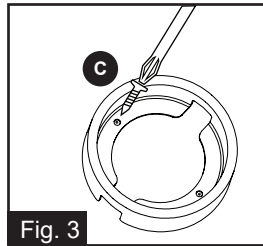

4. Route the lead wires through the openings leading toward the nearest receptacle. Push the puck light (A) body into the surface rings.

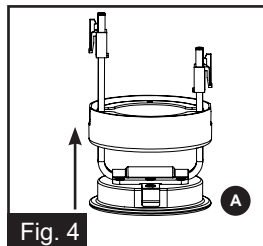


5. Connect the system together by attaching the lead wire of the puck (A) to the power cord (B).

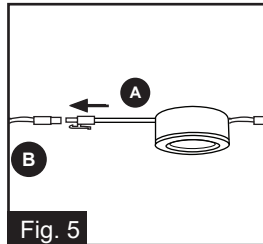


6. Plug power cord (B) into wall receptacle.


Surface mount installation is complete.

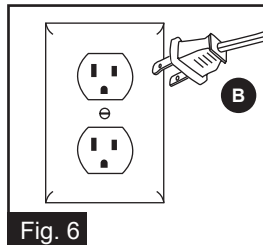

7. Mark the locations of the puck lights on the mounting surface with a pencil. Before you drill, be sure the pucks can connect to each other using the linking extensions and that the power cord will reach the receptacle.

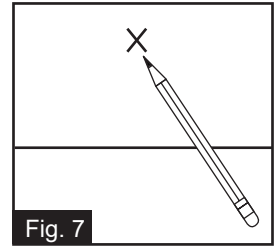


8. Separate the surface ring from the LED puck light housing. Holding the surface ring of the puck firmly with your fingers with the lens facing away from you, press the back of the puck housing with your thumbs.

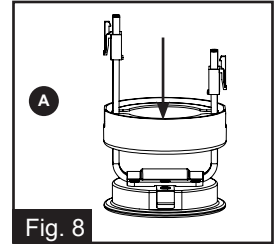


9. Discard the surface rings. They will not be needed.


At the marked locations, use a power drill and a 2-3/8 in. hole saw to drill mounting holes for the puck lights.

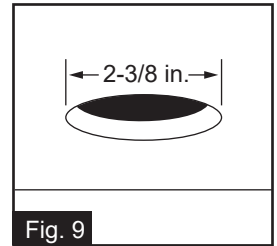


10. Route lead wires of puck light (A) through the hole.

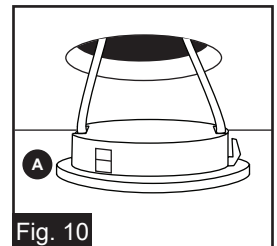

11. Press the puck light into the mounting hole until fully seated.

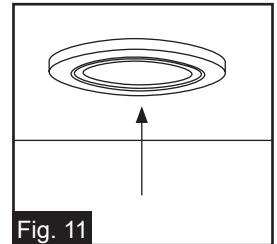


12. Connect the system together by connecting the lead wire of the puck (A) to the power cord (B).

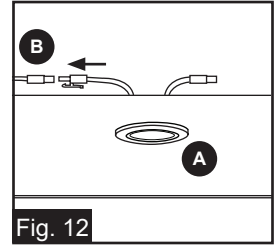

13. Plug power cord (B) into wall receptacle.

Recess mount installation is complete.

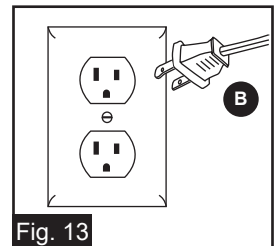

CARE AND MAINTENANCE

- Use only a mild soap and/or water with a soft cloth to clean the fixture. Harsh chemicals will damage the fixture. Do not wipe the fixture with a rough cloth that may scratch the finish or the lens.

TROUBLESHOOTING

- The light does not come on at all:
 - a) Advance roll switch on power cord one time to turn on fixture.
 - b) If outlet is on a switched circuit, make sure the wall switch and circuit breaker are on.

If neither a) nor b) fixes this issue, please consult a certified electrician.

FIVE-YEAR LIMITED WARRANTY

If, during normal use, this PATRIOT LIGHTING® lighting fixture breaks or fails due to a defect in material and workmanship within five (5) years from the date of original purchase, simply bring this lighting fixture with your original sales receipt back to your nearest MENARDS® retail store. At its discretion, PATRIOT LIGHTING® agrees to have the product or any defective part(s) repaired or replaced with the same or similar PATRIOT LIGHTING® product free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. This warranty; (1) excludes expendable parts including but not limited to light bulbs; (2) does not cover damage that has resulted from abuse or misuse; and (3) does not cover any losses, labor, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state.



Questions, problems, missing parts?
Before returning to your retailer, call our customer service at
1-844-255-9692 Monday – Friday 8:00 a.m. – 5:00 p.m. CST