

Whirlpool



**Health & Safety, Use & Care, Installation Guide and
Online Warranty Registration Information**

Model: WS91V9KPX



**www.whirlpool.com.au
www.whirlpool.co.nz**



FREESTANDING COOKER USE AND CARE GUIDE

Dear user,

Thank you for choosing our products. We are sure you will find your new appliance a pleasure to use. Before you use the appliance, we recommend that you read through these instructions carefully and retain them for future reference. Design and specification may change due to product development, no prior notice will be given.

Table of Contents

IMPORTANT SAFETY INSTRUCTIONS	3
INSTALLATIONS	7
OPERATING INSTRUCTIONS	14
OVEN FUNCTIONS	20
CLEANING & MAINTENANCE	29
TROUBLESHOOTING	31
AFTER-SALES SERVICE	32



IMPORTANT SAFETY INSTRUCTIONS

SAFETY INSTRUCTIONS TO BE READ AND OBSERVED

Before using the appliance, read these safety instructions. Keep them nearby for future reference. These instructions and the appliance itself provide important safety warnings, to be observed at all times. The manufacturer declines any liability for failure to observe these safety instructions, for inappropriate use of the appliance or incorrect setting of controls.

⚠ To maintain the efficiency and safety of this appliance, only call the authorised service centers and always use original spare parts.

⚠ Toddlers (0-3 years) should be kept away from the appliance. Young children (3-8 years) should be kept away from the appliance unless continuously supervised. Children above 8 years old and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they are supervised or have been given instructions on safe use and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.

⚠ **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age must be kept away unless continuously supervised.

⚠ Never leave the appliance unattended during food drying. If the appliance is suitable for probe usage, only use a temperature probe recommended for this oven.

⚠ Keep clothes or other flammable materials away from the appliance, until all the components have cooled down completely. Always be vigilant when cooking foods rich in fat, oil or when adding alcoholic beverages. Use oven gloves to remove pans and accessories. At the end of cooking, open the door with caution, allowing hot air or steam to escape gradually before accessing the cavity so as to prevent burns. Do not obstruct hot air vents at the front of the oven.

⚠ Exercise caution when the oven door is in the open or down position, to avoid hitting the door.

⚠ When handling the appliance, always use the provided handles recessed into the sides of the oven to prevent harming people or damaging the appliance itself.

⚠ Heat will be generated when it is working. Caution must be exercised to avoid touching the heating element.

⚠ Use oven gloves to place cookware in the oven or when removing it.

⚠ Always grip the oven door handle in the center as the extremities of the same may be hot due to any hot air leaks

⚠ Make sure the knobs are in the **0** position when the appliance is not in use.

PERMITTED USE

⚠ **CAUTION:** The appliance is not intended to be operated by means of an external switching device, such as a timer, or separate remote controlled system. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels, bed & breakfast and other residential environments.

⚠ No other use is permitted (e.g. heating rooms). This appliance is not for professional use. Do not use the appliance outdoors.

⚠ Do not store explosive or flammable substances (e.g. gasoline or aerosol cans) inside or near the appliance.

INSTALLATION

⚠ The appliance must be handled and installed by two or more persons. Use protective gloves to unpack and install.

⚠ Installation, including water supply (if any), electrical connections and repairs must be carried out by a qualified technician. Do not repair or replace any part of the appliance unless specifically stated in the user manual. Keep children away from the installation site. After unpacking the appliance, make sure that it has not been damaged during transport. In the event of problems, contact the dealer or your nearest After-sales Service. Once installed, packaging waste (plastic, styrofoam parts etc.) must be stored out of reach of children. The appliance must be disconnected from the power supply before any installation operation. During installation, make sure the appliance does not damage the power cable preventing catching fire or electric shock. Only activate the appliance when the installation has been completed.

⚠ Carry out all cabinet cutting operations before fitting the appliance and remove all wood chips and sawdust. Do not obstruct the minimum gap between the worktop and the upper edge of the oven. Do not remove the oven from its polystyrene foam base until the time of installation.

⚠ After installation, the bottom of the appliance must no longer be accessible.

⚠ Do not install the appliance behind a decorative door.

ELECTRICAL WARNINGS

⚠ The rating plate is on the front edge of the oven (visible when the door is open).

⚠ It must be possible to disconnect the appliance from the power supply by unplugging it if the plug is accessible, or by a multi-pole switch installed upstream of the socket in accordance with the wiring rules and the appliance must be earthed in conformity with national electrical safety standards.

⚠ Do not use extension leads, multiple sockets or adapters. The electrical components must not be accessible to the user after installation. Do not use the appliance when you are wet or barefoot. Do not operate this appliance if it has a damaged power cable or plug, if it is not working properly, or if it has been damaged or dropped.

⚠ If the supply cord is damaged, it must be replaced with an identical one by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard and electric shock. In case of replacement of power cable, contact an authorised service centre.

CLEANING AND MAINTENANCE

⚠ **WARNING:** Ensure that the appliance is switched off and disconnected from the power supply before performing any maintenance operation; never use steam cleaning equipment - risk of electric shock.

⚠ Do not use harsh abrasive cleaners or metal scrapers to clean the door glass since they can scratch the surface, which may result in shattering of the glass.

⚠ Ensure the appliance is cooled down before any cleaning or maintenance to prevent burns.

⚠ **WARNING:** Switch off the appliance before replacing the lamp.

TECHNICAL SPECIFICATIONS

Specifications	90cm Ceramic Freestanding Cooker
Supply Voltage & Frequency	220-240V AC 50-60Hz
Usable Capacity	133L
Oven Input Power	3000-3600W
Ceramic Hob Input Power	7500-8900W
Maximum Rated Power Input	10500-12500W
Net Weight (kg)	72
Gross Weight (kg)	81
Product Dimensions (mm)	900 (W) x 600 (D) x 900 (H)

Technical specifications can be changed without prior notice to improve product quality.

The values provided with the appliance or its accompanying documents are laboratory readings in accordance with the respective standards. These values may differ depending on the use and ambient conditions.

INSTALLATIONS

INSTALLATION REQUIREMENTS


THIS COOKER MUST BE INSTALLED BY A QUALIFIED INSTALLER IN ACCORDANCE WITH LOCAL REGULATIONS.

IMPORTANT: CONTACT AN AUTHORISED SERVICE AGENT FOR INSTALLATION OF YOUR APPLIANCE!

Positioning


1. Make sure that there are no combustible or flammable materials, such as curtains, in the vicinity off installation.
2. Furniture and cabinets surrounding the cooker must be of material resistant to temperature greater than 100°C.
3. Surrounding furniture, cabinets and extractor fans shall be positioned in accordance with the diagram shown in the figure.
4. There must be a least 20mm of free space between the back wall and the rear of the appliance to allow for ventilation and air circulation.
5. If fitted, the extractor fan must be at least 650mm above Radiate Ceramic. If no fans in fitted the minimum distance between the Radiate Ceramic and any cabinet or other structure must be 750mm.

Product Dimensions

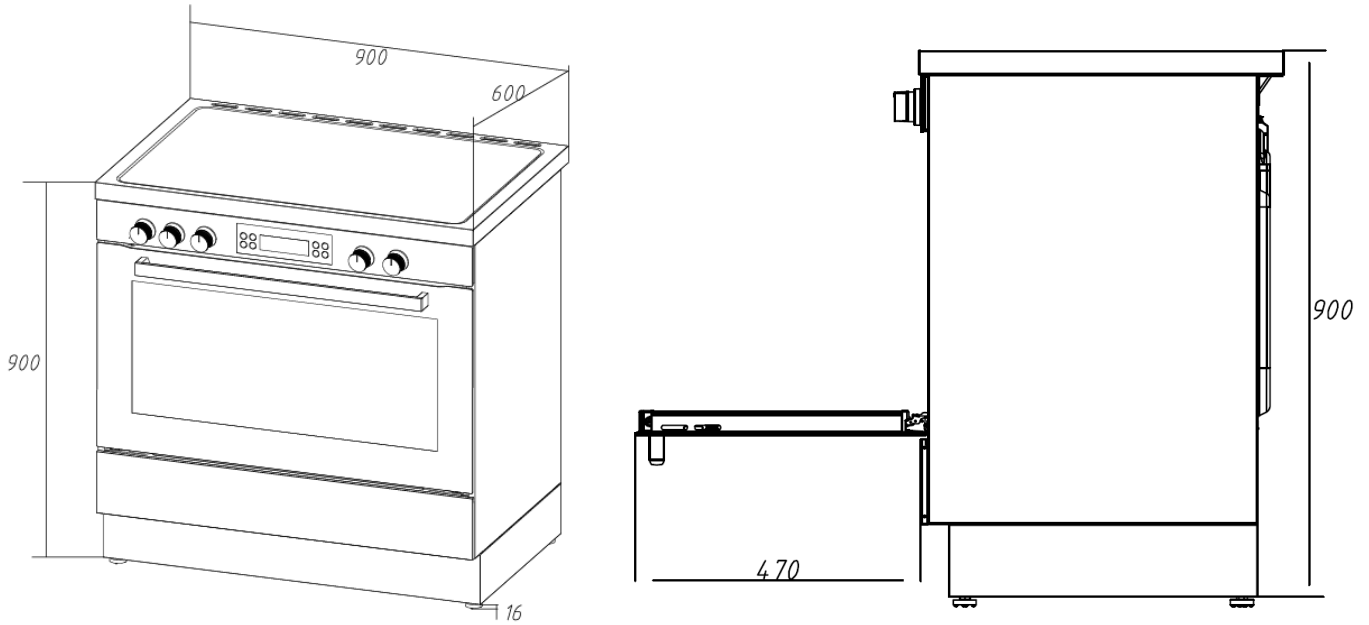

Product Dimensions	mm
A) Overall width of the freestanding oven	900
B) Overall height of the freestanding oven (from the floor to top of the cooktop, excluding the optional backguard)	916
C) Overall depth of the freestanding oven (excluding handles and knobs)	600
D) Height of the freestanding oven chassis (ie. excluding the adjustable feet)	900
E) Depth of the open oven door to the front of the freestanding oven	470


FREESTANDING OVEN CLEARANCES

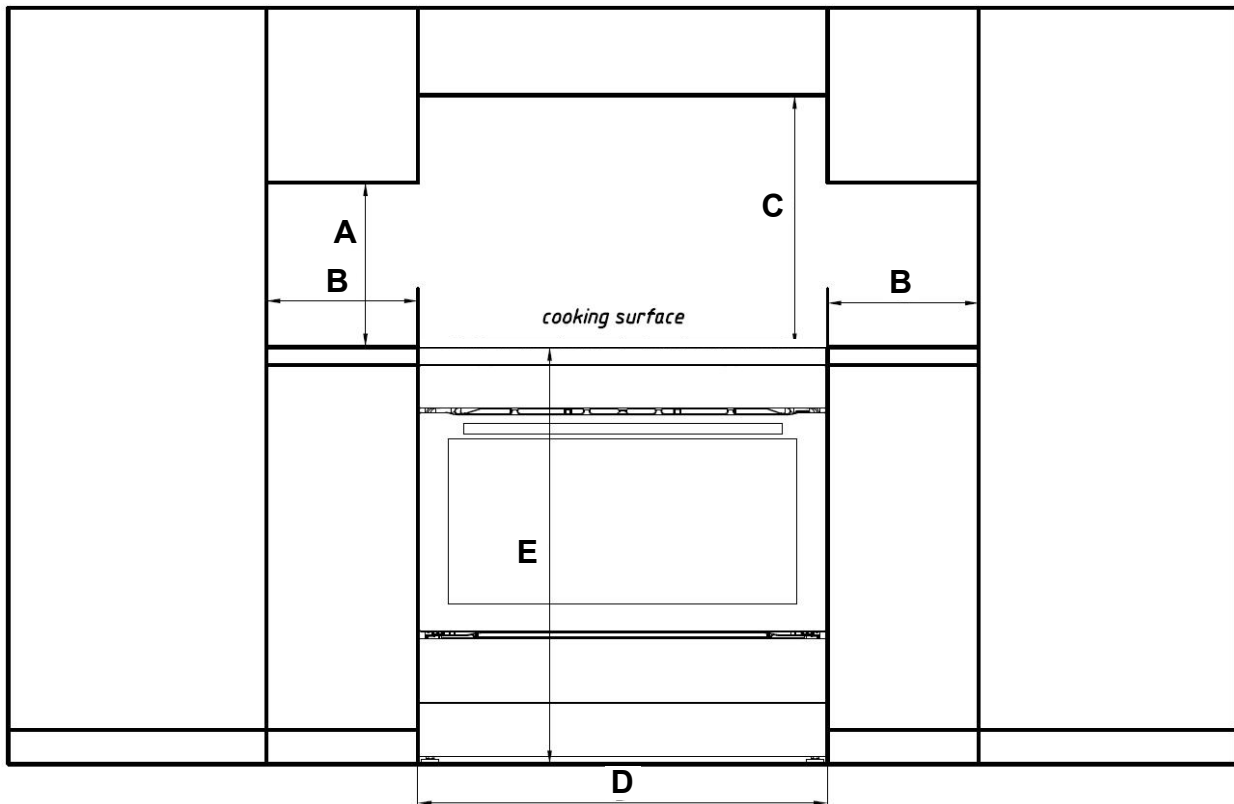

Product Dimensions	MM
A) Minimum vertical distance between benchtop and cabinet extending above the counter	450
B) Minimum clearance from left and right hand edge of the freestanding oven to the nearest combustable surface*	200
C) Minimum clearance from the top of the burner cap (cooking surface) to: <ul style="list-style-type: none"> • Overhead cabinet centered above the cooktop (combustible/unprotected)* • Overhead cabinet centered above the cooktop (non-combustible/protected)* • Ventilation hood centered above the cooking surface 	650 450 750
D) Width of cabinetry opening	900
E) Maximum height of cabinetry immediately adjacent to the freestanding oven (from floor to countertop)**	946
F) Maximum depth from wall to cabinetry face	600

Levelling feet


The height and level of the appliance can be adjusted by rotating the feet located underneath the appliance at each corner. Rotate the feet to decrease or increase the height.

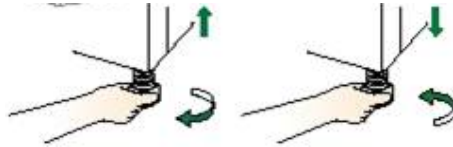

Safety chain

The appliance must be secured against overbalancing by using the supplied two safety chains on your oven.

Fasten hook (1) by inserting a wall plug into the kitchen wall (5) and connect safety chain (3) to the hook via the locking mechanism (2).

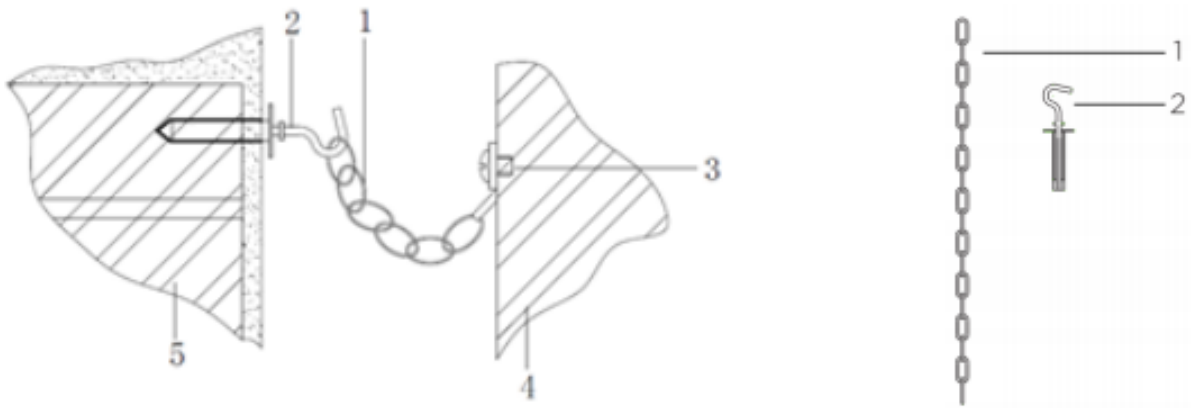


- 1 Safety chain(supplied and mounted to oven)
- 2 Stability hook
- 3 Chain attachment for the rear cooker
- 4 Rear of the cooker
- 5 Kitchen wall

Fitting on a Power Supply Cable

Connecting appropriate power supply / terminal board / connector block:

- Using a screwdriver, prise on the side tabs of the terminal board cover, pull open the cover of the terminal board.
- Remove the wire clamp screw.
- Fasten the wires beneath the corresponding screw heads.
- Fasten cable clamp and close the cover of the terminal board.

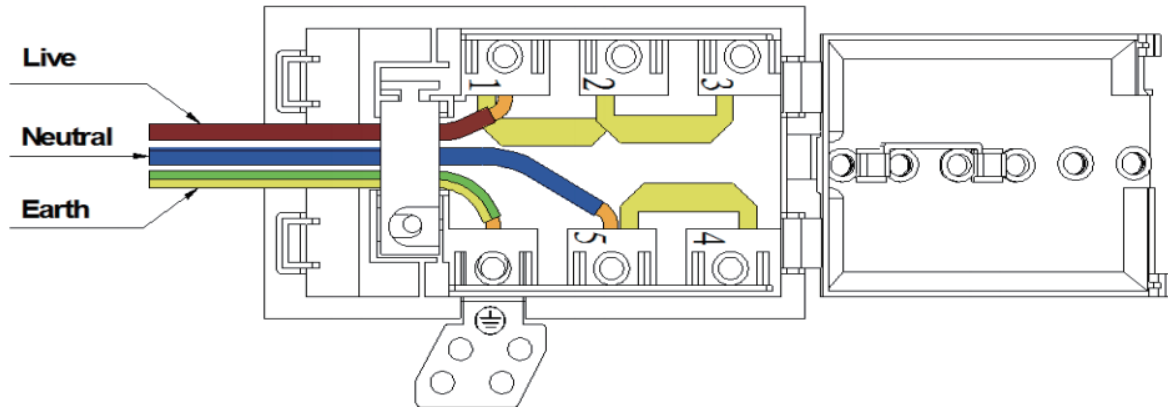

- The AC power supply should be 220-240V, 50Hz. For electric cookers, the minimum 45A fuse, or at least 45A a distribution circuit breaker.

Warning: Connect the power cord must be in accordance with the instructions listed in the table below

Wire cross-sectional area(mm ²) Connection mode	L	N	E
1N-	Min4	Min4	Min4

Connecting the supply cable to the mains

Install an approved circuit breaker with a minimum contact opening of 3 mm, between the appliance and the mains fuse box. The circuit breaker should be sized according to the load and should comply with current regulations (the earth wire should not be interrupted by the circuit breaker).

The supply cable should be positioned so that it does not reach a temperature of more than 50 °C with respect to the room temperature, anywhere along its length Before switching fuse ON in meter-box check:

- The supply system is regularly grounded, according to the regulations in force. The socket or the omnipolar switch can easily be reached after the installation of the oven.
- After carrying out the connection to the mains, check the supplying cable does not come into contact with parts subject to heating.
- Never use reductions, shunts, adaptors which can cause overheating or burning.
- Earth continuity. The electrical safety of this appliance can only be guaranteed if the cooker is correctly installed and earthed, in compliance with regulations on electrical installations.
- The electrical capacity of the system and sockets will support the maximum power of the appliance, as indicated on the data plate.
- Follow safety warnings about installation.



If this cooking range is to be connected to a new or upgraded electrical installation, then it must be connected to the supply by a supply cord fitted with: an appropriately rated plug that is compatible with the socket-outlet fitted to the final subcircuit in the fixed wiring that supplies this cooking range; or an appropriately rated installation male connector that is compatible with the installation female connector fitted to the final sub-circuit in the fixed wiring that supplies this cooking range. (*New Zealand only)

NOTE: All Upright cookers must comply to local regulations to Australian Standard AS/NZS 3000:2007 guidelines. Qualified Electrician will have a copy of these guides that MUST be adhered to.

Safety warnings about installation


- The cooker MUST BE installed and serviced only by an authorised person.
- A certificate of compliance must be supplied by installer and is to be kept by the customer.
- The packing materials must be removed before you install the cooker.
- You must follow the installation instructions in this booklet.
- The surrounding kitchen cabinets MUST BE able to withstand 95°C. We will not accept responsibility for damage caused by installation in to kitchen cabinets which cannot withstand 95°C.
- The appliance must not be installed in a corner. It must be installed at least 100mm from the side wall.
- The flexible pipe for gas models must have sufficient loops so the cooker can be moved for service.
- The vents; openings and air spaces MUST NOT be blocked.
- The anti-tilt floor bracket must be installed to avoid accidental tipping.
- The stability bolt must be installed to avoid accidental moving.
- You must not pull the cooker by the door handles.
- Power socket, if provided for gas models, and electricity isolation switch for electric models and gas models without a 20A plug, is to be installed in an accessible position near the cooker (but not behind cooker).
- If the supply cord or cable is damaged, it must be replaced by an approved service agent or a similarly qualified person in order to avoid a hazard.

ENVIRONMENTALLY-FRIENDLY DISPOSAL

- The packing box may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potential hazardous packaging (plastic bags, polystyrene, etc.) out of the reach of children. 
- This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead, it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. 
- Disposal must be carried out in accordance with local environmental regulations for waste disposal.
- For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchase the product.
- Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.


OPERATING INSTRUCTIONS

Model: WS91V9KPX

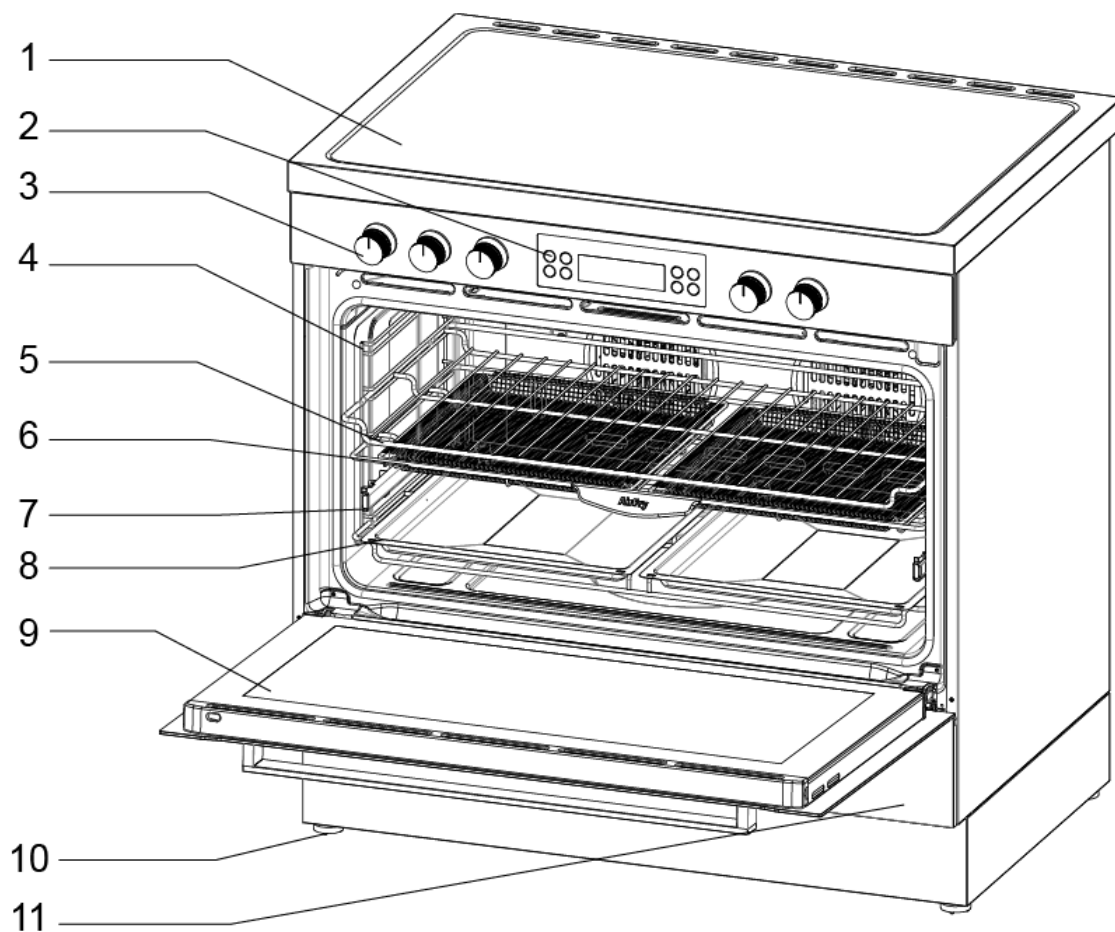

- | | |
|--------------------------|-------------------------|
| 1. Ceramic Hob | 7. Telescopic Runner |
| 2. Oven Control Panel | 8. Baking Tray |
| 3. Ceramic Control Panel | 9. Oven Door |
| 4. Guide Bracket | 10. Anti-Slip Feet |
| 5. Shelf | 11. Storage compartment |
| 6. Air Fry Basket | |

CONTROL PANEL

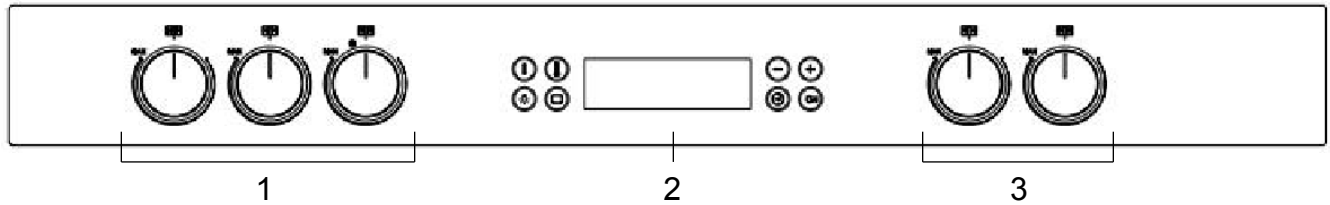

1 & 3. Ceramic Cooktop Power Control

Adjust desired power level of each ceramic cooktop cooking zone.

2. Oven Control

Control oven power on/off, temperature and function settings, lamp, etc.

ACCESSORIES

<p>Wire Shelf x 1</p>  <p>Use to cook food or as a support for pans, cake tins and other ovenproof items of cookware.</p>	<p>Baking Tray x 1</p>  <p>Use for cooking all bread and pastry products, but also for roasts, fish en papillote, etc.</p>	<p>Air Fry Basket x 1</p>  <p>Use the Air Fry basket for frozen food such as chips, wedges or chicken nuggets.</p>	<p>Telescopic Rails x 1 pair</p>  <p>To facilitate inserting or removing accessories</p>
---	--	---	--

FITTING THE TELESCOPIC RAILS

Remove the shelf guides from the oven and remove the protective plastic from the sliding runners. Fasten the upper clip of the runner to the shelf guide and slide it along as far as it will go. Lower the other clip into position. To secure the guide, press the lower portion of the clip firmly against the shelf guide. Make sure that the runners can move freely, Repeat these steps on the other shelf guide on the same level.

COOKTOP SAFETY

- Do not use if the ceramic glass top is cracked or broken.
- Do not leave aluminum foil on the hot ceramic hotplates (permanent damage will occur)


NOTE: Stored heat in the hotplate can be used for the last few minutes of cooking. Simply turn off the control.

Choose the right saucepans

- Use only pans that are suitable for ceramic hobs. We recommend stainless steel and enamelled steel pans, as pots and pans with copper or aluminium bases leave traces on the hob that are difficult to remove.
- Glass-ceramic cookware is not suitable because of its poor conductivity. The kind of pan you use and the quantity of food affects the setting required. Higher settings are required for larger quantities of food.
- Pots and pans should have thick, smooth, flat bottoms . This ensures the maximum heat transfer from the hob to the pan, making cooking quick and energy efficient.
- Never use a round-bottomed wok, even with a stand.
- Make sure that the base of the pan is clean and dry to prevent any residue burning onto the hob panel. This also helps prevent scratches and deposits.
- Always use pans that are the same size as (or slightly larger than) the areas marked on the hob. Using a lid will help the contents boil more quickly.
- The very best pans have bases that are very slightly curved up when cold . If you hold a ruler across the bottom you will see a small gap in the middle. When they heat up the metal expands and lies flat on the cooking surface.



Always take care before touching the surface, even when the hob is turned off. It may be hotter than you think!

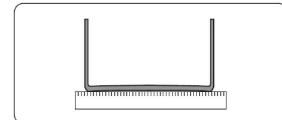

Ceramic Hob

Hob Care

NEVER cook food directly on the hob surface Fig. 1.1.

DO NOT use the hob surface as a cutting board.

DO NOT leave utensils, foodstuffs or combustible items on the hob when it is not in use (e.g. tea towels, frying pans containing oil).

DO NOT place plastic or aluminium foil, or plastic containers, on the hob.

DO NOT leave the hob zones switched on unless being used for cooking.

NEVER allow anyone to climb or stand on the hob.

DO NOT stand or rest heavy objects on the hob. Although the ceramic surface is very strong, a sharp blow or sharp falling object (e.g. a salt cellar) might cause the surface to crack or break Fig. 1.2.

Should a crack appear in the surface, disconnect the appliance immediately from the supply and arrange for its repair.

Always LIFT pans off the hob. Sliding pans may cause marks and scratches Fig. 1.3. Always turn the control to the OFF position before removing a pan.





DO NOT place anything between the base of the pan and the hob surface (e.g. asbestos mats, aluminium foil, Wok stand). Take care NOT TO PLACE HOT LIDS onto the Hob surface. Lids that have been used to cover a hot pan can “stick” or create a “vacuum” effect to the Glass Hob. Should this occur, **DO NOT** attempt to lift the lid off the glass surface, this may damage the glass. Instead slide the lid to the edge of the hob surface and remove, taking care not to scratch the hob surface. Alternatively wait until the lid has cooled to room temperature, the vacuum has been released, then remove the lid by lifting it from the hob surface Fig. 1.4.

⚠ Take care NOT to place metallic objects such as knives, forks, spoons and lids on the hob surface since they can get hot.

⚠ The appliance is not intended to be operated by means of external timer or separated remote-control system.

Care should be taken that no water seeps into the appliance. Avoid heating an empty pan. Doing so may damage both the hob and pan.

DO NOT use abrasive cleaners/pads, oven aerosols/pads or stain removers on the surface.

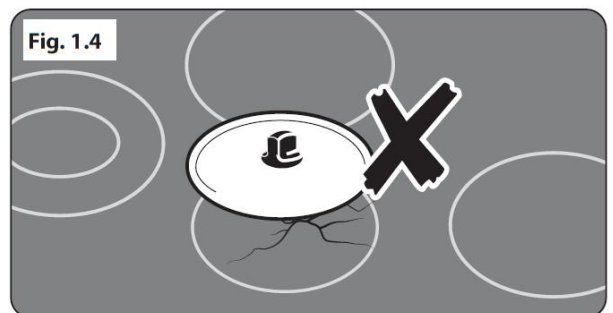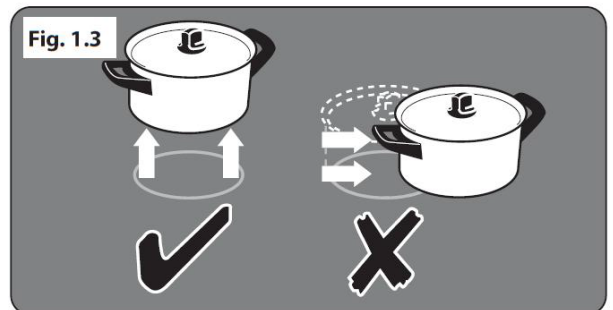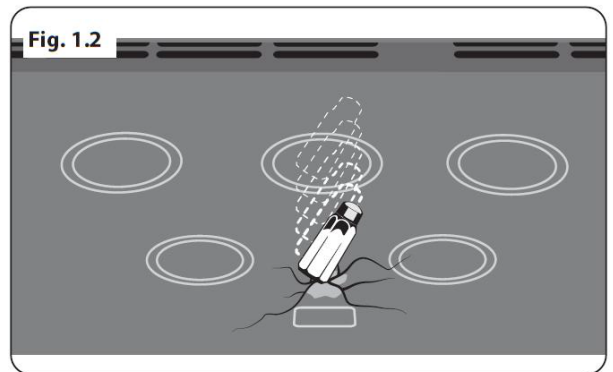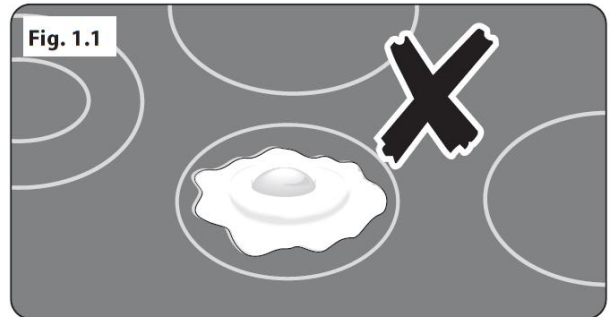

We recommend that you avoid wiping any surface unit areas until they have cooled and the residual heat indicator has gone out. Sugar spills are the exception to this (see 'Cleaning your Hob'). After cleaning, use a dry cloth or paper towel to remove any cleaning cream residue.

Cleaning

The ceramic surface should be washed after use in order to prevent it from becoming scratched or dirty.


In the interests of hygiene and safety, the hob should be kept clean at all times as a build up in fats and other foodstuffs could result in a fire.

Clean only the parts listed in this guide.

Clean with caution. If a wet sponge or cloth is used to wipe spills on a hot surface, be careful to avoid steam burns.


Some cleaners can produce noxious fumes if applied to a hot surface.

Product Overview

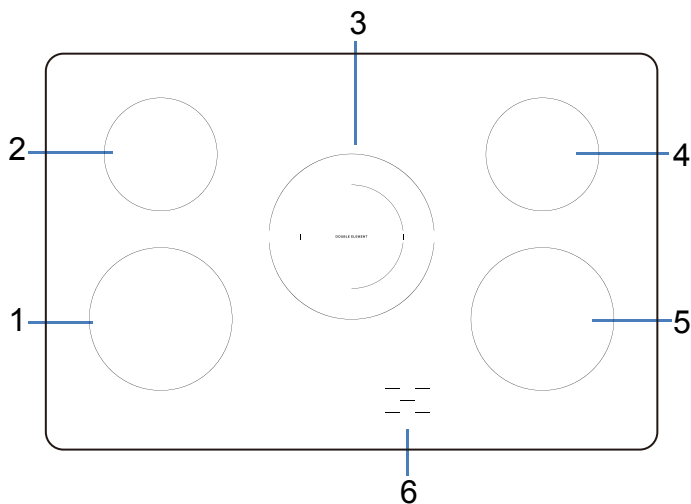

1. Zone 1 Diameter: 180 mm, 1800W
2. Zone 1 Diameter: 140 mm, 1200W
3. Zone 2 Diameter: 140/210 mm, 1000/2200W
4. Zone 1 Diameter: 140 mm, 1200W
5. Zone 1 Diameter: 180 mm, 1800W
6. Power & residual heat warning lights

The Control Panel

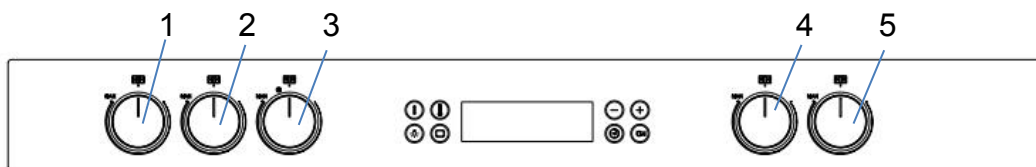

1. Front left burner
2. Rear left burner
3. Central burner
4. Rear right burner
5. Front right burner

Heat Settings

The exact setting will depend on several factors, including your cookware and the amount you are cooking. Experiment with the ceramic hob to find the settings that best suit you.

Use and care

Description of symbols

Single cooking zones

Turn the control knob to the desired position (low to high).

Adjustment is continuous so the cooking zone will operate at any intermediate knob setting between low & high. Once the cooking zone is hot, the LED corresponding to the zone illuminates.

You can switch off the cooking zone by turning the knob, in either direction, to the off position. The residual heat warning light remains illuminated when the temperature of the ceramic glass surface is hot and it will switch off once the surface temperature has cooled.

Dual cooking zones

Turn the control knob clockwise to the desired position between low and halfway as shown on the diagram on B. The inner cooking zone will heat and the outer cooking zone is off.



Adjustment is continuous so the cooking zone will operate at any intermediate knob setting between low & halfway. Once the inner cooking zone is hot, the lamp corresponding to the zone illuminates.

To operate the outer cooking zone, turn the knob past the halfway setting. Both inner and outer cooking zones will operate.

Adjustment is continuous so the both zones will operate at any intermediate knob setting between halfway & max. For highest setting with both zones operating, turn the knob past max, to the detent position (between max &). To reduce heat setting, but continue to operate both zones, turn the knob anywhere between maximum and halfway setting.

To return to operating the inner cooking zone only, turn the knob anticlockwise to between halfway and low.

Control Knob
(Cooktop Burners)

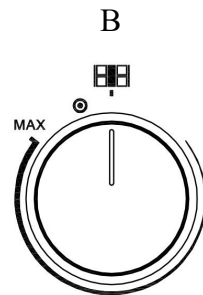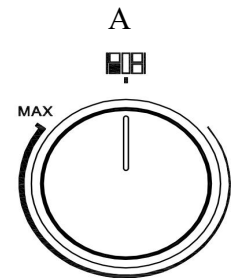

CLEANING AND MAINTENANCE

Before any intervention, disconnect the power supply of the device.


Cleaning the ceramic cooktop

The cooktop should be regularly cleaned; preferably after every use, once the residual heat warning lights have gone off.


Smudges from aluminum-bottom pans can be easily cleaned off with a cloth dampened in vinegar.

Remove any burnt residues after cooking with the scraper; rinse with water and wipe dry with a clean cloth. Regular use of the scraper considerably reduces the need for chemical detergents for the daily cleaning of the cooktop. Never use abrasive or corrosive detergents (e.g. cleaning powders, oven sprays, spot-removers, wire sponges).

NEVER USE A STEAM JET TO CLEAN THE APPLIANCE.

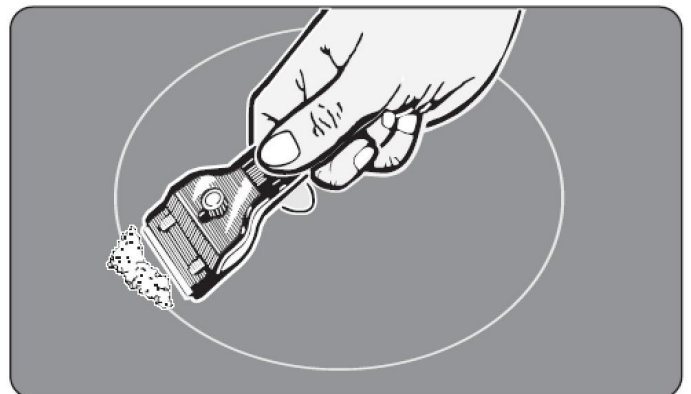

Oven Control Panel

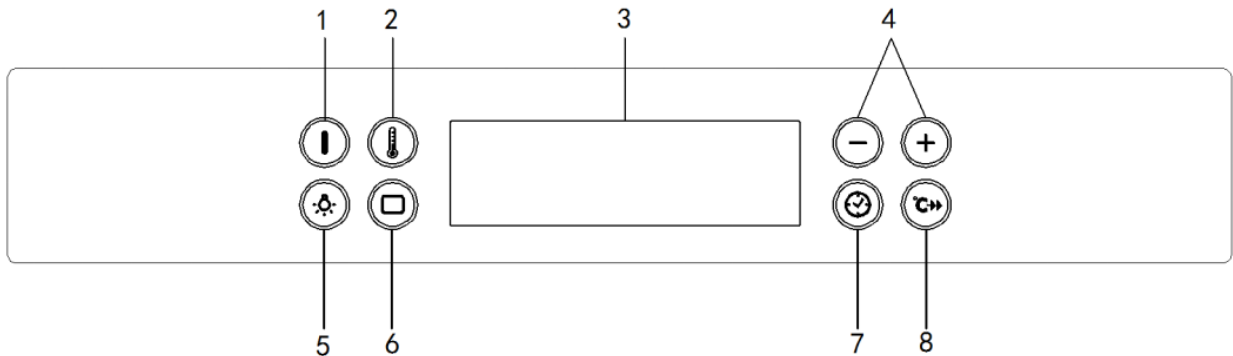

1. On/Off Button

For switching the oven on and off for stopping an active function.

2. Temperature Button

For accessing the temperature you require when activating functions.

3. Display

Shows the current settings of the appliance

4. Navigation Button

For increasing/decreasing the settings or values of a function

5. Lamp Button

With the oven switched on, press to turn the oven compartment lamp on or off.

6. Function Button

For access to the functions and menus.

7. Time Button

For accessing the cooking time settings, delayed start and timer. For displaying the time when the oven is off.

8. Fast Preheat

For preheating the oven quickly.

FIRST TIME USE

Please wipe out the oven interior prior to operation with warm soapy water and polish dry with a soft clean cloth.


HEAT THE OVEN

A new oven may release odours that have been left behind during manufacturing: this is completely normal. Therefore, before starting to cook food, we recommend heating the empty oven in order to remove any possible odours. Remove any cardboard or transparent film from the oven and remove any accessories from inside it. Heat the oven to 250°C for about half an hour. The oven must be empty during this time. Follow the instructions for setting the function correctly.

Please note: We recommend ventilating the room after using the appliance for the first time.

Oven shelf positions


- The main oven has 5 shelf positions to choose from. Position 1 is the position at the bottom of the oven and position 5 is located at the highest point of the oven.
- The 5 position side rack system can house both the standard oven shelves and baking tray.

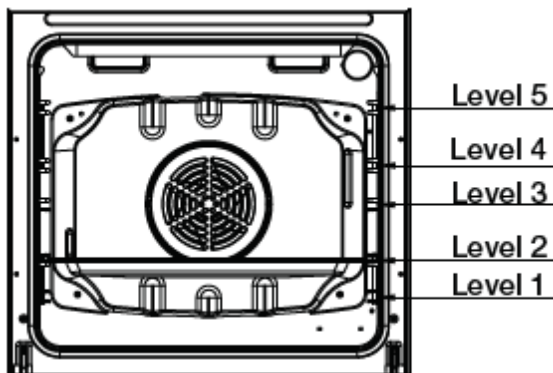

Fitting oven shelves

- Ensure shelf orientation is correct (refer picture).
- The shelf has a safety bar fitted to reduce the risk of dishes sliding off the shelf, this is the rear of the shelf.
- Slide into oven at an angle until raised back of shelf is past the stop on side runners.
- Lower front of shelf and push in until stop is reached.

Note: The top ledge is not a shelf position

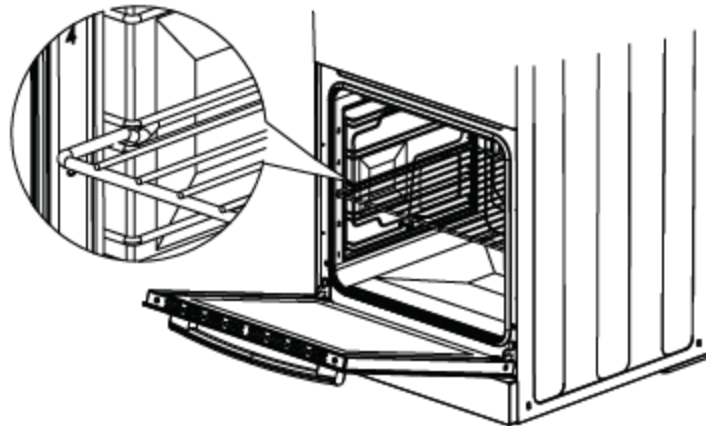


Oven Safety Warnings

- Always follow the instructions for putting the shelves and side racks into the oven, to avoid accidents.
- Do not line the oven with foil, it will damage the enamel.
- Do not place cookwares or anything else on the bottom of conventional oven model as trapped heat will damage the oven.
- Do not touch the hot surfaces or heating elements inside the oven.
- Do not use the oven door as a shelf.
- Do not push down on the open oven door.
- Do not place shelves on top of upper most shelf runner as there are no stops for shelf withdrawal.

FIRST TIME USE

SET THE TIME

You will need to set the time when you switch on the appliance for the first time. The display will show “12:00”. You can only set the clock when the oven is in standby mode.

Press \wedge or \vee to set the current hour and press the “” button. The two digits for the minutes will flash on the display. Press \wedge or \vee to set the minutes and press “time icon” to confirm.





HEAT THE OVEN







A new oven may release odours that have been left behind during manufacturing: this is completely normal. Therefore, before starting to cook food, we recommend heating the empty oven in order to remove any possible odours. Remove any cardboard or transparent film from the oven and remove any accessories from inside it. Heat the oven to 200 °C for about an hour. The oven must be empty during this time. Follow the instructions for setting the function correctly.





Please note: We recommend ventilating the room after using the appliance for the first time.

FUNCTIONS & DAILY USE

FUNCTIONS





	CONVENTIONAL Uses upper and bottom heating element Select a temperature between 30 °C and 260 °C. For cooking any kind of dish on one shelf only.
	CONVECT BAKE Uses top and bottom heating elements, together with the fan. Constant heat distribution throughout the cavity. Select a temperature between 30 °C and 260 °C. Recommended for cooking pre packaged food quickly. Best results when cooking, refer to “Practical Cooking Advice”.
	FORCED AIR Uses the heating element from the rear and the fan to ensure delicate even heat distribution throughout the oven. Select a temperature between 30 °C and 260 °C. Ideal for baking and cooking delicate food on 3 shelves at the same time. Recommended for cakes that need to rise, cream puffs, sweet and savory biscuits, savory puffs, swiss rolls, small portions of vegetables au gratin, etc.
	PIZZA Uses forced air and bottom heating elements making it perfect for baking pizza. The fan and heating element works together to circulate hot air For even cooking and melting toppings, while the bottom heating element ensures a crispy base.

	<p>DEFROST Bottom heating with fan to circulate the air at room temperature. To speed up defrosting of food especially delicate food (eg. ice cream, cakes, cream, custard desserts, fruit cakes). For defrosting meat, fish and bread, it is recommended to use “Forced Air” mode (Temperature: 30 °C and 260 °C) to accelerate the process.</p>
	<p>GRILL Uses radiant heat from powerful upper element. Select a temperature between 80 °C and 230 °C . Recommended for grilling tender cuts of meat, steak, chops, sausages, fish, cheese toasts. Preheat the grill for 3 mins to get the best results. Slide the grill dish into either of the 2 spaces within the upper pairs of support rails.</p>
	<p>MAXI GRILL Uses direct radiant heat from 2 powerful upper elements. Cook faster than a normal “Grill”. Select a temperature between 80 °C and 230 °C . Recommended for grilling tender cuts of meat, steak, chops, sausages, fish, cheese toasts. Preheat the grill for 3 mins to get the best results. This will help seal in the natural juices of the meat for a better flavour.</p>
	<p>TURBO GRILL Uses top central heating and fan. Select a temperature between 80 °C and 230 °C Grill element turns on and off to maintain the set temperature while the fan circulates the heat air. Keep the door closed to ensure food is fully cooked. Recommended for large cuts of meat. Put the food on the 2nd or 3rd rack from the bottom. Put the deep tray on the lowest shelf to collect the oil or juice. It is not required to turn the food over when using this mode.</p>
	<p>MULTI-COOK Uses the top and circle heating elements together with the fan. Select a temperature between 50 °C and 260 °C . Able to cook various dishes at the same time with the same cooking temperatures. A maximum of 2 racks can be used at the same time. Recommended for dishes requiring a gratin finish or those requiring prolonged cooking times (eg. lasagna, baked pasta, roast chicken, potatoes, etc.), cooking fish, vegetable-based side dishes and baking leavened cakes.</p>
	<p>AIR FRY Uses the top and circle heating elements together with the fan. To be used with the air fry basket. Select a temperature between 150 °C and 230 °C. Advanced convection cooking function without having to turn the food, giving crispy great tasting results in a shorter time without all the oil. Suitable for french fries, chicken wings and nuggets.</p>

	<p>DELICATE COOK Uses bottom heating element and fan. Select a temperature between 50 °C and 230 °C. Suitable for pastries, cakes and non-dry sweets in baking tins. Excellent results are also obtained in cooking requiring above all heat from the bottom. Recommended to put the food on a low level.</p>
	<p>ECO FORCED AIR Uses the rear heating element and fan. Food is prevented from drying out excessively by gentle, intermittent air circulation. Select a temperature between 40 °C and 230 °C. When this ECO function is in use, the light will remain switched off during cooking. To use the ECO cycle and therefore optimise power consumption, the oven door should not be opened until the food is completely cooked. For baking and cooking delicate foods-especially cakes that need to rise-and for the preparation of certain tartlets on 3 shelves at the same time.</p>
	<p>SMART CLEAN The action of steam released during this special low-temperature cleaning cycle allows dirt and food residues to be removed with ease. Remove all accessories from the oven when activating the Smart Clean function. Pour 150ml of drinking water on the bottom of the oven then set the function to  and temperature to 220°C. Set time to 20-30 minutes. Allow it to cool and wipe with a wet cloth. Note: Activate the function when the oven is cold.</p>

DAILY USE




1. SELECT A FUNCTION

Press  to switch on the oven: the display will show the last running main function or the main menu. The functions can be selected by pressing the  To select an item from a menu (the display will show the first available item), press  or  to select the desired one.





2. SET A FUNCTION

After having selected the function you require, you can change its settings.

TEMPERATURE/GRILL LEVEL





Press  then press  or  to change its setting.

DURATION

Press  several times until the  begins to flash on the display. Press  or  to change its setting, the oven will automatically start to work after 3 seconds flash.

END TIME (START DELAY)





In many functions, once you have set a cooking time you can delay starting the function by programming its end time.

Press  several times until the  begins to flash on the display. To set the time you want cooking to end, press  or  to set the required time, then the oven will automatically start to work after 3 seconds flash. Place the food in the oven and close the door: The function will start automatically after the period of time that has been calculated in order for cooking to finish at the time you have set.

 
3. PREHEATING

 
It shall have beep sound after preheating finished.

 
4. CHILD LOCK

To lock the control panel, press  and  at the same time and hold for 3 seconds, the  will appear on the display. Do this again to unlock the control panel. Please note: This function can also be activated during cooking. For safety reasons, the oven can be switched off at any time by pressing .









 












5. FAVORITES









 
 













 
If you would like to save a function as a favorite and store the current settings for future use, select the function, temperature and cook time/end time (if necessary) and then press and hold the  button for 2 seconds until an audible signal sounds. Please note: The previously saved setting will be overwritten when a new setting is saved.
















To call up the function you have saved at a later time, press and hold the  for 3 seconds into the memory function. An audible signal will sound, which indicates that the favorites is set.

Press and hold the  button for another 3 seconds, the memory function is obtained. Wait for another 5 seconds to open the memory function.

COOKING TABLE

FOOD CATEGORIES	FUNCTION	WEIGHT (KG)	PREHEAT (MIN)	TEMPERATURE (°C)	DURATION (MIN)	LEVEL
Biscuits (Short Pastry)		-	15	180	15-20	3
		0.3	-	200	15-18	2
Biscuits (on multi-level racks)		0.5	10	180	10-15	2-4
		0.7	15	180	20-25	1-3-5
Tarts		1	15	180	30-35	3
		0.5	15	180	20-30	3
Savory Pies		1.5	15	200	25-30	3
Sponge Cake (on 1 rack)		0.5	10	170	15-20	2
		0.5	15	160	25-30	3
Sponge Cake (on 2 racks)		1	10	170	20-25	2-4
Plum Cake		1	10	170	40-50	2
Fruit Cakes		1	15	180	40-45	2/3
		0.7	15	180	40-50	3
		0.6	-	180	45	2
Small Cakes		0.6	15	190	20-25	2-4
Cream Puffs (on multi-level racks)		0.5	10	190	20-25	2-4
		0.7	15	180	20-25	1-3-5
Cheese Puffs		0.4	15	190	20-25	2-4
		0.2	-	210	10-12	2
Pizza (on 2 racks)		1	15	220	15-20	2-4
Frozen Pizza		0.3	-	250	12	2

Frozen Zucchini and Prawn Pie		0.4	-	200	20	2
Frozen Country Style Spinach Pie		0.5	-	220	30-35	2
Frozen Golden Rolls		0.4	-	180	25-30	2
Frozen Chicken Morsels		0.4	-	220	15-20	2
Frozen Lasagna		0.5	-	200	35	2
Frozen Chicken Nuggets/Crumbed Fish		1	5	230	15	3
Frozen Chips		1	5	220	15	3
Lasagna		1	10	200	30-35	3
Stuffed Pancakes		1.2	15	200	30-35	2-4
Toasted Sandwiches		-	5	Max	2-3	4
		-	5	200	2-3	4
Grilled Chicken		1.5	5	200	55-60	3
Roast Chicken + Potatoes		1	10	180	60-75	2-4
Pre-cooked Chicken Wings		0.4	-	200	20-25	
Chicken Drumettes/wings (with dry rub)		1	5	230	15	3
Duck		1	15	200	65-75	3
Roast Veal or Beef		1	15	200	70-75	3
Veal Steak		1	5	Max	15-20	4
		1	5	200	15-20	4
Scotch Fillet Steak (seared first)		1	5	220	8	3
Cutlets		1	5	Max	15-20	4
		1	5	200	15-20	4
Pork Roast		1	15	200	70-80	3
Hamburgers		1	5	Max	7-10	4
		1	5	200	7-10	4










Lamb		1	10	180	50-60	2
Mackerel		1	10	180	30-35	2
		1	5	Max	15-20	4
		1	5	200	15-20	4
Soles and Cuttlefish		1	5	Max	8-10	4
		1	5	200	8-10	4
Cuttlefish		1.5	5	200	30-35	3
Squid and Prawn Kebabs		1	5	Max	6-8	4
		1	5	200	6-8	4
Cod Fillet		1	5	Max	10	4
		1	5	200	10	4
Fresh Barramundi Fillet (with crumb)		1	5	230	15	3
Grilled Vegetables		1	5	Max	10-15	3/4
		1	5	200	10-15	3/4
Potatoes cut into wedges		0.5	5	230	14	3

*Cooking durations are approximate and may vary according to personal taste.

*When cooking with Grill or Turbo Grill, a deep tray must always be placed on the 1st rack from the bottom.

HOW TO READ THE COOKING TABLES

The tables list: recipes, if preheating is needed, temperature (°C), grill level, cooking time (minutes) and level suggested for cooking. Cooking times start from the moment food is placed in the oven, excluding preheating (where required). Cooking temperatures and times are approximate and depend on the amount of food and the type of accessory used. Use the lowest recommended values to begin with and, if the food is not cooked enough, move on to higher values. Use the accessories supplied and preferably dark-coloured metal cake tins and oven trays. You can also use pans and accessories in pyrex or stoneware, but bear in mind that cooking times will be slightly longer. To obtain the best results, carefully follow the advice given in the cooking table.

FUNCTIONS									
	Conventional	Multi-Cook	Grill	Maxi Grill	Turbo Grill	Forced Air	Convect Bake	Pizza	Air Fry

CLEANING & MAINTENANCE

Make sure the oven has cooled down before carrying out any maintenance or cleaning. Do not use steam cleaners. Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance. Wear protective gloves. The oven must be disconnected from the mains before carrying out any maintenance work.

COOKTOP SURFACES

Remove all spilt food with a razor blade scraper while the hotplate is still warm -NOT HOT.

When the ceramic hotplate has cooled, wipe clean with dishwashing detergent on a damp cloth.

If aluminum foil, plastic items or foods with a high sugar content (e.g. jam, tomatoes, carrots, etc.) melt on the glass, use the razor blade scraper to remove immediately before the ceramic hotplate has cooled down completely, otherwise pitting of the surface may occur.

Note: Do not use abrasive sponges or scourers, oven sprays or stain removers on ceramic hotplates. These may damage, scratch or stain the ceramic cooktop. Any pitting, staining or scratching will not be covered by warranty.

EXTERIOR SURFACES

Clean surfaces with a damp microfiber cloth. If they are very dirty, add a few drops of pH - neutral detergent. Finish off with a dry cloth. Do not use corrosive or abrasive detergents. If any of these products inadvertently comes into contact with the surfaces of the appliance, clean immediately with a damp microfiber cloth.

INTERIOR SURFACES

After every use, leave the oven to cool and then clean it, preferably while it is still warm, to remove any deposits or stains caused by food residues. To dry any condensation that has formed as a result of cooking foods with a high water content, leave the oven to cool completely and then wipe it with a cloth or sponge. Activate the "Smart Clean" function for optimum cleaning of internal surfaces. Clean the glass in the door with a suitable liquid detergent.


ACCESSORIES

Soak the accessories in a washing-up liquid solution after use, handling them with oven gloves if they are still hot. Food residues can be removed using a washing-up brush or a sponge.

REMOVING AND REFITTING THE DOOR


To remove the oven door for better access to the oven when cleaning, follow the below:

1. Open the door fully (Fig. 1)
2. Lift up and turn the latch **A** situated on each of the two hinges (Fig. 2)
3. Hold the door as shown in Fig. 3 and close the door gently until latch **A** of the two hinges are hooked to part **B** of the door (Fig. 4)
4. Grip the door on the two external sides and close it like Fig. 3 & 4
5. Withdraw the hinge hooks from their location following arrow **C** (Fig. 4)
6. To refit the door, repeat the above steps in reverse order

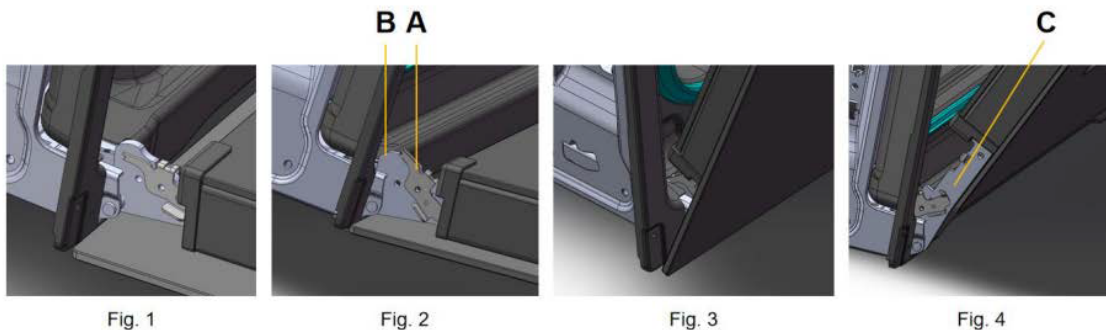

REMOVING THE INNER PANE OF GLASS


- Remove the seal G by unscrewing the 2 bolts (Fig. 1)
- Gently pull out the inner pane of glass (Fig. 2)
- Clean the glass with an appropriate cleaner. Dry thoroughly, and place on a soft surface. Now you can clean the inside of the outer glass.

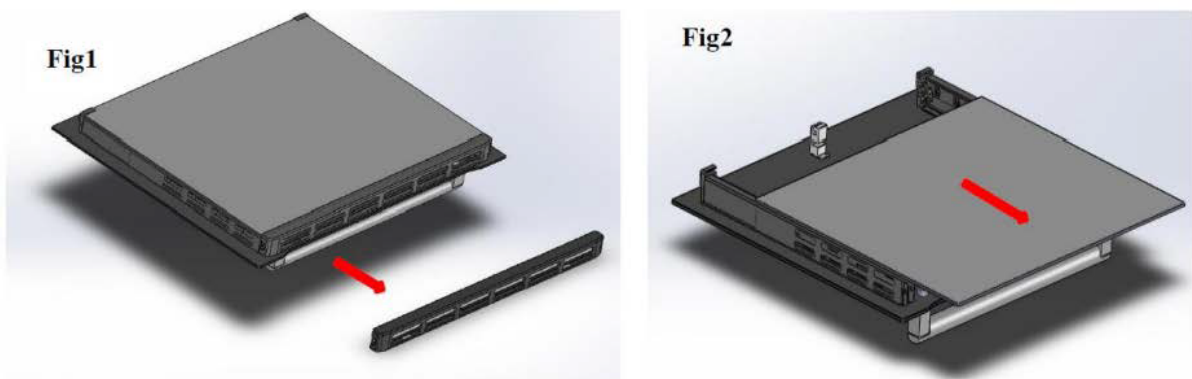


REPLACING THE LAMP

Disconnect the oven from the power supply, remove the cover from the light, replace the bulb and fit the cover back on the light. Reconnect the oven to the power supply. Do not use the oven until the light cover has been refitted.

Please note: Only use 25W/220-240V, G9 type. The bulb used in the product is specifically designed for domestic appliances and is not suitable for general room lighting within the home. Light bulbs are available from our After-sales Service.

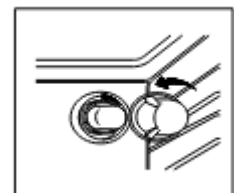

TROUBLESHOOTING

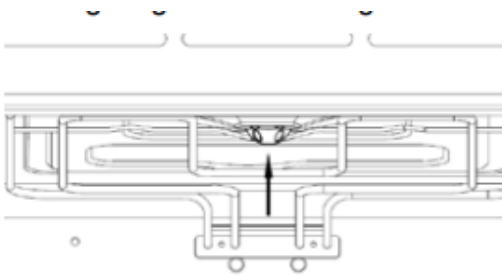What to do if...	Causes/Solutions
Oven does not heat up	<ul style="list-style-type: none"> ● Oven may not be switched on. Switch the oven on. ● The clock may not be set. Set the clock. ● Check to see if the required settings have been applied. ● A household fuse may have blown or a circuit breaker may have tripped. Replace the fuses or reset the circuit. If this happens repeatedly, call an authorised electrician.
A noise can be heard after a cooking programme	Cooling fan remains switched on after the end of a cooking programme.
The lighting is not working 	<ul style="list-style-type: none"> ● Disconnect the appliance from the electricity supply: Switch off and unplug at the socket, or disconnect the fuse, or switch off at the isolator as appropriate. Turn the lamp glass cover anticlockwise to remove it. ● Remove the metal ring and clean the glass cover. ● Replace the lamp with a new G9 lamp. ● Attach the metal ring to the glass cover. ● Install the glass cover.
Cakes and biscuits are browning unevenly	There will always be a slight unevenness. If browning is very uneven, check that the correct temperature is set and that the correct shelf level is used.
"HE1" A fault code appears in the display	Temperature sensor error. Contact local after-sales service centre.

AFTER-SALES SERVICE


To receive complete assistance, please register your product in your local market. Call the number shown on the warranty booklet or follow the website's instructions on:

Australia: www.whirlpool.com.au

New Zealand: www.whirlpool.co.nz

When contacting our Client After-sales service, always specify:

- A brief description of fault;
- The type and exact model of the appliance;
- The serial number (on the rating plate located at the front edge of the oven; visible when the door is open);
- Your full address;
- Your telephone number

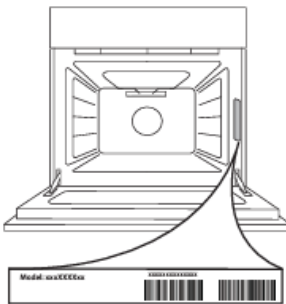

REGISTER YOUR PRODUCT ONLINE

For Australia Market



Scan QR Code to visit
www.whirlpool.com.au
to register your product warranty online.

This QR Code is only applicable to Australia.

You can download the user manual by

- Visiting our website www.whirlpool.com.au
- Contacting our Customer Service Center at 1300 363 344

For New Zealand Market



Scan QR Code to visit
www.whirlpool.co.nz
to register your product warranty online.

This QR Code is only applicable to New Zealand.

You can download the user manual by

- Visiting our website www.whirlpool.co.nz
- Contacting our Customer Service Center at 0800 442 584

Whirlpool® Registered Trademark/TM Trademark of Whirlpool group of companies

All rights reserved - <http://www.whirlpool.com.au>

- <http://www.whirlpool.co.nz>

EN

Whirlpool