

Blueair Pro

User Manual



Innovated with Love in Sweden




Contents

Welcome	4
The Blueair Pro Series Air Purifiers	5
Getting the Most from Your Blueair System	6
Getting Started	7
Settings	8
Care and Maintenance	10
How it Works	11
Changing the Filter	12
Adding the Carbon+ Filter	14
Filters	15
Air Intelligence Module	16

Welcome To The Blueair Pro family



The Blueair Pro Air Purifier

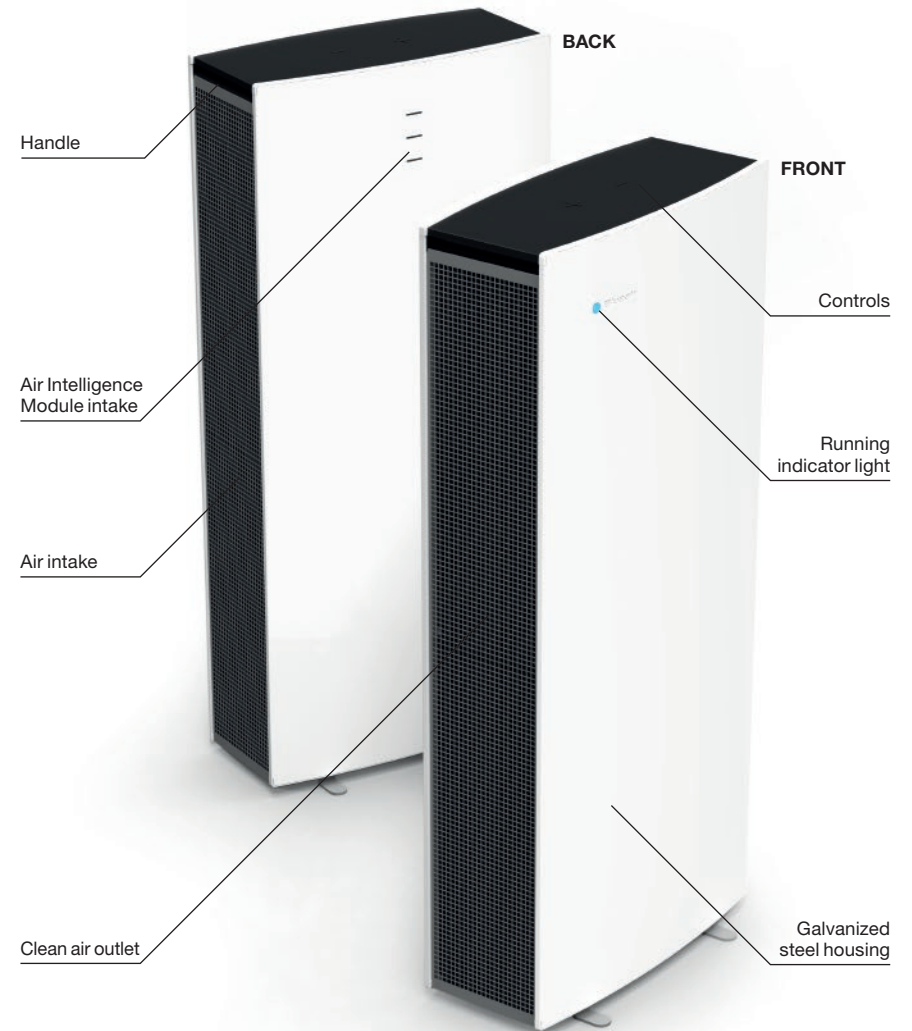

Thank you for buying a Blueair Pro Air Purifier. With patented HEPASilent™ technology and state-of-the-art filters it is our most powerful and technically advanced air purifier yet. Still it's remarkably easy to set up. Just plug in, turn on and let it breeze.

Keep the Filters Fresh

Changing filters according to the replacement schedule keeps your Blueair Pro in tip-top form.

Extend Your Warranty

Complete and send your warranty card to Blueair today to extend your limited warranty.

Keep the Planet Healthy, Too

Maximum effect, minimum footprint. Your Blueair Pro can be recycled so it lives forever.

Getting the Most from your Blueair System

The Blueair system is easy to use. Make sure your unit is the right size for your room, and change the filters according to recommended filter replacement schedule. Remember that, just as air conditioners and heaters have limits to the volume of air they can cool or heat, every air purification system has limits to the volume of air it can clean. Follow these common-sense guidelines.

Close Your Windows

You wouldn't throw open your windows on a hot summer day and expect your air conditioner to work efficiently, because you can feel the hot air coming in and the cool air going out. Even though you can't see the contaminated air coming in and the clean air going out, the same logic applies to your air purifier.

Close Your Doors

Just as you might seal off part of your house on a cold winter night to keep your heater working more efficiently, seal off the room in which your system is working for best results.

Run Your System 24 hours per Day

For best results, run your Blueair unit 24 hours a day, 7 days a week. Round-the-clock operation ensures that a continuous supply of clean, filtered air constantly circulates throughout the room. Blueair systems are designed for phenomenally low power usage. In fact, it costs about the same to power a Blueair air purifier as it does to power a single light bulb, depending on the unit and the operating speed.



To reduce the risk of electric shock, this equipment has a grounding type plug that has a third (grounding) pin. This plug will only fit into a grounding type power outlet. If the plug does not fit into the outlet, contact qualified personnel to install the proper outlet. Do not alter the plug in any way.



This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to Blueair service or collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling this product.

Getting Started

General Safety Instructions

The Blueair Pro Series air purifier is an electrical appliance. Please read the safety instructions before use and take the necessary precautions to reduce the risk of fire, electric shock or injury. The Blueair Limited Warranty applies only if the unit is used according to these instructions.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the

appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified persons in order to avoid a hazard.

Placement

Place the unit in a location that allows air to circulate freely in, out and around the unit. The minimum acceptable distance from another object is 4" or 10 cm. Use only genuine Blueair filters.

Do not place the unit:



Directly on or against soft furnishings, such as bedding or curtains.



Near wet areas, such as bathrooms or laundry rooms, where it may come into contact with water.



Near sources of heat, such as radiators, fireplaces or ovens.




Outdoors.

Settings


Plug the power cable firmly and completely into the recessed power cord socket located at the bottom of the unit and plug the other end into a grounded wall outlet or power strip. Set the unit to maximum speed, which is recommended for

fast initial cleaning, daytime use, or very polluted air. After a few minutes, adjust the unit to the desired speed. Minimum speed is generally recommended for nighttime use.


A. Display Function without the Air Intelligence Module

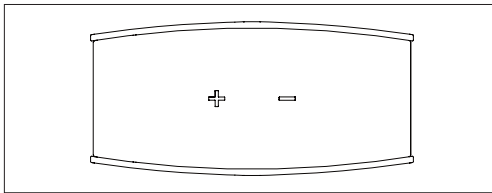

The display is on standby.

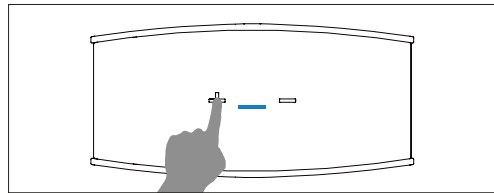


Turn on your Blueair air purifier by touching the PLUS button on the unit. A blue bar will appear between the buttons.

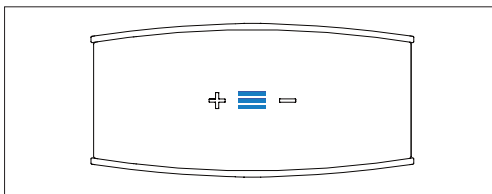


Adjust the speed from 1 to 3 using the PLUS and MINUS buttons.

Turn the air purifier off by pressing the MINUS button when the unit is in first speed.

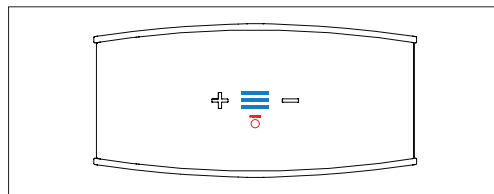

When filter replacement is required, a red replacement filter light will appear.

B. Display Function with the Air Intelligence Module

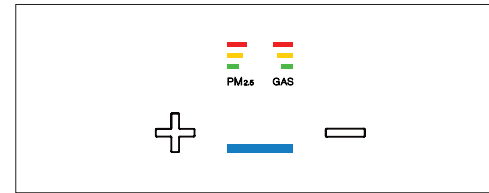


Air Intelligence Module required. For installation and maintenance of the Air Intelligence Module, please see page 16, "Air Intelligence Module".

Turn on your Blueair air purifier by touching the PLUS button on the unit. A blue bar will appear between the buttons.

Above the bar, two bar columns show the levels of air-suspended particles (PM2.5) and gaseous contaminants (GAS). One bar (green) represents a low particle or gas level.


Three bars (green, yellow and red) represent a high level of particles or gas, indicating the need to increase the operating speed, or to set the unit in automatic mode.

Turn the air purifier off by pressing the MINUS button when the unit is in first speed.

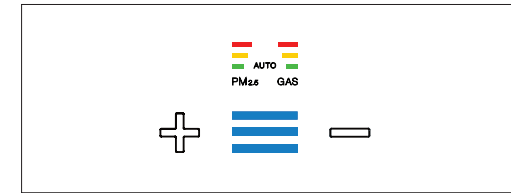

For automatic mode, touch the PLUS button when the unit is running on speed 3. The word AUTO will appear, and the two air quality sensors will adjust the speed according to the contaminant levels.

To return to manual operation, touch the MINUS button.

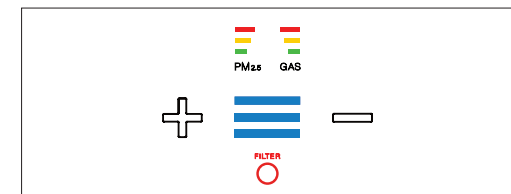

When filter replacement is required, a red replacement filter light will appear.

While the unit is running, the display will slowly disappear after 30 seconds.
To activate the display again, simply touch one of the buttons.

Please note: The Air Intelligence Module will show high levels of both particles and gas during the first five minutes of operation while the air quality sensors calibrate.

Care and Maintenance

Blueair air purifiers feature high quality design, materials and workmanship. To keep your unit in top condition, we recommend routine cleaning. The appliance must be disconnected from the supply mains before cleaning or maintenance.


- Vacuum the air intake grille from the inside when you remove the filter to replace it.
- Wipe the exterior of the unit with a soft, clean, damp cloth.

- Never clean with gasoline, chemical solvents or corrosive material as these agents may damage the surface.
- Do not allow foreign objects to enter the intake or exhaust openings. This may cause electric shock or damage the unit.
- Do not try to repair or adjust any of the electrical or mechanical functions on your Blueair unit yourself. Contact your local dealer or Blueair for warranty information.

How it Works


Air passes through an ion chamber where airborne particles are charged with negative ions. Charged particles are drawn to the HEPASilent™

filter surface. Purified air, which is virtually contaminant-free, is re-circulated into the room.

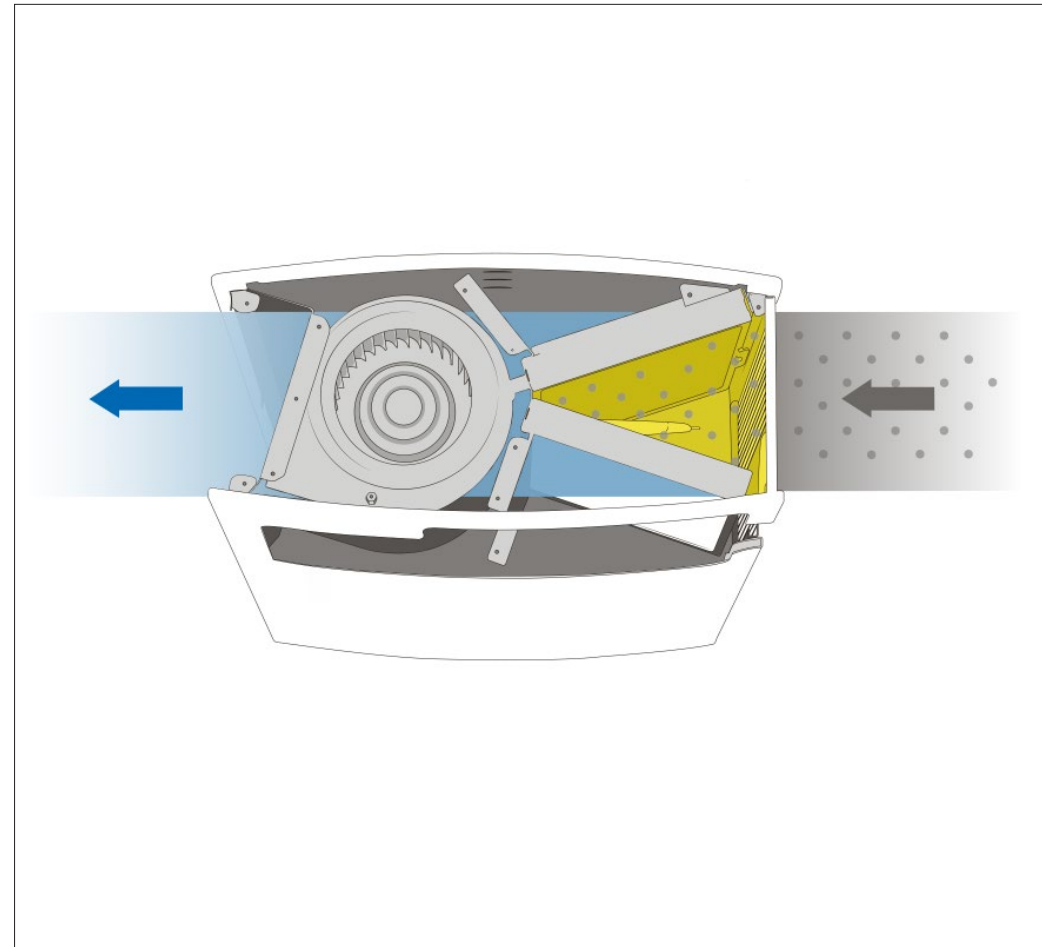

Changing the Filter

Before you start changing the filter, turn off the unit and remove the plug from the wall socket.

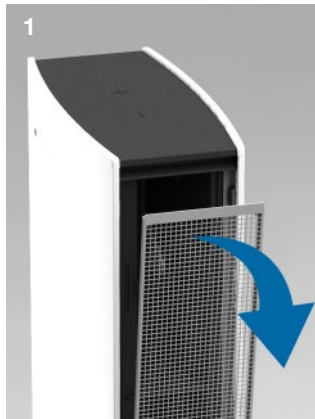


1 Turn the unit off and open the intake door by pulling at the top edge. The intake door is on the right hand side when facing the front of the unit.




2 The filter is fitted into the unit in a V shape. Two tabs protrude on the sides.



3 Using the tabs, push the two filter sides together.

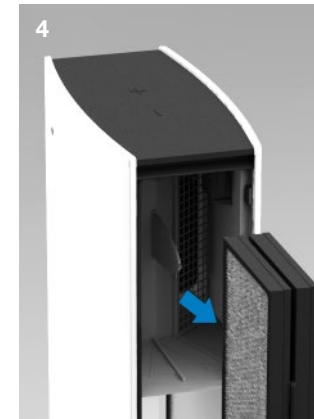

4 Gently pull the dirty filter straight out of the unit.

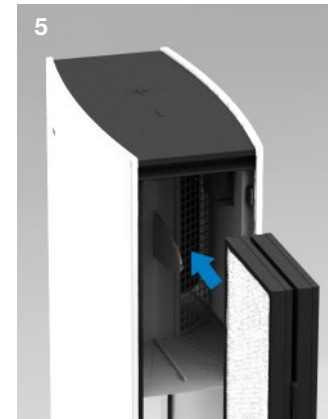


5 Keeping the filter sides together, line up the new filter into the unit using the guiding bars in the top and bottom of the filter housing.



6 Gently push the new filter in.




7 Push the two filter sides out using the tabs.

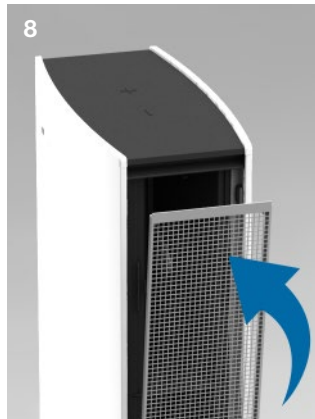

8 Re-attach the intake door. Turn on the unit.



For Blueair Pro L and XL, repeat steps 2-7 for all filter packs.

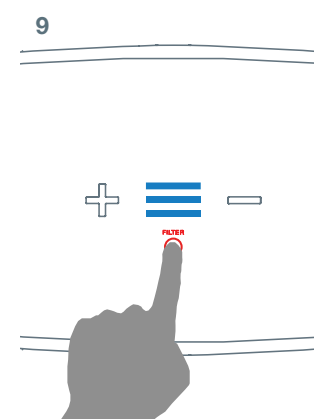


9 Plug in the power cord, turn on and touch and hold the red filter replacement light for three seconds. It will flash and disappear.

Adding the Carbon+ Filter



Keeping the filter sides closed, gently slide the Carbon+ Filter into the unit.

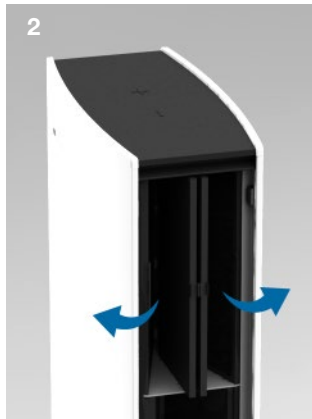

Push the sides out towards the main filter.



Snap the Carbon+ Filter to the main filter frame tab.

Filters

Patented HEPASilent™ technology makes the Blueair Pro Series incredibly quiet. The unit comes with a HEPASilent™ filter already installed.

Particle Filter. Includes a particle filter that removes dust, pollen, bacteria, pet dander, mold spores and other airborne particles. The particle filter is made of polypropylene, which mechanically filters out airborne particles. To maximize filter effectiveness, particles are negatively charged by the Blueair unit before reaching the filter.

SmokeStop™ Filter. Includes a combined particle and active carbon filter to remove gaseous pollutants such as cigarette and cigar smoke or other VOCs (volatile organic compounds, including household paints and other chemicals). Adding activated carbon to a filter may affect airflow and CADR. You may also notice a slight odor from the carbon when the filter is first used; this will quickly dissipate.

Carbon+ Filter. An extra active carbon filter stage that can be mounted in the Blueair Pro Series in addition to the main HEPASilent™ particle filter or SmokeStop™ filter. It provides extra protection against gaseous contaminants such as formaldehyde, sulphur dioxide and volatile organic compounds.

For optimal performance, Blueair recommends that you replace filters every six (6) months of use.

We offer a convenient Filter Subscription Program in some countries. Contact your local dealer or Blueair to find out whether the program is available to you.

IMPORTANT! Use only genuine Blueair filters to ensure proper function of your unit and to qualify for full warranty coverage.

Customer's Record

The model number and serial number of this product can be found on the bottom of the unit. Please note them in the space provided below and keep for future reference.

Model number _____

Dealer's name _____

Serial number _____

Dealer's address _____

Date of purchase _____

Telephone number _____


While the unit is running, the display will slowly disappear after 30 seconds. To activate the display again, simply touch one of the buttons.

Air Intelligence Module

By adding the Blueair Air Intelligence Module, the Blueair Pro Series can continuously monitor and report the surrounding air quality through state-of-the-art particle and gas sensors. The unit can also run on automatic mode, where the speed

is set according to the level of pollution the sensors are detecting.


If you wish to upgrade your Blueair Pro unit with an Air Intelligence Module, please visit www.blueair.com to find your closest dealer.

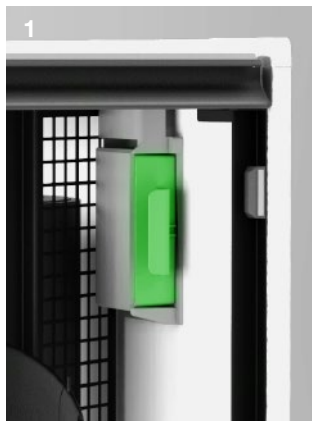

1 Pull out the dummy cover sitting in the module holder.



2 Insert the Air Intelligence Module into the module holder.

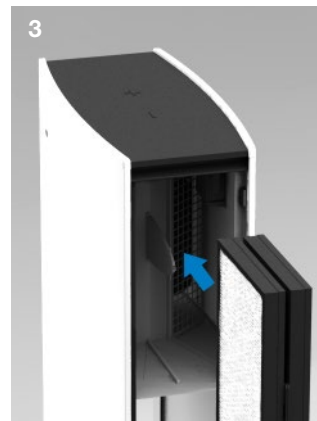

3 Insert the filter pack and re-attach the intake door.

Remove the top filter pack, see [Changing the Filter steps 1–4](#).

Air Intelligence Module Maintenance

- Remove the module from the unit.
- Use a vacuum cleaner to gently clean the intake in front of the gas sensor.
- Use a damp cotton swab to clean the dust sensor lens. After cleaning the dirt off the lens, use a dry cotton swab to wipe the lens. Do not use alcohol to clean the lens.
- Re-insert the module.





Blueair Pro

Professional Performance Superior Style

Blueair was founded on the belief that everyone should be able to enjoy clean air indoors, at home or in the workplace. We have become a global authority on how to remove indoor air impurities down to the tiniest particle thanks to our deep commitment to research and innovation. Our healthier air solutions work quietly and using very little energy to clean more air faster, removing allergens, asthma triggers, viruses, bacteria and other airborne pollutants.

We develop the world's best air cleaners because we passionately believe that clean air is a basic human right. Blueair – Innovated with love in Sweden.

www.blueair.com

Blueair AB
Danderydsgatan 11
SE-114 26 Stockholm
Sweden
Tel: +46 8 679 45 00
Fax: +46 8 679 45 45
info@blueair.se

Blueair (Shanghai)
Trading Co. Ltd.
Rm 1005 City Gateway
No. 398 North Caoxi Road
Xuhui Distr, Shanghai
Tel: +86 21 6091 0981
Fax: +86 21 6091 0989
info@blueair.cn

Blueair Inc.
Suite 1900
100 N LaSalle Street
Chicago
IL 60602
Tel: +1 888 258 3247
Fax: +1 312 727 1153
info@blueair.com



Blueair India
Embassy of Sweden
Nyaya Marg
Chanakyapuri
New Dehli – 110021
Tel: +91 11 4606 7121
Fax: +91 11 4606 7120
india@blueair.se