



Portable Wireless Speaker

HD-Mini

User's Manual

 
Please read this manual
before using the product

Thank you for choosing TREBLAB HD-Mini!

This speaker provides superior sound quality and portability, combined with entertaining features and the convenience of hands-free wireless operation.

WHAT'S IN THE BOX

1.

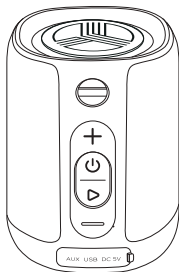


2.



3.



 4.




5.



HD-MINI

1. TREBLAB HD-Mini speaker
2. User's manual
3. Round TREBLAB logo sticker
4. Type-C charging cable
5. 3.5mm AUX cable

 BUTTONS AND PARTS

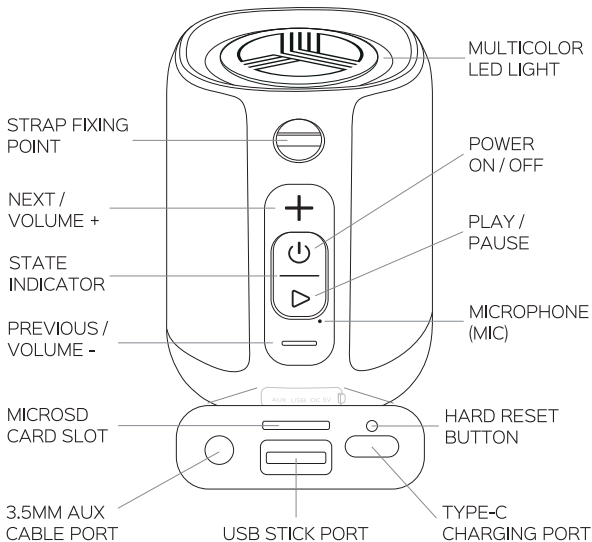

SPEAKER FUNCTION

Function	Operation
Power ON	Press and hold the POWER button for 2 seconds
Power OFF	Press and hold the POWER button for 3 seconds
Play/Pause	Press the PLAY / PAUSE button
Volume +	Press the VOLUME + button
Volume -	Press the VOLUME - button
Next track	Press and hold the VOLUME + button for 2 seconds
Previous track	Press and hold the VOLUME - button for 2 seconds
Switch between Wireless/AUX/SD card/USB stick modes	Press the POWER button
Turn ON/OFF the multicolor LED light	Double-press the PLAY / PAUSE button

Answer a phone call	Press the PLAY / PAUSE button during incoming call
Reject a phone call	Press and hold the PLAY / PAUSE button for 2 seconds during incoming call
End a phone call	Press the PLAY / PAUSE button when on call
TWS mode	Take two HD-Mini , double-press the POWER button on the master speaker while two of the speakers are turned ON and not connected
Disconnect	Press and hold the VOLUME + and the VOLUME - buttons simultaneously for 3 seconds when connected to a device
Factory reset	Press and hold the VOLUME + and the VOLUME - buttons simultaneously for 3 seconds when disconnected from a device
Hard reset	Press the HARD RESET button under the rubber cover
Mute sound (in the AUX mode only)	While connected via AUX cable, press the PLAY / PAUSE button

SETTING UP YOUR SPEAKER

Turn ON

Press and hold the **POWER** button for 2 seconds. You will hear the sound cue, the battery level indicators will light up, the multicolor LED light will start breathing white and the BLUE state indicator will start flashing.

Turn OFF

Press and hold the **POWER** button for 3 seconds. You will hear the sound cue and all the lights will go OFF.

WIRELESS PAIRING

Make sure **TREBLAB HD-Mini** is fully charged.

- Turn ON your speaker. You will see the BLUE state indicator flashing, meaning that the speaker is in pairing mode.
- Activate Bluetooth on the source device (smartphone, tablet, laptop).
- Select **TREBLAB HD-Mini** from the Bluetooth devices list. Keep the speaker within 3 feet / 1 meter from the source device while pairing.
- If prompted to connect by your device, select Yes.
- If requested a passcode, enter 0000.
- Once **HD-Mini** is successfully paired and connected, the BLUE state indicator will stop flashing and stay BLUE.

RE-CONNECTING

After the initial pairing, the speaker will automatically connect to the previously paired device when turned ON again. If reconnection does not happen automatically, the speaker will start looking for any other previously paired device within the effective distance range. **TREBLAB HD-Mini** can remember up to 6 recently paired devices.

NOTE: The speaker remembers the last mode it was in before it has been turned OFF. So, if the speaker is turned OFF in the SD card or USB-Stick mode (considering that the MicroSD card or the USB stick is still in the speaker), after being turned back ON, it will automatically go back to the SD card/USB stick mode.

TRUE WIRELESS STEREO (TWS) - PAIRING TWO SPEAKERS

The TWS technology allows you to use two speakers paired wirelessly to create a wireless dual-channel system, delivering a true stereo sound effect. While using this function, one speaker (Master, left channel) is paired with a source device, the other (Slave, right channel) speaker is paired with the Master speaker.

- Make sure that both speakers are turned ON in Wireless mode and not connected to any source device (BLUE state indicator should blink rapidly on both speakers).
- Select the master speaker and double-press the **POWER** button on

it to enter the TWS pairing mode. You will hear the sound prompt, and the speaker's state indicator will start flashing BLUE and GREEN.

- Once the speakers are paired in TWS, you will hear the sound prompt and the state indicator of the master speaker will start flashing BLUE rapidly. The other speaker's state indicator will turn BLUE.
- Enable Bluetooth on the source device and select **TREBLAB HD-Mini** from the Bluetooth devices list.
- If prompted to connect by your device, select Yes.
- If requested a passcode, enter 0000.
- Now you can use the speakers in stereo mode. Kindly note that the maximum distance between speakers should not exceed 33 feet / 10 meters.

There are a few ways to disable the TWS function:

- When the speakers are connected to the source device, press the **VOLUME +** and the **VOLUME -** buttons simultaneously for 3 seconds on the Master speaker - the connection with the source device will interrupt, but the speakers will remain in the TWS mode. This way you can connect another source device.
- When the speakers are connected to the source device, press the **VOLUME +** and the **VOLUME -** buttons simultaneously for 3 seconds on the Slave speaker - the Master speaker remains connected to the source device, but the Slave speaker will disconnect and enter the pairing mode.

When the speakers are NOT connected to the source device, press the **VOLUME +** and the **VOLUME -** buttons simultaneously for 3 seconds on either speaker - TWS connection between them will be interrupted.

NOTE:

1. When connected in TWS mode, the calling feature is available on the Master speaker only.
2. Once both speakers are turned back ON, they will try to reestablish the TWS connection. If you need to use the speakers separately, you need to **factory reset** at least one of them.
3. In case no TWS connection is established within 15 seconds, the speaker will exit the TWS pairing mode automatically.

AUDIO PLAYBACK

To pause and resume playback when connected wirelessly, press the **PLAY / PAUSE** button.

To adjust the volume, press the **VOLUME +** or the **VOLUME -** button while listening to music.

To change the track on the **HD-Mini**, press and hold the **VOLUME +** or the **VOLUME -** button for 2 seconds.

AUX MODE

You can connect **TREBLAB HD-Mini** to compatible devices using the supplied 3.5mm AUX cable.

- Turn the speaker ON.
- Plug one end of the supplied 3.5mm AUX cable into the 3.5mm AUX cable port on the back of the speaker (under the rubber cover). Plug the other end into the 3.5mm jack on your device.
- The state indicator will turn GREEN. Now you can play music and audio.

To mute the audio, press the **PLAY / PAUSE** button.

NOTE: On-device control is not supported for the NEXT, PREVIOUS and PAUSE functions when using the 3.5 mm AUX cable. Phone calls management using the **PLAY / PAUSE** button is not supported as well. You will need to make adjustments using your

SD CARD/USB STICK MODE

The **TREBLAB HD-Mini** speaker can play music from the MicroSD cards or USB sticks up to 512GB. All you need to do is to copy music to the memory card/USB flash drive (in folders or just to the card root), insert it into the MicroSD card slot/USB stick port on the back of the speaker (under the rubber cover). You will hear the sound prompt and the state indicator will turn green.

To start playing from the MicroSD card/USB flash drive, press the **PLAY / PAUSE** button.

The playlist is arranged according to song addition date (the older tracks play first).

The HD-Mini speaker supports the following formats: **MP2, MP3, WMA, APE, FLAC, AAC, MP4, M4A, WAV, AIF, AIFC**; and the following file systems: **FAT16, FAT32, exFAT, FAT64**.

NOTE: When inserting the MicroSD card into the speaker, the card's contact pad should be faced downwards.

PHONE CALLS

TREBLAB HD-Mini can be used to make and receive phone calls when connected wirelessly. Audio playback will be paused during calls.

To answer/end a call:	Press the PLAY / PAUSE button.
To reject a call:	Press and hold the PLAY / PAUSE button for 2 seconds.
To redial:	Press and hold the PLAY / PAUSE button for 2 seconds.

NOTE: For better call quality, face the microphone when you speak.

CHARGING

When the battery is running low, you will hear a sound signal.

TREBLAB HD-Mini may be used while charging in the Wireless, AUX and SD card/USB stick modes.

To charge the speaker, plug one end of the supplied cable into the TYPE-C charging port under the rubber cover on the back of the speaker. Plug the other end of the charging cable into a standard USB port. It takes up to 2 hours to fully charge.

If the speaker is turned OFF, the RED state indicator will light up. If the speaker is turned ON and connected to the device, the state indicator will turn PURPLE. The RED indicator will turn OFF or the PURPLE light will go BLUE when the speaker is charged.

Be sure to use a 5V DC, 0.5-2 A adaptor or charger. Using the power source with lower power will increase the overall charging time.

Unplug **HD-Mini** from the charging cable and the cable itself from the power source when not in use.

If the speaker is left unused, even the fully charged battery will lose its charge over time. We recommend fully charging the **HD-Mini** speaker at least twice a month to maintain sufficient battery life.

TROUBLESHOOTING

Problem	Solution
Not powering on	Make sure the speaker is fully charged. Charge for 2 hours, if necessary. Press and hold the POWER button for 2 seconds. Press the HARD RESET button on the back of the speaker (under the rubber cover).
Not charging	Clean the charging port using a soft brush. Try charging the case with another Type-C cable, power source, adaptor (if available). Press the HARD RESET button on the back of the speaker (under the rubber cover).
Not pairing	Make sure the speaker is in the Wireless mode. Make sure the speaker is not paired with any other device, as it

can only pair with one device at a time. Press the **VOLUME +** and **VOLUME -** buttons simultaneously and hold for 3 seconds. This will force the speaker to forget previously paired devices. Repeat the steps for pairing as previously described.

MicroSD card/USB flash drive is not recognized

The maximum supported size of 512GB is exceeded.

File formats unsupported.

File system of the memory card/USB flash drive is not supported.

Not finding a wireless driver on your laptop

Make sure your laptop supports wireless connections. If it doesn't, you will need an external wireless USB adapter compatible with your laptop. For further details, consult with your laptop manufacturer.

Frequent disconnection and noise

Ensure that nothing is blocking the signal between your device and the **HD-Mini**.

Check if the speaker is running out of power.

SAFETY RULES

- Don't disassemble or modify your speaker for any reason. Doing this may cause the speaker to malfunction or become combustible. The damage to your device can void the manufacturer's warranty.
- Make sure the speaker is completely dry before charging.
- Clean only with a dry cloth.
- Avoid exposing **TREBLAB HD-Mini** to extreme temperatures (below 37°F / 3°C or above 112°F / 45°C). Extreme temperatures can cause the deformation of the **HD-Mini** components and reduce the battery life and the lifespan of your new speaker.
- Don't put the device's LED lights close to humans' or animals' eyes.
- Do not use **HD-Mini** during a thunderstorm. Thunderstorms can cause serious malfunction and increase the risk of electric shock.

SPECIFICATIONS

Battery:	Input 5V/0.5A-2A
Charging time:	2 hours
Supported profiles:	A2DP/AVRCP/HFP/HSP/OPP/HID/SPP/ PBAP/GATT/SM
Speaker size:	1 x 60mm
Output power:	10W
Charging port:	TYPE-C
Audio port:	3.5mm jack
MicroSD card file systems:	FAT16, FAT32, exFAT, FAT64
MicroSD card supported formats:	MP2/MP3/WMA/APE/FLAC/AAC/MP4/ M4A/WAV/AIF/AIFC
Dimensions:	3.54 x 3.54 x 4.92 inches/90 x 90 x 125 mm
Weight:	1.31 lbs/595g

RECYCLING

The speakers can be recycled, and they should be in order to keep our planet clean. Where should you bring them?

In the **US**, there are a couple of options:

1. Best Buy has a recycling program. Just take the broken speaker with you next time you visit a Best Buy store.

This link will help you find the best location:

<https://www.bestbuy.com/site/store-locator/>

2. Check for other possible locations next to you on these websites (just enter your ZIP to find a location):

<https://www.call2recycle.org>

<https://search.earth911.com>

<https://recyclenation.com/find>

<https://www.cta.tech/Consumer-Resources/Greener-Gadgets>

In **Canada**, please visit the links below:

<https://thinkreuse.net>

<https://www.call2recycle.ca>

In the **UK**, please visit the links below:

<https://www.recycle-more.co.uk/>

<https://www.recyclenow.com/local-recycling>

THANK YOU

We truly appreciate that you chose **TREBLAB** as your trusted brand of wireless speakers and sincerely hope you enjoy the great sound and seamless usability **TREBLAB HD-Mini** provides.

We love making our customers happy by providing true value with our products. If for any reason you are not completely satisfied with your purchase or have any questions, please visit https://treblab.com/contact_us.

We care about our customers most of all and are always here to help you.



TREBLAB

1 YEAR WARRANTY

Parts and Labor Warranty

Please visit www.treblab.com to
register YOUR product.

Manufactured by Productech

Portable Wireless Speaker

HD-Mini



Made in China



WARNING: Cancer and Reproductive
Harm - www.P65Warnings.ca.gov

