 


# DREO

## Tower Fan

USER MANUAL

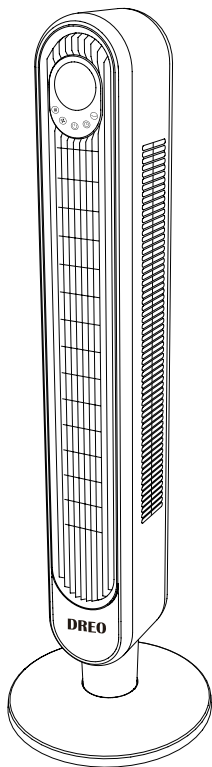

MODEL: DR-HTF001

# Thank You

## for Choosing Dreo !

*Your support means the world to us.  
We hope you enjoy our tower fan as much as we did creating it .*



Scan or visit [dreo.com/warranty](https://dreo.com/warranty)

to extend your warranty by registering your product. If you need any help, don't hesitate to email us to get expert support!



**Email: [support@dreo.com](mailto:support@dreo.com)**

# CONTENTS

<b>IMPORTANT SAFETY INSTRUCTIONS</b>	01
<b>ASSEMBLING YOUR TOWER FAN</b>	04
Package Contents	05
Assembly Instructions	06
<b>KNOWING YOUR TOWER FAN</b>	08
Control Panel/ LED Display	09
Specifications	11
<b>USING YOUR TOWER FAN</b>	12
Operating Instructions	13
Getting the Most out of Your Tower Fan	15
Additional Features	15
Remote Control	16
Battery Replacement	16
WARNING	16
<b>CLEANING AND MAINTENANCE</b>	19
<b>TROUBLESHOOTING</b>	22
<b>DREO CUSTOMER CARE</b>	24

**01**

**IMPORTANT  
SAFETY  
INSTRUCTIONS**

---

# IMPORTANT SAFETY INSTRUCTIONS

**READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.**

**Do not cover the air inlet and outlet while in operation.**

**Do not use the fan near flammables and combustibles.**

## GENERAL SAFETY

1. Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
2. Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
3. This appliance can be used by children aged above 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved.

## OPERATION SAFETY

4. Place the appliance on a flat, dry surface before use.
5. Do not immerse in water and any other liquids.
6. Do not use the appliance until the base is installed.
- 7 Do not insert your fingers, pencil and any other objects into the grilles while in operation.
8. Do not dismantle, repair, or modify. All servicing should be performed by qualified personnel.

## **ELECTRICITY SAFETY**

9. Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
10. Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
11. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, has been dropped or damaged in any manner.
12. Do not run the cord under carpeting, furniture or electrical devices. Do not cover the cord with throw rugs, runner rugs and other similar rugs. Keep the cord away from traffic areas to avoid tripping hazards.
13. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way, If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

### **FOR HOUSEHOLD USE ONLY READ AND SAVE THESE INSTRUCTIONS**

#### **Just a friendly reminder:**

 
In the event of an abnormality or malfunction, stop using the appliance immediately and contact Customer Support.

**02**

# **ASSEMBLING YOUR TOWER FAN**

---

# Package Contents

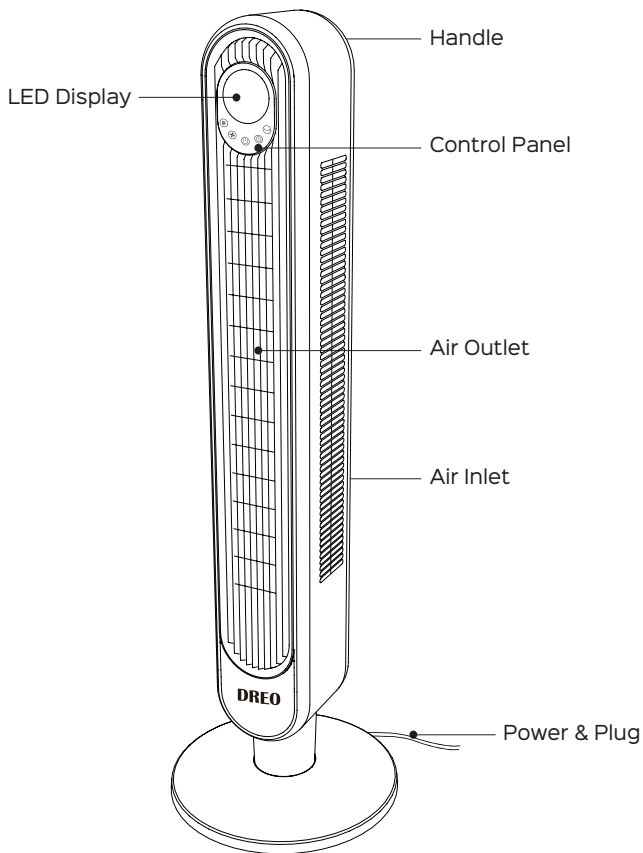


<b>Accessories</b>	Front Base Half
	Rear Base Half
	Thumb Screws x4
	Remote Control (battery included)

<b>Guides</b>	User Manual
	Quick Start Guide

## Assembly Instructions

 When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

1. Align the pegs and the holes, then snap two base halves together.
2. Run the cord through the center hole, and fit the base into the bottom.
3. Align four screws with the holes and drive them clockwise until tight.
4. Thread the cord through the cord keepers before putting the fan upright.

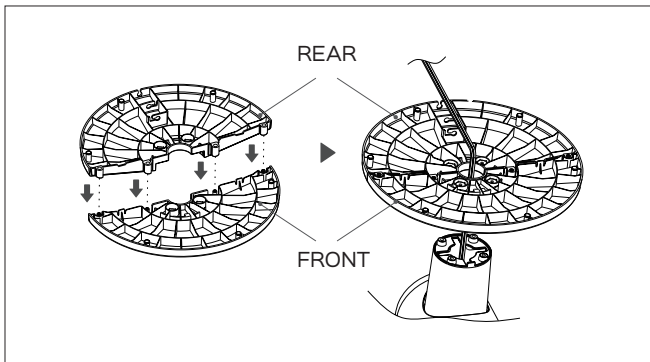

## CAUTION:

 
- Do not operate the tower fan if the base has not been installed.
- Make sure to thread the cord through all three cord keepers.






**03**

# **KNOWING YOUR TOWER FAN**

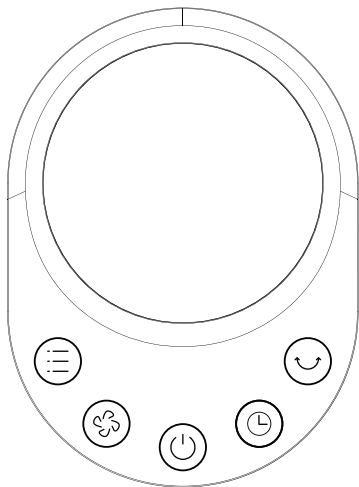







---

# Control Panel/ LED Display

 

				
Mode	Fan Speed	Power	Timer	Oscillation
Switch between Normal/ Natural/ Sleep/Auto	Adjust airflow volume (1-6 levels)	Turn power on/ off	Select time to turn off (0-12h)	Adjust airflow direction



 Normal Mode	<ul style="list-style-type: none"> <li>·6 speed levels</li> <li>·Constant airflow</li> </ul>	<b>AUTO</b> AUTO Mode	<ul style="list-style-type: none"> <li>·6 speed levels</li> <li>·Adaptable airflow</li> </ul>
 Natural Mode	<ul style="list-style-type: none"> <li>·6 speed levels</li> <li>·Changing airflow</li> </ul>	<b>TIMER</b> Timer	<ul style="list-style-type: none"> <li>·Off timer (0-12 h)</li> </ul>
 Sleep Mode	<ul style="list-style-type: none"> <li>·6 speed levels</li> <li>·Decreasing airflow</li> <li>·Display off in 20s</li> </ul>	 Temperature/ Timer	<ul style="list-style-type: none"> <li>·Ambient temperature / Timer hour (0-12h)</li> </ul>
 Fan Speed	<ul style="list-style-type: none"> <li>·6 speed levels</li> </ul>	 Fahrenheit	-
-	-	 Mute	<ul style="list-style-type: none"> <li>·Mute is on</li> </ul>
-	-	 Hour	-

**Note:**

- Mute function is only available on the remote control.
- The display will turn off automatically after 1 minute.

# Specifications



Model	DR-HTF001
Input	AC 120V 60Hz
Rated Power	45W
Battery Type	CR2025 3V

 


**04**


# **USING YOUR TOWER FAN**


---


# Operating Instructions


1.  Press the power button to turn the power on/off.
2.  Press the mode button to choose a working mode.

 Normal Mode	·Standard performance with constant airflow.
 Natural Mode	·Simulates a natural breeze with changing airflow.
 Sleep Mode	·Display turns off automatically after 5 seconds. Wake it up with any non-power button. ·Mute turns on automatically. ·Airflow volume decreases from the current speed every 30 minutes until it reaches level 1.
<b>AUTO</b> Auto Mode	·Fan speed will adapt to the ambient temperature.

 3.  Press the fan speed button to adjust the airflow volume.

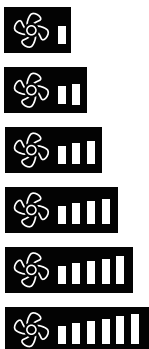

 4.  Press the oscillation button to change the airflow direction.

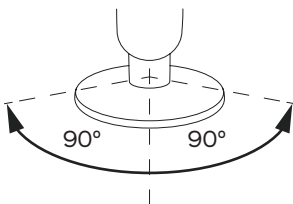

# Getting the Most out of Your Tower Fan

## Not an air conditioner

This tower fan helps improve the circulation of the cool air coming from your air conditioner. Find an ideal position and strategically use your fan to maximize the cooling effect in the room.

1. Remove any tall obstacles that might block the airflow from the fan.
2. Combine with your AC unit to get cooler air throughout the room.

## Additional Features



### Off timer

- Press to set a timer (1-12h).
- To cancel, set the timer to 0h.

*Note: Display will return to temperature after 10 seconds.*



### Mute

- Press to turn on mute.
- Press again to turn off mute.

## Memory

 
- If you turn off the fan, it will return to the previous mode (except sleep mode) and speed once you press the power button again.

*Note: If the fan is unplugged or loses power, all settings will not be remembered.*

## Auto Display Off

- Display will turn off automatically after 1 minute.

## Remote Control

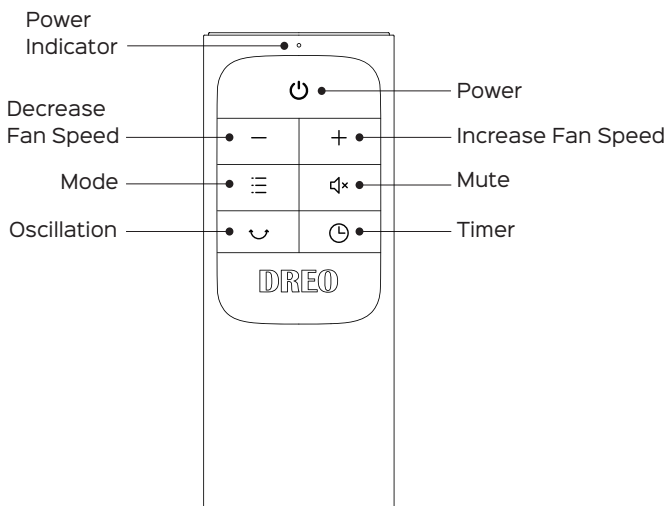

# Battery Replacement

 
*Note: If the indicator on the remote control doesn't turn on any more, please consider replacing the battery.*

①




Press the locking button to pop out the battery holder.

②

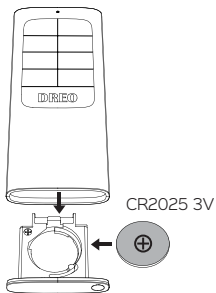

Replace with the same battery type with the (+) side facing up.

 ③

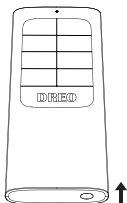

Push in the holder until securely locked into place.

## **WARNING**

### **Chemical Burn Hazard**

**Keep batteries away from children.**

- This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the battery, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**The batteries must be disposed of properly, including keeping them away from children. Even used cells may cause injury.**

**04**

# **CLEANING AND MAINTENANCE**

---

## Outer Surface

Gently wipe off the dust with a soft, dry cloth.

## Grilles & Blades

Remove the dust using a vacuum or air duster.

## CAUTION

- Always unplug the fan before any cleaning or maintenance.
- Do not immerse in water or get water inside the motor housing.
- Do not use any chemical agents when cleaning the fan.
- Store in a cool, dry place and cover it to protect from dust.

## Fuse Replacement

This appliance features a fused safety plug that protects against overload or short-circuit situations. If the fuse blows, please follow the below instructions or consult a qualified electrician.

1. Grasp the plug and unplug from the outlet.
2. Slide the fuse cover towards the blades.
3. Lever out the fuse and replace with a 2.5 amp, 125V fuse.
4. Close the fuse cover by sliding it back into place.

# WARNING

- Never replace a blown fuse with a higher-amp fuse.  
Risk of fire.
- Do not pull by the cord or operate the fan with a damaged cord or plug.
- Contact Customer Support if you need assistance or any other servicing.

**05**

# **TROUBLESHOOTING**

---

### **Q1: My fan won't turn on.**

A1: Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the fan. Check if the fuse has blown. If the fuse has blown, please refer to page.

### **Q2: My fan is shaky and wobbling.**

A1: Place the fan on a flat, level surface. Incorrect installation might also cause shakiness. Please refer to the assembly instructions in page.

*Note: that the power cord must be run through all three keepers.*

### **Q3: My fan is making vibration and noise.**

A3: Place the fan on a flat, level surface. Be sure not to insert anything into the air inlet and outlet.

If your problem is not listed or still persists, please contact our Customer Support at **support@dreocom**.

## **CAUTION**

- Always unplug the fan before any cleaning or maintenance.
- Do not immerse in water or get water inside the motor housing.
- Do not use any chemical agents when cleaning the fan.
- Store in a cool, dry place and cover it to protect from dust.

**06**

# **DREO CUSTOMER CARE**

---

# We're Here to Help!

If you have any questions or encounter any issues regarding your Dreo appliance, feel free to contact our Customer Support anytime. Your satisfaction is our first priority!

**Email: [support@dreo.com](mailto:support@dreo.com)**

\* Please have your order ID ready before contacting Customer Support.

## Default 12-Month Warranty

This appliance is covered by Dreo warranty for 12 months from the date of its original purchase. During this period, in the unlikely event that this appliance is defective or malfunctions due to faulty workmanship or manufacturing, you will get exchange at no cost.

## Extend Your Warranty

Extend your warranty by registering your new appliance on our website <https://dreo.com/warranty>. This will confirm ownership of your Dreo appliance in the event of expiry of the warranty period, and enable us to contact you if necessary.

### The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purposes.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.

- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Dreo.

We can only provide after-sales service for products that are sold by Dreo or Dreo authorized retailers and distributors. If you have purchased the appliance from a different place, please contact your seller for return and warranty issues.



**www.dreo.com**



**Email: support@dreo.com**



**Shenzhen Hesung Innovation Technology  
Co., LTD**



**26F, Bldg A7, Creative City, Shenzhen, China**



**MADE IN CHINA**



**Intertek  
5020677**

# **DREO**

**Looking for help? Send us an email to get  
expert support.**

**[www.dreo.com](http://www.dreo.com)  
[support@dreo.com](mailto:support@dreo.com)**