



HUSKY[®]

C1, C2, C3 Back Bar Chiller User Manual



To ensure safe operation, please read this user manual thoroughly before use.
© Husky. Husky reserve the right to change specifications at any time without notice.
Images used are for illustration only.





Welcome To Your New Husky

Thank you for buying this Husky commercial appliance. It has been designed and manufactured for many years of trouble-free service. Operation is very simple, but please take a few minutes to read this user manual. It contains important safety information, and tips to ensure you receive the best possible service from your Husky appliance.

Contents

Important Notes	3
Safety Instructions & Warnings	3
How To Minimise The Energy Consumption Of Your Appliance	4
Before Using For The First Time	5
Troubleshooting.....	6
Operating Instructions	7
To Operate The Electronic Thermostat	7
Interior Light.....	7
Defrosting	7
Replacing Led Lights.....	9
Installing Shelves	9
Easy Maintenance Access.....	9
Cleaning.....	9
Getting Service Assistance	9
Circuit Diagrams	10
Light Remote Controller	11





All models

Important Notes



WARNING: RISK OF ELECTRICAL SHOCK HAZARD

If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. **DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF.** Ensure that the appliance is properly earthed. Stop using the appliance immediately if electric shock is felt when touching the cabinet.

DISPOSAL OF OLD APPLIANCE

BE SURE TO MAKE ANY LOCKS UNUSABLE. IF POSSIBLE, REMOVE THE DOOR(S) AND DISCARD SEPARATELY.

WARNING - CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH OLD Appliance. CONTACT YOUR LOCAL AUTHORITY FOR PROPER DISPOSAL PROCEDURES.

Before disposing of an old appliance, please make sure it is switched off and safe. Unplug the appliance and break any locks in order to avoid children becoming trapped.

Please note: the appliance system contains gases and refrigerants which require specialist waste disposal. The valuable materials contained in a appliance can be recycled.

Contact your local waste disposal depot for proper disposal of an old appliance and contact your local authority or dealer if you have any questions.

Ensure the pipework of your appliance is not damaged prior to disposal. You can contribute to the environmental awareness by insisting on an appropriate non-polluting method of disposal.

WEEE COMPLIANCE

Husky appliances are authorised to carry the CE (Conformité Européenne) and WEEE (Waste Electrical and Electronic Equipment Directive) symbols.

The WEEE symbol on this appliance indicates that the product must not be disposed of with household waste. To help prevent possible harm to health and the environment, the product must be disposed of by recycling methods authorised as environmentally safe. For more information on how to dispose of this product appropriately, contact your dealer or the recycling department at your local authority. Husky appliances and their components undergo strict product testing by independent companies to comply or exceed all applicable local and international regulatory standards.



SAFETY INSTRUCTIONS & WARNINGS

Before switching on your Husky appliance, read the information in this user manual carefully. The user manual contains important observations relating to the assembly, operation and maintenance of the appliance.

Please keep this user manual in a safe place for future reference. If you ever sell this appliance, hand this user manual to the new owner. The manufacturer does not accept responsibility for any damages that may arise due to non-observation of these instructions.



- Do not use the appliance if it is damaged. If you are in any doubt, consult an engineer.
- Connection and installation of your Husky appliance are to be carried out in strict compliance with the relative instructions in this user manual.
- Make sure there is a suitable power outlet (230 volts, 13 amps outlet) with proper grounding to power the appliance.
- For safety, the appliance must be properly earthed in accordance with specifications.
- Always remember to unplug the appliance before cleaning. Never unplug this appliance by pulling on the power cable. Always grip plug firmly and pull straight out from the socket.
- All electrical repairs must be carried out by a qualified engineer. Inadequate repairs may be dangerous.
- Do not damage any parts of the appliance which carry refrigerant by piercing, perforating, crushing, twisting or scraping. If refrigerant comes into contact with the eyes it may cause serious eye injury.
- Do not obstruct or cover the ventilation grille.
- Do not allow children to play with the appliance, or to sit on it.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

HOW TO MINIMISE THE ENERGY CONSUMPTION OF YOUR APPLIANCE

- Energy consumption will be lower if the appliance stands in a well-ventilated space and in particular if the vents on the appliance are clear of obstruction.
- Do not place the appliance in direct sunlight or near a heat source such as ovens, radiators, heaters, etc. as this will increase energy consumption.
- Keep the appliance doors closed as much as possible.
- Setting the thermostat colder means higher energy consumption, so set only as cold as you really require.
- Do not overfill the appliance - overfilling means the cool air cannot circulate freely inside the appliance which may slow the process of chilling/freezing the contents and make the appliance less efficient.
- Defrost the appliance if frost can be seen building up inside - frost will increase energy consumption and make the chilling/freezing process slower (see section 'Defrosting').
- Turn the appliance off completely if it is not required for a period of days (or longer) to avoid wasting energy.
- Keep the door seal (gasket) clean and check regularly to ensure it is seated firmly and free from damage. Replace if required as a damaged seal will reduce the efficiency of the appliance.





BEFORE USING FOR THE FIRST TIME



IMPORTANT: Before switching the appliance on, we recommend you allow it to stand upright for 8 hours. Failure to do this may result in damage to the appliance.

- To ensure correct operation, it is important that the appliance is level. The appliance may be levelled by turning either or both of the adjustable feet in the front corners. Use a spirit level to check.
- Before operation, we recommend that the appliance is cleaned for reasons of hygiene and to remove any residue left from manufacture.
- For good circulation, vents must not be blocked. Keep a minimum of 100mm of clear space around the appliance. Your Husky appliance should be placed on flat and firm surface for quieter operation.
- Do not expose the appliance to direct sunlight or a heat source such as ovens, radiators, heaters, etc.
- Do not under any circumstances place heated food or beverages in your Husky appliance.
- Do not open the door more often than necessary to lessen the escape of cold air.
- For better air circulation, do not overfill the appliance.
- Adjust the thermostat according to the amount of product and the ambient temperature.
- This appliance has been tested as a beverage cooler and is not suitable for the storage of perishable food.



IMPORTANT: This appliance is intended to operate in a climate where the maximum temperature is 25 degrees Celsius and the humidity do not exceed 60%.





Troubleshooting

Before calling Technical Support, please check the following points; you may be able to solve any problem yourself.

 
Problem	Possible Cause	Action
The appliance has no power.	The appliance is not plugged in.	Connect the plug to the power supply.
	The plug and/or the power cable are faulty.	Call your supplier or a qualified engineer.
	The fuse has blown.	Replace the fuse with one of the same rating.
The appliance's internal temperature is too high or too low.	The wrong temperature is selected.	Check the controller and adjust the set temperature.
	The factory default settings for the controller are incorrect.	Contact Husky for advice.
	The condenser is blocked by an accumulation of dust.	Clean using a vacuum cleaner and soft brush attachment (see p9).
	The doors are not fully closed.	Check the appliance is level and the door seals are not damaged or not seated correctly.
	The appliance is close to a heat source or the ambient temperature is too high.	Move the appliance to a better location and check it is out of direct sunlight.
	The ventilation grille is blocked.	Move the appliance to improve free movement of air.
The appliance is noisy in operation or makes unusual noises. <i>• Note: It is normal to hear some noises as refrigerant flows through the compressor.</i>	The appliance is not on a level, firm surface, or the appliance may be touching other items.	Check location and position using a spirit level.
	The appliance is vibrating against a neighbouring object.	Relocate the appliance or the object.
Outer surfaces are wet	Appliance may be close to a water source or leak.	Dry surfaces thoroughly and move the appliance.
Inner surfaces are wet	The door may be opened too often or kept open too long. Door gasket may be unseated or damaged.	Try to minimise the opening of the doors for better cooling performance. Ensure door seals are seated correctly and replace if worn or damaged.





Operating Instructions TO OPERATE THE ELECTRONIC THERMOSTAT

REFRIGERATION LIGHT DEFROSTING LIGHT

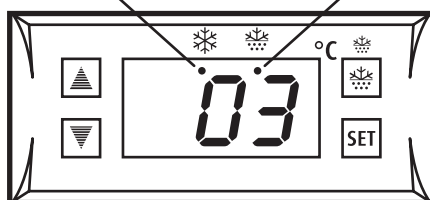

The thermostat has been pre-set, and in most cases it is not necessary to adjust the settings. When the appliance is operating normally, the display will show the current temperature. To display the set temperature press the **SET** button. Press the button again to return to normal operation.

To set a new temperature, press **SET**. The display will flash and the current set temperature will be displayed. Press the  button to increase the set temperature, or press the  button to decrease the set temperature. Press the **SET** button to save the new setting. The display will flash with the new value and then revert to display the cabinet temperature.

Please note:

1. When the appliance is connected to the mains for the first time there will be a short delay before cooling starts. During this time the Refrigeration Light will flash. After the short delay, cooling will begin and the Refrigeration Light will be illuminated. When the appliance reaches the set temperature, the Refrigeration Light will be off.
2. If you do not press any button, after six seconds the thermostat will return to its normal display.

 
 
 
 
INTERIOR LIGHT

The interior light may be switched on or off using the rocker switch on the inside right-hand wall of the cabinet (see Fig. 2 on page 9).

DEFROSTING


The appliance defrosts automatically at pre-set intervals. If however the door is opened too often, or if the appliance is in a location with high humidity, or if the contents are changed more frequently, it may be necessary to defrost the appliance manually. To start or stop manual defrosting, press the  button for six seconds. The Defrosting Light will be illuminated. Melt water runs to a container placed in the compressor compartment and evaporates. After defrosting is complete, the appliance will return to normal operation.



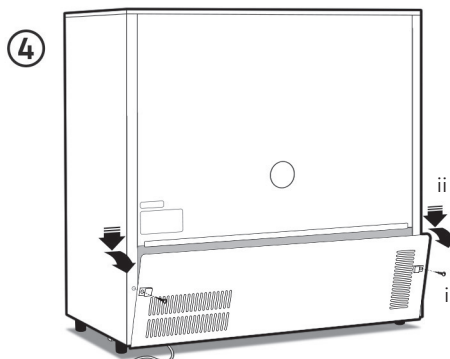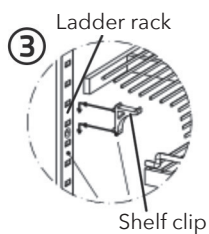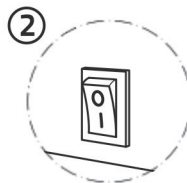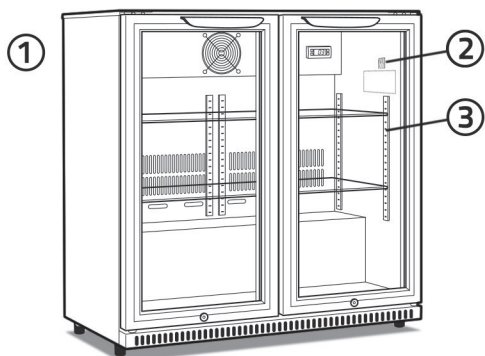

To access the compressor compartment:

 - i. Remove the two screws.
- ii. Push the removable panel down slightly to free it from the securing flange.
- iii. Angle the removable panel forwards and down to remove it.

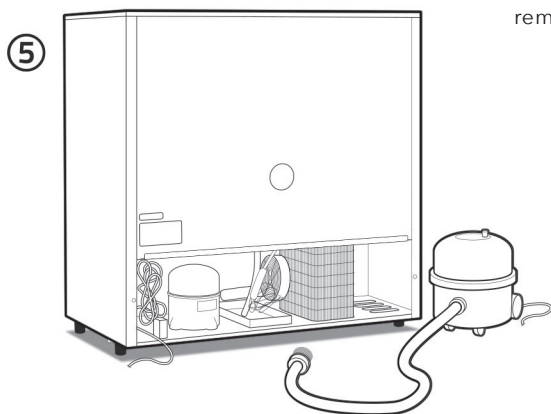



REPLACING LED LIGHTS

1. Disconnect the appliance from the power supply.
2. Pull the LED light out of the clips and disconnect the cable.
3. Refit the cable and push the LED light back into the clips.
4. Reconnect the appliance to the power supply.

INSTALLING SHELVES

Fit the shelf clips to the ladder racks (see Fig. 3 on page 9) and install the shelves horizontally. Ensure the clips are located firmly and the shelves are secure before loading the appliance.

EASY MAINTENANCE ACCESS

Switch the appliance off and disconnect from the mains supply. To access the compressor compartment, simply remove the screws securing the rear access panel – see Fig 4 on page 9. Any repairs or maintenance, other than CLEANING (see below) must be carried out by QUALIFIED ENGINEERS ONLY.

CLEANING

If the condenser coil is not cleaned quarterly, the energy efficiency of the appliance will decrease significantly and it will reduce the life of the appliance. Switch the appliance off and disconnect from the mains supply. See 'Easy Maintenance Access' how to access the compressor compartment. Use a vacuum cleaner fitted with a soft brush attachment to remove dust carefully from the condenser, the components and grilles – see Fig 5 on page 9.

The external and internal surfaces of the appliance should be cleaned regularly. Switch the appliance off and disconnect from the mains supply. Clean the external and internal surfaces of the appliance with a mild soap solution, then wipe dry. Do NOT use cleansers containing chlorine or other harsh cleansing agents, as these can damage the stainless steel surfaces and components. Use mild soapy water to clean the gasket and seals.

GETTING SERVICE ASSISTANCE

The cooling system is a hermetically sealed circuit and does not require any maintenance other than regular cleaning (see 'Cleaning').

 
If the appliance fails to work, first check the power supply. If you cannot locate the reason for the failure, please contact your supplier, stating the model and serial number of the cabinet. You will find this information on the rating plate, which is affixed inside the appliance on the top right-hand interior wall.






CIRCUIT DIAGRAMS


C1H-E-865 & C2H-E-865

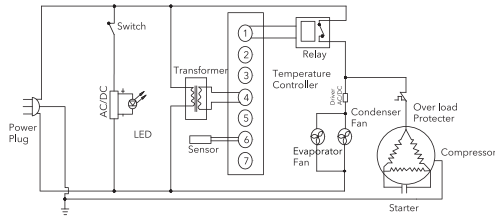


C2S-E-865

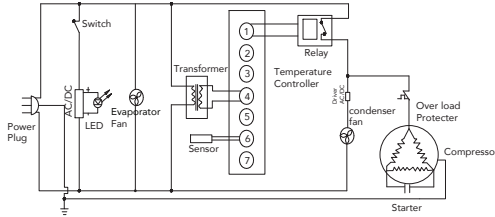 

C3H-E-865

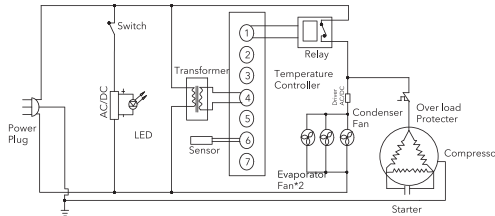 


 C1H-ECO, C2H-ECO, C3H-ECO, ALFC1 & ALFC2

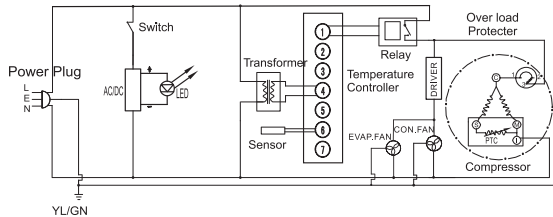



 Light Remote Controller (Applicable Models)

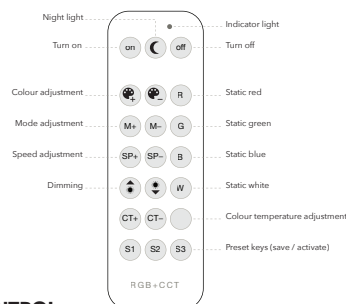

BEFORE USING THE REMOTE CONTROL

Insert 2 x LR03 (AAA), 1.5V alkaline batteries into the remote control before use. Batteries are not supplied.

SWITCH LIGHT ON/OFF

Use the keys ON and OFF to switch the lights on and off. (Note: this does not effect the cooling function!)

DEFAULT SETTING

The factory set up light color is red, use below instructions as required. When switching lighting off and later back on again, the lighting setting will return to the last session set up.

LIGHT COLOR ADJUSTMENT

Press the relevant light color key (red, green, blue, white) to set your desired color.

DIM/INCREASE LIGHT INTENSITY

Press and hold the Dim key  dim the lighting.

To increase the intensity of the lighting. Press and hold the Dim key  to dim the lighting.

FLASHING MODE

Press the Mode keys to activate the flashing mode. Press them again to switch between different flashing modes. To exit the flashing mode, press any static light mode key. In the flashing mode, press the speed adjustment key to change the speed of the light flashing.

PRESET MEMORY BUTTONS S1 S2 S3

These three buttons are used to store light modes, with a variety of built-in modes available. When you are satisfied with the current mode, press and hold one of these three buttons to save this mode. The next time you press this button, the saved light effect will be activated immediately. To replace a stored mode, wait until the desired mode is active, then press and hold the corresponding key to overwrite the previously saved lighting mode. These preset keys function as shortcuts to stored lighting modes, supporting both flashing and static lighting modes.

PAIRING NEW CONTROLLER

Turn off the power and wait for at least 5 seconds;

Turn on the power and press and hold the ON key min. 5 seconds. The Indicator light will flash slowly 3 times to indicate successful pairing.

SAFETY INSTRUCTIONS AND WARNINGS

This remote controller uses 2 x LR03, (AAA), 1.5V Alkaline batteries (not supplied)

There is explosion hazard if you replace the batteries in the remote with the wrong type of battery.

Store the accessories (batteries, etc.) in a safe location well out of the reach of children.

Do not dispose of batteries in a (n open) fire.

Do not short-circuit, disassemble or overheat the batteries.

Replace only with the same type or equivalent type of battery.

There might be environmental regulations that require you to dispose of batteries correctly.

Please contact your local authorities for disposal or recycling information.





Welcome to Husky, the home of smart refrigeration. We are a leading global refrigeration specialist with over 25 years experience in commercial refrigeration for convenience and hospitality professionals. Whatever your requirements, we're sure to have a good looking energy-efficient model that's perfect for you.

HUSKY[®]

www.husky.co.uk

HELPLINE/TECHNICAL SUPPORT

Tel: 01455 555340 (Monday to Friday 0900 – 1700).
Email: sales@husky.co.uk

SALES

Tel: 01455 555340 (Monday to Friday 0900 – 1700).
Email: sales@husky.co.uk

OUT-OF-WARRANTY SPARES

Email: sales@husky.co.uk

27.07.26

