

XTREME® DIGITAL LIFESTYLE ACCESSORIES		PRINTER SLUG FOR TECH PACK	
BRAND: XTREME CATEGORY: SOUND PRODUCT NAME: XB59-1087-BLK FILE NAME: XB59-1087-BLK_UserManual ITEM NUMBER: XB59-1087-BLK		ADDITIONAL PRINTING PROCESSES: UV SPOT: GLOSS METALLIC FOIL: DEBOSS: EMBOSS: VARNISHING TECHNIQUE: MATTE LAMINATION	
PRESS WORK: PRINT 1/1. TRIM TO SIZE, SCORE, FOLD WHEN SPECIFIED SCALE: 100% ASSEMBLED PACKAGE DIMENSIONS (in Inches) WIDTH: 3" HEIGHT: 4.9" DEPTH: DIELINE OVERALL DIMENSIONS (in Millimeters) WIDTH: 78.065mm HEIGHT: 124.873mm		PRESS SPEC COLOR REFERENCES  DIELINE  GLOSS UV SPOT  EMBOSHING (RELIEF)  DEBOSSING (SUNKEN)  FOLDING LINE  PRODUCT PLACEMENT  FOILING  GLUE FOLD  ø20mm SECURITY STICKERS PLACEMENT  BLISTER OR INNER TRAY PLACEMENT  CLOTH LIFT TAG	
MANUAL MATERIAL, THICKNESS & SIZE SUBSTRATE TYPE: MATTE ART PAPER C2S, 100gsm WINDOW: INNER TRAY: BLISTER: PLASTIC BAG: MAGNET: VELCRO: SECURITY STICKERS: HANG TAB COLOR/ MATERIAL/SIZE: FOAM CORRUGATED BOARD: PAPERBOARD: USER MANUAL: PRINT 1/1 IN BLACK ONLY		ADDITIONAL PANTONE COLORS (NOT CMYK) SOLID COLOR NAME: NEON COLOR NAME: METALLIC COLORS: VENDOR'S FOIL NAME/NUMBER:	
PACKAGING TYPES FOLDING CARTON: FOLDING CARTON WITH DOOR PANEL: RIGIT GIFT BOX: CLAMSHELL: SLIDING/SLIPCASE: TRAPPED BLISTER CARD BLISTER CARD: OTHER:		FILE SAVED AS: .ai = FULLY EDITABLE -OUT.ai = OUTLINED .pdf = Acrobat .jpg = Flat image .png = DIGITAL (transparent background)	
		APPROVAL CHECKLIST: PRIMARY DESIGNER: Rita Manukyan DATE: 08/06/2026 SECONDARY DESIGNER: DATE: PROOF READ: DATE: APPROVED BY: DATE: AUTHORIZATION SIGNATURES:	

Press Ready Artwork.
DO NOT PRINT THIS LAYER:
Printer Slug

PRINTABLE LAYER: Manual Artwork

FRONT PAGE

When folded, please make sure that this title page is visible and not folded inside.

FRONT PAGE

KEYS AND OPERATIONS GUIDE

Power Button

- Press and hold to power on/off

To access TWS (second speaker sold separately)

- Single-press the Power button on 1st speaker
- Single-press the Power button on the 2nd speaker at the same time

Note: Speakers must be the same model for a successful TWS.

Multifunction Play Button

- Single-press to play/pause while playing audio
- Single-press to answer an incoming call
- Single-press to end a current call
- Double-press to reject a call
- Press and hold to disconnect Bluetooth* connection

Track and Volume (+/-)

- Single-press (+) to increase volume
- Press and hold (+) to play the next track
- Single-press (-) to decrease volume
- Press and hold (-) to go to the previous track

Mode Button (M)

- Press (M) to switch between Bluetooth*, USB-A flash drive, MicroSD (TF) card, or AUX mode

Note: There will be a voice prompting the current mode the speaker is in.

LED Button

- Press to cycle through various lighting modes

EQ Button (EQ)

- Press to switch between the two track equalizer modes

Note: The effectiveness of this mode varies depending on the production mixing of the audio playing.

TIPS

- Interruption can be caused by obstacles between the speaker and the Bluetooth* device, by Wi-Fi or other high-frequency signals, or if the speaker is brought out of range of the Bluetooth* device.
- Ensure your speaker is fully charged before use.

6

FCC STATEMENT

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

7

ONE YEAR LIMITED WARRANTY

Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement if needed, only in which the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement.

*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service: customerservice@xtremecables.com

8

Scan the QR code below, or on the front of this manual to extend your warranty from 1 Year to 2 Year Limited.



Scan to Extend Your Warranty



XTREME™
SOUND

40W

PULSE40
WITH RGB LEDs



Scan to Extend Your Warranty



XBS9-1087-BLK
User Manual V1.0 0826
855.999.8041 | WWW.GOGETXTREME.COM

BACK PAGE SAFETY AND CARE INSTRUCTIONS Read all the instructions before using the product and then store them for future reference. Failure to follow these safety instructions could lead to fire, electrical shock, personal injury, property damage, or damage to the product. - This product contains a non-replaceable rechargeable lithium-ion battery. When discarding, follow your local and state guidelines. - Do not expose to rain, moisture, or other liquid. Do use near water such as swimming pools, bathtubs, or sinks. If it becomes wet, immediately unplug the product from a power source. Do not handle the unit. USB cord or wall charger with wet hands. - Do not charge, or use, the product if it has been submerged in water, or if water has got inside the product. - Do not expose to heat sources, the sun, or leave in a hot vehicle. Do not dispose of product in an active fire. - Do not expose the product to extremely high or low temperatures. Use this product in a location with a temperature of 32°F - 95°F. Prolonged exposure to extreme heat or cold reduces battery longevity. Exposure to fire or temperatures above 170°F could cause serious damage and explosion. - Do not disassemble, there are no serviceable parts inside. Do not drop. Do not use product if damaged or modified or if you see any bulging, swelling, leakage or other abnormality. - Never insert objects other than the specified cables into the product. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury. - Do not modify or try to use for a non-intended purpose. Overload outputs above rating may result in a risk of fire or injury. - Do not place anywhere where the product would become crushed or punctured. - Charge using the correct wall adapter and make sure that the adapter is inserted all the way into the electrical outlet. Disconnect the speaker once the product is fully charged. - This product is not a toy. Keep out of reach of children or those that require supervision. - Do not use abrasive cleaning solvents to clean the unit. - Store in a cool, dry location in the original package. Note: Lithium-ion batteries will self-discharge over time, and it is normal for battery performance to decline after several years of usage. To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long a lithium-ion battery will no longer have the ability to be recharged. 1	INTRODUCTION Thank you for choosing the Xtreme TWS Pulse 40 Speaker! Features dual 20W drivers that deliver clear and crisp audio. Whether you're relaxing at home or hosting friends, five vibrant RGB lighting modes add the perfect touch to your listening experience. Stream music wirelessly with Bluetooth® or connect through the AUX input, MicroSD (TF) Card Reader, or Flash Drive Reader. For even bigger sound, pair two compatible speakers with True Wireless Stereo (TWS) technology. Portable and rechargeable using the included USB cable for playing music anywhere you go (power adapter sold separately). SPECIFICATIONS - Speaker Wattage: 40W - Input Voltage: 5V DC - Speaker Output: 7.4V - Battery Capacity: 3,600mAh Lithium-Ion - Product Weight: 3.5lb - Parts Available: - USB-A Flash Drive Port (Input max: 64GB) - MicroSD (TF) Card (Supports up to 64GB) - Auxiliary (AUX) Input Port - USB-C Charging Port WHAT'S INSIDE 40W BT LED SPEAKER USB-A to USB-C Charging Cable User Manual 2	GETTING TO KNOW YOUR PRODUCT Before using your speaker, remove all components from the package. - Power - LED - Equalizer - Mode - Multifunction Play - Rewind to Previous Track/ Decrease Volume - Skip to Next Track/ Increase Volume - AUX Port - Flash Drive Reader - MicroSD (TF) Card Reader - USB-C Charging Port OPERATION CHARGING The speaker comes with an included USB-A to USB-C cable that can be used for charging. To use the USB cable - Locate the hidden ports at the back of the speaker. - Gently pull back the silicone cover from right to left. - Connect the included USB-C cable to the speaker's USB-C charging input port. - Connect the USB-A end to an appropriate power adapter (not included). - Plug the power adapter into a standard wall outlet. - Once the speaker is plugged in, a red indicator light will illuminate above the USB-C charging input port. - When the battery is fully charged, the red indicator light will automatically turn off, indicating a completed charging status. 3	OPERATION Note: Before first use, charge the speaker fully. Ensure the silicone cover is firmly sealed to protect the ports when not in use. - When the battery is low on charge, the speaker will emit a warning voice saying, "low battery, please charge." - Discontinue use and charge the speaker once more. After the speaker has been charged and the red indicator light turns off, operate the speaker by using the buttons displayed on the surface of the speaker. POWERING TO POWER ON/OFF - Locate the Power button: Press and hold the Power button to power on/off the speaker. - Once the speaker is powered on, there will be a confirmation tone followed by a voice prompting "Bluetooth® Mode," indicating the speaker is automatically in Bluetooth® mode. - When the speaker is turning off, there will be a voice prompting "Power Off," indicating the speaker is turning off. CONNECTING TO BLUETOOTH™ Once the speaker is successfully powered on, it will automatically go into Bluetooth® pairing mode. To connect the speaker to Bluetooth™ - Ensure the speaker is charged and powered on. A blinking blue indicator will appear next to the Power button, indicating the speaker is in Bluetooth® mode. - Ensure that Bluetooth® is enabled on your device. - Open the Bluetooth® settings on your device and search for new devices. - Select "Xtreme XBS9-10B7" from the list of available devices. - Once paired, a confirmation tone will sound. - To disconnect from Bluetooth® and allow the speaker to connect to other smart devices, press and hold the Multifunction Play button. Note: The speaker will automatically turn off if left idle and isn't connected to a Bluetooth® -enabled device. Note: The speaker will automatically reconnect to the last paired device when it is within Bluetooth® range, if enabled on the device used. 4	OPERATION TO CYCLE THROUGH LED COLOR MODES Once the speaker powers on and paired with a Bluetooth®-enabled device and playing audio, the LED lights will automatically flow rainbow colors. The speaker features various rainbow + solid color modes that can be cycled through using the LED button. - Locate the LED button on the top of the speaker. - Individual single presses of the LED button cycle through various color options, including turning off this feature. TWS PAIRING Link the speaker with a second Xtreme Pulse 40 speaker (sold separately) for a True Wireless Stereo experience. - Power on both speakers. - On one of the speakers, single-press the Power button. A prompting tone will sound, indicating the speaker is automatically searching for the second speaker to pair. - Single-press the Power button on the second speaker to enable synchronization. - Allow up to 15 seconds for both speakers to synchronize. - To cancel TWS pairing, single-press the Power button on either speaker. A prompting tone will sound, indicating TWS cancellation. EXTERNAL MEDIA To use external media to play audio, a compatible USB-A flash drive (64GB maximum), MicroSD (TF) card (64GB maximum), or an Auxiliary (AUX) cable will be needed (sold separately). - Locate the hidden ports at the back of the speaker. - Gently pull back the silicone cover from right to left. - Plug a USB-A flash drive into the speaker's USB-A port or a MicroSD (TF) card into the TF port to play preloaded media, or an Auxiliary cable into the AUX input port to connect and play media from external devices. Note: A USB-A flash drive and/or a MicroSD card must have media loaded directly onto it before use. - Individual single presses of the Mode (M) button allow you to switch between Bluetooth®, USB-A Flash drive, MicroSD (TF) card, or AUX mode. 5
---	--	---	---	---