



## CATALOGUE

Camera AC adapter kit installation instructions.....	2
Sony AC-PW20.....	3
Sony AC-FZ100.....	3
Canon ACK-E18.....	4
Canon ACK-E12/ACK-E17.....	4
Canon ACK-E5/ACK-E8/ACK-E10/ACK-E15.....	5
Canon ACK/E6.....	5
PANASONIC DMW-DCC12.....	6
PANASONIC DMW-DCC11.....	6
PANASONIC DMW-DCC8.....	7
Nikon EP-5A.....	7
Nikon EP-5B.....	8
FUJIFILM CP-W126.....	8
Precautions and after-sale guarantee.....	9-10

# Kimaru camera AC adapter

## Operating Instructions

Thank you for purchasing the Kimaru AC Adaptor. Before operating the unit, please read this manual thoroughly and retain it for future reference.

These operating instructions explain how to use the camera AC adaptor

### Identifying the parts

1. AC Adaptor
2. AC Power cord
3. DC coupler

This unit supports worldwide voltages 100 V to 240V, Do not use an electronic voltage transformer, as this may cause a malfunction.

This power adapter manufactured by Professional OEM factory, all production has passed many national product quality certifications such as UL CUL CE FCC GS ETL, Product quality is more stable and durable.

### Specifications

Input rating 100 V - 240 V AC 50 Hz/60 Hz

Output rating DC 7.4V / 7.6V / 8V / 8.4V / 9V (Subject to the specifications you buy)

Operating temperature 0 °C to 40 °C (32 °F to 104 °F)

Storage temperature -20 °C to +60 °C (-4 °F to +140 °F)

Dimensions (Approx.) 85mm×42mm×30mm(3.3in.×1.6in.×1.2 in.)/100mm×50mm×30mm(3.9in. × 1.9in.×1.2in.)

(excluding the projecting parts)

Cable length: Approx. 120 mm/4.72q Mass (Weight): Approx. 250 g/0.55 lb

Common installation of cameras DC coupler for your reference (If your camera model is not shown and you don't know how to install it correctly, please email us to consult.)

## Sony AC-PW20



①



②



③

1. Open the camera battery cover, Find the right direction to Insert PW20 DC coupler.
2. Pass the dummy battery cable through the slot on the side of the camera battery compartment
3. Make sure close battery compartment cover
4. Connect to the power adapter, turn on the adapter to power your camera.

## Sony AC-FZ100



①



②

1. Open the camera battery cover, Find the right direction to Insert NP-FZ100 DC coupler.
2. Pass the dummy battery cable through the slot on the side of the camera battery compartment
3. Make sure close battery compartment cover
4. Connect to the power adapter, turn on the adapter to power your camera.

## Canon ACK-E18



1. Open the camera battery cover, Find the right direction to Insert DR-E18 DC coupler.
2. Pass the dummy battery cable through the slot on the side of the camera battery compartment
3. make sure close battery cove compartment cover.
4. Connect to the power adapter, turn on the adapter to power your camera

## Canon ACK-E12/ACK-E17



1. Open the camera battery cover, Find the right direction to Insert DR-E12/DR-E17 DC coupler.
2. Make sure close battery compartment cover and open the plughole cover on the top of the battery compartment .
3. As shown in Figure 2, plug in the DC Coupler plug firmly.
4. Connect to the power adapter, turn on the adapter to power your camera

## Canon ACK-E5/ACK-E8/ACK-E10/ACK-E15



- 1.As shown in Figure 1,plug in the DC Coupler plug firmly.
- 2.Open the camera battery cover,Find the right direction to Insert DR-E8/DR-E10/ DR-E5/ DR-E15 DC coupler.
- 3.Pass the dummy battery cable through the slot on the side of the camera battery compartment and make sure close battery compartment cover.
- 4.Connect to the power adapter,turn on the adapter to power your camera.

## Canon ACK/E6



- 1.Open the camera battery cover,Find the right direction to Insert DR-E6 DC coupler.
- 2.Pass the dummy battery cable through the slot on the side of the camera battery compartment.
- 3.make sure close battery compartment cover.
- 4.Connect to the power adapter,turn on the adapter to power your camera.

## PANASONIC DMW-DCC12



1. Open the camera battery cover, Find the right direction to Insert DMW-DCC12 DC coupler.
2. Pass the dummy battery cable through the slot on the side of the camera battery compartment .
3. make sure close battery cove compartment cover.
4. Connect to the power adapter, turn on the adapter to power your camera.

## PANASONIC DMW-DCC11



1. Open the camera battery cover, Find the right direction to Insert DMW-DCC11 DC coupler.
2. Pass the dummy battery cable through the slot on the top of the camera battery compartment .
3. make sure close battery cove compartment cover.
4. Connect to the power adapter, turn on the adapter to power your camera

## PANASONIC DMW-DCC8



- 1.Open the camera battery cover,Find the right direction to Insert DMW-DCC8 DC coupler.
- 2.Pass the dummy battery cable through the slot on the side of the camera battery compartment .
- 3.make sure close battery cove compartment cover.
- 4.Connect to the power adapter,turn on the adapter to power your camera.

## Nikon EP-5A



- 1.Open the camera battery cover,Find the right direction to Insert EP-5A DC Coupler.
- 2.Pass the dummy battery cable through the slot on the side of the camera battery compartment and make sure close battery cover.
- 3.Connect to the power adapter,turn on the adapter to power your camera.

## Nikon EP-5B



1. Open the camera battery cover, Find the right direction to Insert EP-5B DC coupler.
2. Pass the dummy battery cable through the slot on the side of the camera battery compartment and make sure close battery cover.
3. Connect to the power adapter, turn on the adapter to power your camera.

## FUJIFILM CP-W126



1. Open the camera battery cover, Find the right direction to Insert CP-W126 DC coupler.
2. Pass the dummy battery cable through the slot on the side of the camera battery compartment and make sure close battery cover.
3. Connect to the power adapter, turn on the adapter to power your camera.



## Matters Needing Attention

- 1.If the shape of the plug does not fit the power outlet, use an attachment plug adaptor of the proper configuration for the power outlet.
- 2.The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 3.The set is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the set itself has been turned off.
4. If the DC coupler is not necessary, then remove it from the AC adaptor and the digital camera.
5. The camera becomes warm during use. This is not a malfunction.
- 6.Disconnect the AC Adaptor from the wall outlet (wall socket)immediately if any malfunction occurs while using your Digital Single Lens Reflex Camera
- 7.Do not place the unit in a location where it is:
  - Extremely hot or cold

- Dusty or dirty
  - Very humid
  - Vibrating
8. Unplug the unit from the wall outlet if it will not be used for extended period of time. To disconnect the cord, pull it out by the plug. Never pull the cord itself.
  9. Do not operate the unit with a damaged cord or if it has been dropped or damaged.
  10. Always keep the metal contacts clean.
  11. Do not disassemble or convert the unit.
  12. Do not apply mechanical shock or drop the unit.
  13. Keep the unit away from AM receivers, because it will disturb AM reception.

## After-sale guarantee

If your product does not work properly due to material or workmanship defects

a: replace it with a new

b: refund your purchase price

If you have any difficulties, please unplug the power plug and contact us.