

cusimax

INSTRUCTION MANUAL

4 SLICE TOASTER

**MODEL: CMWT-340DW
CMWT-340DB**



Thank you for purchasing the 4-slice toaster. Please read the User Manual carefully before use and keep it in a convenient place for future reference.

CONTENTS

Important Safeguards	1-6
Getting to know your Toaster.....	7
Product Specifications	7
Operating Instructions	8
Before Using the appliance the First Time	8
Tips for ideal toasting results.....	9
Using Your Toaster	10-11
Care & Cleaning Instructions	12
Storage	13
Trouble Shooting	13

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Carefully read all instructions before operating this appliance and save the instructions for further reference. Do not attempt to use this appliance for any other than the intended use, described in these instructions. Any other use, especially misuse, can cause severe injuries or damage by electric shock, heat of fire.
2. Any operation, repair and technical maintenance of the appliance or any part of it other than describable in these instructions may only be performed at an authoress service Coventry. Please contact your vendor.
3. Do not use outdoors.
4. This appliance is for household use only and NOT intended for use in moving vehicles. Don't operate or store the appliance in humid or wet areas or outdoors. Do not attempt to operate the appliance using any parts or accessories not Penderecki by the manufacturer.
5. Check the entire appliance regularly for proper operation-especially the power cord. The pins of the power cord must be clean, smooth and without discoloration. Do not operate the appliance when the appliance or any part of it is likely to be damaged, to avoid risk of fire, electric shock or any other damage or injuries to persons. The appliance is likely to be damaged if the appliances was subject to inadmissible strain (i.e. Overheating , mechanical or electric

- shock, moisture) or if there are any cracks, excessively frayed parts, or distortions. In this case, immediately unplug the appliance and return the entire appliance (including all parts and accessories) to an authorized service Coventry for examination and repair.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
 7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
 8. Bread, cakes and pastries can catch fire, when overheated! During operation keep the appliance in an appropriate distance of at least 20 cm on each side to furniture, walls, boards, curtains and other objects. Do not operate the appliance near inflammable liquids (i.e. High-proof alcohol) or beneath any heat-sensitive or moisture-sensitive materials or beneath boards or drop-lights to avoid damage caused by steam, condensate or fire.
 9. Before operating, always ensure that there are no foreign objects in the slots. Do not insert wrapped foods (i.e. kitchen foil), to avoid risk of fire, electric shock, and damage. Immediately unplug the appliance, if there is any kind of malfunction or problem (i.e. overheating or smoke is coming from the slots).
 10. Close supervision is necessary when the appliance is used near young children. Do not let young children play with any parts of the appliance. The appliance is not intended for use by children or infirm persons without supervision. For storage always keep the entire appliance dry and clean and

where young children cannot reach it. Do not place any hard and/or heavy objects on the appliance or any part of it.

11. Operate the appliance on a well accessible, stable, level, dry, and suitable large table or counter. Do not place any cloth or tissue beneath or on the appliance, to avoid any risk of fire, electric shock and overheating. Do not place any objects (i.e. Cold toast) on the appliance during operation. Always keep the table or counter clean and dry and immediately wipe off spilled liquids. Do not place the appliance near the edge of the table or counter or on inclined or wet surfaces or where it can fall.
12. Do not place the appliance or any part of it on or near hot surfaces (heater, gas burner, grill or oven)
13. During toasting, cakes and pastries can fall to pieces, bend and catch fire when over-heated. **DO NOT LEAVE THE APPLIANCE UNATTENDED, WHEN CONNECTED TO POWER SUPPLY.** Always disconnect the appliance from the power supply, when the appliance is not in use and before cleaning or moving. Always allow the appliance to cool down before cleaning. Always grasp the appliance on its side walls for moving or lifting it.
14. Only toast slices of simple cakes and pastries without any filling or glaze (i.e. Jam, mayonnaise, or icing) and of suitable size (12cm x 12cm; 1/2 to 2.4 cm thick). The slices may not protrude the slots or stick or jam in the slots. **DO NOT** use the toaster for toasting or cooking of very dry cakes and pastries (i.e. cookies) filled rolls or sandwiches.
15. Never use abrasive cleaners, cleaning pads, or any hard and sharp objects (i.e. Metal scouring pads) for cleaning.

Clean the toaster with a damp sponge or tissue and carefully dry the exterior of the toaster after cleaning. Do not handle the appliance or any part of it with violence. NEVER PLACE THE APPLIANCE OR ANY PART OF IT IN AN AUTOMATIC DISHWASHER.

16. Do not immerse the toaster or power cord in water, or allow moisture to come in contact with the appliance. DO NOT insert any foreign objects in the slots and do not poke in the slots to avoid risk of electric shock and damage of the heating elements.
17. If smoke comes out of the slots or the bread crumbles or bends in the slots, then immediately cancel the toasting process by pressing the CANCEL button and unplug the toaster. Wait for the toaster to cool down, before carefully removing jammed bread slices. Ensure not to damage the heating elements on each side of the slots. Always operate the toaster with the crumb tray in place.

HOT SURFACES- RISK OF BURNS

CAUTION: HOT SURFACE!

* Do not touch hot surfaces. Use handles or knobs.



FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

18. During operation do not place any objects (i.e. Cold bread slices) or tissue on the appliance, to avoid overheating of the heating elements.
19. The exterior of the toaster may get hot during operation. Do not touch the exterior of the toaster while the appliance is in use. Always keep your hand, face and arm as well as any clothing and other heat-sensitive objects away from the slots during operation.

20. **IMPORTANT:** Ensure, that the crumb tray is in place before operation the toaster .Otherwise crumbs may become charred on the bottom of the toaster and stick to the surfaces.
21. **IMPORTANT:** before each toasting process ensure, that the browning control is set to the correct level and not to high.
22. **WARNING:** Before operating , always ensure that there are no foreign objects in the slots. Do not insert any foreign objects in the slots and do not poke in the slots, to avoid risk of electric shock and damage of the heating elements. Never use force when removing jammed bread slices.
23. Only toast slices of simple cakes and pastries without any filling or glaze (i.e jam, mayonnaise or icing) and of suitable size.The slices may not protrude the slots or stick or jam in the slots. Do not use the toaster for toasting or cooking of very dry cakes and pastries (i.e. cookies) filled rolls or sandwiches.
24. During toasting, cakes and pastries can fall to pieces, bend and catch fire when overheated. Do not leave the appliance unattended, when connected to the power supply. Immediately unplug the appliance, if there is any kind of malfunction or problem (i.e. overheating or smoke is coming from the slots).
25. Never place the appliance or any part of it in an automatic dishwasher.

SHORT POWER SUPPLY CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Extension cords may be used if care is exercised in its use.

If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

For Products Purchased in the United States and Canada Only

To reduce the risk of electrical shock, this appliance has a polarized plug (one blade is wider than the other).

This plug fits a polarized outlet only one way.


If the plug does not fit fully into the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician.

Do not attempt to modify the plug in any way.

GETTING TO KNOW YOUR TOASTER

1. Bread Slots
2. Lift Lever
3. REHEAT Function
4. BAGEL Button
5. CANCEL Button
6. DEFROST Button
7. 6-level Browning Control
8. Removable Crumb Tray

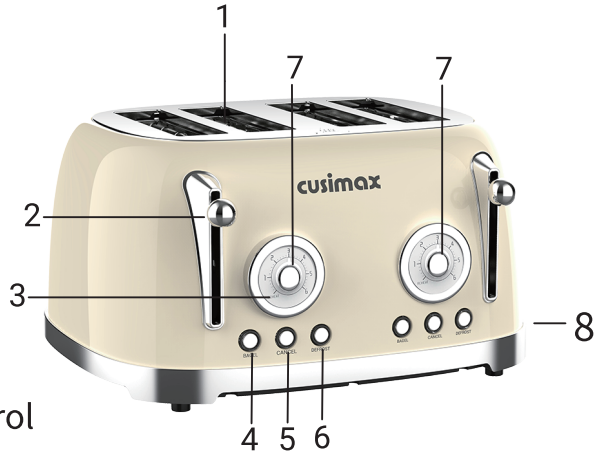

PRODUCT SPECIFICATIONS(FOR INDOOR USE ONLY)

Power	1650 Watts
Voltage	AC 120V
Frequency	60Hz

OPERATING INSTRUCTION

Before Using the appliance the First Time

If you are using your toaster for the first time, please be sure to:

1. Unpack the appliance carefully and check, if there are any parts damaged or missing.

CAUTION: It is important to carefully remove all packing and shipping materials (in the slots and under the Bread Lever) as well as any price-tags, but do not remove any warning rating label on the appliance. Ensure that there are no foreign objects (i.e. packing materials) in the slots before operating the appliance.

2. Wipe the outside of your toaster with a damp cloth.

3. Insert the Removable Crumb Tray into the crumb tray slot.

(Before operating the toaster, make sure the crumb tray is in place. Otherwise the crumbs may stick to the bottom of the toaster and get burnt.)

4. Make certain that the Bread Lever is in the uppermost position before plugging in the toaster's power cord.

5. Select a location for the toaster. The location should be:

- A flat, heat-resistant, non-flammable surface.
- At least three inches away from walls or the back of countertops.
- At least one foot away from any cabinet or shelving that may be above the toaster.
- Away from flammable materials, such as curtains and wall fabric.
- Away from a gas stove flame or electric element.

6. Plug the Power Cord into 120 Volt, 60 Hz AC outlet.

7. Plug in toaster without inserting any food into the bread slots, pushing the Bread

Lever all the way down until it locks. (The Lever will not lock if the toaster is not plugged into a power source.) The first toasting process will preheat the new elements and burn off any dust which may have accumulated during storage or manufacturing. It is normal for this burn off to create an odor.

Tips for ideal toasting results

1. You can interrupt the toasting cycle any time by pressing the "CANCEL" button.
2. Different types of bread have varying moisture content. Therefore, the same toast darkness setting can produce different results.
3. The required browning level depends on your special liking and the type and freshness of the toasted cakes and pastries. For example: a short toasting time (low browning level) is sufficient for toasting raisin pastry and fine white bread, but for toasting rye bread, you must select a higher browning level to get a similar result.
 - For bread that is slightly dry, use a lower toast darkness setting.
 - For fresh bread or whole grain bread, use a higher toast darkness setting.
 - Bread with an irregular surface requires a higher toast darkness setting.
 - Thick bread slices need more time for toasting; it may even be necessary to toast the bread a second time.
4. Smaller bread slices may be removed easier by lifting the Bread Lever to the HIGH LIFT position (approx. 2CM above the middle position).
5. Ensure to make an even and smooth cut. Use a sharp bread knife for cutting. Remove crumbs and protruding rims, especially when crisping up halved rolls.
6. If you toast only one slice, please select a low toast darkness setting.
7. If you toast several slices one after the other, the bread will be somewhat darker at the same toast darkness setting.
8. To toast frozen bread, waffles, ect. Please use the Defrost button.

Using Your Toaster

Inserting the bread into the Bread Slots and toasting:

1. Prepare the toaster as described in the section "Before using the appliance the first time".
 2. Using a sharp knife, cut the food (bread or similar cakes and pastries) in slices of eventhickness and appropriate size: max.12 x 12CM, 1/2 to 2.4CM thick. Try to get a smooth cut and remove the crumbs.
 3. Place the bread slices in the slots in the toasting chamber.
 4. Set the desired toast darkness with the darkness controls.
You can select from give toast darkness: Level 1 is very light, and Level 6 is very dark. For the first use, it is recommended to select a medium browning level (example 3 or 4).
 5. Press the Bread Lever down until it locks into place. The indicator lamp for "CANCEL" lights up (blue color light) and the toaster starts toasting.
 6. When the bread has been toasted to the set darkness, it is automatically ejected. The appliance shuts off automatically.
- NOTE: The Bread Lever will not engage in the browning position unless the toaster is connected to the power supply.



WARNING: Never insert your fingers or metallic utensils into the bread slots.

WARNING: Toaster food can be very hot. Handle with care.


The Defrost function

The Defrost function first thaws out the bread and then toasts it, which means that the thawing cycle lasts somewhat longer than the normal toasting cycle.

1. Insert the frozen bread slices in the slots and select the desired browning.
2. Press the Bread Lever down until it locks into place.
3. Press the DEFROST button.

The power indicator of the button illuminates.

The BAGEL function

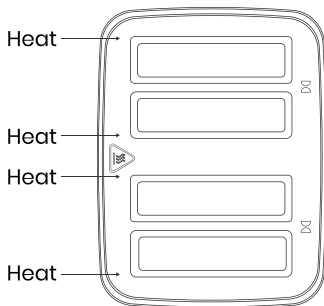

The 'Bagel' function allows for the toasting of bread, bagels and muffins etc on one side only, while the other remains warm.

1. Insert the bread slices in the slots
2. Press the Bread Lever down until it locks into place.

3. Press the BAGEL button. The power indicator of the button illuminates

The REHEAT function

Turn on the browning knob to choose the REHEAT, shortens the toasting time for crisping up toast.

Notes:

1. Toast is the default setting if no food or function select buttons are chosen.
2. When Both bagel and defrost Button pressed, both bagel light and defrost light will illuminate and the bagel time is somewhat longer than normal bagel toasting cycle.

CARE & CLEANING INSTRUCTIONS

1. Always the appliance to cool before cleaning.
2. Before cleaning, always turn off the appliance and unplug it from the power supply.
3. Do not immerse the appliance and power cord in water or other liquid or wash them in the dishwasher.
4. Wipe off the toaster with a damp cloth and a little dish washing detergent. Do not use any abrasive scouring agents, steel wool, metal object, hot cleaning agents or disinfectants, since they can damage the appliance.
5. To remove jammed bread slices, unplug the toaster and turn it over and shake lightly. Never attempt to remove jammed bread slices with sharp or pointed tools or silverware.
6. Remove crumb and any small pieces of bread from the crumb tray regularly. To do this, pull the crumb tray with a damp cloth, then dry it thoroughly and push it back into the appliance.
Warning: Crumbs will accumulate in the crumb tray and could catch fire if not emptied periodically.
7. The appliance must be completely dry before you use it again.



GENERAL INFORMATION

Tip: Your toaster has been designed for optimum toast balance. Some elements on the inside of the toaster may glow more brightly than others when in use. This is part of normal toaster operation.

To remove food jammed in the bread slots: Unplug the toaster and remove the food once the toaster has cooled down.

Do not place food on top of toaster while it is warming.

Do not try to force the food out with the toaster lift lever. This may damage the toaster.

STORAGE

Store the entire appliance on a clean and dry surface, where it may not tilt or fall and noother objects could fall on it and where it is safe from frost and inadmissible strain(mechanical or electric shock, heat, moisture, direct sunlight) and where it is out ofreach of young children. Do not place any hard or heavy objects on the appliance or anyparts of it.

Always switch off the appliance by pressing the CANCEL button and unplug the powerconnector if the appliance is not in use.

If the appliance is not in use for a long period of time, clean the appliance before storage.If required, wind the power cord around the cord storage in the bottom of the appliance.

TROUBLE SHOOTING

Nothing happens when I press the bread lever or buttons:

- Make sure the power cord is correctly plugged into the electrical outlet.
- Make sure the power cord is not damaged in any way.
- Make sure the electrical outlet is operative by plugging in another appliance. If it'snot, please check the circuit breakers or fuses in your home.



cusimax

18-month Limited Warranty

This appliance is warranted for 18-month from date of original purchase against defects in material and workmanship. This warranty does not cover transportation damage, misuse, accident or similar incident. This warranty gives you specific legal rights and you may have other rights, which vary from state to state. This product is intended for household use only, not for commercial use. Warranty does not cover commercial use.

Your new Cusimax appliance comes equipped with numerous safety features. Any attempt to interfere with the operation of these safety features makes this warranty null and void. In the event we receive an appliance for service that has been tampered with, we reserve the right to restore it to its original state and charge for the repair.

If you have any question regarding this warranty or would like to obtain warranty service, please contact support@cusimax.com and our Customer Satisfaction representative will respond to you.

thanks