



70\*90MM

## User Manual





Please read this manual carefully before using the camera.

### Warning

1. This is a precision product do not drop.
2. Do not expose the unit to strong magnetic objects, elds may cause changes to the images and sounds.
3. Never leave the products exposed to high temperatures and direct sunlight.
4. Use only hi-grade Branded TF card. Neutral cards are not guaranteed to work correctly.
5. When charging observe for any overheating, if device gets hot please unplug to prevent re hazard.
6. While charging, keep the product out of children's reach.
7. Keep the device in cool, dry and dust-proof place.

### Product structure

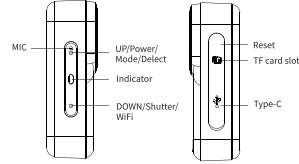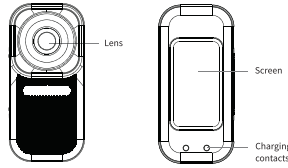

### Start using charging

The camera can be charged using the included Type-C data cable through a power adapter (5V/1A) or charging dock. When the battery is charging, the charging indicator light will turn red. After the battery is fully charged, the charging indicator light will automatically turn off.

### Installing a memory card

Insert the TF card into the card slot in the correct direction. When you hear a "click" sound, it means that the memory card has been correctly installed. If you need to remove it, push the memory card inward and the memory card will pop out automatically. (It is recommended to use a C10 or higher-speed memory card).

### Power on/off

Power on: Long press the UP key to turn on the camera, the blue light will stay on, and the camera will enter the video recording standby mode. Power off: When the camera is turned on, long press the UP key to turn off.

### Setting

Insert the memory card into the camera, connect the computer with a data cable, modify the parameters (date/time/resolution, etc.) in the SYSConfig.txt file, save and restart the camera. The settings will be automatically updated.

### Record Video

In recording mode, short press the Down key to start recording, the blue light flashes, and when the TF card is full, the recording stops [the loop recording mode can be set, saving once every 3 minutes (can be set to 1/2/3/5 minutes), and when the TF card is full, the previous video will be overwritten and recorded in a loop]. Short press the Down key again to pause recording, and the camera enters standby mode.

### Take Picture

In standby mode, press the Up key to switch to photo mode, press the Down key to start taking photos, and the blue light flashes once.

### Playback

In standby mode, press the Up key to switch to playback mode, press the Up/Down key to view the captured photos and videos, select the video to play, long press the Down key to start playing. Double click the Up key to delete the current/all files, long press the Up key to exit playback mode, and the camera enters standby mode.

### Install and use WiFi

WiFi connection (for WiFi model)  
Please download and install "GoPlus Cam" application on your smart phone before starting WiFi function  
PS: For Android, please download from Google Play, for iOS, please download from Apple Store, it can be downloaded from mobile app stores in China.



Scan the QR code to download the APP

### Connecting step:

- a. When turning on the phone, press and hold the "DOWN" button to turn on WiFi, WiFi information appears on the screen.
  - b. Finding out "FM1-\*\*\*\*\*" network on your smart phone, then connecting it by entering the original password:12345678
  - c. Operating the GoPlus Cam application  
Now you can preview in real time and remote control your camera on your phone, also you can download files from the camera to your phone.
- Disconnecting the WiFi connection:  
Long press the "DOWN" key to exit WiFi mode.

### Statement

• For product improvement, if the design is changed, the actual situation will prevail. No notice will be given.

- Please note that excessive volume may cause hearing loss.
- Please use the machine for training, learning, and interviews. Secret recording is prohibited.
- If there are any incomplete details or typos in the operation or manual of this machine, please correct them.
- If the machine is used in a place not allowed by law, you will be responsible for it.

### Parameter

Screen size	1.47 inch HD Screen
Photo resolution	12MP
Photo format	JPG
Video resolution	1080P/720P
Video format	MOV
Support memory	Up to 128GB
Battery	400mA Li-ion battery
Charging case	1000mA Li-ion battery
Charging voltage	DC-5V

## 使用说明书





使用相机前,请仔细阅读说明书

### 注意

1. 本产品精密,请勿跌落。
2. 请勿将本产品暴露在强磁场环境中,磁场可能会导致图像和声音发生变化。
3. 切勿将本产品暴露在高温和阳光直射下。
4. 请使用高品质品牌内存卡,中性卡无法保证正常工作。
5. 充电时,请观察设备是否过热,如果设备过热,请取下电源插头,以防止火灾。
6. 充电时,请将本产品放在儿童接触不到的地方。
7. 请将设备存放在阴凉、干燥、防止虫咬的地方。

### 产品结构

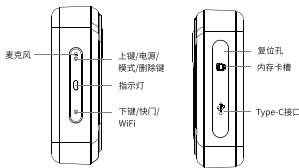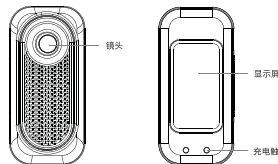

### 开始使用

#### 充电

可以使用随附的Type-C数据线通过电源适配器(5V/1A)或充电座为相机充电。电池充电时,充电指示灯会亮起红色。电池充满电后,充电指示灯会自动熄灭。

#### 安装内存卡

将内存卡按正确的方向插入卡槽,当听到“哒”的一声即表示内存卡已经正确安装。如需取出,请将内存卡向内推一下,内存卡会自动弹出(建议使用C10或更高速度的内存卡)。

### 开机/关机

开机:长按上键3秒开机,蓝灯常亮,相机进入录像待机模式。  
关机:相机开机状态下,长按上键3秒关机。

### 相机设置

将内存卡插入相机,用数据线连接电脑,修改SYSConfig.txt文件中的参数(日期/时间/分辨率等),保存后重启相机,设置会自动更新。

### 录像

在录像模式下,短按下键开始录像,蓝灯闪烁,当TF卡已满时,就停止录像【可设置循环录像模式,每3分钟(可设置1/2/3/5分钟)保存一次,当TF卡已满时,前面的视频将被覆盖并循环录像】。再次短按下键可暂停录像,相机进入待机模式。

### 拍照

待机状态下,点按上键切换到拍照模式,点按下键开始拍照,蓝灯闪烁一次。

### 回放

待机状态下,点按上键切换到回放模式,点按上下键查看拍摄的照片和视频。选择要播放的视频,长按下键开始播放。双击上键删除当前/全部文件。长按上键退出回放模式,相机进入待机状态。

### WiFi的安装和使用

WiFi连接(适用于WiFi型号)  
开启WiFi功能前,请在您的手机上下载并安装"GoPlus Cam" APP  
PS: Android请在Google Play下载,IOS请在Apple Store下载,国内可在手机应用商店下载。



扫描二维码下载APP

### 连接步骤:

- a. 开机后,长按“下键”打开WiFi,屏幕出现WiFi信息。
- b. 打开手机WiFi,找到“FM1-\*\*\*\*\*”网络,然后输入原始密码连接:12345678
- c. APP操作  
现在您可以在手机上实时预览和远程控制您的相机,也可以将文件从相机下载到您的手机。  
断开WiFi连接:长按“下键”,退出WiFi模式。

### 声明

• 为应产品改良之需要,如设计变更,以实际为准,恕不通知。

- 请注意,音量过大可能会造成您听力受损。
- 将机器用在培训、学习、采访方面,禁止偷录。
- 如本机操作或说明书有不详细之处及错别字,欢迎指正。
- 如将本机用在法律所不允许之处,责任自负。

### 参数

显示屏	1.47英寸高清屏
照片分辨率	12MP
照片格式	JPG
视频分辨率	1080P/720P
视频格式	MOV
支持内存	最大支持128GB
电池	400毫安锂电池
充电仓	1000毫安锂电池
充电电源	DC-5V



FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.