 


DOG TRAINING COLLAR

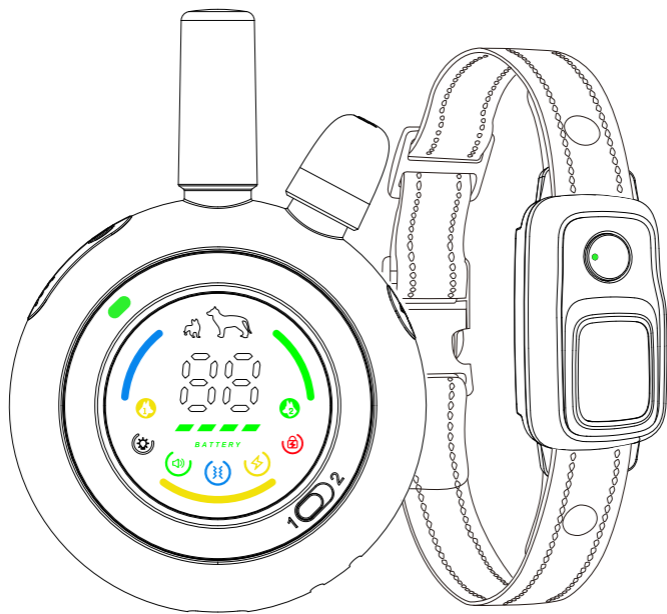

USER MANUAL

MODEL: VS10

1. Important Safety Information:

WARNING

Not for use with aggressive dogs. Do not use this product if your dog is aggressive or prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or a certified trainer.

 
- ◆ For use with dogs over 6 months of age and over 8 lbs.
- ◆ **DO NOT** use when the dog or the collar is wet.
- ◆ **DO NOT** press and hold the shock or vibrate for more than 10 seconds to avoid physical or psychological damage to your dog.
- ◆ Your dog **SHOULD NOT WHINE OR PANIC** when receiving stimulation. If this happens, the stimulation level is too high, and you need to go back to the previous level and repeat the process.
- ◆ **DO NOT** charge the device near any flammable substances.
- ◆ This product is intended for dogs only and must not be applied to humans.
- ◆ This is not a toy, and should only be operated by a responsible adult.
- ◆ This product contains Lithium-ion (Li-ion) batteries; never incinerate, puncture, deform, short-circuit, or charge with an inappropriate charger. Fire, explosion, property damage, or bodily harm may occur if this warning is not followed.

CAUTION

Before your first training, please carefully read and follow the instructions in this manual. The cautions below will help keep your dog safe and comfortable. Millions of dogs are comfortable wearing collars, while some are sensitive to the pressure from the contacts.

- ◆ It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash (do not attach the leash to the receiver). The leash should be long enough for your dog to attempt to chase an object but short enough to prevent reaching roads or other hazards. You must also be physically strong enough to restrain your dog when he tries to chase.
- ◆ Risk of skin damage. Proper Receiver fitment is important. A Receiver worn for too long or made too tight on the dog's neck may cause skin damage. Ranging from redness to pressure ulcers, this condition is commonly known as bed sores.
- ◆ **DO NOT** leave the Receiver on the dog for more than 12 hours per day.
- ◆ When possible, re-position the Receiver on the dog's neck every 1 to 2 hours.
- ◆ Check the fit to prevent excessive pressure; follow the instructions in this manual.
- ◆ Never connect an extra leash to the Receiver; it will cause excessive pressure on the contacts.
- ◆ Clean the dog's neck area and the Metal Prongs of the Receiver weekly with a damp cloth.
- ◆ Examine the contact area daily for signs of a rash or a sore.
- ◆ If a rash or sore is found, discontinue the use of the Receiver until the skin has healed. If the condition persists beyond 48 hours, see your veterinarian.
- ◆ The Receiver Collar meets IP67 waterproof rating. It can be submerged in water up to 1 meter for up to 30 minutes. If submerged and wet, please do not use it.

II. Package Content

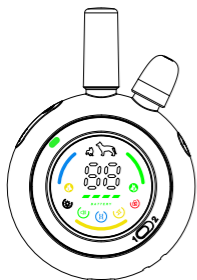

Remote Transmitter



Receiver Collar



User Manual



 
Test Bulb



Metal Prongs



Conductive
Silicone Caps

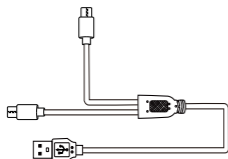


USB Type-C Cable




Wrist Strap

III. Product Overview

 Remote Transmitter

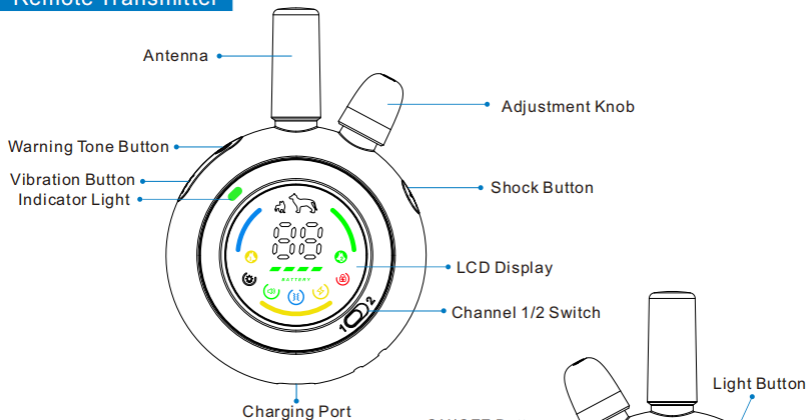

Display Screen


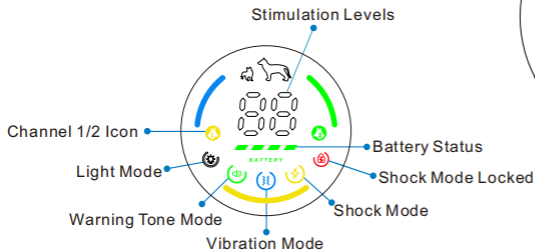 


Note: The Remote Transmitter will go into sleep mode if no operation in one minute.

Remote Transmitter Indicator Light:

Charging	The Green Indicator light blinks regularly
Fully Charged	The Green Indicator light turns solid
Press 	The Green Indicator light turns on
Press 	The Green Indicator light turns on
Press 	The Green Indicator light turns on
Press 	The Red Indicator light turns on

  
Receiver

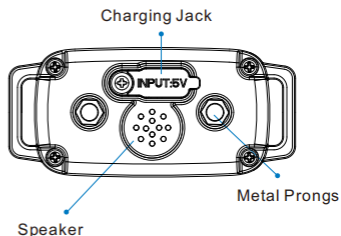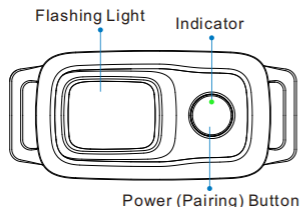

Receiver Indicator Light:


	Slowly blinking indicates the Receiver is on
	Fast blinking indicates the Receiver is on charge
	Faster blinking indicates the Receiver battery is low

 IV. Quick Start Guide

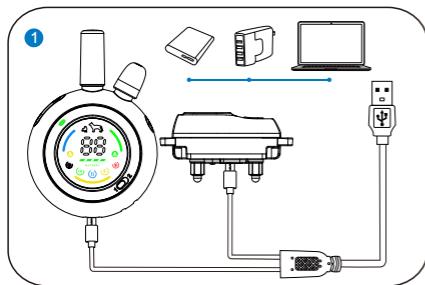


Charge the Receiver and the Remote Transmitter for 2-3 hours with the double-headed Type-C Cable from the package box.

 
Note: The charger, power bank, and other charging devices shown in the above picture are not included in the box.

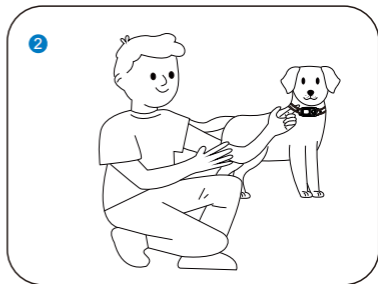

 
Make your dog sit down and fit the Receiver to your dog by leaving one finger space between the collar and your dog's neck. Center the Metal prongs underneath your dog's neck, touching the skin.

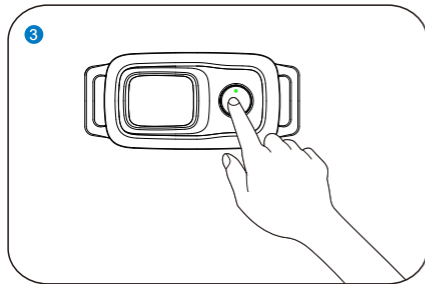

 
To turn on the Receiver, press and hold the Power (Pairing) Button for 2 seconds. A vibration will indicate that the Receiver is on. The green indicator light will then continue to blink regularly.

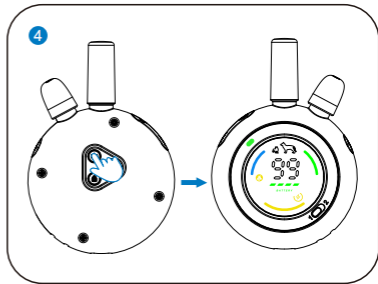

 
To turn on the Remote Transmitter, press and hold the ON/OFF Button located on the back for 2 seconds until the Display lights up.

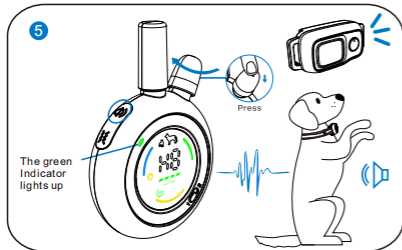


Warning Tone Command: Press the Warning Tone Button, and the green Indicator Light on the Remote Transmitter rapidly lights up. The Receiver will deliver a warning tone, and the green Indicator light on the Receiver comes up simultaneously. To adjust the Warning Tone level, press the Adjustment Knob to select the Warning Tone Mode first, then turn the Adjustment Knob left and right to raise/lower to the desired level, and finally press  button to confirm the modification.

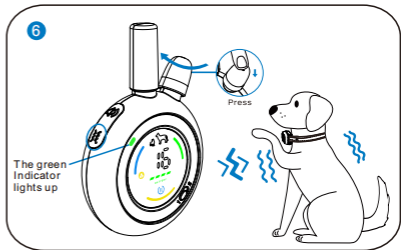 

Vibration Command: Press the Vibration Button, and the green Indicator Light on the Remote Transmitter rapidly lights up. The Receiver will deliver vibration, and the green Indicator light on the Receiver comes up simultaneously. To adjust the Vibration level, press the Adjustment Knob to select the Vibration Mode first, then turn the Adjustment Knob left and right to raise/lower to the desired level, and finally press  button to confirm the modification.


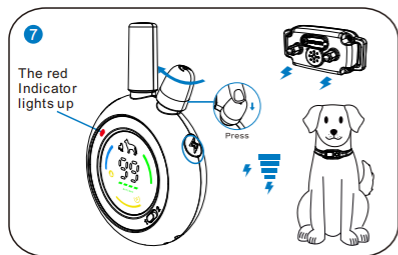 


Shock Command: Press the Shock Button, and the red indicator Light on the Remote Transmitter rapidly lights up. The Receiver will deliver a shock, and the red Indicator light on the Receiver comes up simultaneously. To adjust the shock level, press the Adjustment Knob to select the Shock Mode first, then turn the Adjustment Knob left and right to raise/lower to the desired level, and finally press  button to confirm the modification.

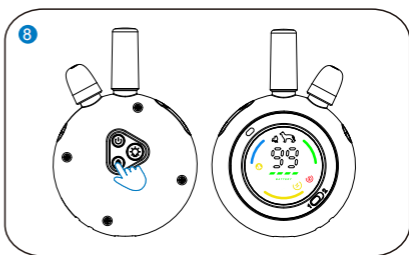 

Lock the Shock Mode: To disable the Shock function, press the Shock Mode Lock Button. The Locked icon will appear on the Remote Transmitter, indicating that the Shock function is disabled. To re-enable the Shock function, press the Shock Mode Lock Button again. The locked icon will disappear, indicating that the Shock function is now active.

  9

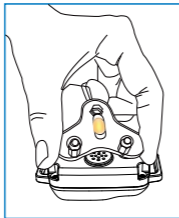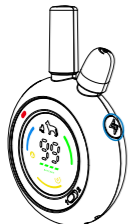


Test the Receiver with the Test Bulb:

1. Turn the Receiver on.
2. Hold the Test Bulb to the Metal Prongs on the Receiver. Make sure the metal wire in the Test Bulb has direct contact with both of the tops of the Metal Prongs.
3. Press the Shock Button on the Remote Transmitter.
4. The Red Test Light will flash if the Receiver works normally. At higher shock levels, the Test Bulb will flash brighter.

Note:

- (1) While you test the Receiver with your fingers, please put your two fingers on the top of the Metal Prongs separately to form a closed loop circle.
- (2) Please always start from the lowest Shock level to avoid accidental injury.

 10

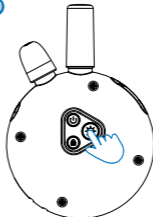

Light Mode: Press the Light Button once; the Receiver's light will stay on, and the 'L1' icon will show on the Remote Transmitter.

Press the Light Button twice; the Receiver will keep flashing, and the 'L2' icon will show on the Remote Transmitter.

 
 
Press the Light Button again to turn it off, and the 'L0' icon will display on the Remote Transmitter.

Note: 1. The Light will auto-shut off after 5 minutes with no remote operation.


2. Any other button operation will immediately disable the flashing light function.

11

2

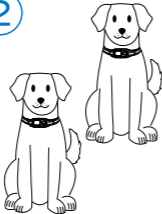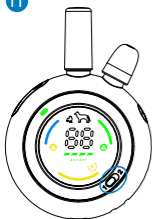

 To switch the channel, slide the Channel Switch of the Remote Transmitter. This product can be used to train up to two dogs.

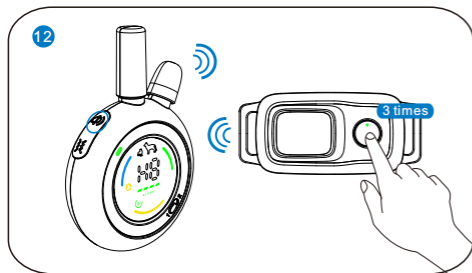

In case the Receiver is not responding to the Remote Transmitter, follow these Steps to pair the Remote Transmitter to the Receiver:

1. Press the Power (Pairing) Button on the Receiver 3 times to enter the Pairing Mode. You will hear a beeping tone and the green indicator will light up; now you have 15 seconds to complete the pairing process;
 2. Press any Stimulation Button on the Remote Transmitter, and the Receiver will respond correspondingly, indicating that the pairing process is completed.
- Please refer to "VIII. Pairing Up" on page 17 for more details.

How the System Works

The Dog Training Collar is easy to use with an advanced digital display that tells you the exact stimulation level you are using. The Dog Training Collar assists you in controlling your dog without a leash. At the push of a button, your Remote Transmitter sends a signal activating your dog's Receiver. He receives a safe but annoying stimulation. He'll quickly learn the association between his behavior and your correction, and soon you'll have a better-behaved dog.

 
The Dog Training Collar has been proven safe, comfortable, and effective for both small and large dog breeds.

If you use the Dog Training Collar consistently and correctly, any basic obedience commands can be taught and will help correct any misbehavior that your dog exhibits.

V. Setting Up

1. Charge the Product

Charge both the Receiver and Remote Transmitter with the USB Type-C Charging Cable in the package box until their Indicators become solid green, which will take around 2-3 hours.

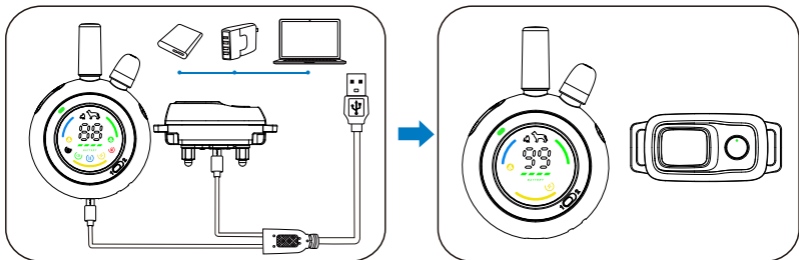


Note:


- (1) The charger, power bank, and other charging devices shown in the above picture are not included in the box.
- (2) Use the charging cable in the package when charging. Other charging cables may not be suitable for this Dog Training Collar, which may cause electrical damage.
- (3) The Dog Training Collar ONLY supports a 5V-rated power source. If charged with an improper charger:
Receiver Collar—delivers a rapid warning tone and stops charging automatically.
Remote Transmitter—stops charging automatically with the Indicator rapidly blinking in red.

2. Turn On/Off the Product

 
Turn on the Remote Transmitter by pressing and holding the ON/OFF Button located on the back for 2 seconds until the Display lights up.

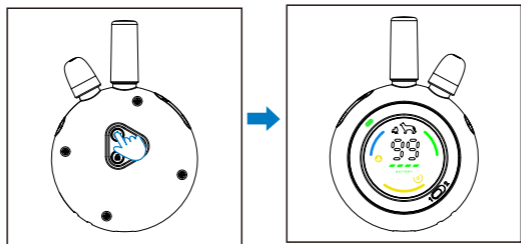

 
Turn off the Remote Transmitter by pressing and holding the ON/OFF Button located on the back for 2 seconds, and the Display will shut down.

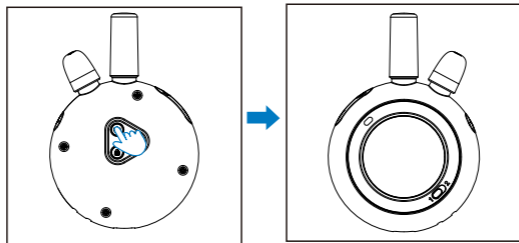

 Turn on the Receiver by pressing and holding the Power (Pairing) Button for 2 seconds, and a vibration indicates the Receiver turns on as the green Indicator light blinks regularly.

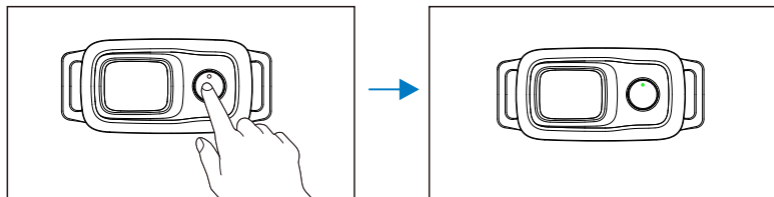

 Turn off the Receiver by pressing and holding the Power Button for 2 seconds, and a long beep indicates the Receiver turns off as the green Indicator light stops blinking.

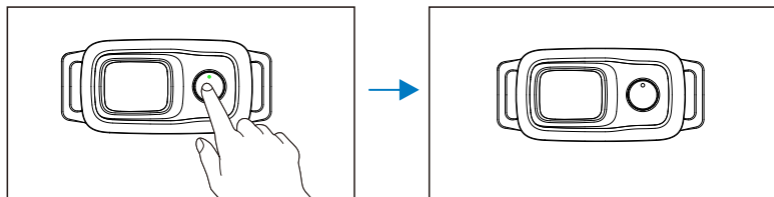


VI. Training Modes


1. Warning Tone Mode

Press the Warning Tone Button and the Receiver will deliver a warning tone. It will cut off automatically if you press and hold the Warning Tone Button for 10 seconds. There is a total of 8 levels of Warning Tone for training.

 To adjust the warning tone level, press the Adjustment Knob to select the Warning Tone Mode first, then turn the Adjustment Knob left and right to raise/lower to the desired level, and finally press  button to confirm the modification.

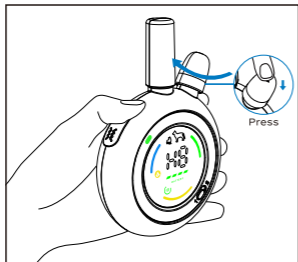


Press

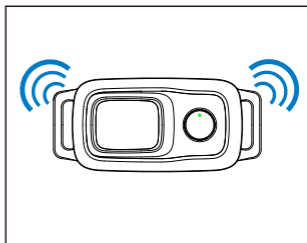 


2. Vibration Mode

Press the Vibration Button and the Receiver will deliver a vibration. It will cut off automatically if you press and hold the Vibration Button for 10 seconds. There is a total of 16 levels of Vibration.

 To adjust the vibration level, press the Adjustment Knob to select the Vibration Mode first, then turn the Adjustment Knob left and right to raise/lower to the desired level, and finally press  button to confirm the modification.

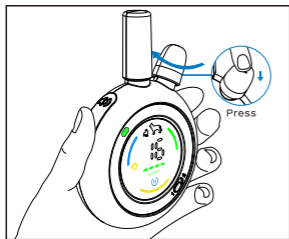


Press


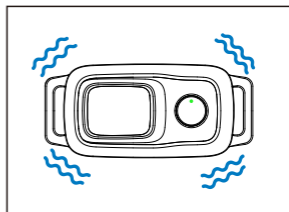 


3. Shock Mode

 Press the Shock Button and the Receiver will deliver a static shock. It will cut off automatically if you press and hold the Shock Button for 10 seconds. There is a total of 99 levels of Shock. To adjust the shock level, press the Adjustment Knob to select the Shock Mode first, then turn the Adjustment Knob left and right to raise/lower to the desired level, and finally press button to confirm the modification. ⚡

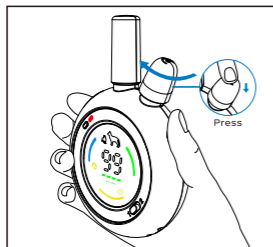


Press

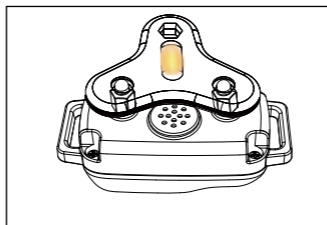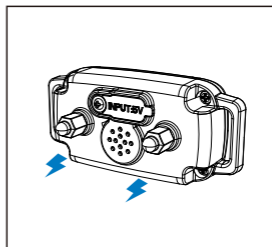  


When testing the Shock function for the first time, place the Test Bulb on the Metal Prongs. The Test Bulb lights up to indicate that the Shock function is working, and it will become brighter at higher shock levels.

4. Lock the Shock Mode

 Press the Shock Mode Lock Button to disable the Shock function. The Lock icon will appear on the Remote Transmitter, indicating that the Shock function is turned off.

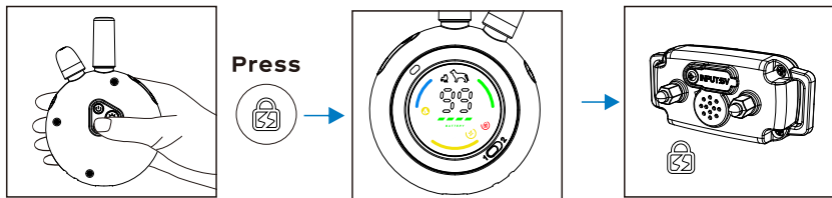


 Press the Shock Mode Lock Button again; the locked icon will disappear, and the Shock function will re-enable.

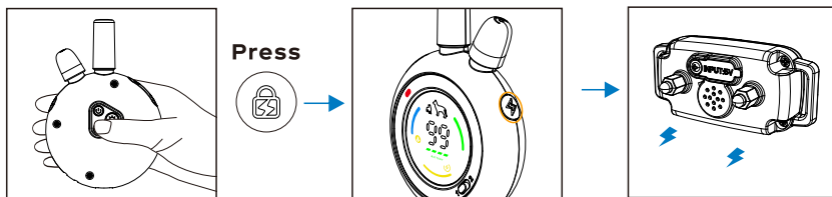


5. Light Mode

 Press the Light Button once; the Receiver's light will stay on, and the 'L1' icon will show on the Remote Transmitter.

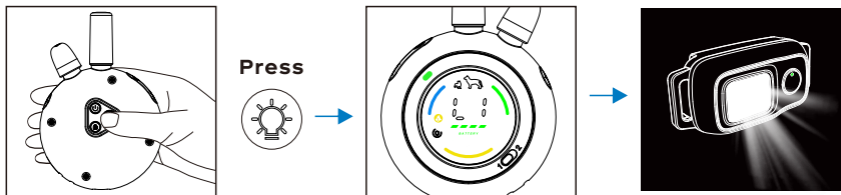

 
Press the Light Button twice; the Receiver will keep flashing, and the 'L2' icon will show on the Remote Transmitter.

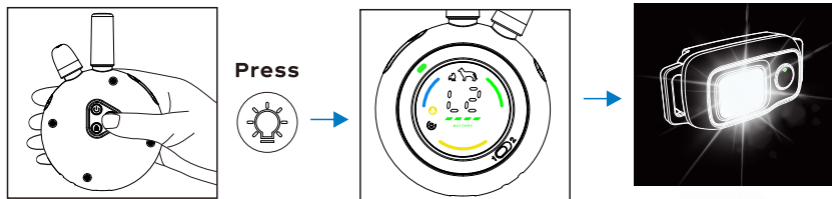

Note: 1. Once the Light is on, it will cut off automatically after 5 minutes if there is no operation on the Remote Transmitter.


2. Any button operation while the Light Mode is active will immediately turn off the Light function.

 Press the Light Button again to turn it off, and the 'L0' icon will display on the Remote Transmitter.

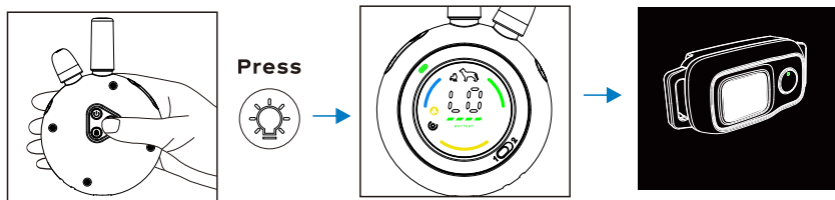

6. Switching Channels

 To control a specific Receiver, slide the Channel Switch on the Remote Transmitter to select the Receiver you wish to operate if you have paired two Receivers.

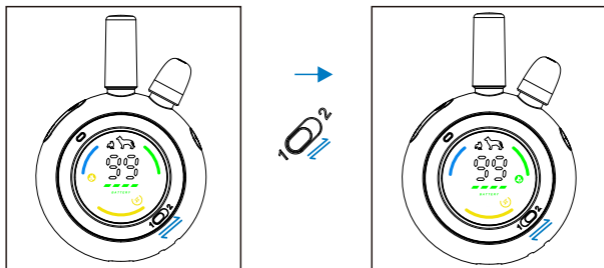

Note: The Remote Transmitter will go into sleep mode if no operation is made for one minute to save battery power.

VII. Fitting the Receiver

 
IMPORTANT:

The proper fit and placement of your Receiver are important for effective training. The Metal Prongs with Conductive Silicone Caps must have direct contact with your dog's skin on the underside of his neck. To ensure a proper fit, please follow these steps:


1. Make sure that the Receiver is turned off.
2. Let your dog stand on four feet or lie down fully (A).
3. Place the Receiver on your dog's neck close to the ears. Center the Metal Prongs underneath your dog's neck, touching the skin (B).

Note: It is sometimes necessary to trim the hair around the Metal Prongs to make sure that contact is consistent.

4. The Receiver should fit snugly, yet loose enough to allow one finger to fit between the strap and your dog's neck (C).
5. Allow your dog to wear the Receiver for several minutes then recheck the fit. Check the fit again as your dog becomes more comfortable with the Receiver.

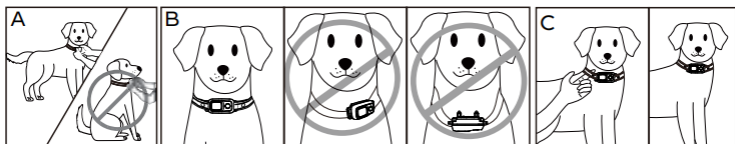

 6. To attach the collar to the Receiver, please follow the following steps as instructed to thread the strap.

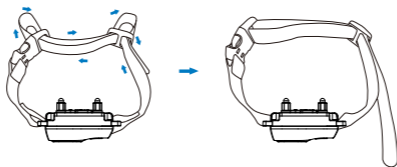

CAUTION:

 
- DO NOT leave the Receiver on your dog's neck for a continuous 12 hours.
- Never attach a leash to the collar.

- **Never** fit the Receiver too tightly to your dog's neck.
- **DO NOT** shave the dog's neck as this may increase the risk of skin irritation.
- **Check the fit regularly** to make your dog more comfortable with the Receiver.


VIII. Pairing Up

In case the Receiver is not responding to the Remote Transmitter, follow these steps to pair them up:


1. Turn on the Remote Transmitter and the Receiver.

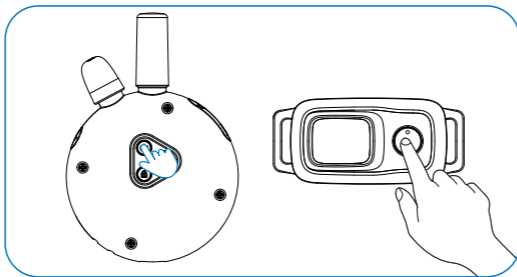

 2. Press and hold the Power (Pairing) Button on the Receiver for 3 times to enter the Pairing Mode. You will hear a beeping tone and the green indicator will light up; now you have 15 seconds to complete the pairing process.

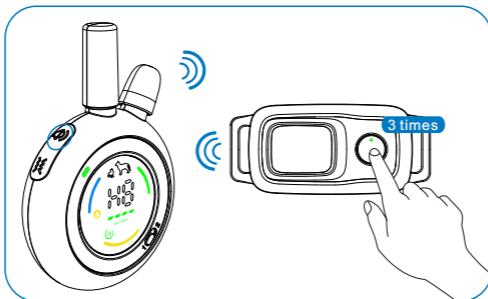

 3. Press any of the Warning Tone Button, Vibration Button, or Shock Button on the Remote Transmitter, and the Receiver will respond correspondingly, indicating that the pairing process is completed.

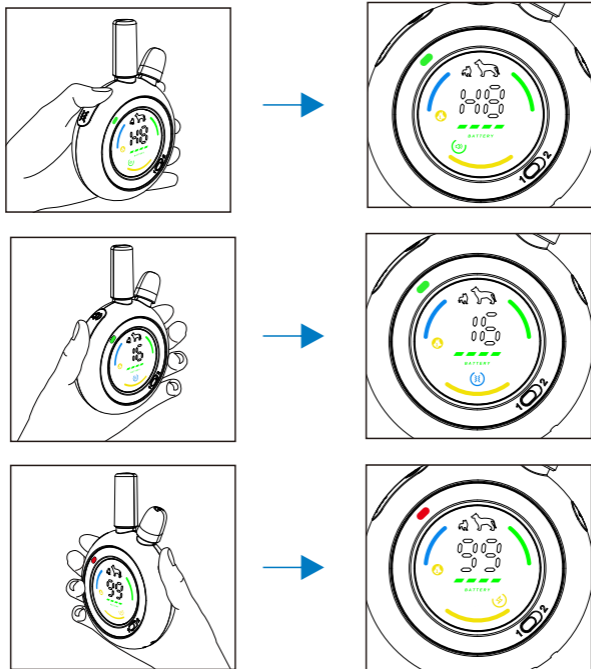

Tips:

The Receiver is paired up to the Remote Transmitter in Channel 1 by the factory default setting. If you buy a new Receiver, you can follow the above instructions to pair it up to Channel 2. The system can pair up to 2 Receivers in 2 different channels. If you can not pair your device successfully, it may be due to signal interference. Please try pairing again in a different location or contact our service center.

IX. Training Tip

How to find the best stimulation for your dog?

Important: Always start at the lowest level and work your way up. The Dog Training Collar has 8 types of Warning Tones, 16 levels of Vibration, and 99 levels of Shock. For Warning Tones, there are 8 types of Tones, with only frequency differences between the different types. For Vibration and Shock, level 1 is the lowest; the highest level for Vibration is level 16, and level 99 for Shock. This allows you to choose the Stimulation Level that is best for your dog. Once you have placed the Receiver on your dog, it is time to find the Stimulation Level that is best for him. This is called the Recognition Level.

A slight change in your dog's behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level that is best for your dog.

 
Follow the steps below to find your dog's Recognition Level:

1. Starting at Level 1, press the Warning Tone/Vibration/Shock Button continuously for 1 to 2 seconds.
Note: When the Warning Tone/Vibration/Shock Button is held down for 10 consecutive seconds, the Remote Transmitter will "time out", and you must release and press the button again before additional stimulation can be delivered.
2. If your dog shows no reaction, repeat the Stimulation Level several times before moving up to the next level.
3. **YOUR DOG SHOULD NOT WHINE OR PANIC** WHEN RECEIVING STIMULATION. IF THIS HAPPENS, THE STIMULATION LEVEL IS TOO HIGH AND YOU NEED TO GO BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS.
4. Move up through the Stimulation Levels until your dog reliably responds to the stimulation.
5. If your dog continues to show no response at the highest level of Vibration or Static Shock, check the fit of the Receiver. If your dog has long or thick hair, you can change to a longer set of Metal Prongs included in the package. Then go back to #1 and repeat the process. If this still does not yield any results, your dog's hair will need to be trimmed around the Metal Prongs. If after completing all of these steps, your dog still does not indicate he is feeling the stimulation, please contact our customer service.

How to Maximize the distance?

Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the maximum range.

Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. For maximum signal strength, keep the device properly charged.

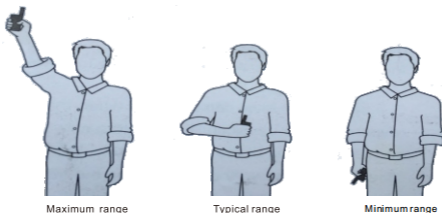

*Avoid touching the antenna or the range may decrease substantially.

X. Frequently Asked Questions

Q: Is the Stimulation safe for my dog?

A: While the Stimulation is unpleasant, it is harmless to your dog. Electronic training devices require interaction and training from the owner to achieve desired results.

Q: How old does my dog have to be before using the Dog Training Collar?

A: Your dog should be able to recognize basic obedience commands such as "Sit" or "Stay". Dogs should be at least 6 months old before using this product.

Q: Once my dog is trained and has been obeying my commands, will he have to continue to wear the Receiver?

A: Probably not. You may need to reinforce training with the Receiver from time to time.

Q: Is the Receiver waterproof?

A: Yes. The Receiver meets the IP67 waterproof rating, but make sure to keep the area dry when charging.

Note: The Remote Transmitter is not waterproof.

Q: Will I get a maximum range with the Remote Training Collar?

A: The range of the Dog Training Collar Mode will vary according to terrain, weather, vegetation, and transmission from other radio devices. See "How to Maximize the Distance" on page 20 for tips on maximizing your range.

Q: How long can I continuously deliver stimulation to my dog?

A: The maximum amount of time you can press the Warning Tone/Vibration/Shock button and deliver stimulation to your dog continuously is 10 seconds. After this, the Remote Transmitter will time out, and these stimulation buttons must be released and pressed again.

Q: How do I know if I can use this product for my dog?

A: The product is designed for healthy dogs over 6 months old. Most importantly, this product cannot be used on unhealthy or aggressive dogs, and if you are unsure whether this product is appropriate for your pet, please consult your veterinarian or a certified trainer.

Q: Is this product safe and humane?

A: Yes. The product is designed to get your dog's attention, not to punish him. However, the initial correction may startle your dog.

Q: Can I charge this product with any type of charger?

A: No, you are suggested to charge this product with a charger of 5V output voltage, because a charger with an output voltage over 5V may cause damage to the product. The product will stop charging automatically if the input voltage becomes too high and will deliver a warning tone.

XI. Trouble Shooting

1. My dog does not respond when I press a button.

- Make sure the Receiver has been turned on.
- If your range has reduced from the first time you used the Dog Training Collar, the battery(-ies) may be low in either the Remote Transmitter or Receiver.
- Many factors can impact the amount of range. For a list of these factors, see "How to Maximize the Distance" on page 20.
- Test the Receiver with the Test Bulb.

NOTE: If the Test Bulb does not flash, recharge the Receiver and re-test. If the Test Bulb Tool still does not flash, please contact our customer service.

- Increase the Stimulation Level. Refer to "How to find the best stimulation for your dog" on page 19 for more information.
- Make sure the Receiver's Metal Prongs are placed snugly against your dog's skin. Refer to "Fitting the Receiver" on page 16 for more information.

2. The Receiver will not turn on.

- Make sure the Receiver has been charged. For the initial charge, be sure to charge it for 4 hours. Subsequent charges only take 2-3 hours.

3. The Receiver is not responding to the Remote Transmitter.

- Verify the Receiver is on.
- If the indicator is blinking rapidly, fully charge the Receiver.
- If the first two solutions did not resolve your problems, please check the "Pairing Up" on page 17 to re-pair the Receiver to the Remote Transmitter.

XII. FCC Statement

USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a specific installation. If interference does occur to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult customer care, the dealer, or an experienced radio/TV technician for help.
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Model: VS10
Made in China
Version: V1.0
303.VS10N-9338