

Common Questions of Electric Spin Scrubber



Q1	The battery cannot charge.
A1	1. Replace the cable or adapter. It is recommended to use the 5V2A adapter to charge, and try to avoid using the USB power supply of the computer; 2. Water is inevitable during the cleaning process. Please make sure the USB charging port is dry when charging.
Q2	The battery died soon after the product was used.
A2	1. When the machine is fully charged, all 5 lights are on. First confirm the state of electric quantity before use; 2. In addition, if there is too much pressure in the use of the machine, it may be triggered the heavy load protection, restart the machine.
Q3	The brush is hard to control, it spins.
A3	1. In addition to the planting brush, other cleaning clothe are fitted by Velcro. The Velcro effect is not as good as the original one after using it for a long time, so try to fit it well when disassembly and assembly, which can effectively avoid the rotation of the process of throwing out; 2. In the process of use, try to make the brush fit with the clean surface, avoid only using the edge of the brush and the clean surface contact. If it's just edge contact, it's harder to control the brush, and edge rotation can cause the brush to fly.
Q4	Installation problem of telescopic rod.
A4	1. After receiving the product, the two poles are separated independently. Fasten the two poles together 2. The head of the pole is engraved with ""OFF"" and ""ON"". Twist the convex point of the head of the pole to ""ON"" and then expand the length of the pole at will. After stretching to the desired length, twist it to the position of ""OFF"" to lock it.