




COOL AID

Neck fan with cooling plate

User Manual


CAUTIONS

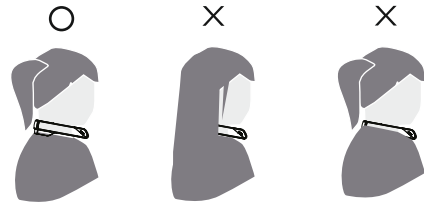

1. Be careful when tucking your hair in. If you have long hair, use a hair elastic or something similar to tie it up!
2. Do not block the air inlet or outlet.
3. Do not block the air inlet or outlet with your clothes.
4. Do not use in humid places. Condensation may form on the cooling plate. Do not allow water or sweat to get inside the product. This may cause a malfunction.
5. Do not store in places with high humidity and temperature.
6. Do not throw or impact the main unit. This may cause a malfunction.
7. Charge with an input of 5V/2A or more.

8. Do not burn this product. The built-in battery may ignite/explode.
9. If an abnormality (such as strange noises) occurs during use, immediately discontinue use.
10. A lithium battery is built in. When disposing of the product, dispose of it using the method specified by your local government.
11. Do not use while charging.
12. Please note that the air blower cannot completely prevent hair from being sucked in.
13. If the battery level is low, the white indicator light will flash and the unit may turn off. Please be aware of this.
14. This product is not a medical device.
15. If you experience any physical discomfort or discomfort while using this product, discontinue use.
16. Do not use if any of the following applies to you:
 1. Those with cardiovascular disease (high blood pressure, arrhythmia, ischemic heart disease, angina, myocardial infarction, heart failure, etc.) or a history of such diseases.

CHECK THE ACCESSORIES

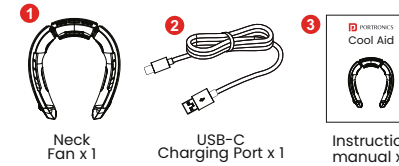

- ② People with dementia or who are unable to express themselves
 - ③ People with sensitive skin, skin wounds or skin disease, or allergies
 - ④ People with cervical spine disease
- Never use the cooling plate below 30° C. There is a risk of frostbite. (During operation, the temperature of the cooling plate is approximately 15-25° C lower than the perceived temperature, but this varies depending on the environment.)
 - If using for more than 30 minutes, check the condition of your skin before continuing to use.
 - Never use while sleeping.
 - Do not disassemble or modify this product. There is a risk of breakdown, frostbite, burns, or electric shock.

PRODUCT SPECIFICATIONS

Input	: 5V/2A
Power	: 10W
Battery Capacity	: 4000mAh
Continuous Use Time	: Approx. 2-15.5H
Usage Environment Temperature	: 0-40°C
Charging time	: 5H
Fan Stage	: 3 stages
Cooling Plate Stage	: 1 stage
Product Weight	: Approx. 330g
Product Size	: Approx. 175*50*213mm

(Depends on usage and environment)

Mode 1 : Fan only

Mode 2 : Cooling + Fan

- Attaching the main unit Before use, please adjust the length of the hair to prevent it from getting caught.

HOW TO USE

Operation Buttons

Power On:

- To power on the device, short press the power button.
- Upon startup, the fan will operate at the default 1-stage wind speed.
- The electronic display will first show the wind speed stage, then switch to display the remaining battery level.

Stepless Adjustment Knob:

- **Increase Wind Speed:** Turn the knob outward to increase the wind speed. There are up to 100 stages.
- **Decrease Wind Speed:** Turn the knob inward to decrease the wind speed. The minimum is 1 stage.

Cooling Plate Function:

- To operate the cooling plate, short press the corresponding button to turn the cooling plate function on or off.
- When the cooling plate function is on, a blue light will illuminate at the intake port.
- When the cooling plate function is off, the blue light at the intake port will turn off.

Power Off:

To turn off the device, press and hold the power button. When the device is powered off, the electronic display will also turn off. If the battery level is low, the electronic display will flash.

HOW TO READ THE ELECTRONIC DISPLAY

Power On	Shows one speed level, switches to battery level after 5 seconds, and turns off after another 5 seconds.
Speed Level Change	Shows adjusted speed level, switches to battery level after 5 seconds, and turns off after another 5 seconds.
Low Battery	When you press the power button, the battery level flashes 3 times when the battery level is 0% and then turns off.
Charging	A single digit for the battery level flashes.
Fully Charged	Lights up when the battery level is 100%.

If the battery level is low, the white operation indicator light flashes.

HOW TO CHARGE

- Use the included USB-C cable to charge by connecting the USB-C port of the neck fan to your USB-compatible charger. (USB-compatible charger is not included, so please purchase it separately.)
- Please use a power supply of 5V 2.0A or more guaranteed.

CARE AND STORAGE

- ⚠ Warning When cleaning, remove the USB-C plug from the unit. This may result in electric shock, fire, or injury.
- ⚠ Never use household cleaners, thinner, benzene, alcohol, or polishing powder. Caution- Do not wash the unit by pouring water directly on it. This may result in electric shock or failure.

CARE INSTRUCTIONS

If the main unit becomes dirty, wipe it gently with a dry cloth (do not rub it too hard, as this may cause scratches).

STORAGE INSTRUCTIONS

Store in the packaging and in a dry place.
⚠ Batteries are consumables and are not covered by the warranty.

CARE INSTRUCTIONS FOR THE INTAKE AND EXHAUST PORTS

Remove any dust or other particles with a vacuum cleaner. (A vacuum cleaner is not included, so please purchase one separately.)

⚠ Caution	If the product will not be used for an extended period of time, keep it fully charged and charge it every six months to a year.
-----------	---

BEFORE REQUESTING REPAIRS OR SERVICE

⚠ Warning	Do not disassemble or repair the product unless you are a repair technician! This may result in electric shock, fire, or fire.
-----------	--

If you suspect a malfunction, check the following points.



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E: info@3rrecycler.com

For E-Waste & ROHS compliance refer to www.portronics.com/ewaste