



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

EVERCOSY Electric Heated Under Blankets



Model No.

600020 600021 600022 600023
600120 600121 600122 600123

User Manual

Please read and keep these
instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- Children under the age of three are not to use this appliance due to their inability to react to overheating.





HEALTH AND SAFETY

- Young children should be instructed on how to operate the controls safely and heat settings should be controlled by a parent or guardian.
- Do not use a hot water bottle at the same time as using the blanket.
- **WARNING:** When storing the appliance, allow it to cool down before folding.
- Examine frequently for any signs of wear or damage to the blanket, switch or cord. In case of damage or misuse, please cease using immediately.
- Do not crease the appliance by placing items on top of it during storage.
- Do not use on adjustable beds.
- Do not insert pins or any sharp objects into the blanket.
- Do not use if the blanket is wet.
- Avoid pressing creases or folds into the blanket. Do not switch on if the blanket is folded, creased or rucked.





HEALTH AND SAFETY

- Do not use any lead, switch or cord other than the one supplied with this blanket.
- Not intended for medical use in hospitals.
- If the mains cable is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified person in order to avoid a hazard.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- This appliance is not intended to be to be operated on an extension cable or by means of an external timer or separate remote control system.





HEALTH AND SAFETY

PRODUCT SAFETY

- To store, fold carefully and place back into the original packaging.
- Do not dry clean the blanket, follow washing instructions on the label attached to the blanket and the details that relate to it.
- Ensure the blanket is used in the manner in which it is intended.
- Ensure the product is correctly fitted to the bed, following the instructions in this booklet.
- Do not tuck the heated part of the material under the mattress.
- Do not coil or lay the lead on the blanket.

MAINS CABLE

- The mains cable and control unit of the appliance can cause risks of entanglement, strangulation or tripping if not correctly arranged.
- Do not pull or exert pressure on the mains cord.

PERSONAL SAFETY

- Use the electric blanket under the body only. Do not wrap the body with the blanket.

OTHER SAFETY CONSIDERATIONS

 
 
- Do not use the appliance for anything other than its intended purpose.



ELECTRICAL DETAILS

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.
- This appliance does not need to be earthed. It is a double insulated product.
- The power consumption in standby is 0.4W.
- The period after which the heating time ends and enters standby mode is 1 minute.

PRODUCT OVERVIEW

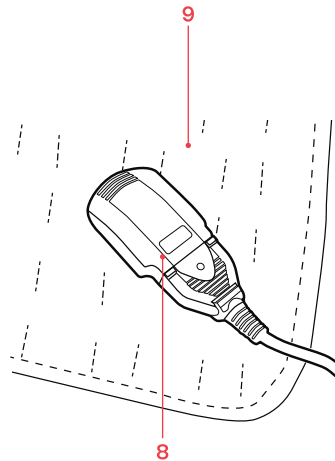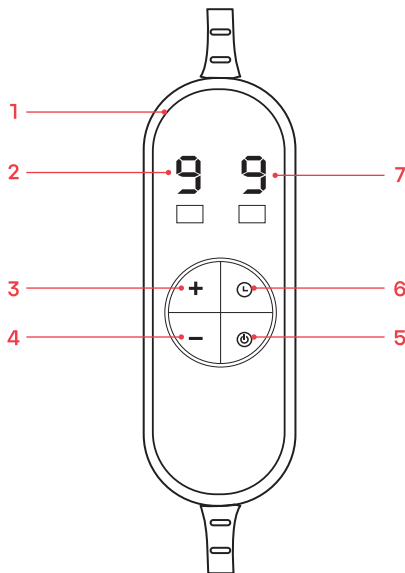

- | | |
|-------------------------------|-----------------------------------|
| 1. Controller | 6. Auto off (hours) Select Button |
| 2. Heat Level Display | 7. Auto off (hours) Display |
| 3. Heat Level Increase Button | 8. Connector |
| 4. Heat Level Decrease Button | 9. Blanket |
| 5. Power On/Off Button | |





BEFORE FIRST USE

Before using this appliance, ensure that the voltage indicated on the product corresponds with the mains voltage of your home electrics.

WARNING: Do not attempt to use the electric blanket with controls other than those supplied with it.

FITTING THE UNDERBLANKET TO THE BED

- Lay the electric blanket flat (9) on the bed with the controller (1) at the head of the bed and smooth out any creases.
- Attach the elastic straps on the electric blanket over each corner of the mattress. Cover the electric blanket with a sheet or a thin cotton-padded mattress cover. Smooth out any creases.

USING YOUR UNDERBLANKET

The electric blanket has 9 temperature settings (1 – 9), and a 9 hour Auto Off function (1-9 hours).

- Plug into a mains outlet.
- Press the On/Off button (5).
- The controller (8) will default to Setting 0 on the heat level display (2) and 9 (hours) on the auto off display (7).
- If either of the heat level buttons (3,4) or the auto off select button (6) aren't pressed within 30 seconds, the controller (1) will automatically switch off. (To reactivate press the Power On/OFF button).
- Press the Heat Level Increase Button (3) to increase the heat level until the desired setting is showing in the heat level display.
- To reduce the heat level, press the Heat Level Decrease Button (3).





USING YOUR UNDERBLANKET

- To set the Auto Off function, press the Auto off button (6) until the desired time is showing in the Auto off display.
- To turn off the electric blanket, press the On/Off button at any time.

IMPORTANT: When the electric blanket is in use, the controller **MUST** be **UNCOVERED** at all times and in a position that it is easy to access.

IMPORTANT: Do not leave the controller close to any other heat source as it may become overheated, causing damage to the controller.

IMPORTANT: When the electric blanket is not in use, ensure it is switched off and the plug removed from the mains socket to avoid any accidental fires.

 
- When not in use for long periods, unplug the electric blanket from the mains socket.

WASHING YOUR UNDERBLANKET



IMPORTANT: Do not dry clean or bleach the electric blanket.

- The electric blanket can be hand washed or machine washed.
- Before washing, unplug from the mains outlet and disconnect the controller/mains cable (1) from the product by raising the flap slightly on the connector (8) before pulling the connectors apart.

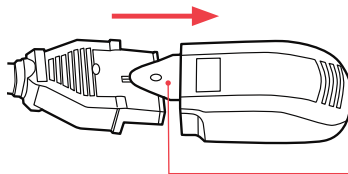

Lift flap to pull
the connectors apart





WASHING YOUR UNDERBLANKET

- Prior to washing it is essential that you measure the electric blanket to ensure that it has returned to approximately its original size once dry.
- Hand wash using a mild washing powder or detergent and warm water, soak for 5 minutes, gently wash and rinse thoroughly in clean water.
- Machine wash as wool at a maximum of 40°C following manufacturer's instructions.
- The controller (1) and mains cable **MUST NOT** be immersed in liquid.
- Cleaning and user maintenance shall not be made by children without supervision.

DRYING YOUR UNDERBLANKET

- Never wring the electric blanket.
- Reshape the electric blanket prior to drying.
- Air dry on a clothes line, avoid using pegs in the wire sections as this may damage the circuit.
- The electric blanket **MUST** be completely dry before using again.
- **DO NOT** tumble dry.

After washing and drying, inspect before use.

- Ensure that no wire is visible through the surface of the blanket and the wires have not formed loops or twisted by holding it up to the window.
- Check the controller (1) and mains cable regularly for damage.

STORING YOUR UNDERBLANKET

- Unplug the electric blanket and allow it to cool completely before storing.
- Make sure the electric blanket is stored without any heavy items on top as this could cause deep creases and damage to the wiring.





TROUBLESHOOTING

Problem	Solution
No power.	Try another socket.
	Ensure the controller is attached securely to the blanket.
	Change the fuse in the plug.
Display lights aren't on.	Ensure the connector is attached securely to the blanket.
Not getting warm.	Has the correct heat setting been selected? Increase the heat setting if required.





CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www: www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





NOTES

[illegible]



REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year





REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.





EB600120MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

