 








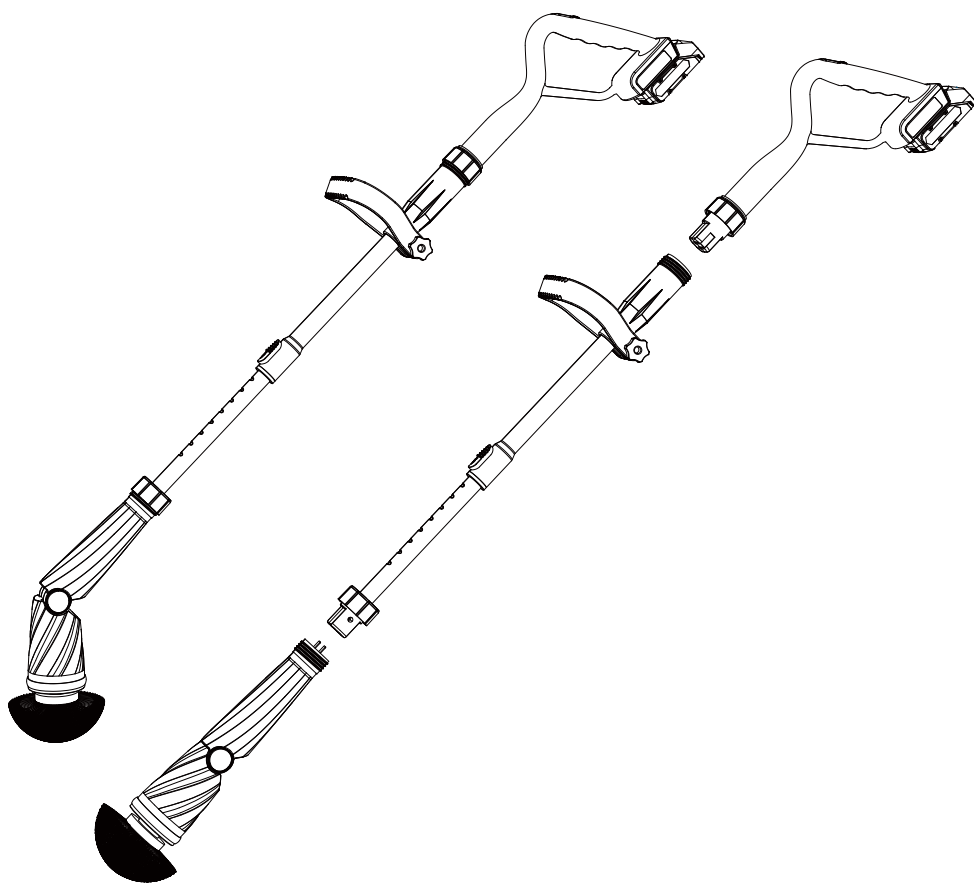

USER MANUAL

Electric Spin Scrubber




Please read this manual carefully before using the machine


Catalog

	Product Introduction.....	1
	Attachment & accessory.....	1
	Installation.....	2
	Usage Scenario.....	7
	Storage.....	8
	Technical parameters.....	8
	Warning.....	9
	Trouble & Troubleshooting.....	9

 
Product Introduction

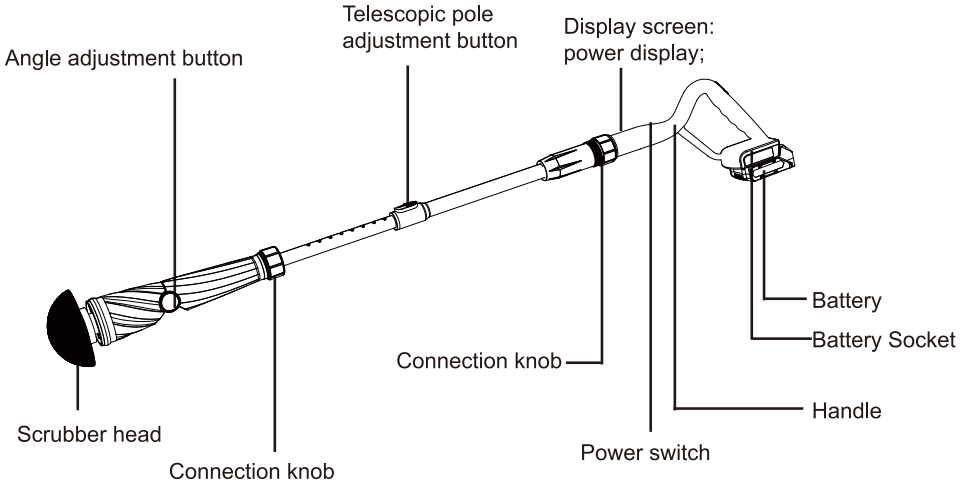


Attachment & accessory

 


① Corner Brush x 1

 


② Big Flat Brush x 1

 

③ Small Flat Brush x 1

 


④ Dome Brush x 1

 


⑤ Scouring Pad (green) x 1



 ⑥ Lint Cloth Pad x 1




⑦ Small Wool pad (white) x 1

 

⑧ Soft sponge pad (Blue) x 1



 
⑨ Brush Replacement Base x 1



⑩ 18-21V Battery



 
⑪ Charger x 1



⑫ wall bracket x 1




 
⑬ storage bag x 1



⑭ handle x 1

Installation

  
1. Telescopic pole installation

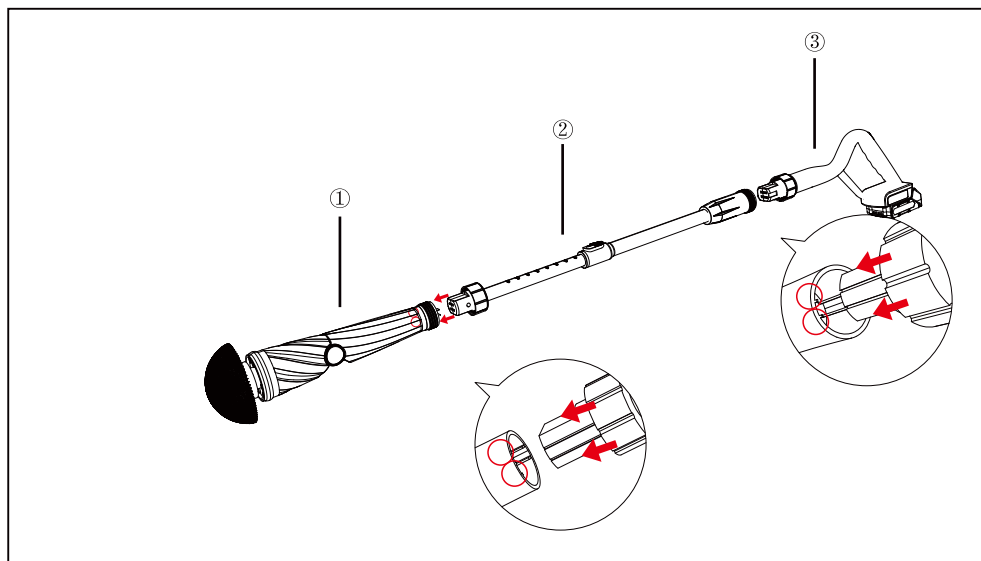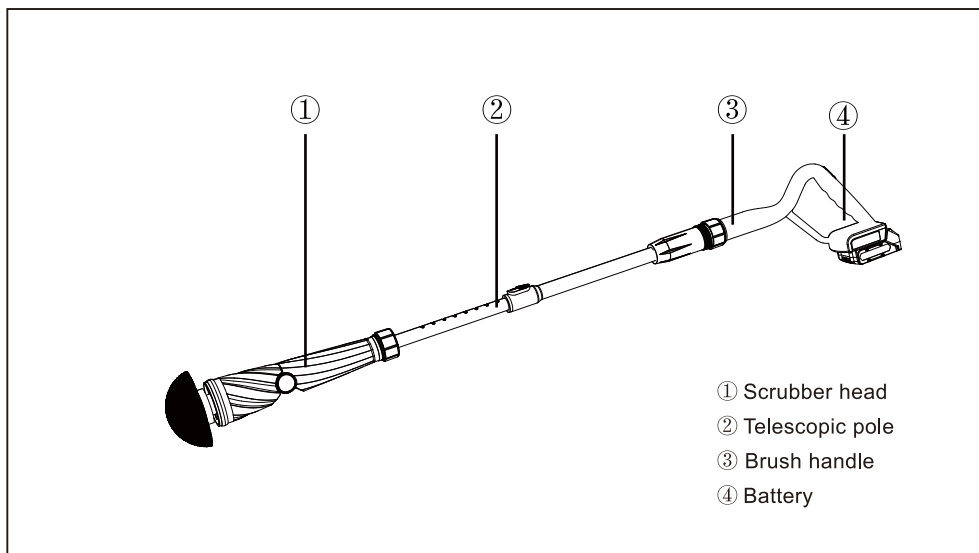

Insert Section ② into section ①, twist the connection knob clockwise to fix the connection.

When installing the telescopic rod, please align the guide rail to grooves in the direction indicated by the arrow in the figure, inset it then tighten.

 
Installation

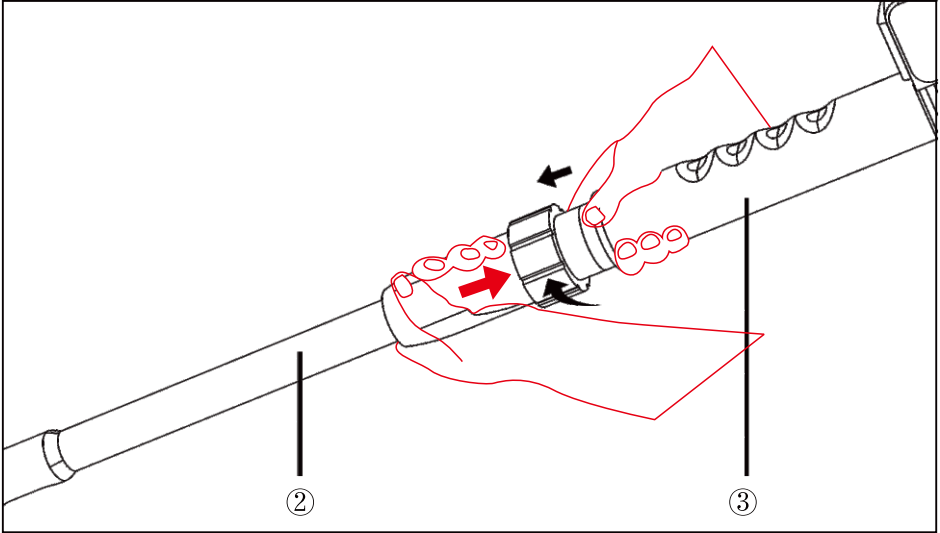

Insert Section ③ into section ②, twist the connection knob clockwise to fix the connection.

When installing the handle and the telescopic rod, please push the plastic part upward in the direction of the arrow in the figure, inset it then tighten.

 
2.Fixed pole installation

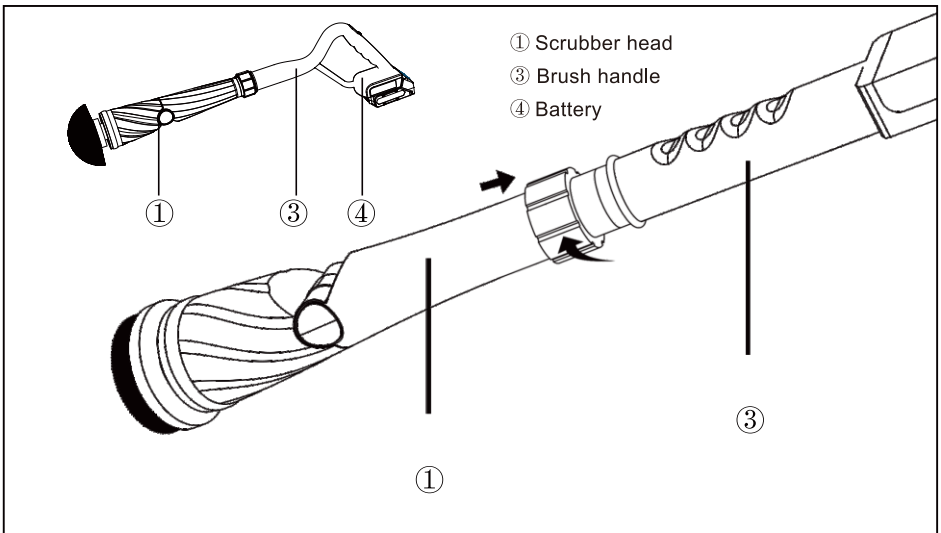

Insert Section ③ into section ①, twist the connection knob clockwise to fix the connection.

Installation

 
3. Battery Installation

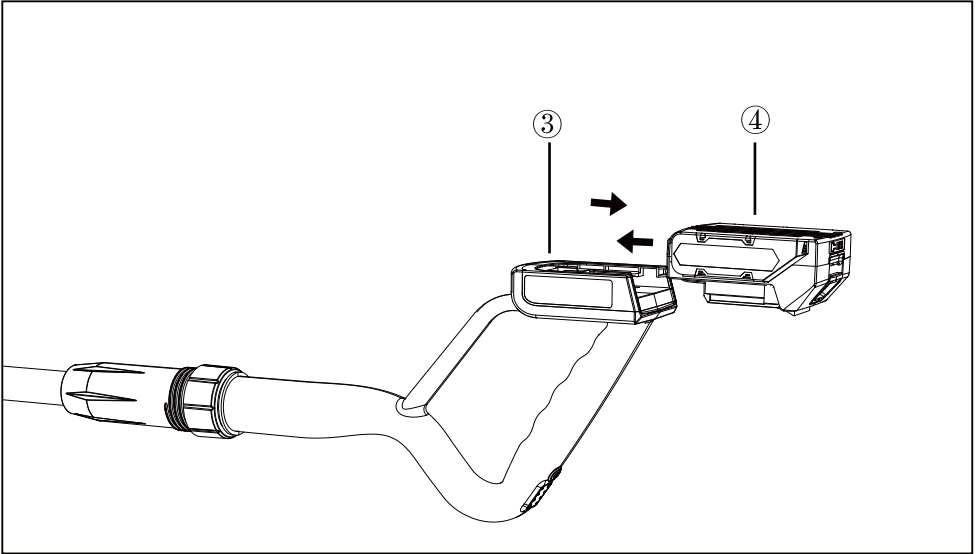

Insert the battery into the battery socket.


4. Activate /Stop machine

 - 1、 Hold the power button for 3~5 seconds to switch on and off , **After turning on the machine, need press the switch briefly to switch the spin speed.**
- 2、 Display screen:
 - ① Power display: 25% 50% 75% 100%
 - ② Speed display: on/off, low speed, middle speed, max speed (press to shift)

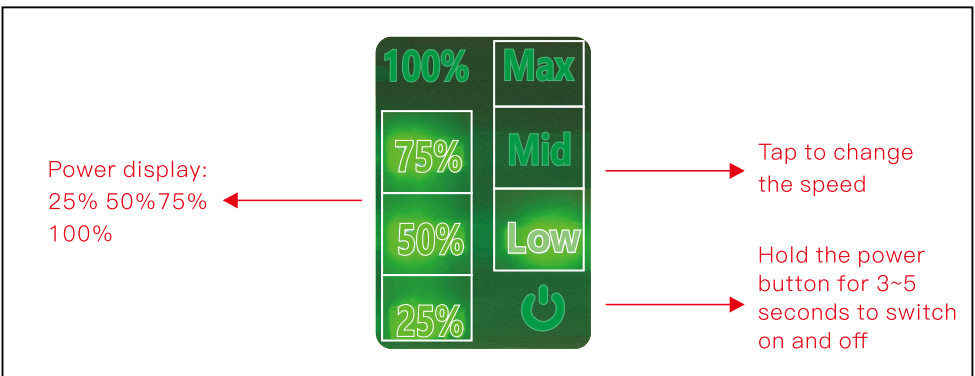


Installation

 5.Charger the battery

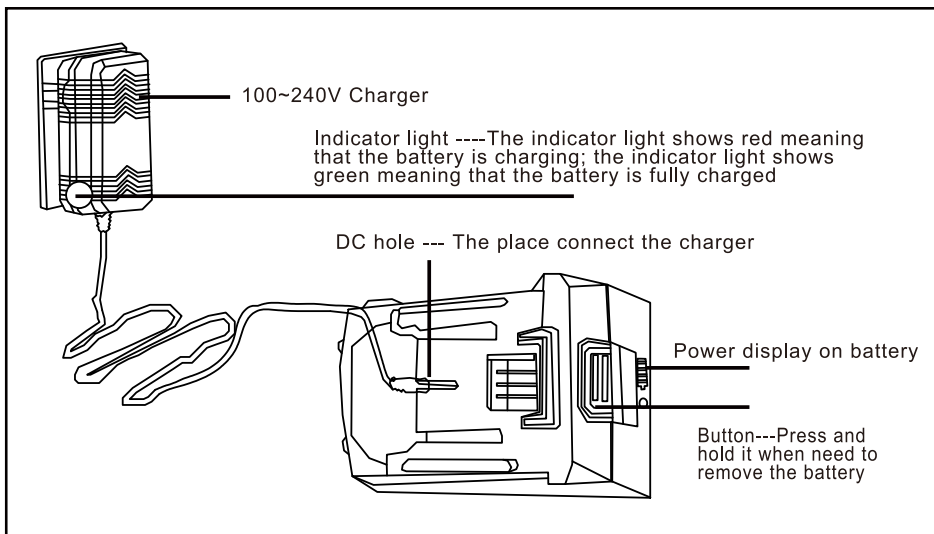

Battery charging: connect the charger to the DC port of the battery directly. When the battery power is low, it should be removed for charging. The indicator light of the charger showing green indicates that the charging is complete.

 6.Installation and replacement of brush

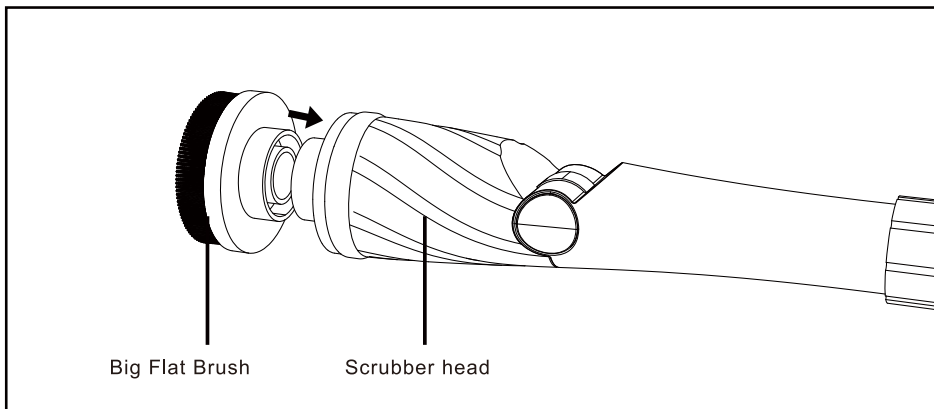





Brush installation: the base bracket of the brush head and the card position of the scrubber head can be firmly pressed into place.

Replacement of brush: Pull out the original brush on the Scrubber head to replace and install different cleaning brushes.





Installation

Replacement of brush: Pull out the original brush on the Scrubber head to replace and install different cleaning brushes.

    Replacement instructions for hard brushes

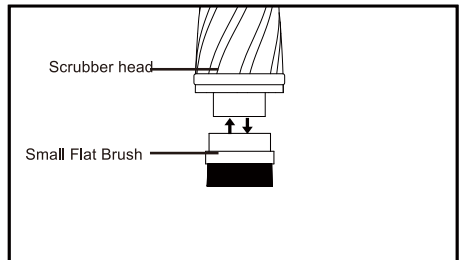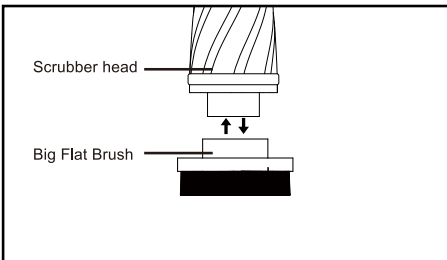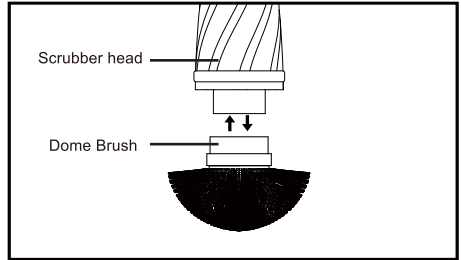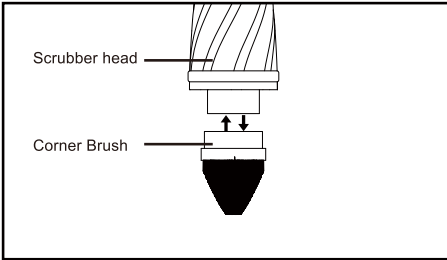

    Replacement Instructions for the soft brush

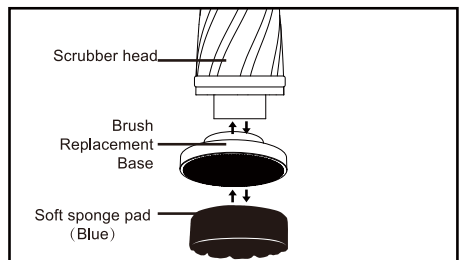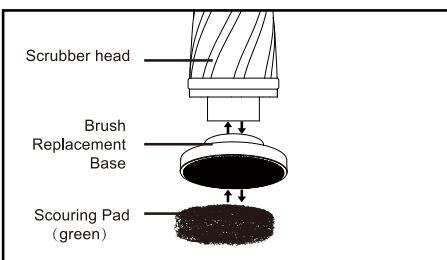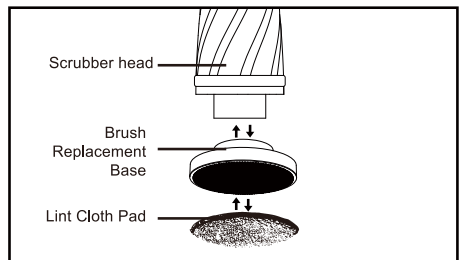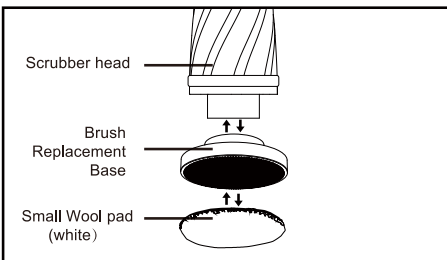

Usage Scenario

Suitable for floors, bathtubs, bathrooms, living rooms, tiles, walls, cars, tires, washbasins, sinks, stoves, glass doors and other household scenes that need to be cleaned.

Specific brush for particular usage

Dome Brush: for bathtubs or sinks

Large flat brush: suitable for floors, tiles, ovens, stoves, etc.

Small flat brush: suitable for floors, tiles, ovens, stoves, etc.

 
 
 
 
Corner Brush: Suitable for window sills, corners, stoves, tires, and tight places.

Soft sponge pad: Suitable for dishes, car surfaces, glass, etc.

Small Wool pad: suitable for car glass cleaning, polishing, and waxing


Cloth Pad: good for window cleaning

Scouring Pad: suitable for kitchen oil stains

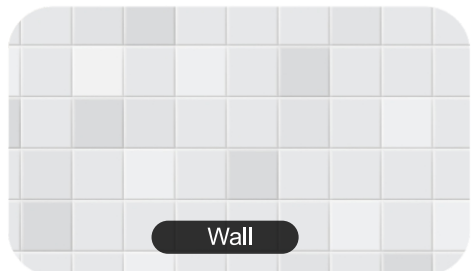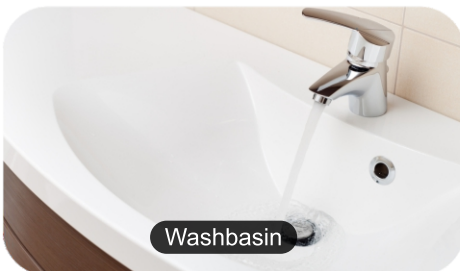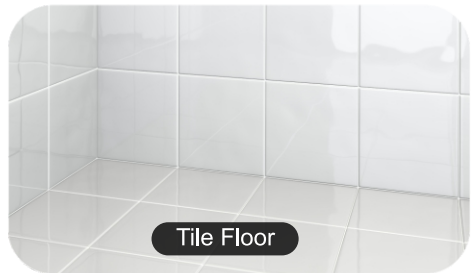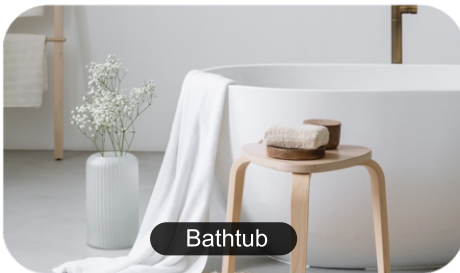

Storage

 1. Install the wall bracket on the wall and place the cleaning brush on the wall bracket.

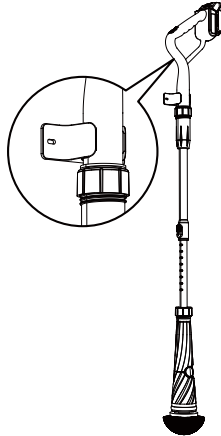

Technical parameters

Battery voltage (applicable range)	18-21V
Battery capacity	2000mAh
Charging time	1.5H~2H
Maximum power	60W
Brush head angle	180° 135° 90°
Adjustable length	68~125CM/26-50inch
Number of revolutions	800/1000/1500rpm
Speed	Low, medium and max 3 type
No load time	Low speed duration: ≈158mins Mid speed duration: ≈122mins Max speed duration: ≈96mins

Warning

1. This product is only suitable for cleaning the household environment, do not use it in industrial and harsh environments.
2. Please ensure that the brushes are well installed and fixed, and the battery has enough power before starting the machine.
3. When using this product for the first time, please make sure the battery is fully charged.
4. Only the part below the angle adjustment button can work underwater(IPX7), other parts are only waterproof at the splash level(IPX4).
5. Please turn off the power when the brush head is stuck or the rotor is blocked during cleaning.
6. Please replace the brush head when the brush is shut down completely.
7. Children and pets are not the target group of the cleaning brush, they should be careful and avoid injury.
8. Please do not aim at the human body or animals to avoid injury.
9. After cleaning, please turn off the power of the machine.
10. In order to extend the battery life, please remove the battery after using the product.
11. Do not disassemble and repair when no experts present.
12. Do not place the charger near a fire source.
13. If the shell or wire of the charger is damaged or broken, please stop using it immediately.

Trouble & Troubleshooting

When in MAX mode, pressing hard doesn't work	Separate the battery from the scrubber, reinstall the battery into the scrubber, press and hold the on button for 3 seconds to start the machine.
Donot Work	Please check whether the battery is fully charged and follow the correct steps to install the scrubber again.
The brush head does not turn or the brush head fals off	Before starting the cleaning brush, please check whether the brush head is well installed.
Battery cannot charge	Please contact customer service.
Scrubber is extremely hot	Please stop using and contact customer service.

