

# PYLE

PyleUSA.com



## ***PMP57LIA***

### **Portable Megaphone with USB/SD Readers**

Megaphone Speaker with Built-in Rechargeable Battery,  
MP3/USB/SD Readers, Aux (3.5mm) Jack, Siren Alarm Mode

## PMP57LIA

### Portable Megaphone with USB/SD Readers Megaphone Speaker with Built-in Rechargeable Battery, MP3/USB/SD Readers, Aux (3.5mm) Jack, Siren Alarm Mode

This user manual contains important information for safe operation and optimal megaphone performance. Please carefully read and follow safety notes and instructions. Save this manual for future reference. Make sure that it is available to all persons using this device.




**\*Important Note\*:** Before operating the megaphone, ensure you hit the correct switch to the proper position when **CHARGING/OPERATING** Mode.

#### (1) Press-to-talk switch

Press this switch to talk while carrying the megaphone on your shoulder

#### (2) Press-to-talk switch

Press this switch to talk while holding the grip

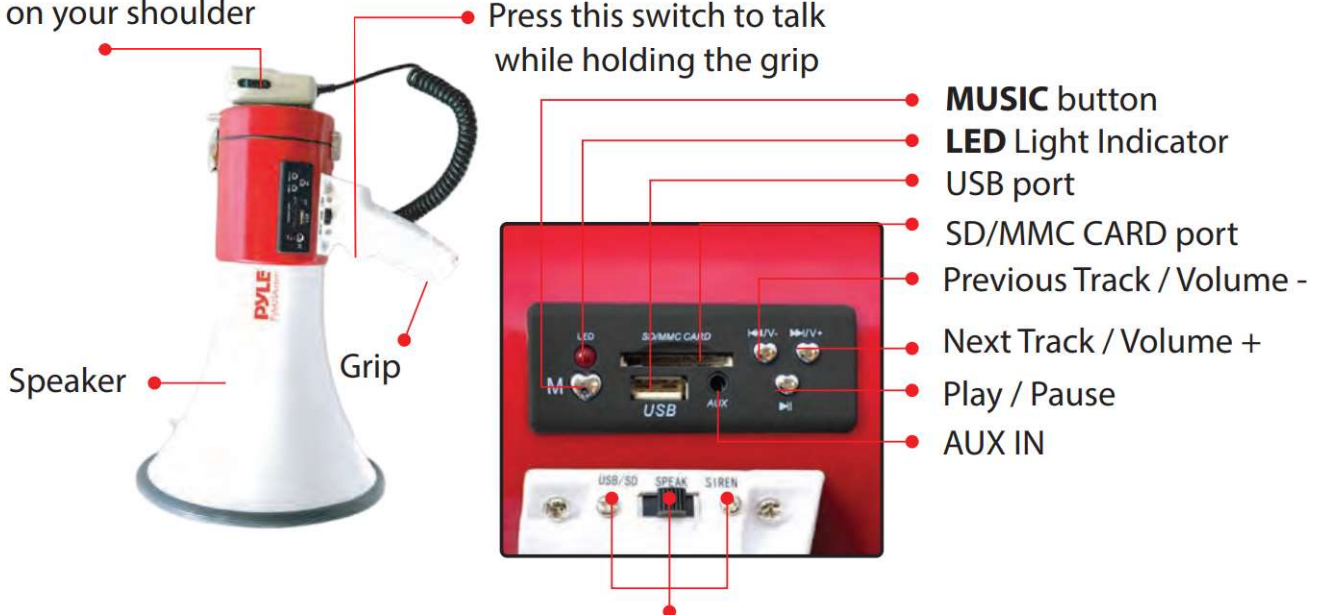

Slide to select **USB/SD, SPEAK, or SIREN MODE**

Megaphone for handheld or shoulder-slung use (strap supplied). Detachable anti-how/ microphone on coiled lead with on-off switch and volume control. Metal and ABS construction.

#### SAFETY




This megaphone is intended to be used only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or device

damage. Please use the megaphone as described and under supervision if used by children or minors.

- Ensure that plastic bags, packaging, etc.
- Never let children unattended use electrical devices.


## OPERATING INSTRUCTIONS

1. When carrying the megaphone on the shoulder, press the (1) press- to-talk power **ON-OFF** switch, on the left side of the microphone.
2. When holding the megaphone at the grip, fix the microphone hanger inlet in the microphone fixing hanger, then press the (2) press-to-talk power **ON-OFF** switch back with your index finger.
3. Position the speaker opening mouth towards the object, and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak normally.
4. Turn the sound volume control, on the right hand side of the microphone and adjust the sound level to max without causing howling.

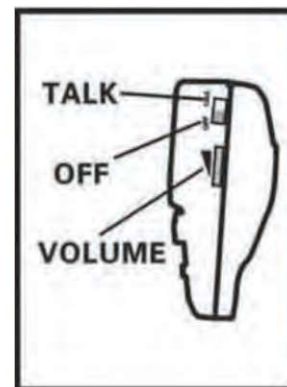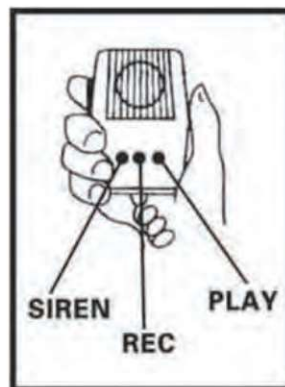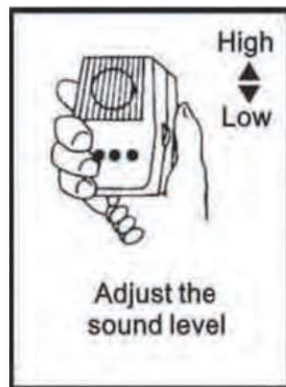


## TO REPLACE BATTERIES

1. Loosen the locking screw of the battery compartment cover on the back of the body.  
The battery compartment cover comes off.

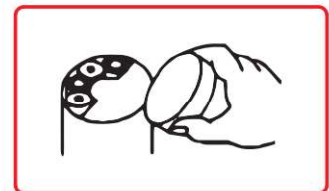

2. **Insert 8 x type-C**

"C" batteries in the battery case observing correct polarity.

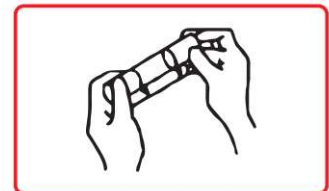

3. Insert the battery case with batteries into the battery compartment of the megaphone, paying attention to polarity.



## BATTERY CHARGING

1. The megaphone features a removable rechargeable battery, that plugs-in directly into the USB wall power outlet for charging. Once connected to the wall power outlet, the battery will begin charging automatically, after you set the battery to "**Charge Mode**" (average time for full-charge: **8.5 hours**). A Red light will be lit while charging and turns Green when fully charged.
2. **\*Important Note\***: Before charging the battery, ensure you hit the switch to "**DC CHARGING**" -- as located on the battery, to enable Charge Mode.
3. Once fully charged, insert the battery into the megaphone by opening the end cap in the rear of the megaphone. Be sure to slide the battery into the compartment properly, ensuring the power connection cable is exposed.
4. Once the battery is inserted, connect the battery power cable connector into the megaphone power input -- ensure you set the battery to "**Power Output**" Mode.
5. **\*Important Note\***: Before operating the megaphone, ensure you hit the switch to "**DC OUTPUT**" -- as located on the battery, to enable Power Output Mode.



## **PMP57LIA**

### **Portable Megaphone with USB/SD Readers Megaphone Speaker with Built-in Rechargeable Battery, MP3/USB/SD Readers, Aux (3.5mm) Jack, Siren Alarm Mode**

#### **Features:**

- (3) Audio Function Modes: Talk, Siren, USB/SD Memory Playback
- Built-in USB Flash & SD Memory Card Readers
- MP3 Digital Audio File Playback
- Convenient Wired Handheld Microphone
- Ergonomic Pistol Grip and Light-Weight Chassis
- Rechargeable Battery for Wireless PA Speaker Portability
- Battery Charges via Included USB Wall Power Adapter
- \*or Battery Powered by (8) x "C" Type Batteries, Not Included
- Aux (3.5mm) Input Connector Jack
- Connect & Stream Audio from External Devices  
(Works with MP3 Players, Smartphones, Tablets, etc.)
- Used by U.S. Armed Forces
- For Indoor/Outdoor Use

#### **What's in the Box:**

- Megaphone Speaker
- Rechargeable Battery
- USB Wall Adapter

#### **Technical Specs:**

- Power Output: 50 Watt MAX
- Projection Distance: Up to 1,200 Square Yards
- Rechargeable Battery: 11.1V Lithium-iOn, 1500mAh (16.6Wh, 166g)
- Megaphone Dimensions (Diameter x Length): 9.5" x 13.8" -inches

# PYLE

PyleUSA.com



**VISIT US ONLINE:**

*Have a question?*

*Need service or repair?*

*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

PYLE