 


FUKIN TUNED

USERS MANUAL

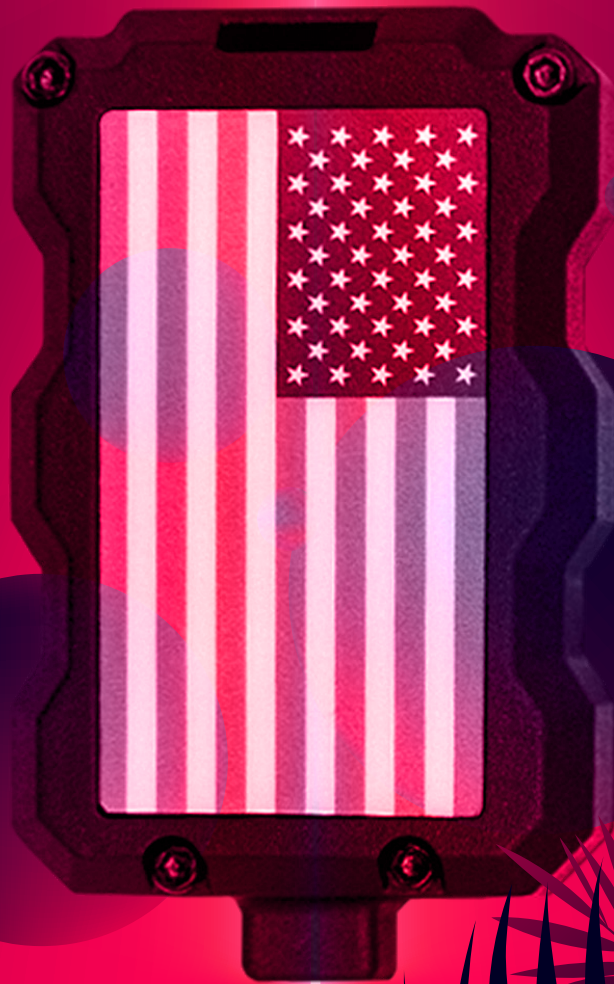

FUKIN TUNED

Table of Contents

- **Installation 2**
- **Registration 3**
- **Activation 4**
- **Bluetooth Connection 5**
- **Login To The App 6**
- **Modes 7**
- **Anti-Theft Mode 8**
- **Installing Remotely Submitted Software 9**

FUKIN SLOW

FUKIN CRUISE

FUKIN FAST

FUKIN SEND IT



Installation

Download Play Store or App Store to connect to Fukin Tuned.

 
1. Turn off over the ignition of your car, then open the Fukin Tuned application.

2. Make sure your mobile device has Bluetooth and GPS turned on.

3. When you open the application, you will see the following screen: If your email has been activated before, just continue to Sign-in with your email. However, if you haven't signed up before please click on the button 'Sign-up with email'.

4. Activate Your Unit Using The Fukin Tuned App

- Unplug Stock Harness
- Connect Unit In-Line to Harness
- Apply Zip-Ties For Mounting

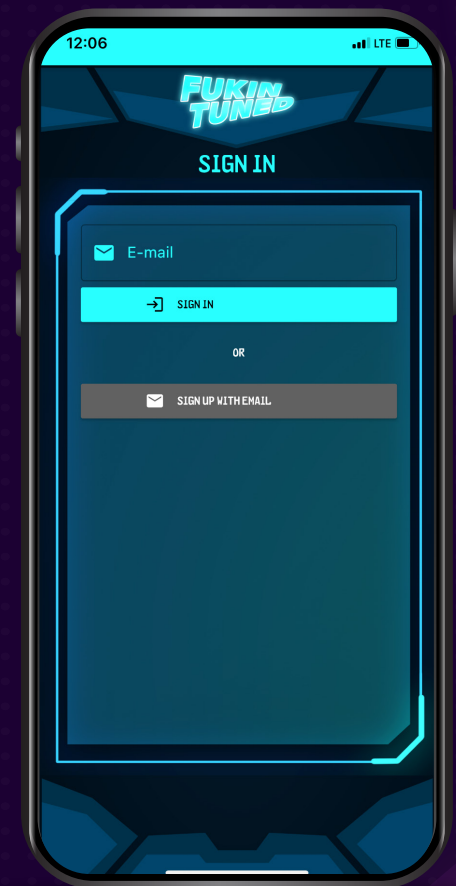

Registration

5

12:08 LTE

FUKIN TUNED

REGISTRATION

E-mail*

E-MAIL IS REQUIRED TO ACTIVATE ACCOUNT!

Name*

Last Name*

Phone

SIGN UP

OR

SIGN IN

5. Enter the requested information and simply press the "Registration" button:

6. An activation email will be sent to the e-mail address you registered:

6

FUKIN TUNED

REGISTRATION

E-mail*

fn@fukintuned.com

E-MAIL IS REQUIRED TO ACTIVATE ACCOUNT!

Name*

John

CAUTION

THE ACTIVATION E-MAIL WILL BE SENT TO THE E-MAIL BELOW. DO YOU CONFIRM?


FNFUKINTUNED.COM

YES NO

OR


SIGN IN

 Activation

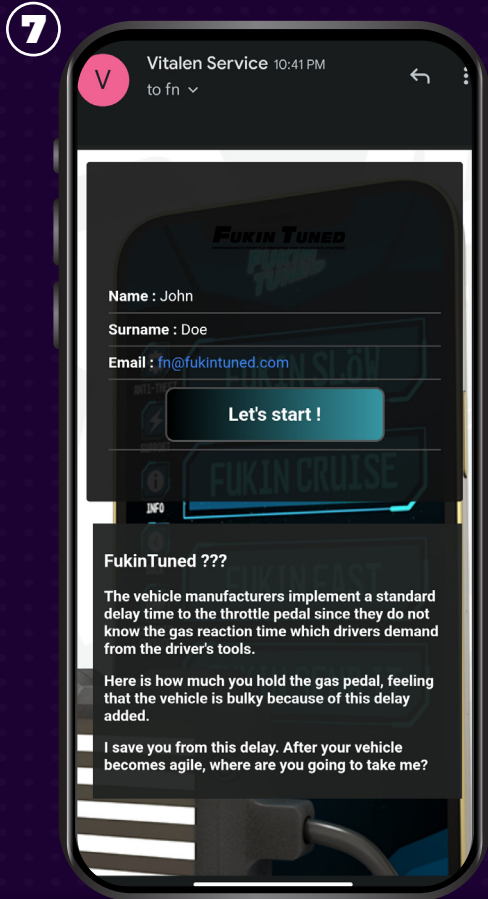

7. Press the "Start Using" button on the activation which was sent to your email address and open the app.

 8. In case the activation is not successful, you can get support from **customerservice@fukintuned.com**

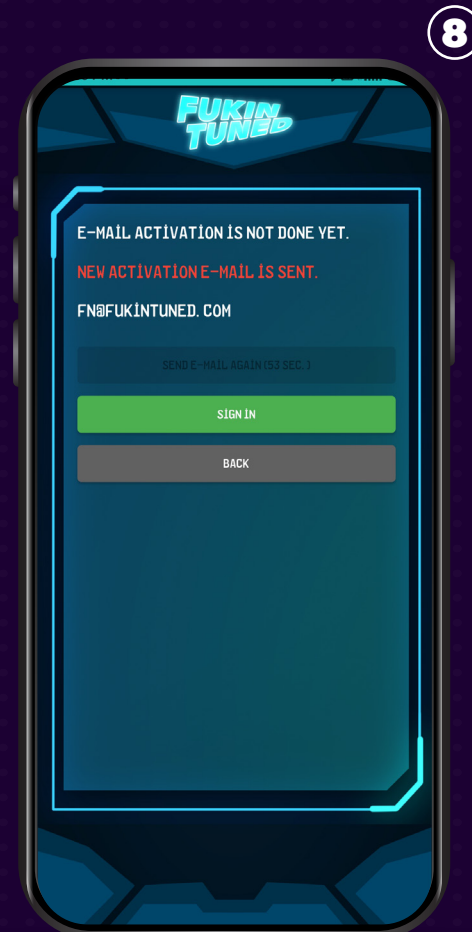

Bluetooth Connection

 


9. Touch to Start



10. Find and select Fukin Tuned that comes up in the Bluetooth scan.

Login To The App

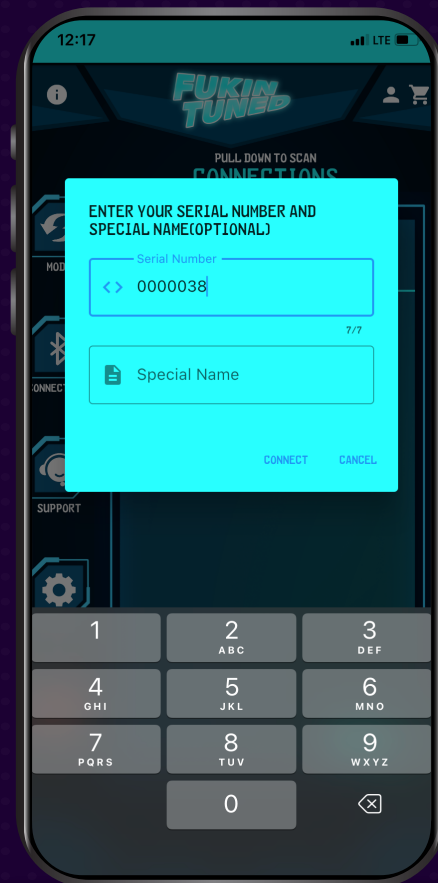

11. Enter the 7-digit serial number located on the side of the device or on the side of the box.

12. Name your device and simply press the 'Connect' button.

Modes



Fukin Slöw: Select the Fukin Slöw Mode and choose 'Change'. This mode deliberately reduces the throttle response to enhance control in challenging weather and land conditions.

Fukin Cruise: It provides faster throttle responses in the urban area.

 
 


Fukin Fast: It offers even stronger responses than Fukin Cruise, while remaining suitable for urban use.

Fukin Send It: It is the quickest mode which is good for racing or track days.

Each mode can be adjusted to 9 different levels.

Anti-Theft Mode

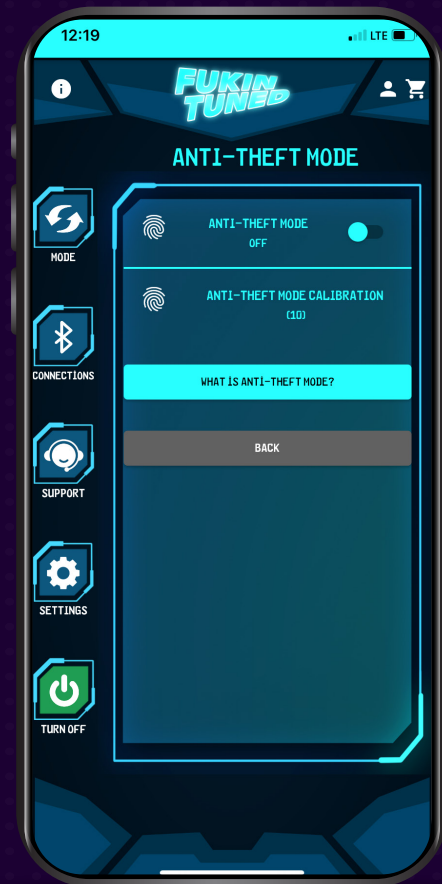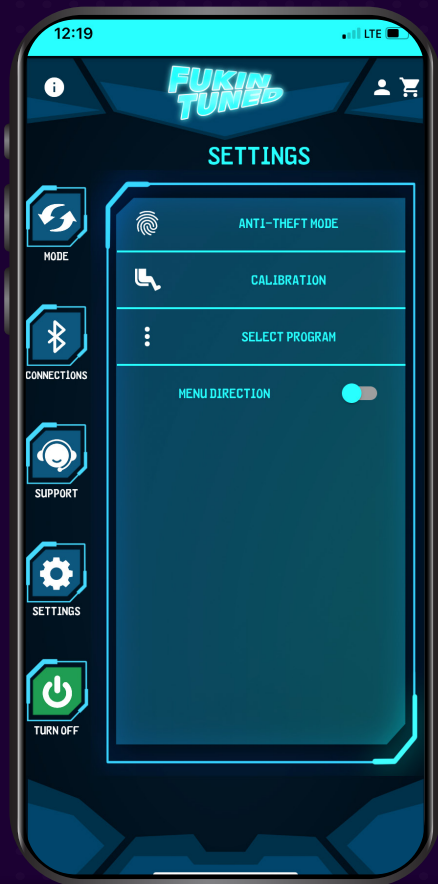

13. Go to settings and simply press the Anti-Theft Mode.

 
14. Do the calibration.

-Calibration mode is only done once when you enable Anti-Theft Mode, and you won't need to do it again.

Remote Software Update

Essential: It is the program defined by a Fukin Tuned personnel according to your request. You cannot change the mode without this update.

Standard: It is the program defined by a Fukin Tuned personnel according to your request. You can install this update at any time.

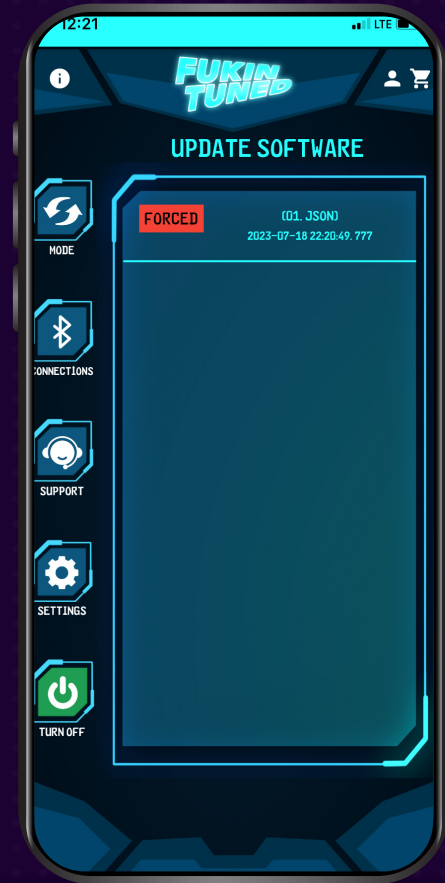

If you want your Fukin Tuned to change throttle responses, (The process of accelerating or reducing the response), You can request remote software by contacting our technical department.

When you connect to the device from the application, you will receive an "Essential Update Available" warning. Press the "Update" button to install the software.