 
 
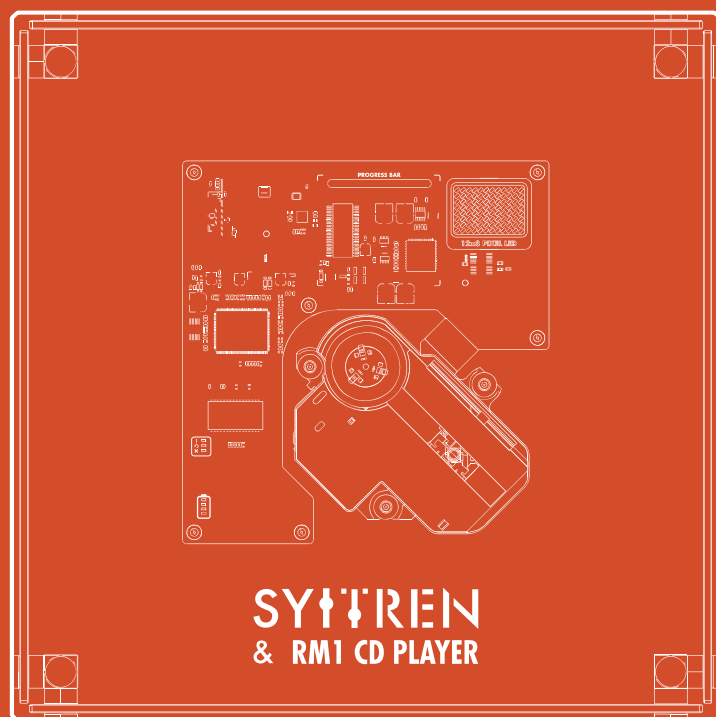 


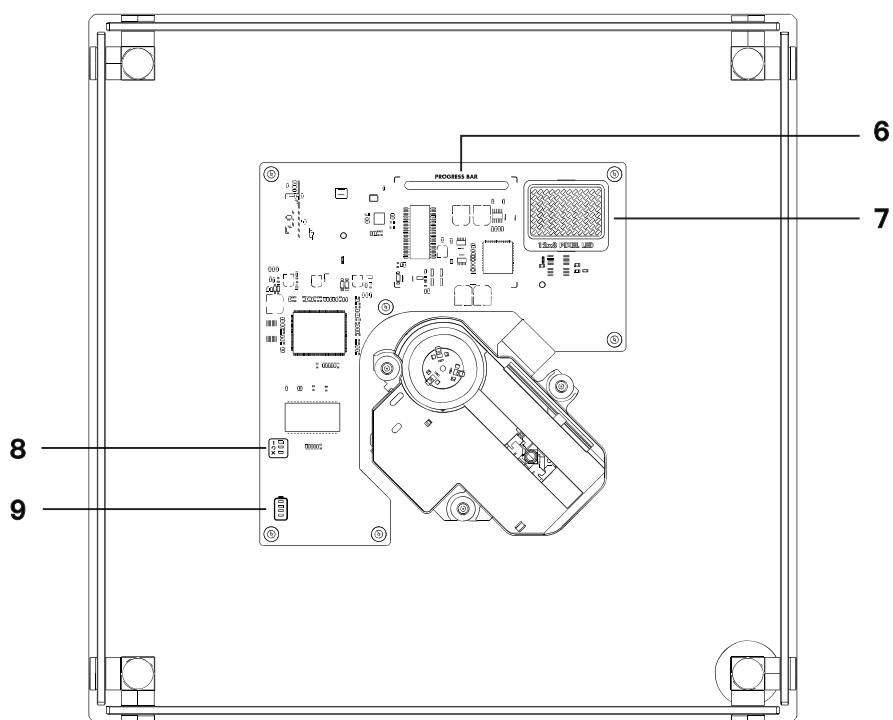

使用说明书

 
INSTRUCTION MANUAL

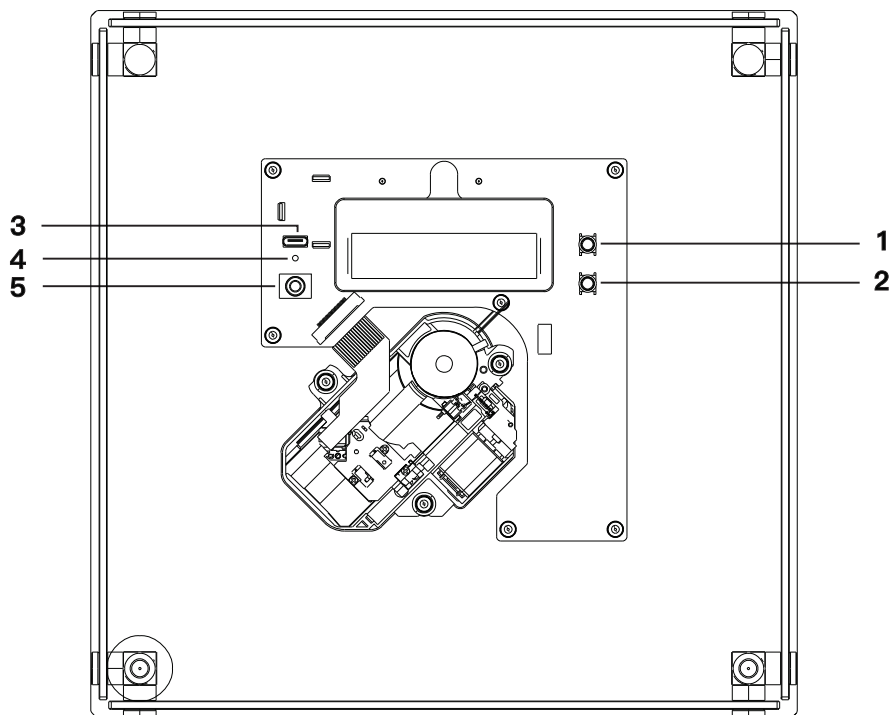

- 1.电源开关
- 2.蓝牙重置
- 3.充电接口
- 4.充电指示灯
- 5.耳机接口

- 6.播放进度条
- 7.点阵屏幕
- 8.循环模式指示灯
单曲循环/顺序播放/随机播放
- 9.电量指示灯

遥控器使用说明

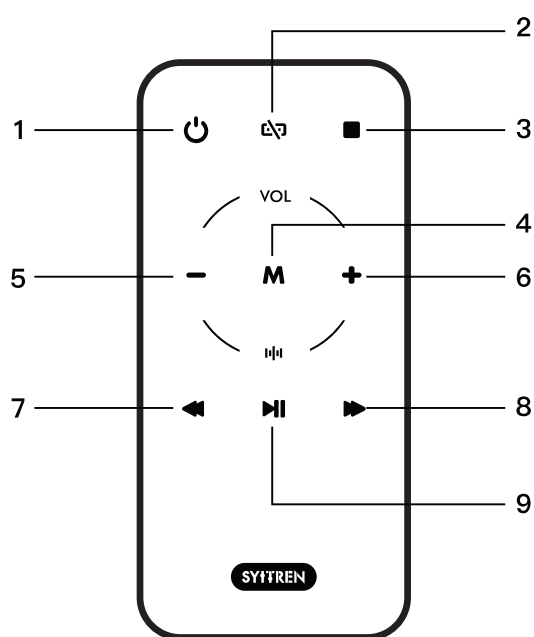

1. 开关机
2. 蓝牙重置
3. 歌曲停止播放
4. 长按进入彩蛋模式
短按切换彩蛋
5. 音量减小
6. 音量增大
7. 短按：上一曲/长按：快退
8. 短按：下一曲/长按：快进
9. 播放/暂停

使用说明

开关机

长按背面电源按钮，点阵屏点亮，指示灯亮起为开机，再次长按为关机。

CD播放

首次使用时，请取下保护卡纸。

请勿在播放过程中强行停止CD光盘转动。

短按遥控器上的「■」按键，光盘将停止播放。

供电

RM1内置充电电池，请使用附带的电源线充电（本机不附赠插头，建议使用5V/1A的插头）。

插入电源线充电，背面充电指示灯红色常亮，正面电量图标闪烁，充满电后，背面充电指示灯变为绿色，正面电量图标常亮。

蓝牙功能

开机默认蓝牙为开启状态，显示屏蓝牙图标闪烁，设备进入可搜索状态，将需要配对的设备（蓝牙音响，蓝牙耳机等）设置为蓝牙搜索模式，显示屏显示播放曲目序号，连接设备成功，即可播放音乐。

输出接口

RM1支持3.5mm音频输出，可自行连接音响，耳机等设备。

使用方式

桌面放置

逆时针旋转拆下背面底部两个螺丝后（图1），将配件中的支撑结构顺时针拧紧（图2），可以立放在桌面上。

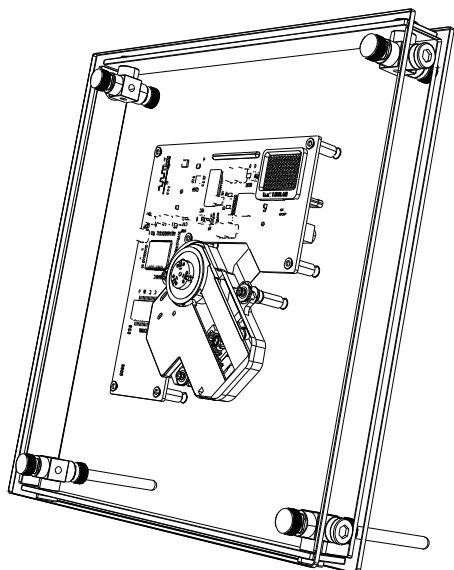 


图1


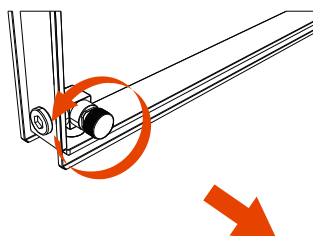 


图2

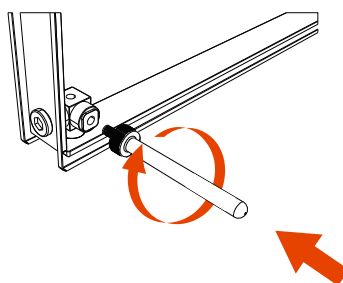 

挂墙放置

逆时针旋转拆下背面支撑结构后（图1），顺时针旋转拧紧螺丝（图2），通过背面凹槽（图3）可以挂在墙面上放置。

图3

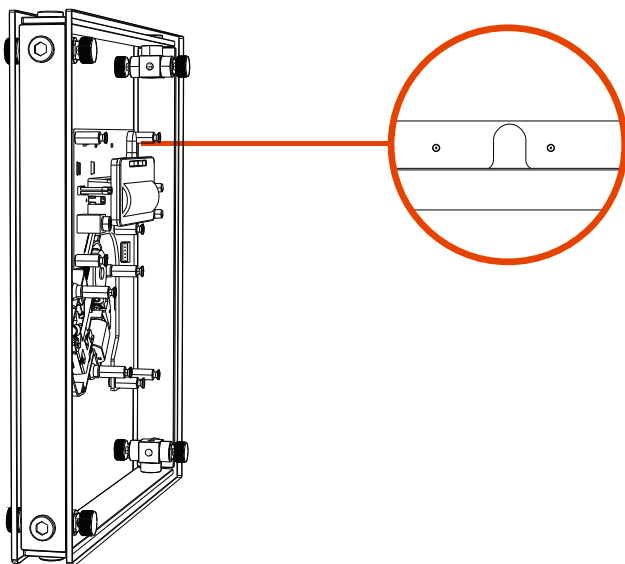 


图1


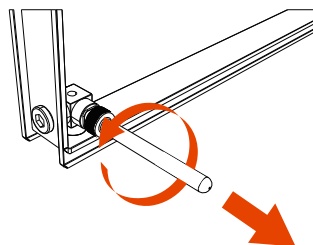 


图2

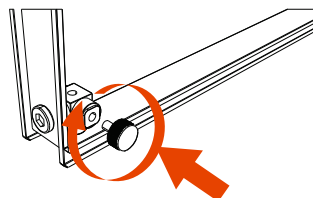 

产品规格

电源参数：DC 5V1A

充电接口类型：Type-C

支持碟片格式：CD, MP3, WMA

支持音频格式：MP3, WMA

解码芯片型号：M5673D

防震时间：CD-40S MP3-120S

音频输出接口：3.5mm

音频输出推力：11mW/32Ω

信噪比：95dB

蓝牙版本：5.3

电池型号：18650

电池容量：2000mAh

充满电时长：1-2小时

 
 
满电可使用时长：6-8小时

产品尺寸：260*260*42mm

产品净重：0.9kg

注意事项


1. 为避免火灾和触电危险,请勿将本设备淋雨或受潮。
2. 仅可使用制造商制定的配件。
3. 本设备仅适用于非热带气候条件。
4. 请勿在本产品上面放置任何盛满液体的物品(如花瓶),严禁水滴和水溅。
5. 请勿堵塞本产品开口处,连接前请检查端口是否有异物、插头是否与接口匹配、方向是否正确。
6. 请勿靠近热源(如散热器、炉灶等产生热源的设备)。
7. 请勿擅自拆卸设备外壳,如需拆卸,请联系专业的维修人员进行维修。
8. 请不要直视激光头,以免造成眼部伤害。
9. 当长期没有使用本产品时,需要定期给产品充电,以保证电池寿命。
10. 本产品提供的遥控器需搭配纽扣电池使用,电池电压3V。

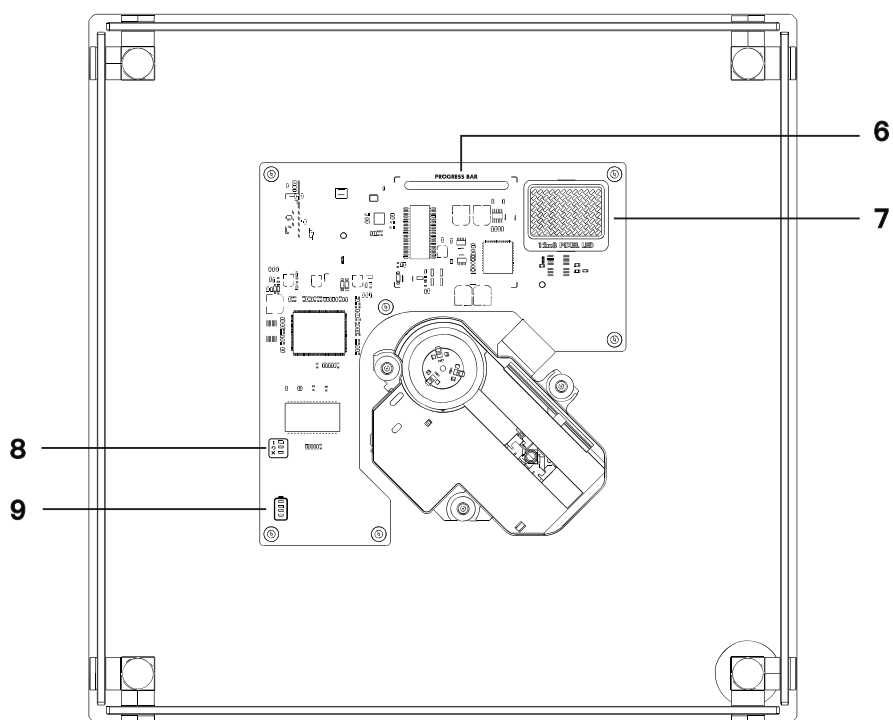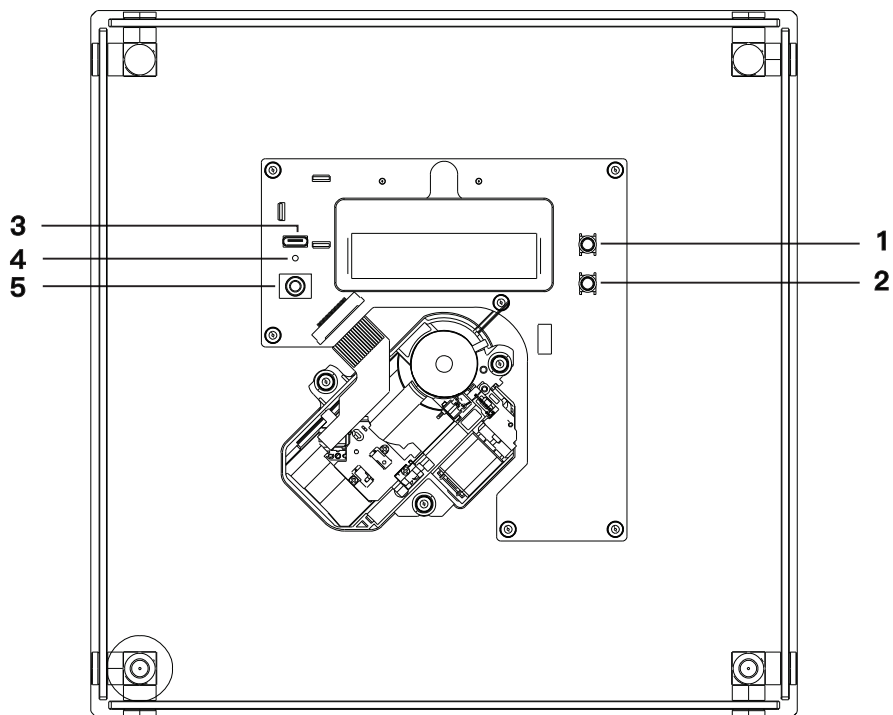

- 1.Power Switch
- 2.Bluetooth Reset
- 3.Charging Port (Type-C)
- 4.Charging Indicator
- 5.Headphone Jack
- 6.Progress Bar

- 7.Dot-Matrix Display
- 8.Repeat Mode Indicator
 - Single Repeat
 - Sequential Play
 - Shuffle Play
- 9.Battery Level Indicator

 REMOTE CONTROL INSTRUCTIONS

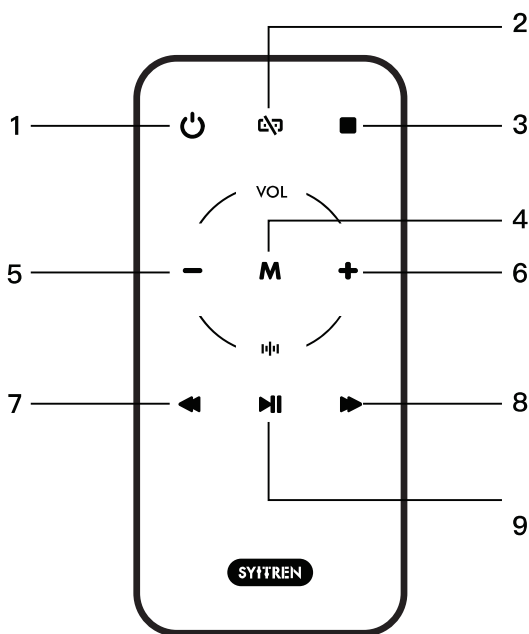

- 1.Power On/Off
- 2.Bluetooth Reset
- 3.Stop Playback
- 4.Long press to enter Easter Egg mode/
Short press to switch Easter Egg
- 5.Volume Down
- 6.Volume Up
- 7.Short press: Previous track / Long
press: Rewind
- 8.Short press: Next track / Long press:
Fast forward
- 9.Play/Pause

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the power button on the back to turn the unit on. The dot-matrix screen will light up and the indicator will turn on. Press and hold the button again to turn it off.

CD Playback

Remove the protective card when using for the first time.

Do not forcibly stop the CD disc while it is rotating during playback.

Press and release the 「■」 button on the remote control to stop playback of the disc.

Power Supply

RM1 is equipped with a built-in rechargeable battery. Please use the supplied power cord for charging (the unit does not include a plug;a 5V/1A adapter is recommended). Plug in the power cord to charge. The charging indicator light on the back will remain red steadily, and the battery icon on the front will blink. When fully charged, the charging indicator light on the back will turn green, and the battery icon on the front will stay solid.

Bluetooth Function

Bluetooth is enabled by default upon power-on. The Bluetooth icon on the display flashes, indicating that the device is in discoverable mode. Set the device you wish to pair (such as Bluetooth speakers,headphones, etc.) to Bluetooth search mode.The display will show the track number. Once the connection is successful, you can start playing music.

Output Interface

RM1 supports 3.5mm audio output. You can connect speakers, headphones, or other audio devices as desired.

INSTRUCTIONS FOR USE

Desktop Placement

Remove the two screws on the bottom of the rear panel by turning them counterclockwise (Fig. 1), then tighten the included support structure clockwise (Fig. 2) to enable upright placement on a desktop.

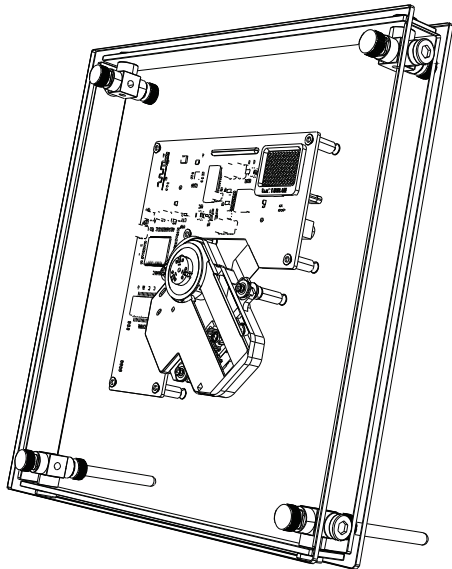 


Fig. 1


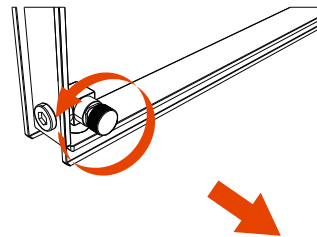 


Fig. 2

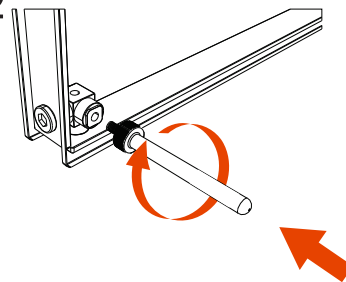 

Wall Mounting

Remove the support structure on the rear panel by turning it counterclockwise (Fig. 1), then tighten the screws clockwise (Fig. 2). The device can then be hung on a wall using the recessed slot on the rear panel (Fig. 3).

Fig. 3

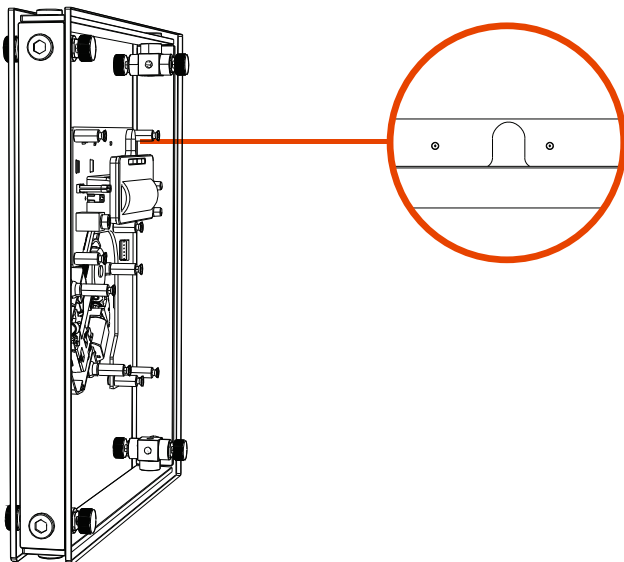 


Fig. 1


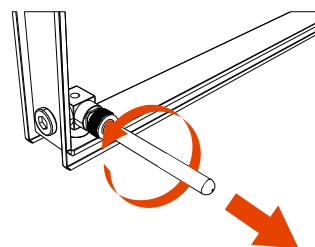 


Fig. 2

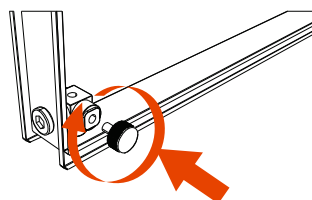 

PRODUCT SPECIFICATIONS

Power supply: DC 5V 1A

Charging port: Type-C

Supported disc formats: CD, MP3, WMA

Supported audio formats: MP3, WMA

Decoder chip model: M5673D

Anti-shock time: CD — 40s, MP3 — 120s

Audio output jack: 3.5mm

Audio output power: 11mW / 32Ω

Signal-to-noise ratio: 95dB

Bluetooth version: 5.3

Battery type: 18650

Battery capacity: 2000mAh

Charging time: 1—2 hours

Playback time (full charge): 6—8 hours

Product dimensions: 260 × 260 × 42 mm

Net weight: 0.9kg

PRECAUTIONS

1. To avoid the risk of fire and electric shock, do not expose this device to rain or moisture.
2. Use only accessories specified by the manufacturer.
3. This device is suitable for use in non-tropical climates only.
4. Do not place any liquid-filled objects (such as vases) on top of this product. Droplets and splashes are strictly prohibited.
5. Do not block any openings on this product. Before connection, check that the ports are free of foreign objects, that the plug matches the interface, and that the orientation is correct.
6. Do not place near heat sources (such as radiators, stoves, or other heat-generating equipment).
7. Do not disassemble the device casing without authorization. If disassembly is required, please contact a qualified service professional for repair.
8. Do not look directly at the laser pickup to avoid eye injury.
9. When the product is not in use for an extended period, charge it regularly to preserve battery life.
10. The remote control provided with this product requires a button cell battery with a voltage of 3V.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The equipment shall be installed and operated with a minimum distance of 20 cm between the radiator and your body.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

MANUFACTURER

SHENYANG SYITREN CULTURAL COMMUNICATION CO., LTD.

Website: www.sytren.cn

Email: service@sytren.cn

Note: We offer a 1-year limited warranty starting from the date of receipt of your product. Thank you for choosing our brand.

保修须知

- 1.商品非人为损坏，保修1年，双方各自承担邮寄费用。
 - 2.电池为消耗品，保修半年，因正常使用而消耗的电池不在保修范围之内。
 - 3.过保商品维修，以及其他售后问题，可联系售后客服。
- 售后工作时间为:工作日9:00--17:00

SYTTREN