


DREO

Smart TurboPoly™ Fan
765S

USER MANUAL

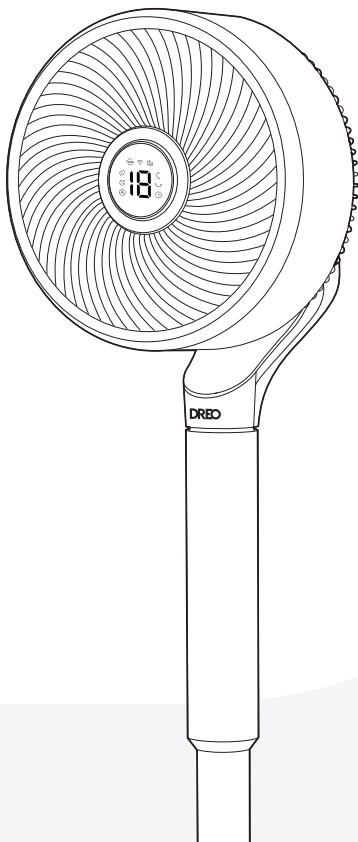

//

Thanks for Choosing DREO!

Your support means the world to us. We hope you enjoy our product as much as we did creating it.

CONTENTS

01

ASSEMBLING YOUR
APPLIANCE

1-4

02

CONNECTING TO YOUR
APPLIANCE

5-6

03

KNOWING YOUR
APPLIANCE

7-8

04

USING YOUR
APPLIANCE

9-12

05

CLEANING
AND MAINTENANCE

13-15

06

TROUBLESHOOTING

16

ASSEMBLING YOUR APPLIANCE

01


Assembly Instructions

When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

Pedestal Fan Assembly


Note: It's recommended to place the fan head in the box during assembly to prevent scratches or wear.

1

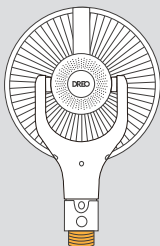

Take out the fan head.

 2




Insert the pedestal into the fan body until it clicks into place.

3




Install the column into the fan body.

4

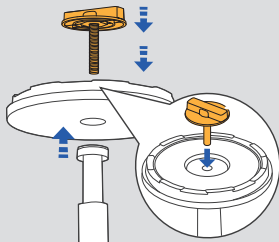


Push the column into the base, and tighten it using the thumb screw.

5

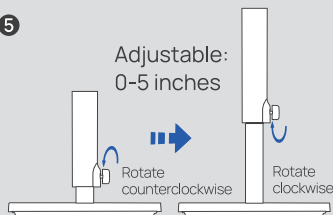Adjustable:
0-5 inches


Raise or lower the appliance to the desired height.

6

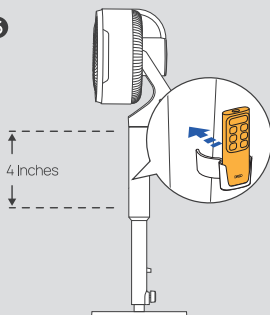

Install the remote control holder.


7

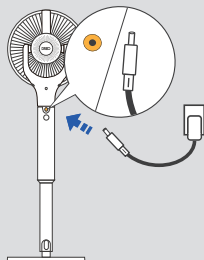

Connect the power adapter to the input (located at the back of the appliance), and then plug the appliance into the power outlet.

Table Fan Setup (Optional)


1

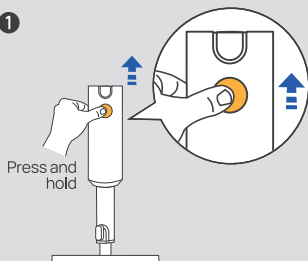

Press and hold the locking tab, then remove the pedestal and base assembly.


Note: ALWAYS unplug the power cord first to avoid any safety hazards.

2

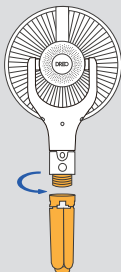


Rotate the tabletop stand counterclockwise into the fan body until it is securely tightened.

3

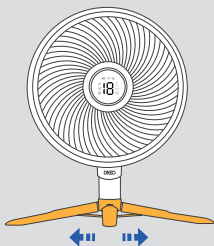

Place the stand on any hard, flat surface and it will unfold automatically.


Store the pedestal and base assembly in a safe place for later reassembly.

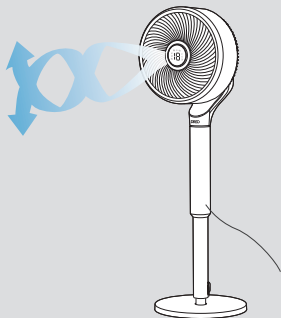

CAUTION

Do not operate the appliance if the base has not been installed. Please exercise caution and handle the base with care during installation.

Package Contents

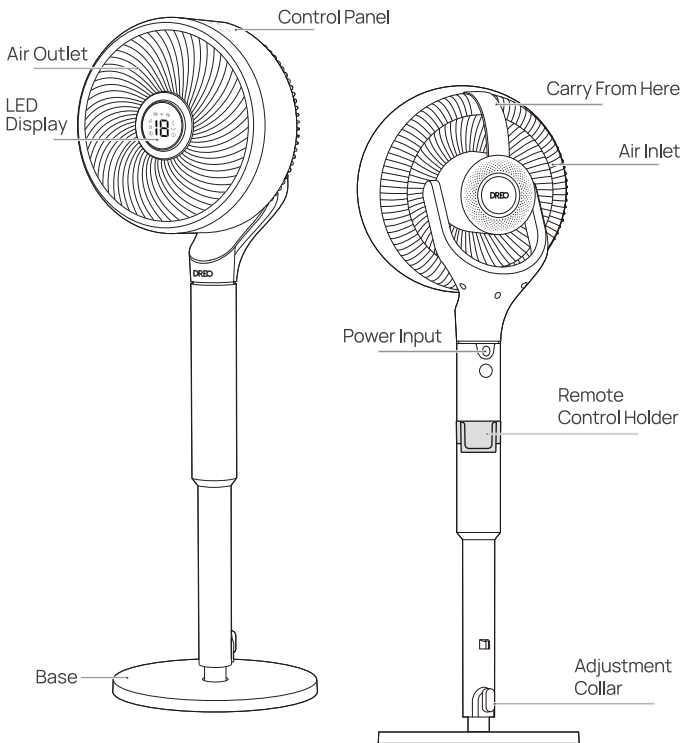

User
Guide



Remote Control



Power Adapter



Remote Control Holder



2 x AAA Batteries



Thumb Screw



Tabletop Stand

CONNECTING TO YOUR APPLIANCE

02



Before connecting the appliance to your mobile device, please scan the QR code on the left or go to the app store and search “DREO”, then select and download the app.



Look for “**Smart TurboPoly™ Fan 765S**” when connecting your new appliance.



You can use the DREO app to connect your appliance to **Amazon Alexa** or **Google Home**. Please follow the in-app instructions to set up your voice assistant.

NOTE: You must create a DREO account to access voice assistants.

- 1 Launch DREO and sign in or create an account by following in-app instructions.
- 2 Enable Bluetooth on your mobile device and plug in your appliance.
- 3 Hold  for 5 seconds to start WiFi connection settings.
(Tip: The WiFi icon  will keep flashing when pairing.)
- 4 Tap+ **Add Device** and select **Smart TurboPoly™ Fan 765S**.
- 5 Follow in-app instructions to complete WiFi connection.
- 6 You're now ready to control the appliance on your app.
(Tip: To restart connection settings, hold  again for 5 seconds.)

Long press  and  for 5 seconds to unpair your appliance and restore factory settings. To re-pair the remote control, long press  and  on the remote for 5 seconds.

KNOWING YOUR APPLIANCE

03

Control Panel



Power Button

- Turn power on/off.



Increase Button

- 1-12 speed levels.



Decrease Button

- 1-12 speed levels.



Mode Button

- Switch between Normal/Natural/Sleep/Auto/Turbo Mode.



Timer Button

- Select to set a timer (0-12h).



Horizontal Oscillation Button

- Sweep airflow horizontally (0°/30°/60°/90°/120°/150°).
- Long press for 5 seconds to start network settings and device pairing.



Vertical Oscillation Button

- Sweep airflow vertically (0°/40°/70°/100°).



Turbo Mode Button

- Turn Turbo Mode on/off.

Note:

- This appliance is muted by default. To turn on the button sounds, go to the DREO app.

LED Display



Turbo Mode



WiFi Connection



Mute/Unmute



Natural Mode



Sleep Mode



Auto Mode



Fan Speed/Timer
Hour



Vertical
Oscillation




Horizontal
Oscillation



Timer

USING YOUR APPLIANCE 04


Getting the Most out of Your appliance

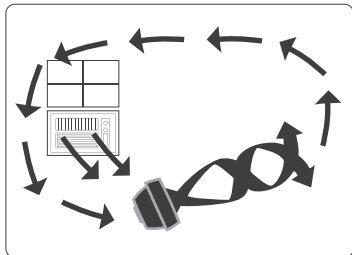

Summer:

Use with Air Conditioner


Position the appliance in front of your AC to circulate cold air and provide better cooling.

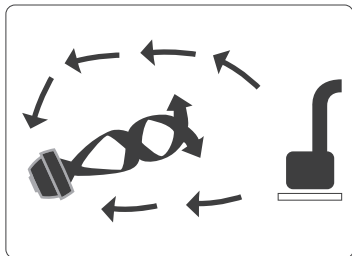

Winter:

Use with Heater

Send the heat to the corner of the room and circulate warm air faster.

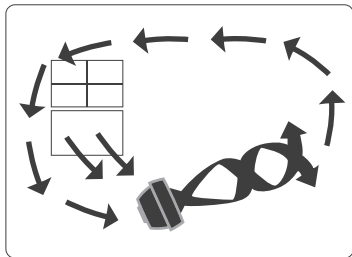

Spring & Fall:

Circulation

Make the indoors as fresh and pleasant as the outdoors.

Working Modes (Press on the remote)



Normal Mode

Fan runs at the fixed speed.



Auto Mode

Fan automatically increases speed when room temp is higher and decreases speed when temp is lower.



Turbo Mode

Fan runs at the maximum speed.



Natural Mode

Fan speed goes up and down intermittently to replicate the natural breeze.



Custom Mode

(Available in the DREO app)

Fan speed changes according to temperatures or time you desire.



Sleep Mode

Balance comfort and noise by automatically decreasing fan speed as you fall asleep.

If the fan speed is higher than 4, it will decrease two times at most, one speed every 30 minutes, then it will remain constant.

If the fan speed is 3 or lower it will remain constant.

Additional Features



Timer

When the fan is ON/OFF, touch the timer button  on the remote control repeatedly to set a timer from 1 to 12 hours. When the timer ends, the fan will stop/start running automatically. To cancel, set the time to 0 hour.

Note: When the auto off timer is enabled, display will return to fan speed after 3 seconds.



Child Lock

Long press  and  at the same time for 3 seconds to turn on/off Child Lock.

Note: Child Lock doesn't apply to operations from the remote control. You can also turn off Child Lock by re-plugging in, resetting to factory settings.



Memory

If the fan is turned OFF or disconnected from power, it will operate under the previous settings (except the Timer setting) when it is turned ON again.



Countdown Display

When long pressing buttons for Factory Reset, Child Lock, and Mute, a countdown will show on the display accordingly.



Firmware Update

Check the firmware version on the DREO app and update regularly for the appliance to work more efficiently.



Display will show "U" during the update process.
Do not operate until the update is completed.




Display Auto Off

Display turns off after 1 minute (after 5 seconds in sleep mode).
Wake up the display with any button.

To disable this feature, please go to the DREO app.

Remote Control

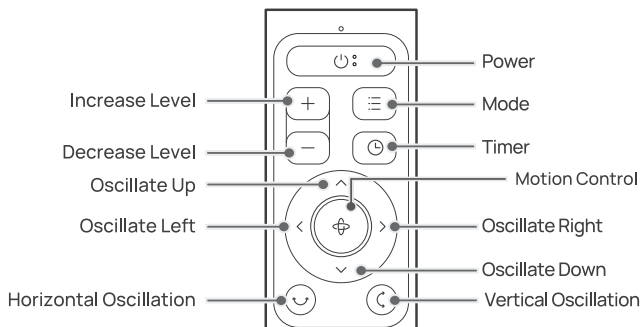


Motion Controls



Your new remote control comes with the Motion Control feature. It can make the fan oscillate horizontally and vertically in the direction of your motion. To use this feature:

1. Aim the remote control towards the LED display. Then, hold down the  button.
2. Gently move the remote control in the direction you want the fan to oscillate:
 - Move left or right to oscillate horizontally.
 - Move up or down to oscillate vertically.

Note: Avoid swiping too quickly when using this function, as this may affect the appliance's oscillation response.

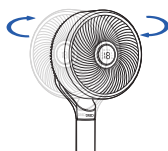

Hold  & Swipe Left/Right

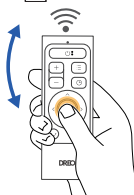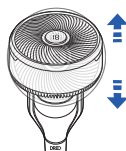

Hold  & Swipe Up/Down

Additionally, you can hold the  or  button to manually oscillate the fan horizontally, and  or  oscillate it vertically.



Remote Control Pairing

The remote control that shipped with your fan is already paired.

Pairing a new remote control to an existing appliance

If you lose your remote control or purchase a new one, please follow the steps below to pair the remote control to your appliance.

- Long press  and  **ON YOUR REMOTE CONTROL** to initiate pairing.
- If pairing is successful, there will be a long beep, and the LED lights will flash and stay on for 1 second.
- To unpair the remote control and restore factory settings, long press  and  for 5 seconds **ON THE CONTROL PANEL**.

Pairing multiple remote controls to an existing appliance

To pair multiple remote controls to an existing appliance, you must pair each additional remote control separately. The remote control that shipped with your fan is already paired.

- For each additional control, long press  and  **ON YOUR REMOTE CONTROL** to initiate pairing.
- If pairing is successful, there will be a long beep, and the LED lights will flash and stay on for 1 second.
- To unpair the remote control and restore factory settings, long press  and  for 5 seconds **ON THE CONTROL PANEL**.


Pairing one remote control to multiple appliances

To pair one remote control to multiple appliances, you must pair each additional appliance separately. The remote control that shipped with your fan is already paired.

- For each additional appliance, long press  and  **ON YOUR REMOTE CONTROL** to initiate pairing.
- If pairing is successful, there will be a long beep, and the LED lights will flash and stay on for 1 second.
- To unpair the remote control and restore factory settings, long press  and  for 5 seconds **ON THE CONTROL PANEL**.

CLEANING AND MAINTENANCE

05

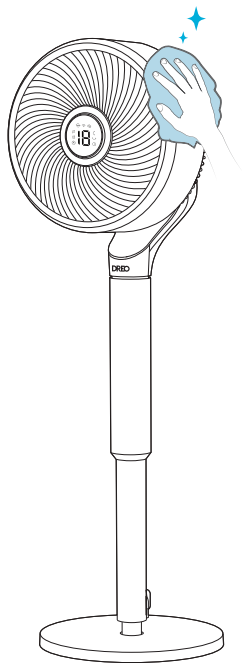

Outer Surface

Gently wipe off the dust with a soft, dry cloth.

Base

The base can be disassembled in the reverse order of assembly.

CAUTION




1. Always unplug the fan before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.



WARNING


To reduce the risk of electrical shock and injury to persons, turn off and unplug the appliance before any cleaning and maintenance.

1

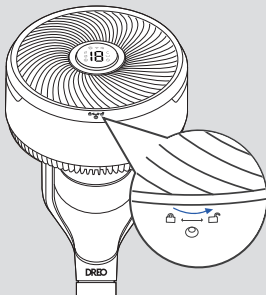


Remove the screw on the front grille, rotate the grille counterclockwise to take it off.

2

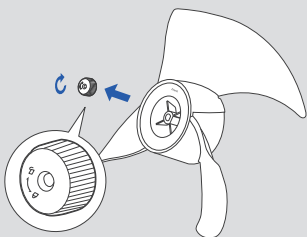


Remove the blade cap by rotating it as shown and take the blade assembly out of the shaft.

3

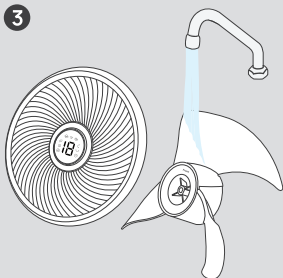


Rinse cap, blades, and grille under running water or with a clean, damp cloth.

4

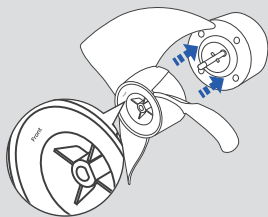


Dry all parts. Make sure the side marked "Front" faces outward before reinserting the blade assembly.

5

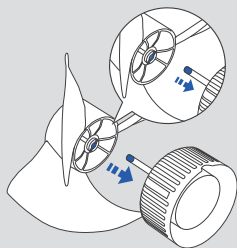

Insert the blade assembly back into the shaft by aligning the centers.

6

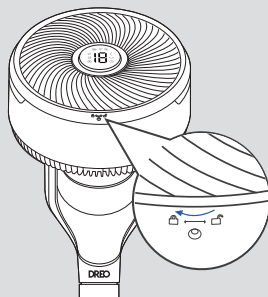

Align the point on the front grille with the right point on the casing, then rotate the grille clockwise and install the screw back in place.

My appliance won't turn on!

Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the appliance.

My appliance is shaky and wobbling!

1. Place the appliance on a flat, level surface.
2. Incorrect installation might also cause shakiness.
Please refer to the assembly instructions in page 1-3.

My appliance is making vibration and noise!

1. Place the appliance on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.

If your problem is not listed or still persists, please contact our
Customer Support (see page 17)

Model No.: DR-HPF015S
Rev_EN_1.0

We're Here to Help!

 (888) 290-1688 (Mon - Fri, 9:00 am-5:00 pm PST/PDT)

 support@dreco.com

 www.dreco.com

 DRECO PTE. LTD.

 112 ROBINSON ROAD, #03-01, ROBINSON 112, SINGAPORE 068902



www.dreo.com

Looking for help?

Contact us to get expert support.



support@dreo.com



[\(888\) 290-1688](tel:(888)290-1688)



www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT