

Welcome to use your F15


F15 will start automatically after you press and hold the power button for 3 seconds



▲ Front Panel




▲ Back Panel

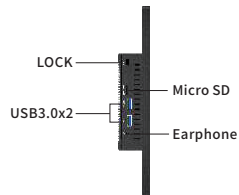

▲ Left Panel



▲ Right Panel

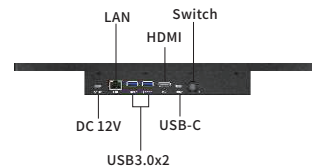

▲ Top Panel



▲ Bottom Panel

Specification and features(1)

NAME	F15
Form Factor	15.6" touch industrial PC
Dimensions	358.9×222×38.1mm
Weight	1.5kg
Screen Size	15.6"
Screen Resolution	1920*1200
Touch Module	G+G Multi-Touch
Battery	Optional(lithium polymer)
System Version	Windows 11
CPU Type	Intel Celeron N5095
CPU Speed	2.0GHz ~ 2.9GHz
GPU Type	Intel UHD Graphics
Memory	8GB
Storage	eMMC 128GB

Specification and features(2)

Speaker	Built-in
WIFI	WiFi 5
Bluetooth	Bluetooth 5.0
Ethernet Network	1000Mbps Gigabit Lan
USB Interface	USB3.0 x 4
USB-C	USB-C charge x 1
SD card	SD Card reader ×1
Audio Jack	3.5mm headphone
HDMI	HDMI 2.0 ×1
Power On/Off	Supprot
Wake up on Lan	Wake up on Lan by RJ45
PXE	Preboot Execution Environment
CE/FCC	Support

F15

15.6 Inch Industrial PC

Support Team: higoleus@gmail.com

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.