

SENCOR®

SES 1510BK



ESPRESSO COFFEE MACHINE

Translation of the original manual

 
 



SENCOR®

SES 1510BK



A

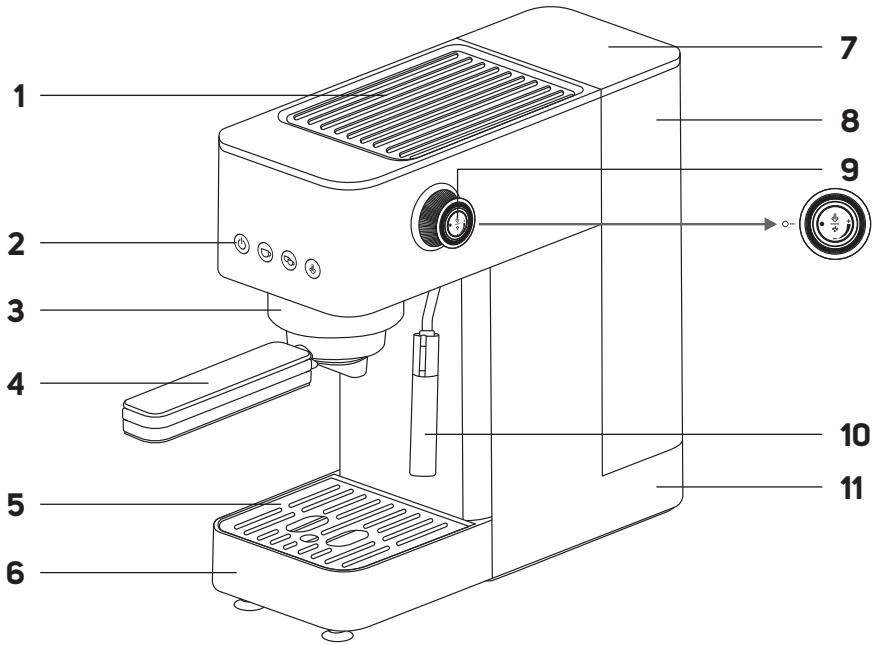

B



1



2




3




4


C

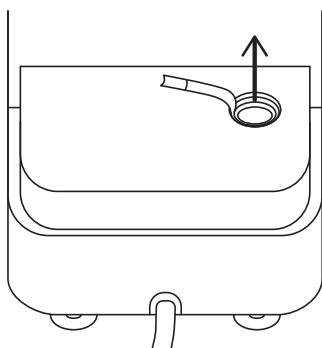


D1


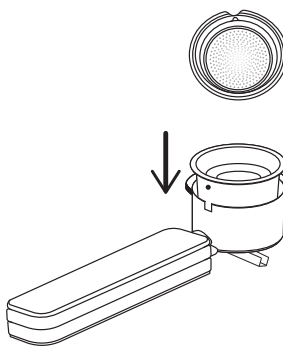


D2

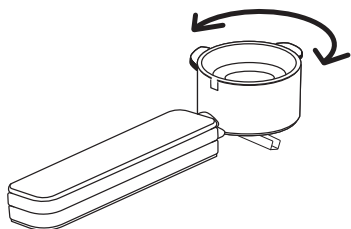

E

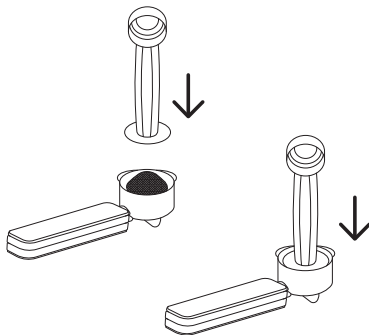

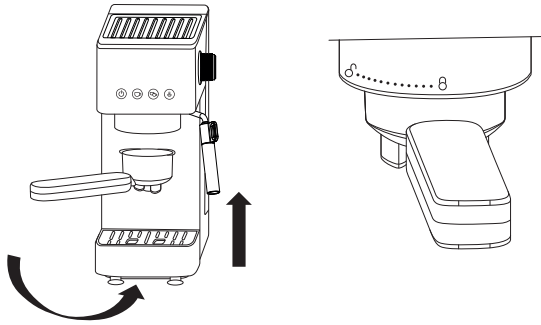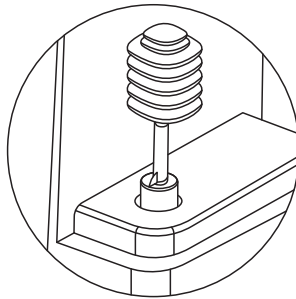F**G**

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by unsupervised children.
- Keep the appliance and its power cord out of the reach of children under 8 years of age.
- If the power cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. Never use the appliance if the power cable is damaged.
- This appliance is intended for household use. It is also suitable for personal non-commercial use in spaces such as:
 - kitchenettes in shops, offices and other workplaces;
 - agriculture;
 - hotel, motels and other residential areas;
 - bed and breakfast establishments.
- The appliance must not be immersed in water when it is being cleaned.

**WARNING:**

The filling hole must not be opened during use.

**WARNING:**

Prevent the plug from getting wet.

- Always clean the parts of the appliance that come into contact with food with clean warm water and a little neutral dishwashing liquid, rinse them with clean water and wipe dry.

**WARNING:**

Incorrect use may lead to injury.

- The outer surface of the appliance heats up during use and may be hot for some time after use. Be very careful.
- The appliance must not be placed in a cabinet when in use.

Additional Important Safety Instructions for Use of the Appliance

- Before connecting the appliance to a power socket, make sure that its nominal voltage indicated on the rating plate matches the electrical voltage of the socket.
- Connect the appliance only to a properly earthed socket. For safety reasons, we do not recommend using adaptors or extension cables.
- Do not place the appliance on windowsills, sink drain trays or unstable surfaces. Always place the appliance on a stable, flat and dry surface.
- Do not place the appliance on an electric or gas stove or near an open flame.
- Never use the appliance in the immediate vicinity of a bath, shower or swimming pool.
- Use the appliance only for its intended purpose.
- Use the appliance only with the original accessories supplied with it.
- Leave at least 15 cm of free space around and 35 cm above the appliance to ensure proper air circulation during operation.
- Only use the top surface of the appliance to heat up cups. Do not use it to store items.
- Fill the water tank with clean, cold water. Do not pour hot water or other liquids into it or place any objects inside it.
- Before turning on the appliance, make sure that:
 - the drip tray and grille are in place;
 - the water tank is filled with a sufficient amount of water and is properly installed in position. The water level must not exceed the maximum mark.
- Before you begin brewing coffee, check that the portafilter is properly attached to the brew head. Pressure is created in the portafilter during the coffee brewing process, so do not move it during operation. Otherwise a dangerous situation could arise.
- Take extra care when operating the appliance to avoid scalding with hot water or steam.
- When using the appliance, check the water level in the water tank regularly. If the water level falls below the minimum mark, refill the water tank. Before adding water, first turn the appliance off and disconnect it from the power socket.
- The appliance is equipped with a built-in thermal fuse that switches it off when the pump is idling to prevent damage. If such a situation occurs, unplug the power cable and allow the appliance to cool down for at least 30 minutes. Then you can use it again.
- Always turn off and unplug the appliance from the power socket when not in use, when left unattended, before disassembly or assembly, before refilling the tank, before moving or cleaning it. Allow the appliance to fully cool down before cleaning or moving.
- Do not move the appliance when there is a cup of coffee on the drip tray grille or with cups on the surface for heating them up.

- Keep the appliance and its accessories in clean condition. Perform the cleaning and maintenance following the instructions in the Cleaning and Maintenance section. Do not wash the appliance under running water or submerge it in water or any another liquid.
- Ensure that the power cable does not come into contact with hot surfaces or that the power cable plug is not spilled on.
- Unplug the appliance from the power socket by pulling on the plug, not the power cable. Otherwise, you may damage the mains cable or the socket.
- To avoid the risk of electric shock, do not repair or modify the appliance yourself. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.







This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

DESCRIPTION OF THE COFFEE MACHINE

A1 Cup warming plate	A10 Steam and hot water dispensing nozzle
A2 Control panel	A11 Coffee machine body
A3 Brew head	A12 Coffee measuring scoop with tamper
A4 Portafilter	A13 Filter for 1 cup
A5 Drip tray grille	A14 Filter for 2 cups
A6 Drip tray	A15 Manual water pump
A7 Water tank lid	
A8 Water tank	
A9 Steam and hot water dispensing control	

DESCRIPTION OF THE CONTROL PANEL

B1  button to switch the coffee machine on/off	B3  button to prepare 2 cups
B2  button to prepare 1 cup	B4  button to dispense steam or hot water

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Remove the protective foil from the control panel.
- Place the coffee machine on a flat, dry and clean surface. Make sure there is a clear space around the coffee machine, at least 35 cm above it and 15 cm on the sides. Wipe the outer surface of the appliance with a slightly dampened sponge and then wipe dry.
- Remove the water tank from the appliance. Rinse it with clean water and a small amount of neutral dishwashing detergent. Then thoroughly rinse with clean water, dry, and place it back into the coffee machine.
- After removing the water tank, remove the protective plug from the inlet hole – see figure **C**.
- Remove the drip tray and grille from the machine.
- Wash the drip tray, the portafilter, the coffee measuring scoop and filters under clean running water with a little kitchen detergent. Then rinse with clean water and dry.
- Wipe the exterior of the coffee machine with a damp sponge and dry it.
- Attach the grid back onto the drip tray and insert into the coffee machine.

SETUP BEFORE USE

Drip tray

- The drip tray with a grid catches drops of brewed coffee when the portafilter is removed, hot water used to froth milk, and any spilled milk during frothing. Therefore, make sure that both parts are correctly installed and inserted into the appliance.
- We recommend emptying the appliance and washing the drip tray after each use. When washing, follow the instructions in the **CLEANING AND MAINTENANCE** section.



Note:

The drip tray is equipped with a fullness indicator. This is a red float. When the liquid level in the drip tray pushes it up, the drip tray must be emptied.

Filling the Water Tank

- Open the lid of the water tank. Grasp the tank and lift it upwards. Fill it with cold potable water up to the maximum mark and insert it back. Then close the lid of the water tank. The water tank must be properly seated in place for water to be pumped into the internal system.



Note:

The water you pour into the water tank should ideally be at room temperature (approximately 25 °C). Too cold water can negatively affect the final taste of the coffee beverage. Do not leave the remaining water in the water tank for more than one day. For brewing quality fresh coffee, it is necessary to use fresh water. Otherwise, the final taste of the coffee drink may be adversely affected.



Warning:

The maximum capacity of the water tank is 1.5 l. Do not overfill it. Never fill the water tank with warm, hot or sparkling water or liquids such as milk. Do not fill the water tank when it is inserted in the appliance. You risk splashing the appliance overfilling the water tank.

Inserting and Removing the Filter

- Insert the selected filter into the portafilter so that the protrusion on the filter fits into the hole in the portafilter (Figure **D1**). Rotate the filter left or right (Figure **D2**). Allow the filter and portafilter to cool down for a while before removing them.
- If you need to remove the filter, you must rotate the filter in the portafilter so that the notch on the filter is aligned with the hole in the portafilter. You can then remove the filter from the portafilter.



Warning:

Before removing the filter from the portafilter, make sure that both the filter and the portafilter have cooled down. Do not remove the filter from the portafilter immediately after making coffee. They are very hot and there is a risk of injury.

Filling the Filter and Tamping the Coffee (Fig. E)

- Place the portafilter on a flat surface and pour the appropriate amount of ground coffee into the filter. For one cup of coffee, fill the filter with one level measuring scoop of ground coffee. The double cup filter is filled with twice the amount of coffee. One levelled scoop corresponds to about 7 g of ground coffee. Spread the coffee in the filter evenly and tamp it with the flat end of the scoop. After tamping, the coffee in the filter should be approximately 3 mm from the upper edge.
- Clean the edges of the filter and the portafilter thoroughly of any ground coffee residue.

**Note:**

Use only ground coffee designed for use in espresso machines. Do not use ground coffee intended for use in French presses, drip coffee makers, etc.

Installing and Removing the Portafilter

- Place the portafilter underneath the brew head so that the handle points to the left and aligns with the open lock icon on the brewing head. To attach the portafilter to the brew head, turn the handle to the right into the closed lock position – see figure F.
- To remove the portafilter from the brew head, rotate the handle counterclockwise until it aligns with the open lock icon. Remove it from the brew head and move it above a rubbish bin.
- Rotate the portafilter so that the filter with the used coffee points downwards. Use a coffee spoon to remove the coffee grounds. Avoid contact with the surface of the filter or portafilter as they may still be hot. Before taking the filter out of the portafilter, cool it under cold running water. Then rinse the filter and the portafilter under clean running water and dry them thoroughly.


 

Warming the Cups

- Once you turn on the coffee machine, the cup warming plate will automatically heat up. Place empty coffee cups upside down on to surface and let them warm up.

USING THE COFFEE MACHINE

- Place the coffee machine on a flat, dry and clean surface at a sufficient distance from the power socket.
- Make sure that the water tank is filled with fresh water and that the coffee machine is properly assembled.


Switching On and Preheating the Coffee Machine

- Plug the power cable into a power socket. Turn on the coffee machine by pressing the  button. You will hear one short beep.
- The  and  buttons on the control panel will blink, indicating that the machine is heating up. Wait until the coffee machine is preheated.
- When all buttons on the control panel light up, the coffee machine is ready for use.

**Note:**

You may hear a clicking sound as it heats. This is normal.

Rinsing the Coffee Machine upon First Use

- We recommend following these steps when first using the coffee machine or if the machine has not been used for an extended period.
- Fill the water tank to the maximum level.
 - Place one filter in the portafilter, but do not add any ground coffee.
 - Insert the portafilter into the brew head.
 - Place a bowl under the dispensing holes of the portafilter and direct the steam and hot water dispensing nozzle into it.
 - Turn the steam and hot water dispensing control knob clockwise to the + symbol and let hot water flow through the nozzle for about 30 seconds. Then turn the knob to the "0" position.
 - Press the  button and let the coffee machine finish brewing two cups of coffee. Water will be dispensed through the dispensing nozzle and then through the milk dispensing nozzle.
 - We recommend repeating this process two more times for thorough rinsing of the coffee machine's internal system and milk frothing system.
 - Then pour out the water in the bowl, remove the portafilter and filter and clean them according to the instructions in the **CLEANING AND MAINTENANCE** section.


 


**Warning:**

Be careful during rinsing as the discharged water is very hot and improper handling can cause scalding.


**Note:**

You will hear the sound of the pump when the coffee is being brewed. This is normal.

Preparing Espresso

- The coffee machine is supplied with 2 stainless steel filters: a single cup filter and a double cup filter.
 - The single cup filter is suitable for making 1 Espresso, Cappuccino or Latte.
 - The double cup filter is suitable for the preparation of 2 cups of Espresso or one strong large coffee, Cappuccino or Latte.
- Insert the single or double cup filter in the portafilter, tamp down the coffee and insert the portafilter in the brew head.
 - Make sure the coffee machine is preheated.
 - Place a cup/cups or a mug/mugs under the portafilter.
 - Press the  (to make 1 cup of coffee) or  (to make 2 cups of coffee) button.
 - When the machine starts, it will first brew the coffee by releasing a small amount of hot water into the filter to swell the ground coffee in the filter. After a moment, full coffee extraction begins.
 - The coffee machine automatically stops brewing once the preset amount of coffee has been poured into the cup.
 - Remove the cup or mug with the drink.
 - Remove the portafilter from the brew head and clean it following the instructions in the **CLEANING AND MAINTENANCE** section. We recommend waiting for about 5 seconds before removing the portafilter from the brew head. This will naturally release the pressure and make it easier to remove the portafilter.
 - You can stop brewing coffee at any time by pressing the  or  button.

Frothing Milk

- You can use hot milk and milk froth to prepare lattes, cappuccinos, hot chocolate, hot cocoa, or other non-coffee beverages.
- Pour fresh, cold whole milk into the jug. The milk level should not be higher than the bottom edge of the sink.
 - Point the tip of the steam and hot water dispensing nozzle into the empty cup.
 - Short press the  button. The button flashes, indicating that the coffee machine is heating up to dispense steam. When it stops flashing and lights up, the coffee machine is ready to dispense steam.
 - Turn the steam and hot water dispensing control knob clockwise and let the steam escape for a few seconds. Then turn the control to the "0" (off) position and the steam release stops. This step will clean the nozzle, remove any dirt and heat the milk frothing system.
 - Now immerse the steam and hot water dispensing nozzle in the milk in the jug so that the tip is immersed 1 to 2 cm below the surface.
 - Turn the steam and hot water dispensing control knob clockwise again to start the steam dispensing. Keep the tip of the nozzle submerged just under the surface of the milk to blow hot air into the milk and start forming foam. You can tilt the jug slightly to achieve a swirling movement of milk in the jug.
 - Once the milk has been frothed to suit your needs, dip the nozzle deeper into the milk to warm up the entire milk content in the jug. We recommend holding the jug by its bottom with your other hand so that you can easily estimate the temperature of the milk.
 - Once the bottom of the jug is hot to the touch, the milk is warm enough.
 - Then turn the control to the "0" (off) position and wait for the steam dispensing to stop. Only then remove the nozzle from the kettle.
 - Wipe the tip of the steam nozzle with a slightly damp cloth and run steam for a few seconds to remove any milk residue. Clean the nozzle according to the instructions in the **CLEANING AND MAINTENANCE** section.
 - Pour the hot frothed milk into the prepared coffee to prepare a Cappuccino or Latte, or pour it over the hot chocolate or cocoa.

**Note:**

Always wait for the steam dispensing to stop before removing the steam nozzle from the milk, otherwise there is a risk that the milk will come out.

Dispensing Hot Water

- Hot water can be used, for example, to quickly heat cups or prepare tea.
- Place a cup/mug under the steam and hot water dispensing nozzle.
 - Turn the steam and hot water dispensing control knob clockwise to start dispensing hot water.
 - Once the desired amount of water has flowed into the cup/mug, turn the control to the "0" (off) position and remove the nozzle from the cup/mug.




Warning:

Be careful not to get burnt by the steam or hot water.

Reheating the Espresso Machine

- Every time it finishes brewing coffee / frothing milk, the coffee machine automatically reheats to operating temperature. During this time, the buttons on the control panel will flash.
- You may hear a clicking sound as it heats. This is normal.
- This means the coffee machine can also reheat even between individual uses. This is normal.
- The coffee machine cannot be started when it is heating up, so always wait for it to finish.




 
 

Turning Off the Coffee Machine

- If you are not going to use the coffee machine, press the  button. The coffee machine will shut down. Unplug the power cord from the power socket.

Automatic Shut-off

- If you do not use the coffee machine for more than 30 minutes, it will automatically switch itself off. Pressing any button will turn it on again and start heating it up.

Manual Water Pumping

- When the coffee machine has not been used for a long time and cannot pump water, you can use the manual water pump to assist in adding water.
- Remove the water tank.
 - Pour water into the manual water pump and then place the pump into the water inlet (Figure 6).
 - Press the  button to switch the coffee machine on and wait until it preheats (buttons light stop flashing).
 - Press the  or  button, and then gently press the manual water pump up and down to pump water into the coffee machine.
 - Place a bowl under brewing head and direct the steam and hot water dispensing nozzle into it.
 - If you press the  or  button, the water will come out of the brewer head; and if you press the  button, the water will come out of the steam nozzle.
 - Remove the water pump from the water inlet, discard the water from the water pump and bowl, and replace the water tank.
 - Run a brewing cycle without coffee in the filter. Then the coffee machine is ready to use.

Coffee Brewing Tips

- We recommend using fresh roasted and ground coffee beans. Coffee beans should be ground to the level suitable for Espresso machines. Grind the coffee beans just before brewing coffee.
- If the ground coffee is too fine, water will not flow through the coffee even under high pressure. Such finely ground coffee resembles powder and feels like salt when rubbed between the fingers.
- If the ground coffee is too coarse, water flows through the coffee too quickly and the full flavour is not extracted. Make sure to use a quality grinder for consistent grind size.
- Store coffee beans / ground coffee in an air-tight container in a cool and dark place. Store them for a maximum of 4 weeks.
- Do not store coffee beans / ground coffee in the fridge or freezer.

CLEANING AND MAINTENANCE

Before cleaning, press the  button. Unplug the power cord from the power socket and let the appliance cool down.



Warning:

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.



Caution:

Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface.


Cleaning the Filter, Portafilter and Brew head

- The filter and portafilter must be thoroughly cleaned after each use.
- Remove the portafilter with the used coffee from the brew head. Dispose of the coffee grounds in the compost or in regular municipal waste. If the coffee grounds are difficult to remove from the filter, use a cutlery knife or spoon.
 - Take out the filter.



Warning:

Take extra care as the coffee grounds, filter and portafilter are very hot after use. There is a risk of burns.

- Rinse the filter and portafilter under warm running water and wipe them dry with a clean cloth.
- Wipe the bottom of the brew head with a damp cloth to remove ground coffee residues.
- Insert the portafilter (without the filter) into the brew head.
- Switch on the coffee machine and let it warm up. Place a cup/bowl under the portafilter.
- Press the  button and let the coffee machine finish brewing. This will clean the brew head and remove any ground coffee residues.
- Then remove and rinse the portafilter.



Note:

Place the portafilter and filters on the heating plate so that they are preheated and ready for the next use.



Caution:

Do not wash the portafilter or filters in the dishwasher. There is a risk of them being damaged.

Cleaning the Drip Tray

- The drip tray needs to be emptied and washed after each use of the appliance.
- First, remove the grille from the tray and then pour out the water. Wash the tray and grille in warm water with a neutral dishwashing detergent. Rinse both parts under running water, dry them, and place them back in their positions.

Cleaning the Water Tank

- Open the lid of the water tank. Grasp the tank and lift it upwards.
- Pour out the remaining water.
- Rinse it with clean water and a small amount of neutral dishwashing detergent. Then thoroughly rinse with clean water, dry, and place it back into the coffee machine.
- Wash the water tank lid in warm water with a little kitchen detergent.
- Rinse and wipe dry.

Cleaning the Outer Casing

- Wipe the outer surface of the appliance with a slightly damp cloth and dry it.

DESCALING

- Over time, minerals from the water can build up in the machine's inner circuit. This is a natural process. Therefore, regular descaling is necessary. Mineral deposits can spoil the taste of your coffee.
- We recommend using descaling agents for coffee machines, which are commonly available in shops.
- We recommend descaling the coffee machine when you notice an extended time required for preparing Espresso, excessive steam formation, or visible white deposits on the surface of the brew head. The frequency of descaling depends on the hardness of the water used. The following table shows the recommended descaling intervals.


Type of Water	Frequency of Descaling
Soft water / filtered water	Approximately every 80 to 100 coffees prepared
High water hardness	Approximately every 40 to 50 coffees prepared

- Prepare a descaling solution of water and descaling agent following the dilution/preparation instructions given on the packaging/enclosed leaflet. We recommend using the Sencor SEXD 001 liquid descaler, which can be purchased from regular retail outlets.

Descaling the Water Tank

1. Fill the water tank with the amount of descaling solution up to the Max mark.
2. Insert the water tank into the coffee machine and let it sit overnight.
3. Remove the water tank and pour out the contents.
4. Thoroughly rinse the water tank with clean water.
5. Fill the tank with clean water and rinse the coffee machine according to the instructions RINSING THE COFFEE MACHINE UPON FIRST USE in the previous part of this user's manual.

Descaling the Internal System

1. Make sure that you have descaled the water tank first according to the instructions above.
2. Make sure that the coffee machine is switched off and the power cord plug is disconnected from the mains socket.
3. Fill the water tank with a descaling solution of water and descaling agent according to the instructions on the packaging / package leaflet.
4. Insert a filter into the portafilter (without coffee) and insert the portafilter into the brew head.
5. Place a bowl (with a capacity of at least 450–500 ml) under the portafilter. Direct the steam and hot water dispensing nozzle into the bowl.
6. Plug the power cord into a mains socket, switch on the coffee machine, and allow it to preheat.
7. As soon as the coffee machine warms up, press the  button. The heated descaling agent will flow through the coffee machine and automatically stop.
8. Turn the steam and hot water dispensing control knob clockwise and allow the solution to flow out for approximately 2 minutes. Then turn the control to the "0" (off) position.
9. Now let the coffee machine rest for about 15 minutes.
10. Repeat steps 7 to 9 until the water tank is empty.
11. When the water tank is empty, pour out the remaining descaling solution and fill the tank with clean water.
12. Repeat steps 7 to 9 until the water tank is empty again. This will remove any remaining traces of descaling agent and impurities from the coffee machine.



Note:

If the coffee machine is heavily clogged with mineral deposits, repeat the descaling process several times in a row.



Note:



When descaling is complete, clean the water tank, portafilter and filter according to the instructions in this user's manual.

STORAGE

- If you are not going to use the appliance for an extended period of time, unplug it from the mains socket, allow it to cool down and clean it according to the instructions in the **CLEANING AND MAINTENANCE** section.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TROUBLESHOOTING

Problem	Cause	Solution
Coffee is not dispensing.	The water tank is empty.	Refill the water tank.
	The input voltage on the type plate does not match the voltage in your outlet.	Check the voltage in your mains socket.
	Coffee machine malfunction.	Contact an authorised service centre.
The coffee machine does not dispense steam.	The nozzle is clogged.	Clean the nozzle.
	The water tank is empty.	Refill the water tank.
	Coffee machine malfunction.	Contact an authorised service centre.
The coffee flows over the edge of the portafilter inserted in the brew head.	There is too much ground coffee in the filter.	Reduce the amount of ground coffee.
	The edge of the filter is dirty from ground coffee residue.	After tamping, wipe any ground coffee residue from the edge of the filter and the portafilter.
	The portafilter is not properly inserted in the brew head.	Turn the portafilter until you feel resistance – the handle of the portafilter is perpendicular to the coffee machine.
The coffee dispenses too slowly.	The ground coffee is too fine.	Select a coarser grind size.
	The holes in the filter are clogged.	Clean the filter.
	The water tank is not inserted.	Insert the water tank.
The coffee dispenses too quickly.	The ground coffee is too coarse.	Adjust the grinding level to finer.
	There is too little ground coffee in the filter.	Increase the amount of ground coffee.
There is water under the coffee machine.	The drip tray is full.	Empty and clean the drip tray.
	Coffee machine malfunction.	Contact an authorised service centre.
The coffee machine does not switch on.	The power cable plug is not properly inserted in the mains socket.	Properly insert the plug into the power socket.
	Coffee machine malfunction.	Contact an authorised service centre.

Problem	Cause	Solution
The coffee machine does not emit steam, or the milk froth is weak.	The coffee machine is not heated to dispense steam.	Wait until the  button lights up and the coffee machine is preheated.
	The milk jug is too large.	Use a jug for frothing the milk, or a taller mug or cup.
	You use low-fat milk.	Use whole milk to achieve rich milk froth.
The  button is blinking.	The steam and hot water dispensing control knob is not in the "0" (off) position.	Turn the control knob to the "0" (off) position.

If the problem is not listed in the table or if the problem persists, switch off the coffee machine, disconnect it from the power source, and contact an authorised service centre.

TECHNICAL SPECIFICATIONS

Rated voltage range220–240 V-
 Rated frequency50/60 Hz
 Rated power input1230–1465 W
 Noise level75 dB(A)

The declared noise emission level of the appliance is 75 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

For business entities in European Union States

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

Changes to text and technical parameters are reserved.

FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.com
info@sencor.cz