



QUICK START GUIDE for all TA25G Series

KNOW YOUR CONTROLS

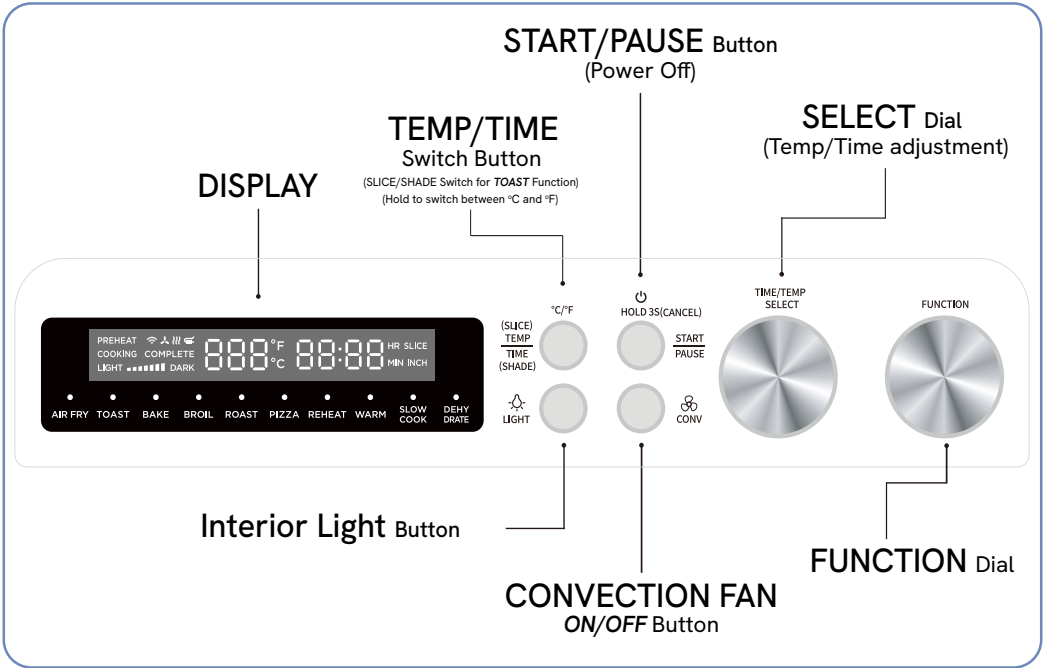


ACCESSORIES

 Tips



Baking Pan

 For easy cleanup, line the baking pan with parchment paper or aluminum foil.



Oven Rack

When using Toast function, select the exact number of bread slices.



Air Fry Basket

Always place the baking pan underneath the air fry basket to prevent drippings from falling on the heating element.

 
 
 

 


Crumb Tray

For deep cleaning, let the accessories soak in warm, soapy water overnight and scrub with a non-abrasive brush or sponge.




FUNCTIONS AND ACCESSORIES PLACEMENT

FUNCTIONS	AIR FRY/DEHYDRATE	BAKE	ROAST/REHEAT/ SLOW COOK	TOAST/PIZZA	BROIL
ACCESSORY PLACEMENT	 <p>Air Fry Basket - Top Baking Pan - Middle</p>	 <p>Baking Pan - Middle</p>	 <p>Baking Pan - Bottom</p>	 <p>Oven Rack - Middle</p>	 <p>Baking Pan - Top</p>


QUICK OPERATION GUIDE

AIR FRY

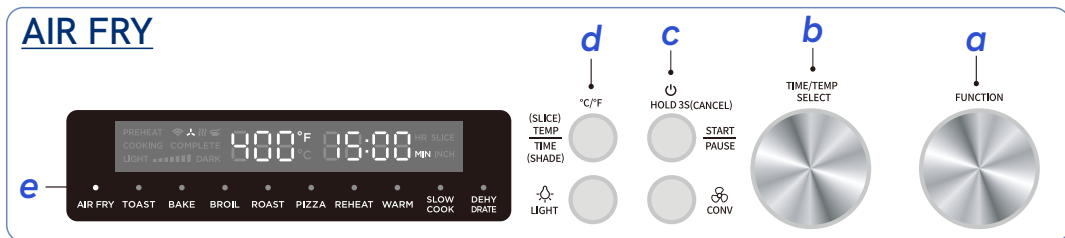

- 1 Turn the **a. FUNCTION** dial until the **e. AIR FRY** indicator light turns on.
- 2 Turn the **b. SELECT** dial to set temperature.
- 3 Press the **d. TEMP/TIME** button to switch to time adjustment.
- 4 Turn the **b. SELECT** dial again to set cooking time.
- 5 Press the **c. START/PAUSE** button to start cooking.
- 6 Press and Hold the **c. START/PAUSE** button for **3 seconds** to cancel/power off.

TOAST

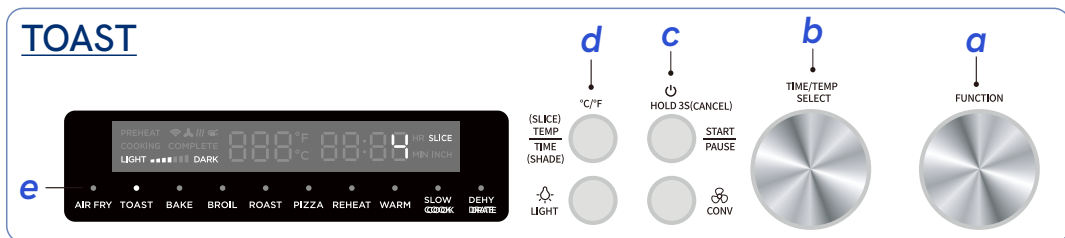

- 1 Turn the **a. FUNCTION** dial until the **e. TOAST** indicator light turns on.
- 2 Turn the **b. SELECT** dial to choose how many slices of bread.
- 3 Press the **d. TEMP/TIME** button to switch to darkness setting.
- 4 Turn the **b. SELECT** dial again to set the desired darkness level (Shade).
- 5 Press the **c. START/PAUSE** button to start toasting.
- 6 Press and hold the **c. START/PAUSE** button for **3 seconds** to cancel/power off.