

QUICK SETUP GUIDE

Read this guide carefully before installing the product and make sure you understand all of the content.



Scan the QR code above for installation guide video.



Scan the QR code above for Multilingual QSGs.

CONTENTS

READ BEFORE INSTALLATION	1
Important Information.....	1
Required Tools(not included)	1
ASSEMBLING THE SCREEN	2
Space for Assembling Screen.....	2
Preparation	2
I. Assemble the Inner Frame.....	2
II. Assemble the Screen.....	4
III. Assemble the Outer Frame.....	7
WALL MOUNT BRACKET INSTALLATION.....	9
Installation Space	9
Install the Wall Mount Bracket	9
Maintain the Screen.....	11

READ BEFORE INSTALLATION

Disclaimer

All products, product specifications and data are subject to change without prior notice to improve reliability, function, design or other aspects.

Important Information

 
WARNING

- Do not touch or wipe the screen directly by hands or with an ordinary towel.
- Do not expose the screen to dripping or splashing.
- Do not place the screen on an unstable cart, tripod or desktop. Dropping may cause serious damage and injuries.
- Do not scratch or touch the screen with hard or sharp objects.
- Do not expose the screen to direct sunlight.
- Do not place the screen near inflammable, explosive and other dangerous objects.

Required Tools (not included)



Tape measure




Stud finder



Hammer



 Phillips screwdriver

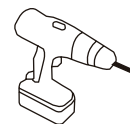


Electric drill
Ø5/16 inch(8mm)

ASSEMBLING THE SCREEN

Space for Assembling Screen

Before the installation, make sure you have enough space for assembling the screen.
The space should be larger than 3m × 2.5m(118.1 in. × 98.4 in.).

 Preparation

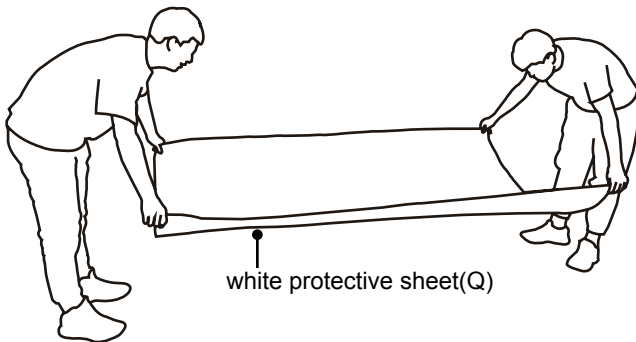

Before installation, spread out the white protective sheet(Q) on the floor and make sure that there is no sharp or hard objects, or bulges on the floor.

I. Assemble the Inner Frame

Required tool (not included)



Phillips screwdriver

Required parts

 


inner frame




M4×6 screw (M)
×28 (Black)


1. Unroll the inner frame.

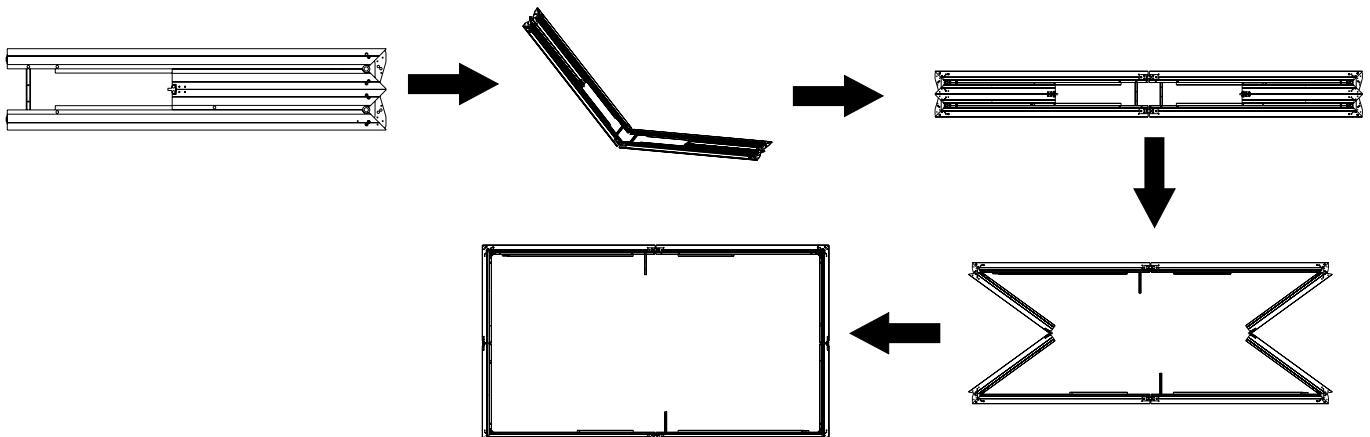

 
2. Unfold the two short side support braces hidden in the inner frame and tighten them with M4×6 screws(**M**).

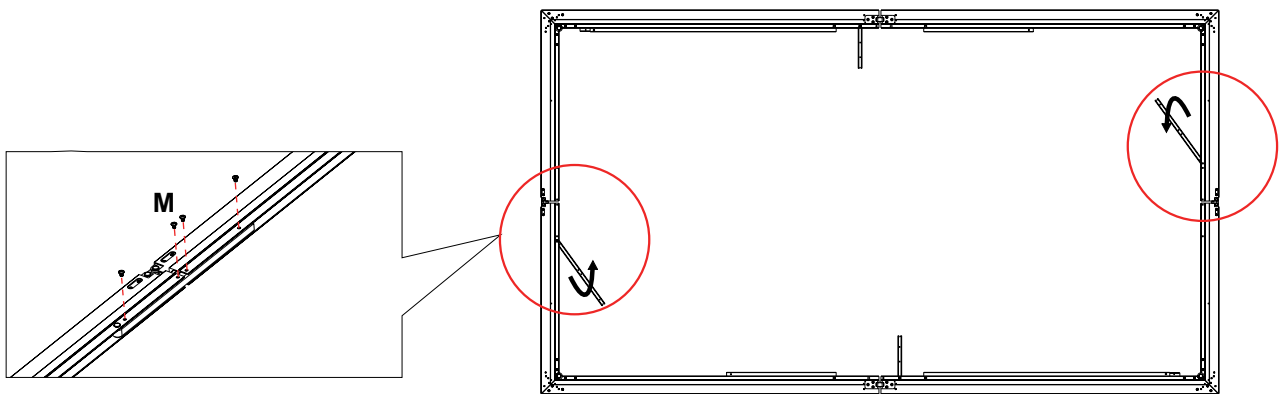

 3. Tighten the four corners of the inner frame with M4×6 screws(**M**) .

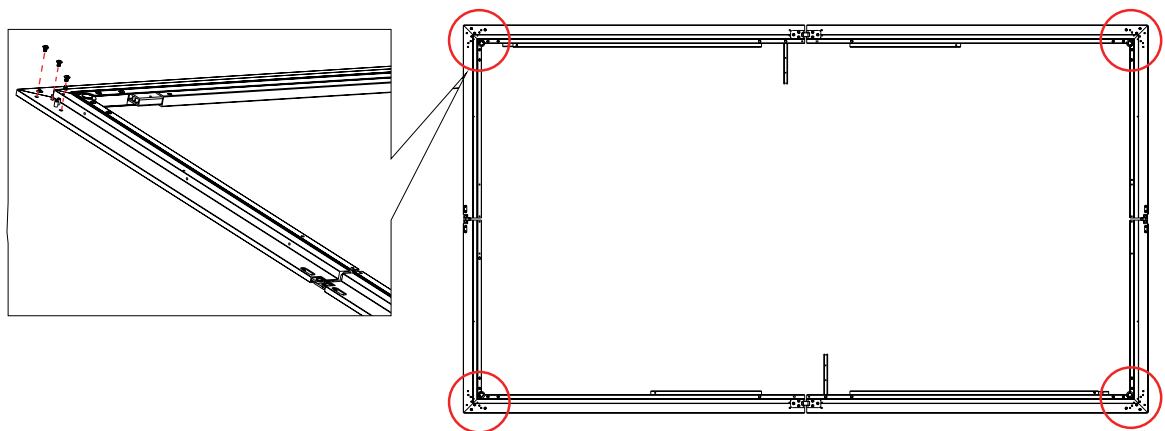

 4. Unfold the vertical beams and tighten them with M4×6 screws(**M**). Then unfold the two long side support braces hidden in the inner frame and tighten them with M4×6 screws(**M**) .

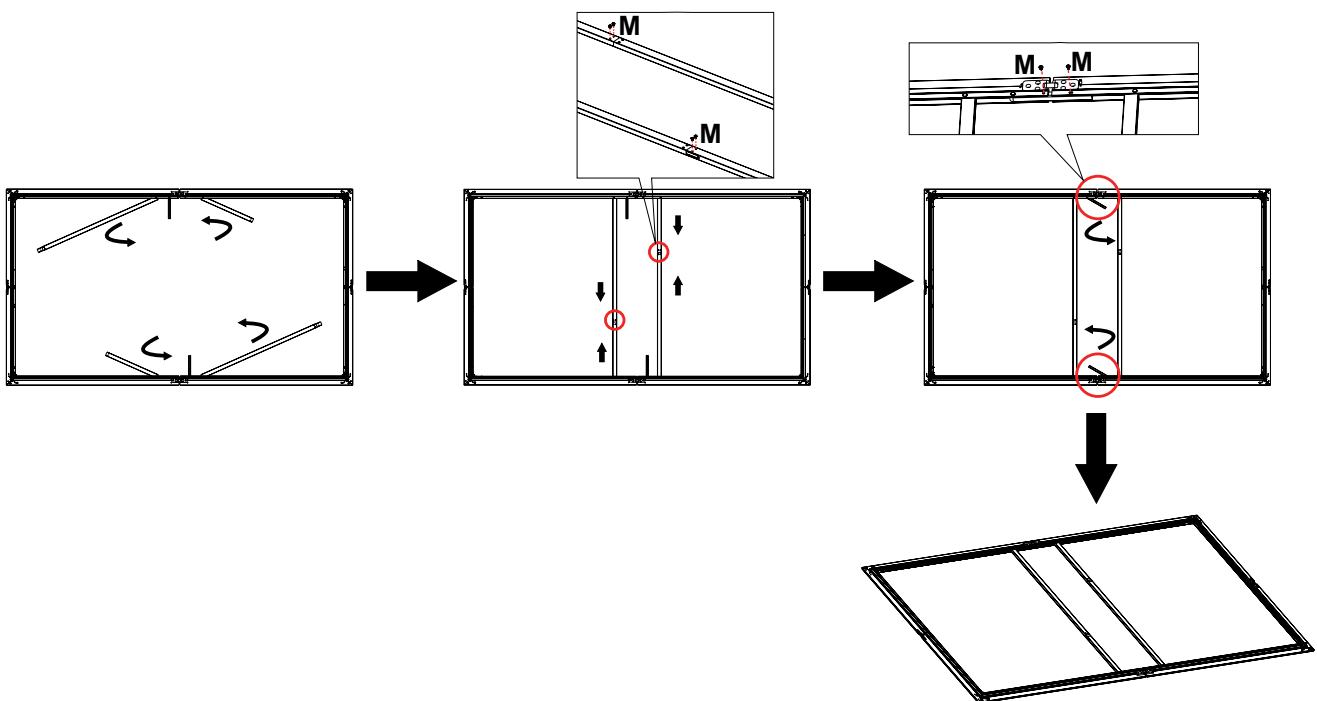


II. Assemble the Screen

Required tool (not included)



Phillips screwdriver

 Required parts



screen ×1

 


screw (N) ×24 (White)


short side tension rod(E) ×2

long side tension rod(D) ×4

- Two people with gloves are required to take the screen out of the packaging box.

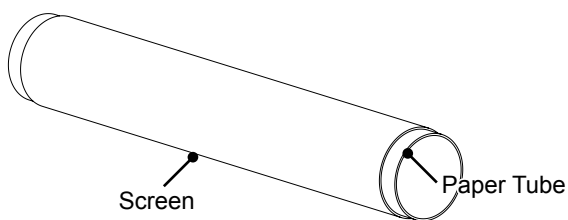


 - Unroll the screen on the protective sheet and remove the covering on it to check if there are creases or scratches on the surface of the screen.

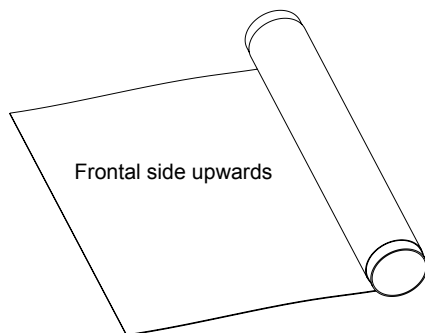


- Two people stand on the two sides along the width direction and turn over the screen to make it face down.

 ⚠ **NOTE:** Handle with care to avoid damaging the screen.

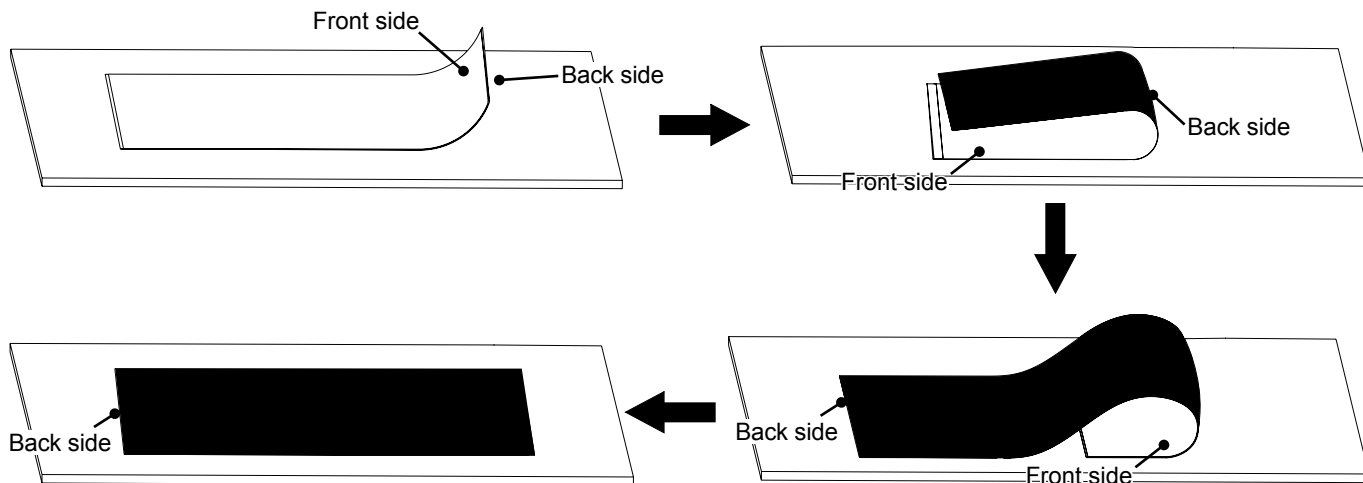


4. Place the inner frame on the back side of the screen. Then adjust the position of the inner frame to centre it on the screen.

 
NOTE: There are positioning lines on the four corners of the back side of the screen.

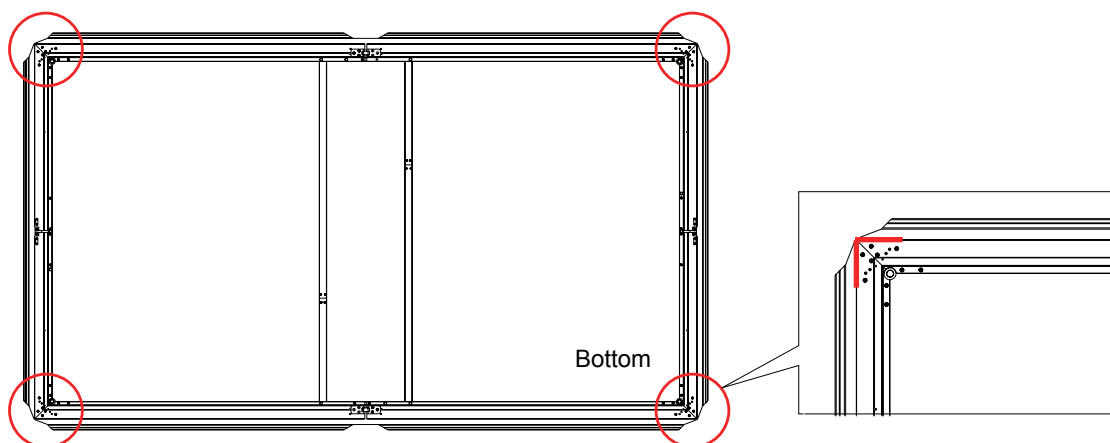

 
5. Insert the two short side tension rods and the four long side tension rods into the sleeve of the screen.

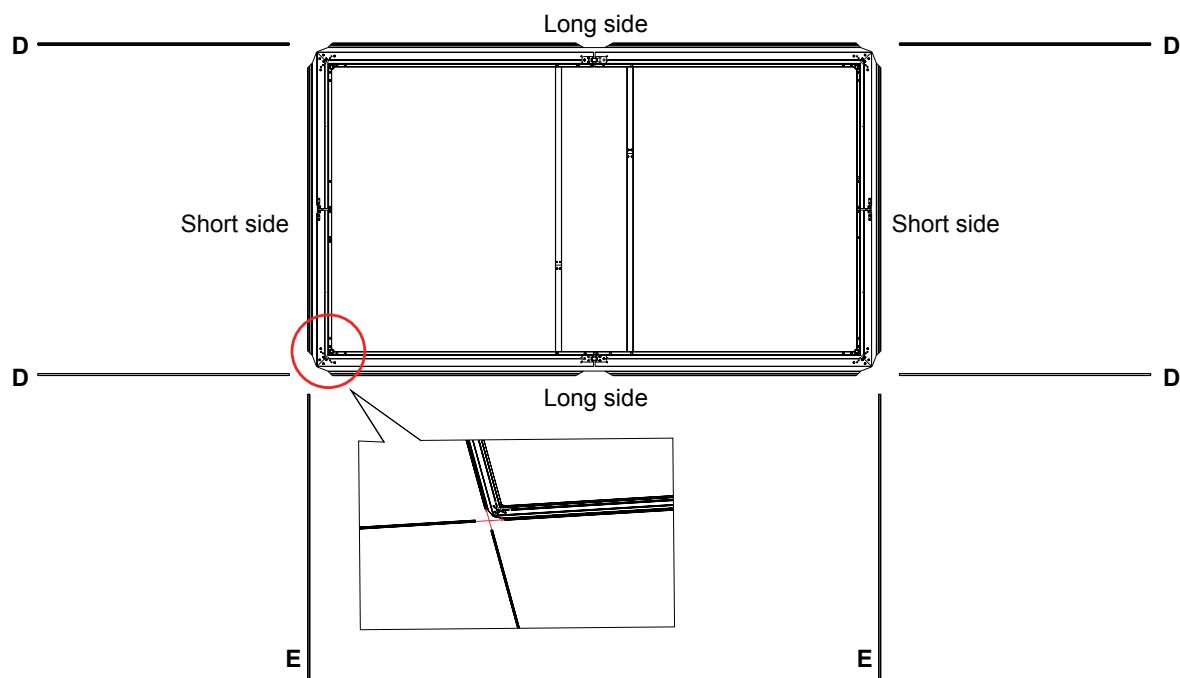

 6. Fold the sleeves up towards the inner frame.

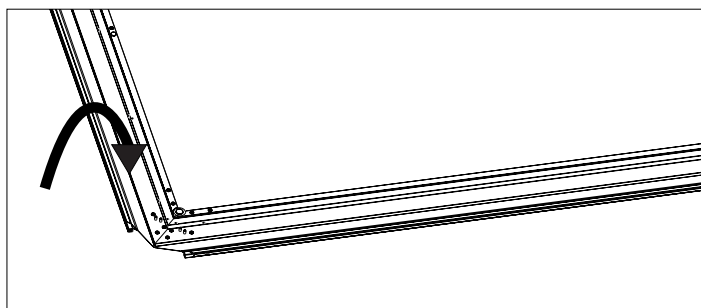

 
7. Position the screen by the location pins on the inner frame.

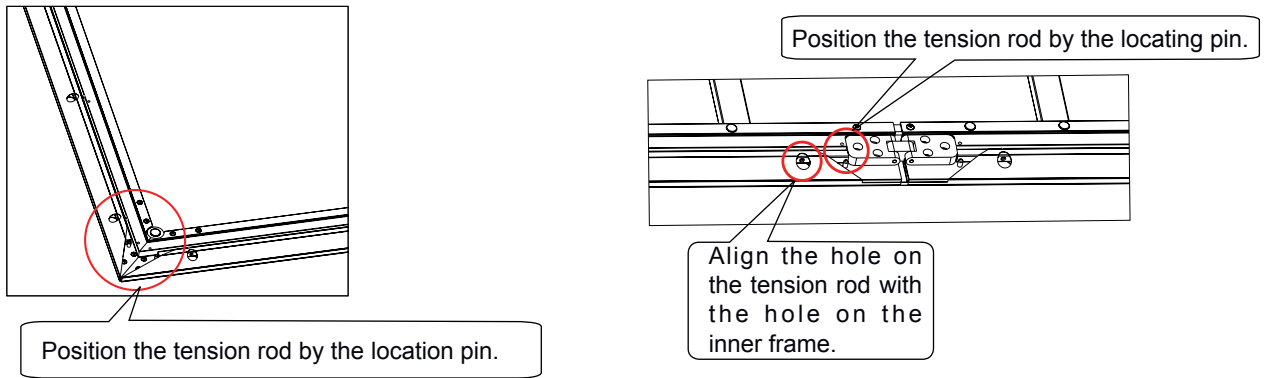

8. Put the screws(N) into the screw holes. Tighten the screw to secure the inner frame.

NOTE:

 Tighten the screws on the short side first, and then tighten the screws on the long side.

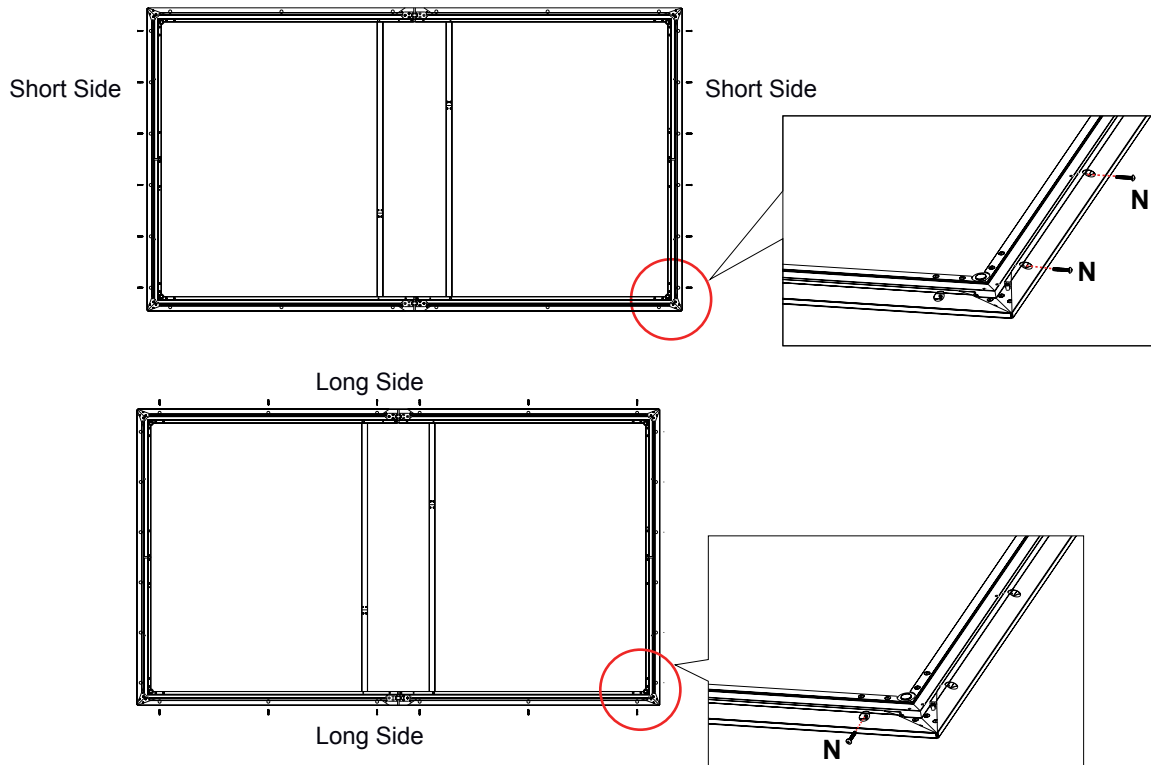

Recommended torque of the electric drill is 2Nm.

III. Assemble the Outer Frame

**Required tool
(not included)**



Phillips screwdriver

Required parts

long side of the outer frame (A) ×2



long side of the outer frame (B) ×2



short side of the outer frame (C) ×2

 


**M4×6 screw(M) ×18
(black)**





Velcro(P) ×2



1. Lay all the sides of the outer frame as shown in the following illustration.

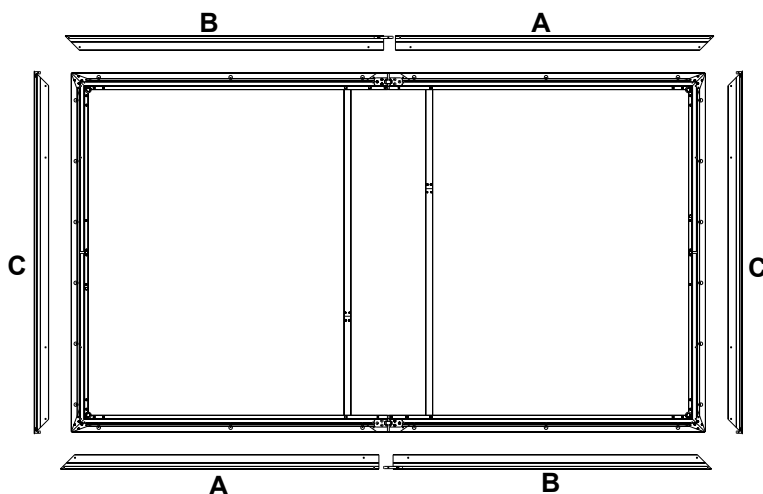

  
2. Connect the long side of the outer frame (A) and the long side of the outer frame (B).

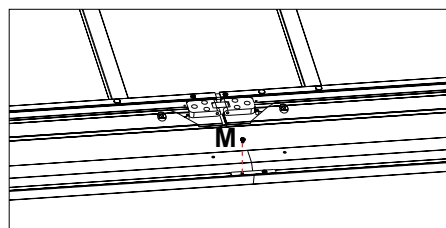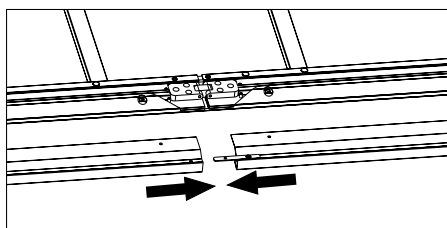

  3. Connect the long side of the outer frame and the inner frame with M4×6 screws(M).

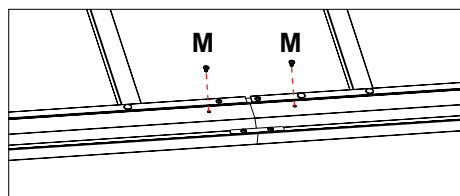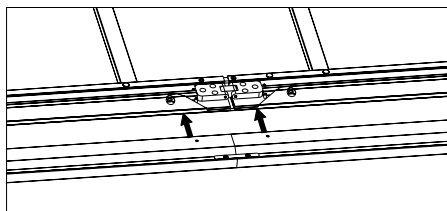


 4. Connect the short side of the outer frame and the inner frame with M4×6 screws(M). Adjust the gaps on the four corners of the outer frame.

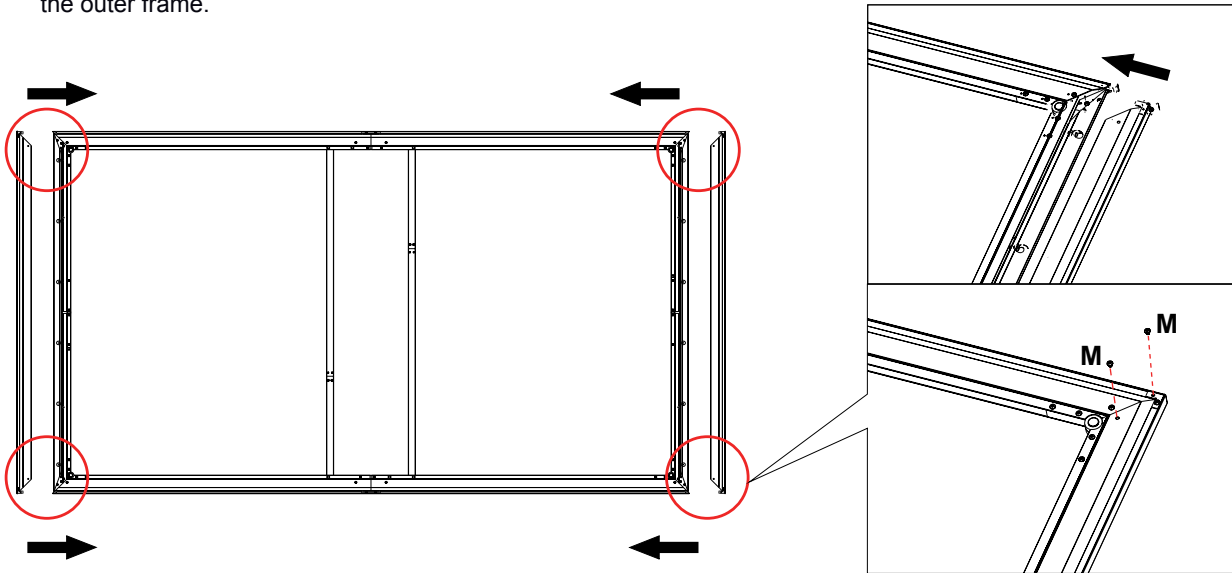


5. Tear off the release paper on one side of the Velcro(P) and attach them to the inner frame as shown in the illustration below.

 
NOTE: Don't tear off the release paper on the other side of the Velcro(P) until the adjustment of the screen is finished.

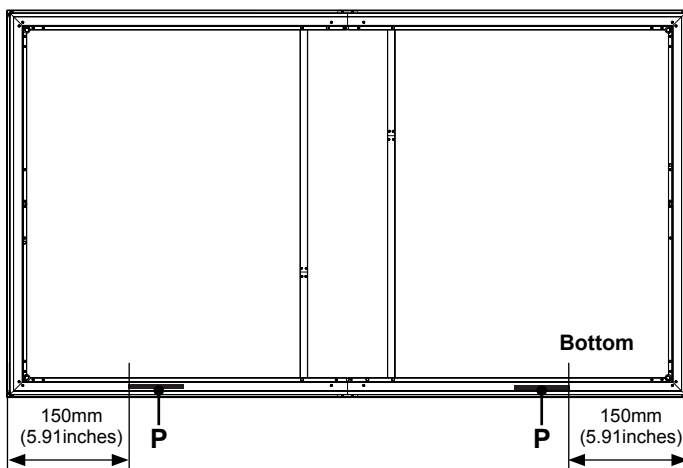

 Congratulations, the screen assembly is finished. The frontal and back sides of the screen is shown as below.




Frontal side

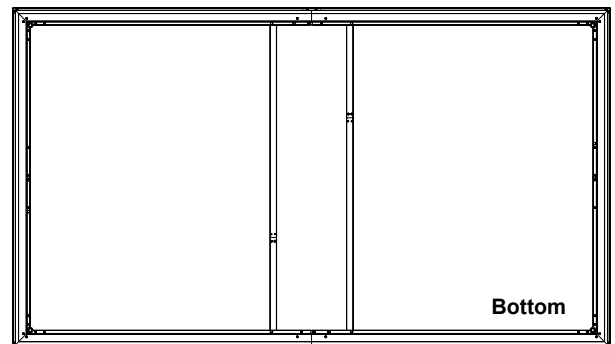 

Back side

WALL MOUNT BRACKET INSTALLATION

 
Installation Space

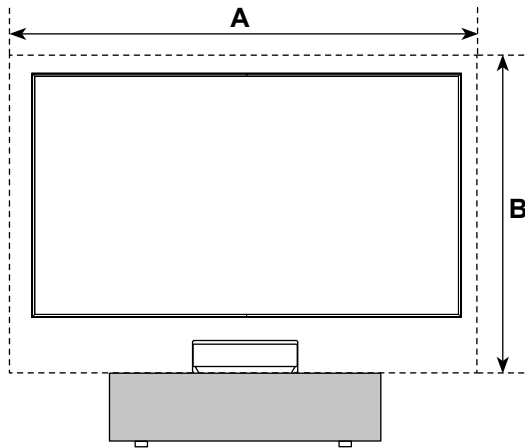


Screen size (inch)	A (width of the wall)	B (height between the top of cabinet to the ceiling)
110	>102.36inches(2.6m)	>77.17inches(1.96m)
120	>110.24inches(2.8m)	>82.68inches(2.1m)

Install the Wall Mount Bracket

 Required tools (not included)

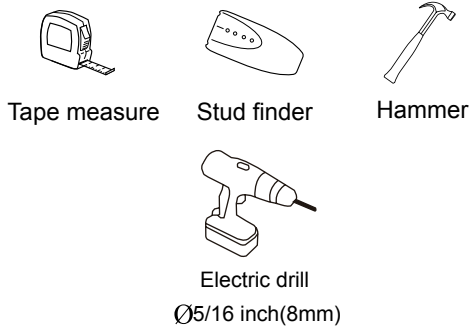


Required parts

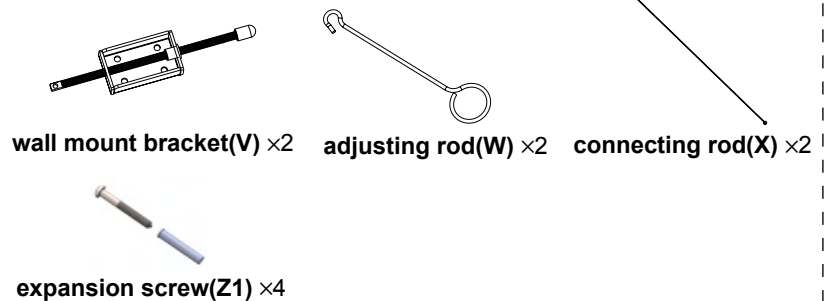 

1. Mark the position of the mounting holes. Please refer to the illustration below.

NOTE:

 
- Each bracket requires 2 screws to mount it securely to the wall.
- 'a' is the distance between the two brackets(V).
- 'b' is the distance between the first hole of the bracket and the cabinet.

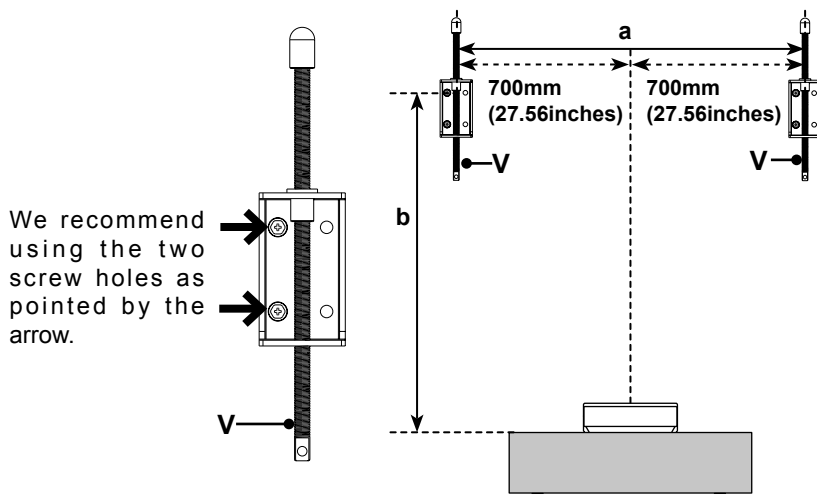


Screen size (inch)	Model	a	b
120	120L9H	1400mm (55.12inches)	1785mm (70.28inches)
	PT1		1813mm (71.38inches)
	120L5H		1800mm (70.87inches)
	120L5N		1769mm (69.65inches)
	PX3-PRO		1658mm (65.28inches)
	PL2		
110	L9Q		
	PX3-PRO		
	PL2		

Fig.1

 
- Secure the bracket according to the distance listed in the Fig.1. The bracket should be installed on the solid wall or the studs of the wall.

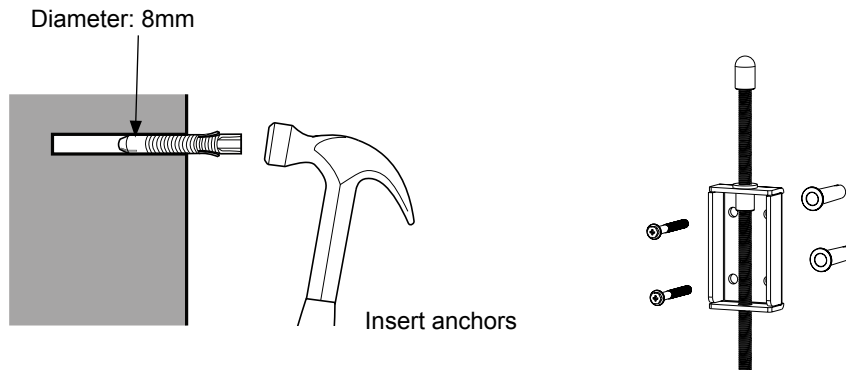

 - Hang the connection rods(**X**) on the mounting brackets(**V**), then connect the adjusting rods(**W**) to the connecting rods.

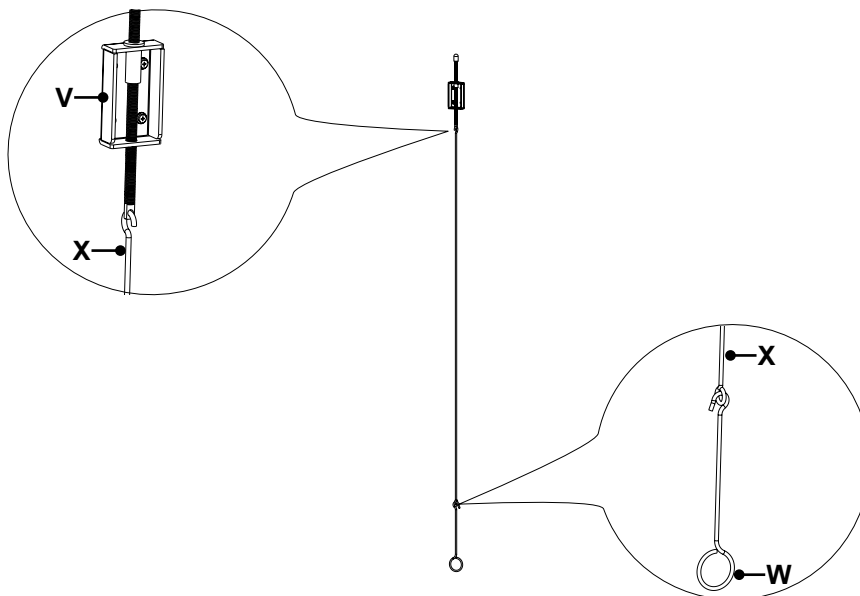


 - Hang the screen on the mounting brackets as shown in the illustration below.



5. Fold and hide the adjusting rods(**W**) on the screen bracket after finishing the alignment of the console and the screen.

 NOTE: After the screen is mounted, please do not tear off the backing paper on the Velcro(**P**) to attach the screen to the wall until the alignment of the console and the screen is finished.

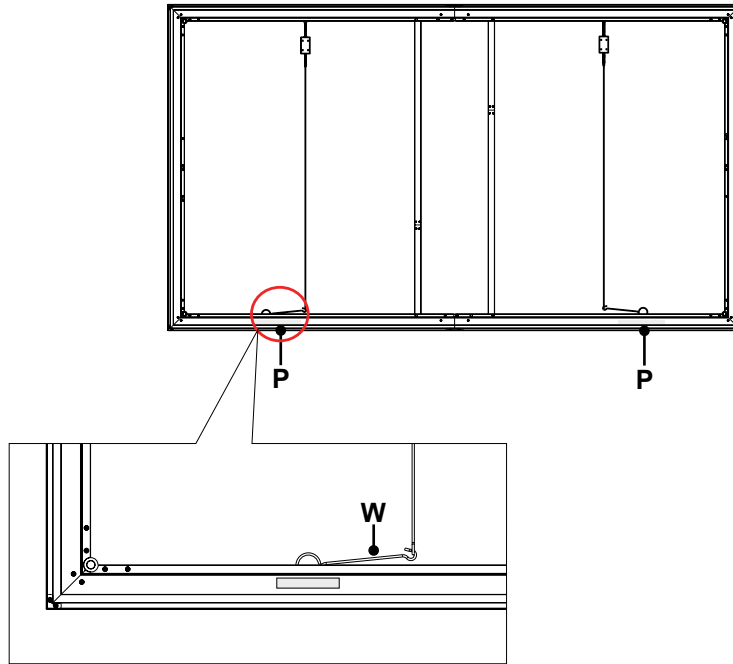

Maintain the Screen

1. Clean the screen surface with a soft brush or microfiber cloth with water or alcohol.
2. Do not touch the screen with hard or sharp objects, otherwise the screen may be damaged.

Hisense

LASER TV 4K



Quick Setup Guide

Read the guide carefully and ensure you have fully understood its contents before operating this device for the first time.

English



HISENSE LIMITED PTY WARRANTY AND DISCLAIMER

ACCEPTANCE OF TERMS: Laser Televisions

By using this Laser Television, you agree to the terms and conditions outlined in the Warranty and, where applicable, the Disclaimer. If you do not agree to the terms and conditions you have the option to return the Laser Television to the relevant retailer within 7 days of the original purchased date and obtain a refund, provided the Laser Television has not been used or damaged.

HISENSE DISCLAIMER

THIRD PARTY CONTENT AND SERVICES:Laser Televisions

What does this Disclaimer apply to?

- 1.This Disclaimer applies in relation to any laser television (together with any remote and other accessories supplied with it) (**Laser Television**) supplied by Hisense Australia Pty Ltd (**Hisense**) or an Authorised Retailer, and if you can access any third party software application, content and/or services (**Third Party Content and Services**) through the Laser Television.
- 2.This Disclaimer does not limit your rights under the Australian Consumer Laws (for Australian customers) or the Consumer Guarantees Act 1993 (for New Zealand customers).

The basis on which Third Party Content and Services are provided

- 3.Third Party Content and Services are **accessed and used at your own risk**, regardless of who installed the Third Party Content and Services on the Laser Television. To the maximum extent permitted by law, Hisense makes no warranty, guarantee, representation or undertaking in relation to any Third Party Content and Services.
- 4.You must comply with any terms and conditions relating to the Third Party Content and Services.
- 5.Hisense can **restrict your access** or use of certain Third Party Content and Services.

6.Hisense is not liable or responsible for your use of the Third Party Content and Services, including for any:

- a.charges relating to your use of the Third Party Content and Services;
- b.claims, liabilities, loss and damage arising out of (or in connection with) any of the Third Party Content and Services;
- c.breach of the law or the rights of any other person or entity arising from the use of any Third Party Content and Services;
- d.customer service or support in relation to any Third Party Content and Services.

7.You acknowledge and agree that:

- a.the performance of the Third Party Content and Services will depend on variables beyond the control of Hisense;
- b.certain Third Party Content and Services may require internet access, express consent regarding the collection and use of personal information, other accessories which are sold separately and/or other requirements;
- c.the Third Party Content and Services (including their intellectual property rights) will remain the property of the relevant provider of the Third Party Content and Services (**Third Party Provider**).

8.Your other obligations: You must:

- a.ensure that your use of the Third Party Content and Services complies with all applicable laws, and the intellectual property and other rights of the Third Party Provider;
- b.not modify, duplicate, publish, upload, distribute, translate, adapt, market or use any part of the Third Party Content and Services, without the prior written consent of the relevant Third Party Provider unless expressly permitted by this Disclaimer, the Warranty or any other applicable terms and conditions;
- c.adhere to any additional terms where a Third Party Content or Service requires internet access;
- d.pay any additional charges relating to the use of a Third Party Content and Service.

Important Notice

Paragraphs beginning with the symbol  indicate important instructions, tips or conditions for the following settings.



For your own safety and the optimal performance of your device, ensure to read the safety instructions before performing any installation.

Compatibility with 3rd party products, software and services are not guaranteed. We cannot be held liable for any damage or loss suffered whilst operating, using or connecting to incompatible devices or apps.

The recording and playback of content on this or any other device may require permission from the owner of the copyright or other such rights in that content. It is your responsibility to ensure that your use of this or any other device complies with applicable copyright legislation in your country. Please refer to that legislation for more information on the relevant laws and regulations involved or contact the owner of the rights of the content you wish to record or playback.

Read these instructions

Follow all instructions

 
Heed all warnings

Keep these instructions

All rights reserved.

Safety Instructions

To ensure safe and correct use of this product, always comply with the following precautions to avoid dangerous situations and damage to your device:

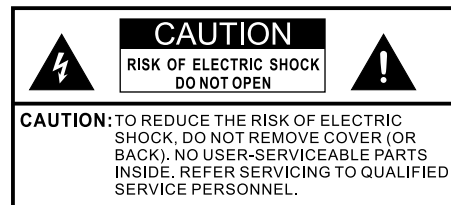

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.



Class I product: This symbol indicates that it requires a safety connection of protective earthing (ground).

The intended use and ambient conditions for this device

This device is intended for the rendering of video and audio signals, on a table-top, in a home or office environment. It must not be used in rooms with a high level of humidity or dust concentration. The warranty is only valid if used as intended by the manufacturer.



High humidity and dust concentration may lead to current leaks in the device. To reduce the risk of fire or electric shock:

- Do not expose this device to rain, moisture, dripping or splashing water, and do not place objects filled with liquids, such as vases, cups, etc. on or over the device.
- Do not touch the device with wet hands.
- Do not expose to direct air-conditioning and keep candles or other naked flames away from the device at all times.

If the device is moved from a cold environment to a hot environment, leave it switched off for at least an hour to avoid condensation. If used outside, make sure it is protected from moisture.

If you notice anything unusual, immediately remove the power plug.

In case of fire, use preferably a CO₂ gas or powder fire extinguisher. If such extinguishers are not accessible, try to isolate the electrical supply before using a water fire extinguisher.

The device may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the device.
- ALWAYS use furniture that can safely support the device.

- ALWAYS ensure the device is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the device or its controls.
- ALWAYS route cords and cables connected to your device so they cannot be tripped over, pulled or grabbed.
- NEVER place the device in an unstable location.
- NEVER place the device on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and device to a suitable support.
- NEVER place the device on cloth or other materials that may be located between the device and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the device or furniture on which the device is placed.

If your existing device is being retained and relocated, the same considerations as above should be applied.

■ Power Supply

Incorrect voltages can damage the device. Only connect this device to a power supply with the correct voltage and frequency noted on the type plate, using the supplied power cable.

The power plug must be easily accessible so that the device can be disconnected at all time. The device is live, even if in standby mode, as long as the device is connected to a power outlet.

It is recommended that this device is placed on a dedicated circuit.

- Do not overload the power outlets by connect too many appliances to the same outlet. Overloaded wall outlets, extension cords, etc. are dangerous and can result in electric shock and fire.

After power off, don't turn it on again in 5 seconds. Frequent

switching power supply in a short period of time can cause abnormal device.

The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.

■ Power plug and power cable

- Do not touch the power plug with wet hands.
- Do not place heavy objects on the power cable. Route the cable so that it is not kinked or laid over sharp edges, walked on or exposed to chemicals. A power cable with damaged insulation can cause electric shock and fire.
- Pull the power plug, NOT on the cable when disconnecting. The cable can become damaged and cause a short circuit if pulled on.
- Do not place the power cable near a high temperature object.
- Do not move the device with the power cable plugged into a socket.
- Do not use a damaged or loose power cable, or a damaged socket outlet.
- Do not use any power cords other than the one supplied with this device.
- MAIN plug on the power cord is used as the disconnect device, the disconnect device and socket-outlet shall be easily accessible.

■ Air ventilation and high temperatures

Install your device only where there is proper ventilation, and ensure that there is at least 30 cm free space on the sides and 10 cm free space on the back unit for air circulation. Excessive heat and obstruction of ventilation could lead to fire or early failure of some electric components.

- Do not block any ventilation openings with newspapers, tablecloths, curtains, etc.
- Do not dry clothing etc. on top of the device.
- Take care not to touch the ventilation openings since they may become hot.
- Do not insert foreign objects into the device through the vents.

■ Warning about off-gassing

New furniture, carpet, paint, building materials and electronics can release chemicals into the air through evaporation. After you set your device up and turn it on for the first time, you may notice a slight smell within a couple of hours. This is because some components of device are heating up for the first time. The materials that we use fully meet the environmental requirements and regulations. Your device is working just fine and the fumes from the off-gassing will diminish eventually.

■ Supervision

- Do not let children play unsupervised close to the device. It could tip over, be pushed off or pulled down from the stand surface and injure someone.
- Do not allow a switched-on device to run unattended.

■ Volume

Loud music and noise may lead to irreparable damage to your ears. Extreme volumes should be avoided, especially during long-term exposure and when using headphones.

If you hear a drumming noise in your ears, turn down the volume or temporarily stop using headphones.

■ Thunder Storms

Pull out the power plug and all connected antenna cables from the device during a thunderstorm. Overvoltage caused by lightning strikes can damage the device via the antenna system, as well as the wall socket.

■ Long periods of absence

As long as the power plug is connected to a live socket outlet, the device will consume power even in standby mode. The power plug and all connected antenna cables should be disconnected during long periods of absence.

■ Cleaning and care

CAUTION:

Unplug the power cord prior to cleaning the device.

Clean the device, the screen, and the remote control with a soft, moist, clean and colour-natural cloth only. Do not use any chemicals.

- Do not subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade the surface quality.
- Do not spray water or other liquids directly on the device. Liquid inside the device could lead to product failure.
- Also wipe the power plug with a dry cloth at regular intervals.

■ Service/Repair

Never remove the cover/back of the device; there are no user serviceable parts inside. Refer all service to qualified service personnel.

■ Packaging

Keep the anti-moisture materials and plastic bags out of reach of children.

Plastic bags can cause suffocation and the anti-moisture material is harmful if swallowed. If swallowed by mistake, force the patient to vomit and visit the nearest hospital.

■ Modification

Do not attempt to modify this product in any way. Unauthorized modification could void the warranty of this device, cause electric shock and fire.

■ Remote Control batteries

- Do not disassemble the product or attempt to remove the battery by yourself.
- Do not dispose it into fire.
- Do not crush or puncture the battery.
- Prevent it from falling down.
- Use the correct charging device.
- Be sure to dispose of battery correctly.
- Do not expose battery to excessive heat such as sunshine, fire or the like.

■ Outdoor Antenna Grounding

If an outdoor antenna used, be sure the antenna system is protected against voltage surges and built-up static charges.

■ Disposal

Refer to the recycling section of this guide.

■ Laser

Do not look directly at the lens when this device is on because the laser light may damage your eyes!

- This product comes with a laser module. Do not tear or modify this device in any manner; otherwise, it may result in personal injury.

RG2

As with any bright light source, DO NOT STARE INTO THE
BEAM IEC 62471-5: 2015

CLASS 1 LASER PRODUCT

$\lambda = 459\text{-}471\text{nm}/519\text{-}531\text{nm}/635\text{-}651\text{nm}$

Wavelength 459-471nm/519-531nm/635-651nm

CLASS 1 LASER PRODUCT IEC 60825-1: 2014

CAUTION:

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

- If this device requires a repair, please wear laser eye protection with an optical density OD that is 4 or higher and has a wave length of 459-651nm.
- Do not place any water-containing vessel on this device, such as cosmetics or liquid medicine.
- If any object or water enters this device, please unplug this device and contact the service staff of Hisense.
- Do not place any exposed fire source (e.g. burning candle) on this device. Keep away from high temperature and heat.
- Do not expose the battery to direct sunlight or candle light.
- Keep air vents on both sides clear from any objects to prevent the device from overheating inside.
- To avoid a short circuit, product damage or electric shock, do not use any sharp object or metal to touch the ports or other openings on the device.
- If this device has been in a warm environment, allow any built-up condensation to evaporate first BEFORE you switch the device on.
- Do not allow a child to stand on or climb up this device.
- Do not place any object above or in front of the lens because the laser light could cause the object to become flammable.
- Clean the lens periodically with a clean cloth and make sure the device is turned off before you start.

Congratulations on the purchase of your new Laser TV! This Guide will walk you through a few easy steps to set up your Laser TV.

Please visit Hisense official website for more details.

Figures and illustrations are provided for reference only and may differ from actual product appearance.

Parts of the software function change with the system upgrade.

Table of Contents


Accessories List	1
Laser TV Diagram	2
STEP 1. Mount the Screen	2
STEP 2. Install the Laser TV	2
STEP 3. Align the Projected Image	7
STEP 4. Use Your Remote	9
STEP 5. Proceed with the Screen Setup Menu	11
Maintenance & Troubleshooting	12
Product Specifications	14
Recycling / Licenses	15

Accessories List

- Laser TV × 1
- Remote control × 1
- Gloves for handling the Laser TV × 2
- Power cord × 1
- Laser TV Quick Setup Guide × 1
- Laser TV Warranty Card × 1
- Cleaning kit for the lens × 1
- C-shape blocks × 2
- C-shaped Block Installing Instruction × 1

NOTE: The accessories list above may vary depending on specific model, country or region. Please refer to the actual accessory bag.

 Laser TV Diagram

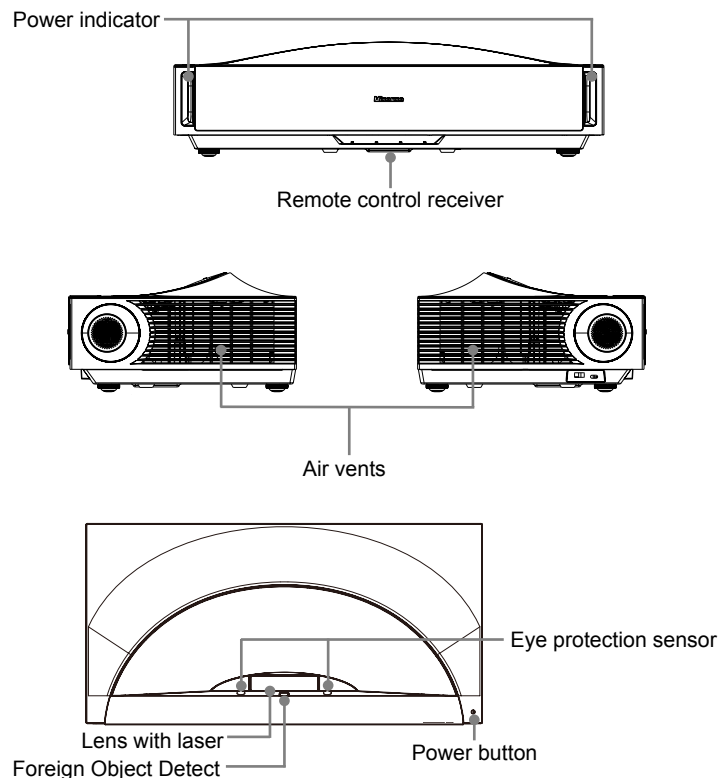

STEP 1 Mount the Screen

 
If you have purchased a screen, then refer to the specific screen installation guide.

STEP 2 Install the Laser TV

Be sure to protect the lens when you handle this device.

We recommend to connect all cables to the ports on the back of the Laser TV before positioning the Laser TV. (Audio, video, Ethernet cables and external devices are not included in the accessory bag.)

Check to ensure that you have selected the right cables for the ports and that they are connected securely. Loose connections may affect the quality of the picture image and colour.

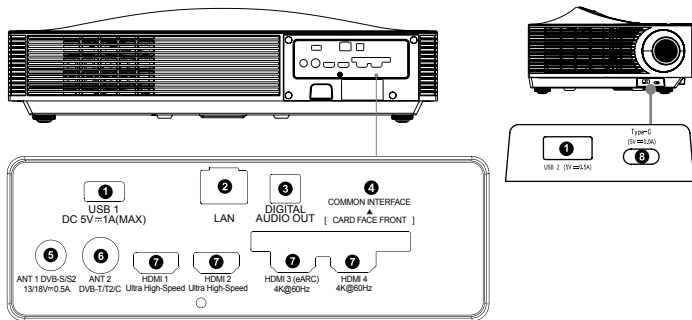


NOTE:

- When connecting a hard disk or a USB hub, always connect the mains adapter of the connected device to the power supply. Exceeding a total current consumption may result in damage. The maximum current consumption of the USB 2.0 device is 500mA and the maximum current consumption of the USB 3.0 device is 1A.
- For non-standard and large-capacity individual mobile hard disks, if the pulse current is larger than or equal to 1A, it may cause the device to restart or self-lock. The Laser TV is therefore not compatible with this type of drive.
- The voltage output of the USB is 5V.




 Ethernet (a router for Internet connection is needed)

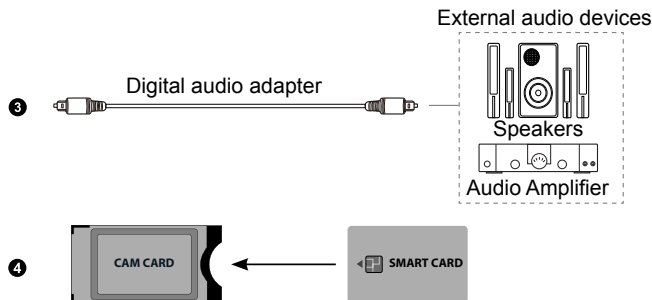




NOTE:

 - Before you insert/remove the CI+ module, ensure that the Laser TV is switched off. Then insert the CI card into the CI+ module in accordance with the service provider's instructions.
- Do not repeatedly insert or remove the Common Access Module as this may damage the interface and cause a malfunction.
- You must obtain a CI+ module and card from the service provider of the channels you want to watch.
- Insert the CI+ module with the SmartCard in the direction marked on the module and SmartCard.
- CI+ is not supported in some countries and regions; check with your authorised dealer.

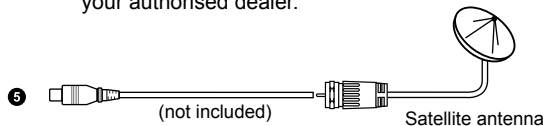

NOTE:

   - ANT1 Jack can provide power for satellite antenna (13/18V, 0.5A max.)
- DVB-S/S2 may not be applicable in some models/countries/regions.

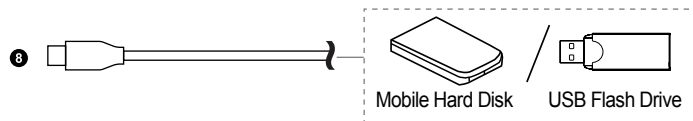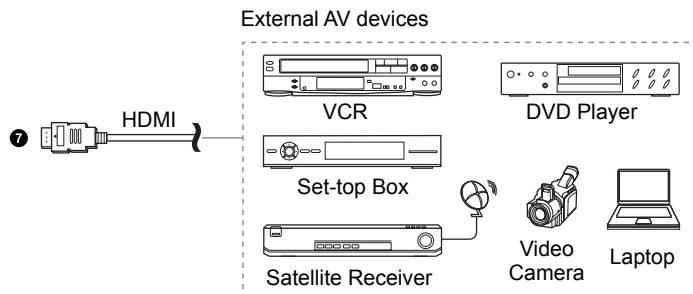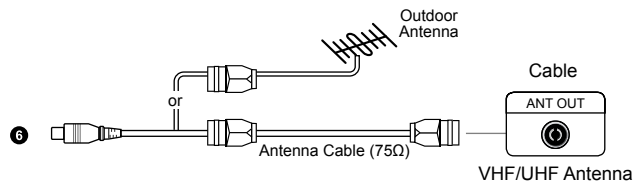


NOTE:

- The Type-C port can connect to a Type-C USB drive or connect to a USB 3.0 drive via a Type-C dock, but does not support DP (DisplayPort) display.


LAN (Wired setup)

 - To connect your Laser TV to the network, connect the LAN port on the back of your Laser TV to an external modem or router using a LAN (Ethernet/Cat 5) cable. See the illustration below.

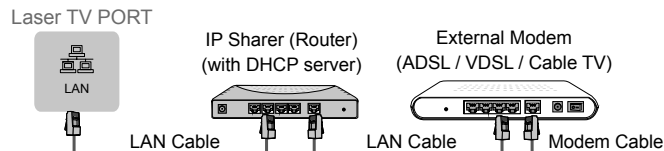

Wireless setup

 
- To connect your Laser TV to your network wirelessly, you need a wireless router or modem. See the illustration below.

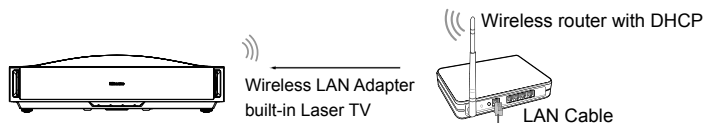

NOTE:


- You must use the built-in Wireless LAN Adapter to use a wireless network because the set doesn't support external USB network adapters.
- If the wireless router supports DHCP, your Laser TV can connect more easily to the wireless network.
- If you apply a security system other than the systems listed below, it will not work with the Laser TV.
Security system: WPA, WEP, WPA2, WPA3.
- In order to guarantee smooth network, the distance between router and Laser TV should be less than 10 metres.

 Plug the power cord into a power socket.
Press the POWER button to switch on the device.

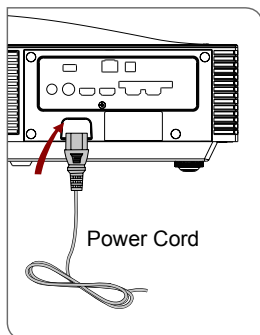


! WARNING: Poor ventilation will cause the device to overheat or become damaged.

 - Do not block the ventilation openings or place any object on the device.
- Do not place the device in any narrow, enclosed or poorly ventilated space.

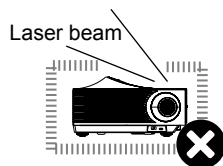

Ceiling installation

 The device can be installed on the ceiling through the four threaded holes on the bottom of the device.
Please use a certified ceiling mount for the installation and ensure that four certified bolts of 6M×10mm are used to secure the device to the mount.
Select a suitable ceiling mount based on the weight of the device and the pattern of the mounting holes on the bottom of the device, as shown below.

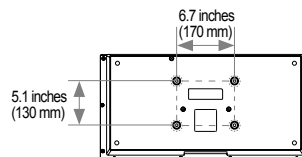

Only qualified professionals should perform the installation.
Using defective mounts or bolts, or improper installation, can result in personal injury or property damage.
The user shall assume full legal and financial responsibility for any personal injury, property damage, or consequential losses arising from:

- Use of non-certified installation materials
- Improper installation practices deviating from specifications
- Failure to implement safety measures

To ensure proper ventilation of the device, the minimum space must be maintained as shown in the diagram below.


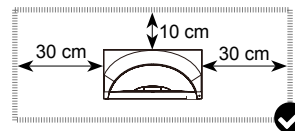 


Image size and projection distance

 NOTE: The sizes of the projected image for each projection distance may differ depending on the actual installation environment.




Projected Image Size (inch)	X(mm)	Y(mm)	A(mm)	B(mm)
80	1770	996	57	298
100	2215	1245	137	354
110	2436	1369	176	382
120	2657	1494	216	410
139	3076	1730	292	463
150	3320	1867	336	494
200	4427	2492	535	634

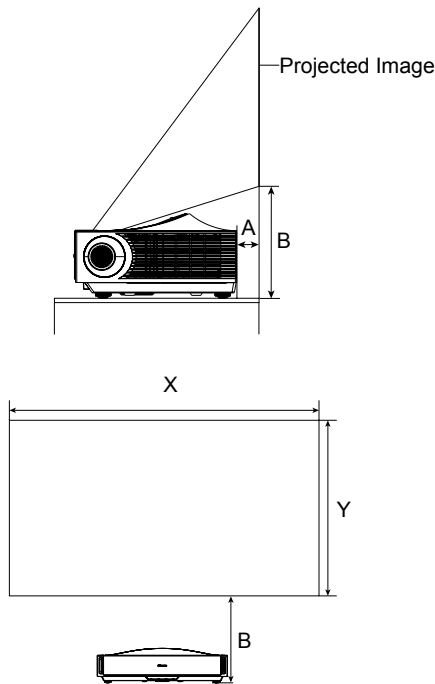

STEP 3 Align the Projected Image


- Follow the steps below, only if they apply to your situation.
- Adjust the height of the screen until the projected image is parallel with the screen.
- Rotate the feet with an overlooking view, and do not look directly at the lens when the console is on because the laser light may damage your eyes.

 PARALLEL THE BOTTOM OF THE IMAGE WITH THE SCREEN

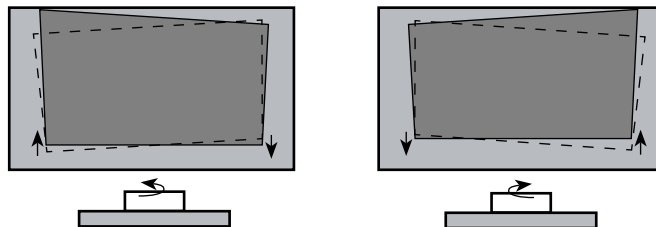


If the bottom of the image is lower on the left (right) and higher on the right (left), rotate the console counterclockwise (clockwise) until the bottom of the image is parallel with the screen.

 
FIT THE BOTTOM OF THE IMAGE TO THE SCREEN

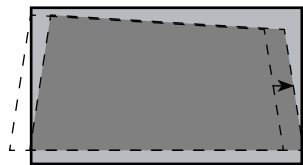


Move the console to the right

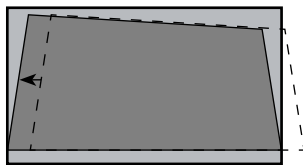 

Move the console to the left

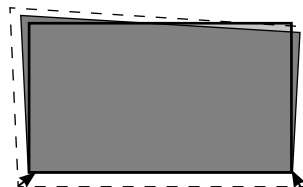 


Move the console closer to the screen

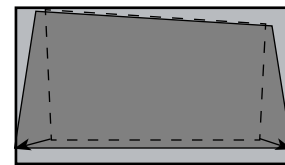 


Move the console farther from the screen

 
ADJUST THE UPPER-RIGHT/UPPER-LEFT OF THE IMAGE

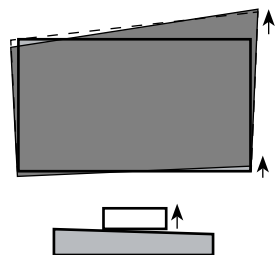


Rotate the front-right foot clockwise

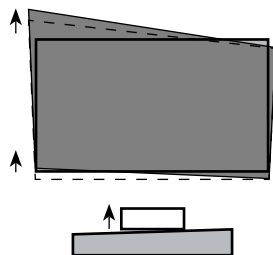 

Rotate the front-left foot clockwise

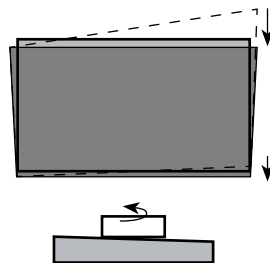 

 Rotate the console counterclockwise until the bottom of the image is parallel to the screen

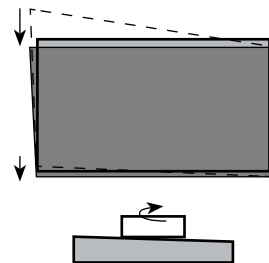

Rotate the console clockwise until the bottom of the image is parallel to the screen

FILL THE TOP OF THE IMAGE TO THE SCREEN



Rotate the front-left and front-right feet clockwise



Rotate the back-left and back-right feet clockwise

 


Rotate the front feet counterclockwise if the back feet are already at their maximum height

STEP 4 Use Your Remote

BUTTONS ON YOUR LASER TV REMOTE


NOTE: The labels on the buttons are provided for reference only. The actual appearance of the remote packaged with the Laser TV may differ from this diagram.

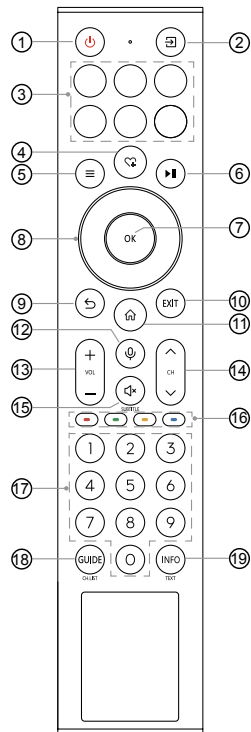

- ① : Power on/Standby
- ② : Input source selection
- ③ APP: Quick access to APPs
- ④ : Custom button, provides quick access to its user-defined function
- ⑤ : Press to enter Menu
- ⑥ : Playpad keys
- ⑦ OK: Confirm selection
- ⑧ : D-pad (up/down/left/right navigation buttons)
- ⑨ : Under the Menu or App, return to the previous place
- ⑩ EXIT: Exit the menu or exit the application
- ⑪ : Display the Home screen
- ⑫ : Activate the microphone
- ⑬ VOL: Volume (up/down)
- ⑭ CH: Channel (up/down)
- ⑮ : Mute and restore sound (Long press to be used as *SUBTITLE*: Activate or deactivate the subtitle mode)
- ⑯ Four colour buttons: Special function buttons
- ⑰ Number buttons: Select a channel or input numbers
- ⑱ GUIDE: Display the Electronic Program Guide (DTV mode)
(Long press to be used as *CH.LIST*: Display the Channel List)
- ⑲ INFO: Display the current program information
(Long press to be used as *TEXT*: Turn on/off the teletext function)

NOTE: The included remote control will vary depending on models, countries/regions. Check information according to the actual remote control in the accessory bag.

 CHARGING THE REMOTE CONTROL

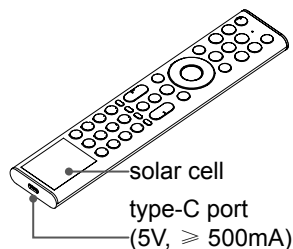

You can charge the remote by exposing the solar cell to light or using a USB type-C cable (not provided).

When charged by type-C port, the red indicator will blink. When fully charged, the indicator will stop blinking first and then turn off.

NOTE:

- Figures and illustrations are provided for reference only and may differ from actual product appearance.
- The battery is not user-replaceable. Do not try to remove or change the internal battery yourself, as it may cause damage to the battery/device, personal injury, fire or explosion.
- When you do not use the remote control, place it face up to make the solar cell expose to light.
- Exposing the battery to environments with extremely high temperatures can result in explosion or the leakage of flammable liquid or gas.
- Battery chemicals can cause skin irritation. If chemicals come into contact with your skin, wash immediately.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Always handle the remote control with care to prevent it from falling down.

- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

REMOTE CONTROL RANGE INFORMATION

- The remote control can work up to 8 metres in front of the Laser TV. (This distance is used for an unpaired infrared device.)
- Remote control angle: with the remote sensor as the highest point and 6 metres away, the horizontal control angle is within $\pm 30^\circ$, while the vertical angle is within $\pm 15^\circ$. (This distance is used for an unpaired infrared device.)

PAIRING THE REMOTE CONTROL (ONLY FOR BLUETOOTH REMOTE CONTROL)

Pair the remote to the Laser TV after the device is switched on. Keep the remote control within 3 metres from the Laser TV and press any button (except power and mic button) to pair.

NOTE:

- In special cases, press and hold [$\equiv$] button to pair.
- If an unknown error occurs with the remote control, it would be caused by interference. Try to eliminate the cause of the interference and pair it again.
- If an unknown error occurs with the remote control, please recharge and activate the remote control.
- The remote cannot be paired to the Laser TV while the Laser TV is in standby mode.

STEP 5 Proceed with the Screen Setup Menu

PROJECTION MODE

 
If you need to flip the image over top-to-bottom and/or left-to-right, select the Projection Mode.

AUTO GEOMETRIC CORRECTION

1. Adjust the Laser TV position by using the levelling feet as needed, and ensure the frame of the screen is located inside the rectangular border.



2. Click Next to continue.
3. An auto-correction pattern will be displayed below, and the correction process will complete automatically.

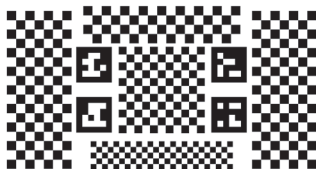

4. If the auto-correction results are unsatisfactory, use manual correction for fine-tuning.

NOTE:

- Obstacles between the console and the screen, foreign objects on the screen surface, dark-colored walls, and strong ambient lighting may interfere with the automatic screen alignment. Ensure all obstacles and foreign objects are removed, use a lighter-colored wall, and minimize ambient light before initiating automatic screen alignment.
- This function is available only for screen of 100" and 120".
- Since screen type significantly impacts the performance of auto screen correction, we strongly recommend using the Hisense Ambient-Resisting Screen for optimal results.
- Manual correction may be required for fine-tuning if auto correction is unsatisfactory.

MANUAL GEOMETRIC CORRECTION

Select points and move it to fit the projected image into the screen.

1. Press $\wedge / \vee / < / >$ buttons on your remote control to move focus, and press **OK** button to choose a point you need to adjust.
2. Long press $\wedge / \vee / < / >$ buttons: quick adjustment of the projected image;
Short press $\wedge / \vee / < / >$ buttons: precise adjustment of the projected image.
3. Press $\hookrightarrow$ button to save your adjustment, and you can select other points to adjust the image.

If you want to return the image position to the factory default, select Reset on the screen.

EYE PROTECTION

In order to protect your eyes, turn the **Eye Protection** on, and do not look into the lens. If you get too close to the Laser TV, the light output will be temporarily disabled after 5 seconds.

FOCUS ADJUSTMENT

You can adjust the focus parameters by pressing the up and down buttons on the remote. The focus effect is adjusted in real time according to the displayed background image card.

Maintenance

- Avoid touching the device when it is running or immediately after it is turned off, as it may be hot.
- Do not clean the device with oil-based products as they can deteriorate the exterior or damage the paint. Extended contact with rubber or ethylene products can cause stains on the device.
- If the exterior of the Laser TV becomes dirty, turn off the device and wipe it with a damp, soft cloth.
- **Lens Care:**
 - Avoid touching the lens with your hands.
 - Do not use ordinary cleaning cloths to wipe the lens.

- Use a dust blower to remove dust from the lens.
- For grease, dirt, and fingerprints, have a professional clean the lens using optical cleaning cloths, lens wiping paper, or professional cleaning solutions to avoid damaging the optical coating and affecting image quality.
- Always use the Power button on the remote control to turn off the device. Do not cut off the power directly while the device is operating.

Troubleshooting

If you are having trouble with your device, first try turning it off and on again. If this does not fix the problem, check the tips in the following.

It takes a few seconds before the picture is displayed after the device is switched on. Is this normal?

Yes, this is normal. The Laser TV is in the process of initialisation and searching for information on previous settings.

No sound or no picture

1. Check if the power cord is plugged into a working mains socket.
2. Press the  Power button on the remote control to activate the device from 'Standby' mode.
3. Check if the power indicator is lit or not. If it is, then the Laser TV is powered.

No picture and/or sound after connection to an external source

1. Check if the output connection of the external source and the input connection of the Laser TV are correct.
2. Make sure you have made the correct selection for the input mode of the incoming signal.

Picture is normal but there is no sound

1. Check the volume settings.
2. Check if 'Mute' mode is activated.

Sound is normal but there is no picture or only a black and white picture

1. If the picture is black and white, unplug the device from the power socket and re-plug it after 60 seconds.
2. Check if the Colour Saturation is set to 50 or higher.
3. Try different sources.

Sound and/or Picture are distorted or appear wavy

1. An electric appliance may be affecting the Laser TV. Turn off any appliances nearby and move it farther away from the Laser TV.
2. Insert the power plug of the Laser TV into another power socket.

Sound and/or Picture are blurry or cut out

1. Check the direction, position and connection of the antenna if

an external antenna is used.

2. Adjust the direction of the antenna or reset or fine tune the channel.

The plastic housing is emitting a clicking sound

Temperature changes during operation may cause the device to slightly expand or shrink, which may cause a clicking sound. This is normal and the device is in perfect working order.

The remote control does not work

1. Ensure that the device is connected to the mains socket and can be operated.
2. Please recharge and activate the remote control.

Product Specifications

Model Name		Laser TV
Dimension (L × D × H)		24.6 × 12.5 × 6.5 inches (624 × 317 × 166 mm)
Weight		28.4 lbs (12.9 kg)
Active Screen Size (Diagonal)		80 ~ 200 inches
Screen resolution		3840 × 2160
Audio power		2 × 15 W + 2 × 15 W + 2 × 10 W + 2 × 8 W + 2 × 10 W
Power consumption		350 W
Power supply		120-240V ~ 50/60Hz
Receiving systems	Analog	PAL-D/K, B/G, I, SECAM-D/K, B/G
	Digital	DVB-T/T2, DVB-C, DVB-S/S2
Environmental conditions		Temperature: 41°F - 104°F (5°C - 40°C) Humidity: 20% - 80% RH Atmospheric pressure: 86 kPa - 106 kPa
HDMI Input		RGB / 60Hz (640×480, 800×600, 1024×768) YUV / 60Hz (480i, 480p, 720p, 1080i, 1080p) YUV / 50Hz (576i, 720p, 1080i, 1080p) 3840×2160 / 24Hz, 3840×2160 / 25Hz, 3840×2160 / 30Hz, 3840×2160 / 50Hz, 3840×2160 / 60Hz
Network Standby Power Consumption		≤ 2.0 W
Power Consumption in Standby Mode		≤ 0.5 W

Disclaimer: All products, product specifications, and data are subject to change without notice to improve reliability, function, design or otherwise.

Recycling / Licenses



This symbol on the product or on its packaging indicates that this product must not be disposed of with your household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.

 


FOR DTS PATENTS, SEE [HTTP://XPERI.COM/DTS-PATENTS/](http://xperi.com/DTS-PATENTS/). MANUFACTURED UNDER LICENSE FROM DTS, INC. AND ITS AFFILIATES. DTS, DTS:X, AND THE DTS:X LOGO ARE REGISTERED TRADEMARKS OR TRADEMARKS OF DTS, INC. AND ITS AFFILIATES IN THE UNITED STATES AND/OR OTHER COUNTRIES. © DTS, INC. AND ITS AFFILIATES. ALL RIGHTS RESERVED.



Manufactured under license from IMAX Corporation. IMAX® is a registered trademark of IMAX Corporation in the United States and/or other countries. For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.

Bottom View

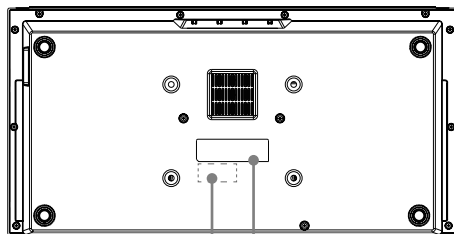


S/N: XXXXXXXXXX



mm dd, yyyy

 Back View

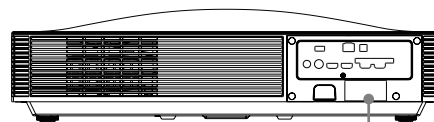

WARNING: This set must not be opened unless by a qualified technician,
WARNUNG: Dieses Set darf nur von einem qualifizierten Techniker geöffnet werden.
VAROVANÍ: Toto zařízení nesmí být otevřeno, pokud není otevřeno kvalifikovanými technikami.
VAROVANIE: Toto zariadenie neodvŕajte, pokiaľ nemáte kvalifikovaneho technika.
AVERTISSEMENT: Ne deschildiez pas cet équipement avant d'avoir un technicien qualifié.
OPOZORILO: Tečaj kompleta ne smete odpirati, odpreti ga sme samo usposobljeni tehnik.
UPOZORENJE: Ovaj se uređaj ne smije otvoriti ako ga nije otvorio kvalificirani tehničar.
ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Μην ανοίξετε τη συσκευή εκτός αν το ανοίξετε από ειδικευμένο τεχνικό.
OSTRZEZENIE: Nie otwieraj tego urządzenia bez wykwalifikowanego technika.
AVERTISSEMENT: Cet ensemble ne doit être démonté que par un technicien qualifié.
ATTENZIONE: Non aprire la unità a meno che non sia stato eseguito da un tecnico qualificato.
ADVERTENCIA: Este conjunto no debe abrirse a menos que lo haga un técnico calificado.
AVISO: Este conjunto não pode ser aberto a menos que por um técnico qualificado.
ПРЕДУПРЕЖДЕНИЕ: Това устройство не трябва да се отваря, освен ако не е отворено от квалифицирани техници.
FIGYELEM: Csak akkor nyissa ki ezt az eszközt, ha képzett szakemberrel rendelkezik.
WAARSCHUWING: Deze set mag niet worden geopend, alleen door een gekwalificeerde technicus.



CAUTION
 RISK OF LASER RADIATION
 DO NOT STARE

Hisense LASER TV

NOTE:

This page is used to show the position of the nameplate, and the content is for reference only.



1426289 ES-A2527Z0-1

