 


User Manual

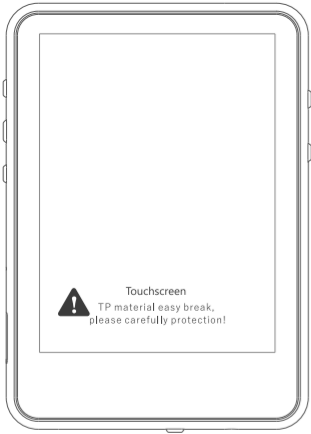

 Touchscreen
TP material easy break,
please carefully protection!

 Service E-mail:
tengsen2009@hotmail.com



-01-

Copyright ©

Button Function

① Volume+ / Previous

② Volume- / Next

③ reset

④ Menu

⑤ TF Card Slot

⑥ Headphone Jack

⑦ USB Port

⑧ Turn on/off / Screen out/Wake up key

HP Music Player [133n, Dedicated music player
 Designed by Tingsen | Made in China
 Shenzhen Tingsen Technology Co., Ltd
 Patent No.: ZL201930044336.1

CE FC CCC

Speaker

1. Touch Operations

1.1 Main Interface
Swipe left/right or up/down to select different function modules.

1.2 Touch Select & Enter
Touch on the screen to select and enter a desired function.

1.3 Scroll
Use "up/down swipe" to scroll through the content.

1.4 Return
Swipe left or touch the "--" icon to return to the previous screen.

2.Button Function

① Power/Screen Off & Wake-up Button ON/OFF
Press and hold for 3 seconds to power on/off.
Short press to turn the screen off or on.

② Play/Pause Button  
While playing music or video, short press to pause or resume playback.

③ Return Button 
Short press to return to the previous menu.

④ Menu Button M
While in playback mode, short press to open the menu options.

⑤ Previous File   Volume Up +
Press and hold to increase volume (a pop-up box will appear).
While playing music or video, short press to switch to the previous file.

⑥ Next File   Volume Down -
Press and hold to decrease volume (a pop-up box will appear).
While playing music or video, short press to switch to the next file.

⑦ TF Card Slot 
Be sure to insert the TF card in the correct direction to avoid damaging the internal circuit of the TF card slot, which could prevent the card from being read or cause permanent damage to the TF card or slot.

⑧ USB Port
Used for charging the device and connecting to a computer for file transfers.

⑨ Headphone Jack
In music or video playback mode, insert the headphones to listen to music.
In radio mode, the headphones must be inserted to serve as an antenna for receiving broadcasts.

⑩ Reset Hole R (Requires professional guidance)
Use a needle with a diameter of <1mm at a 90-degree angle to gently press the internal reset button to reset the system. The location may vary by model; please refer to the actual device.

-03-

TF card installation & read file

- 1 → Insert the expansion memory card
- 2 Touch the main menu of "Folder" in the main interface
- 3 Click the extended memory card to browse the file

Wrong insertion mode of TF card

Correct insertion mode of TF card

Return

view the Manual User Video

-04-

Charging

The adapter must meet the following requirements, or if met any problem, our company will consider it as man-made damage.

Input: AC110-240V 50/60Hz Max:100mA

Output: DC5.0V $\approx$ 500mA

1 Broadcast one end of the data cable into the USB adapter or computer USB

2 The other end is connected to the machine

The battery icon in the upper right corner of the screen flashes, indicating that it is charging.
Do not disconnect it

Do not disconnect

DC5V / 500mA

-05-

Power On/Off

1. Power On/Off

1.1 Power On

 
Press and hold the "Power/Screen Off & Wake-up Button On/OFF" for 3 seconds to turn on the device.

1.2 Power Off

While in use, press and hold the "Power/Screen Off & Wake-up Button On/OFF" for 3 seconds to turn off the device.

1.3 Screen Off or Screen On

While in use, short press the "Power/Screen Off & Wake-up Button On/OFF" to turn off the screen for protection, or to wake up and turn the screen back on.

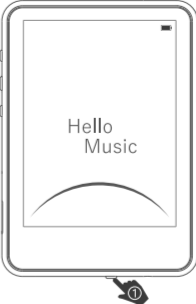

The diagram shows a front view of a smartphone. The screen displays the text "Hello Music" above a curved line representing a speaker grille. A small battery status icon is in the top right corner. A hand icon is shown pressing the power button, which is located at the bottom center of the device's frame.

Save Power:
Please set up 3 Mins auto turn off.
If you don't need save power please go to set up-save power turn on/off set be "dose"

-06-

BT/Bluetooth

⚠️ **TengenS®** Reminder: Before use, ensure that the Bluetooth headphones and Bluetooth speaker are disconnected or unpaired from other devices.

In the main menu, touch the "BT/Bluetooth" icon to enter the Bluetooth menu after a prompt message appears:

Bluetooth switch Control, Search Device, Paired Devices.

 
Bluetooth Functions

1. **Bluetooth switch control:** Bluetooth On... Bluetooth Off
A. When Bluetooth is not in use, make sure to turn off Bluetooth via the Bluetooth control switch to conserve battery life and extend the device's battery life.
2. **Search Device**
After turning on Bluetooth, touch "Search Device" to automatically search for available Bluetooth speakers and Bluetooth headphones. Select the device to pair and connect. Once connected, you can stream music, radio, and videos from the device to the Bluetooth speaker or headphones.
3. **Paired Device**
A list of devices that were previously connected. To reconnect, touch on a device from the list. If Bluetooth is not turned off, you need not unpair previously paired devices.

⚠️ **Note:** Bluetooth only supports connections to Bluetooth speakers and Bluetooth headphones. It does not support connecting to a smartphone via Bluetooth.



Searching for...

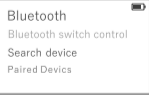

Bluetooth
Bluetooth switch control
Search device
Paired Device

Service E-mail: tengsen2009@hotmail.com

-07-

Data Transfer

The diagram illustrates the process of connecting a Tensengs player to a computer for data transfer. It features a vertical timeline with three numbered steps (1, 2, 3) and a large illustration of the Tensengs player interface.

- Step 1:** Plug one end of the data cable into the computer USB. The illustration shows a USB cable being plugged into a computer's USB port.
- Step 2:** The other end is connected to the machine. The illustration shows the other end of the USB cable being plugged into the Tensengs player.
- Step 3:** Select player pop-up "Charge & transfer" (default); "Charge & play" choice. The illustration shows the Tensengs player screen displaying the message "Choose connection type:" with two options: "Charge & transfer" (highlighted) and "Charge & play".

Below the timeline, a laptop is shown connected to the Tensengs player via a USB cable. The cable is labeled "USB".

-08-

Main Menu

1. Left and right sliding switching interface

Note: The user interface is only for display, the actual UI icon is constantly changing and optimizing, please refer to the actual product, so we apologize for the inconvenience caused, thank you for your understanding!

Return main menu

[Touch Operations]

1.1 Main Interface

Swipe left/right or up/down to select different function modules,

1.2 Touch to Select & Enter

Touch the screen to select and enter a desired function,

1.3 Scroll

Use "up/down swipe" to scroll through the content,

1.4 Return

Swipe left or touch the "←" icon to return to the previous screen.

-09-

Music menu

The song played last time/the song being played: When no music is played at the background and you enter the music interface, "last song" will be displayed. As you enter this interface, the song played last time at the time of your exit will be played. When any music is played at the background, "the song being played" will be displayed. Then, you can enter the music playing interface by pressing the Play button,

- ◆ Now playing/Resume
Remember to play the last song played recently.
- ◆ All songs
Display all songs inside the player.
- ◆ Artist
Singers of all songs are listed in an alphabetic order of their name acronyms.
- ◆ Album
Albums are displayed in an on alphabetic order of their name acronyms.
- ◆ Style
Styles are displayed based on built-in styles of downloaded music.
- ◆ Favorites
Click on the  icon in the playback interface and bookmark this playlist1-6.
- ◆ Updating playlists
After adding new songs to the player or inserting a TF card, they can be read by refreshing the playlist.
- ◆ Local folder
Tracks in the machine's memory (No card, no display.)
- ◆ Card folder
Tracks in the TF card's memory (No card, no display.)

-10-

Music Play 1-3

1 Touch main menu "music" into play list

2 Touch choice function operate

3 In playing click the label handle the playing music

Return main menu

Note: In the playing, Touch screen blank change be playing music word (the song should included words)

The diagram illustrates the steps to play music on a device. A vertical timeline with numbered circles 1, 2, and 3 indicates the sequence of actions. Step 1: Touch main menu 'music' into play list. Step 2: Touch choice function operate. Step 3: In playing click the label handle the playing music. Below the timeline, a screenshot of a music player interface is shown. The interface displays the song title 'I Do It For You.flac', the artist 'Tengsen®', and a progress bar. The progress bar shows '00:01:13' out of '00:04:10'. The interface also includes buttons for play/pause, previous, next, and a heart icon.

Music Play 2-3

In the main menu, touch the "Music" icon to enter the music function: Now Playing, All Songs, Artist, Album, style, Favorites, Updating playlists

Swipe up or down to scroll through the features, and touch to enter the corresponding function.

While playing Music:

1. Menu
 - Press the "M" menu button on the device or touch the "—" icon to bring up the function selection menu: EQ(Equalizer), Delete, 1. EQ (Equalizer)
 - Options include Off, Rock, Funk, Hip-Hop, Jazz, Classic, Electric, Customize, etc.
 - 1.2 Delete
 - Delete the current file, Please use this option with caution, as once deleted, the file cannot be recovered.
2. Play mode
 - Touch the  icon to set the play mode:
 -  Repeat all
 -  Single repetition
 -  Shuffle
 -  Sequential Play
3. Equalizer Settings
 - Touch the "NOR" icon to adjust the EQ settings:
 - NOR → Off
 - < ROCK → Rock
 - < FUNK → Funk
 - < HIP-OP → Hip-Hop
 - < JAZZ → Jazz
 - < CLAC → Classic
 - < TECH → Electric
 - < CUST → Customize, etc.
4. A-B Repeat
 - Touch the "A-B" icon once to make "A" turn red and "B" start blinking.
 - Touch the "A-B" icon a second time to make both "A" and "B" turn red, starting the A-B repeat.
 - Touch the  pause icon to cancel the repeat and stop playback.
 - 5. Speed Control
 - Touch the "X" icon to adjust the playback speed with a range of ±8 levels (X3 to X-8).
 - 6. Add to Favorites
 - Touch the  icon to add the currently playing track to your favorites 1-6.

Music Play 3-3

7. Pause/Playback

Touch the **⏏** or **⏮** icon on the screen, or briefly press the **⏏** play/pause button on the device to pause or resume playback.

8. Previous/Next File

Touch the **⏮** or **⏭** icon on the screen, or briefly press the **⏮** or **⏭** buttons on the device to skip to the previous or next file.

9. Fast Forward / Rewind:

Touch and slide the **progress bar** with small circles **⏮** icon left or right, or touch and hold the **⏮** or **⏭** icons on the screen to fast forward or rewind.

 
10. Return

Swipe left or touch the **⏮** icon, or briefly press the **⏮** return button on the device to go back.

11. Updating playlists

Normally, when a TF card is inserted for the first time, the player will automatically refresh the playlist.

If needed, you can manually touch the "Updating playlists" option to refresh it later.

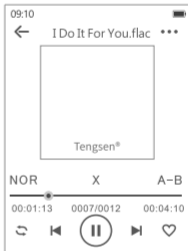

The screenshot shows a music player interface. At the top, the song title "I Do It For You.flac" is displayed. Below the title is a large rectangular area labeled "Tengsen®". At the bottom, there is a playback control bar. It includes a progress bar with a slider, a play/pause button (a square with two vertical bars), and buttons for previous, stop, and next. The time display shows "00:01:13" and "00:04:10".

Radio 1-2

 **Tengen's® Reminder:** Please insert headphones to use as the antenna!

In the main menu, touch the "Radio" icon to enter the radio function.

Radio Functions:

1. Return
Touch the "←" icon or briefly press the "→" return button on the device to go back.
2. Antenna
Headphones must be inserted to serve as the antenna for signal reception.
3. Menu
Press the "M" menu button or touch the "... " icon to bring up the function selection menu:
 - Automatic tuning
 - Radio Frequency Band (Ordinary Frequency Band: 87.5-108 MHz, Japan Band: 75-90 MHz, European band: 87.5-108 MHz)
 - Background switch
 - Preset Radio Station
 - Clear the Preset
 - Clear all Presets
 - Save to Preset Station
 - FM Recording File
 - Start recording on the FM radio
4. Manual Tuning
Touch the "►" or "◄" icons, or swipe left and right on the yellow vertical bar to manually select a radio station.
5. Select Preset Station
Touch the  icon to select a stored preset station.
6. Save to preset station
Touch the "◻" icon to save the currently tuned station to your preset list.
7. Automatic tuning
Touch the "Q" icon to automatically search for and save radio stations.

-14-

Radio 2-2

8, FM Recording File
Touch the  icon to access the FM recording file list.

9, Start recording on the FM radio
Touch the  icon to begin recording the current radio station.

10, Radio Frequency Band
Touch the  icon to switch between different radio frequency bands:

- NOR (Ordinary Frequency Band: 87.5-108 MHz)
- JP (Japan Band: 76-90 MHz)
- EU (European band: 87.5-108 MHz)

11, Radio station switch
Choose to toggle the background radio listening mode open or close.

 **Note:** Quick-touch icons may vary depending on the model and may be fewer in number. Please refer to the actual device for accurate details. The specific operation details can be found under "3. Menu".



radio

Video

1. **Tengsen® Reminder:** The specified video format must be converted using the **MovioConvertTool** software on a computer before viewing on this device.

2. **The video format must be converted to the specified pixel size (240x320, 240x240, 128x160) in AVI format using the built-in MovioConvertTool software on a computer. (The exact pixel size conversion depends on the device model. Please consult the retailer for confirmation.)**

In the main menu, touch the "Video" icon to enter the video directory list. Swipe up or down to scroll through the files. Touch on the corresponding file to start playback. While Playing Video:

1. **Return:**
Briefly press the "⏮" return button on the device or touch the "←" icon to go back.
2. **Delete:**
Touch the  trash can icon to delete the current file. Please use this option with caution, as once deleted, the file cannot be recovered.
3. **Pause Playback:**
Touch the  or  icon on the screen, or briefly press the  play/pause button on the device to pause or resume playback.
4. **Previous/Next File:**
Touch the  or " icon on the screen, or briefly press the  " buttons on the device to switch to the previous or next file.
5. **Fast Forward / Rewind:**
Touch and slide the small circle  on the progress bar left or right, to fast forward and hold the " or " icons on the screen to fast forward or rewind.
6. **Play mode:**
Touch the  to set the play mode:  Repeat all,  Single repetition,  Shuffle,  Sequential Play

 Tengsen®.avi 



00:01:13  00:04:10 

-16-

E-book 1-2

In the main menu, touch the "E-book" icon to enter the eBook file list. Swipe up or down to scroll through the files, and touch the corresponding file to start reading. While Reading:

1. Reading
Swipe up or down to scroll through the content.
2. Return
Swipe left, briefly press the "⏮" return button on the device, or touch the screen to open the quick settings menu and touch the "←" icon to go back.
3. Menu
Briefly press the "M" menu button or touch the "..." icon to bring up the function selection menu: - Page Selection, - Add a bookmark, - Bookmarks, - Chapter Select, - Delete

While reading, touch the screen or briefly press the "⏮ | ⏭" play/pause button on the device to bring up quick settings for:

- Brightness Adjustment
- Auto Page Turn Time
- Background Color
- Add a bookmark
- Bookmarks
- Chapter Select

4. Page Selection
Touch the "1/xxxx" icon, input the desired page number, and touch the "✓" icon to go directly to that page.
5. Add Bookmark
Touch the "🔖" icon to add a bookmark on the current page.
6. View Bookmarks
Touch the "🔖" icon to view the list of bookmarks you've added. If you touch the limit of 16 bookmarks, the oldest ones will be replaced.
7. Chapter Select
Touch the "📖" icon to view a list of chapters containing key chapter markers. Touch the desired chapter to jump to that section. Touch the "+" flag icon to add a bookmark on the current page.
8. Brightness Adjustment
Touch the "☀" icon to adjust the reading brightness by tapping the icon left or right.

-17-

E-book 2-2

 **Tengsen® Reminder:** Please protect your eyes by adjusting the brightness appropriately!

9. Auto Page Turn

Touch the  or  icon to enable auto page turning based on the set time, or pause the auto page turn.

10. Auto Page Turn Time

After tapping  icon, adjust the progress bar to set the desired auto page turn time.

 
11. Background Color

Touch the "004" icon to select a different background color for reading.

12. Delete File

Touch the  delete icon to remove the current file. Please use this option carefully, as the file cannot be recovered once deleted.

 **Note:** Quick-touch icons may vary depending on the model, and some icons may be updated. Please refer to the actual device for precise information. For detailed operations, see section "2. Menu".

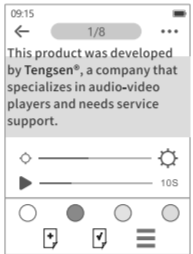

-18-

File browser

In the main menu, touch the "File browser" icon to display all files or folders, Swipe up or down to scroll through the files, and touch the corresponding file to open and use it.

1. Delete

Press and hold a file or folder to bring up the delete option, Touch "Delete" on the confirmation popup and select "Yes" to delete the current file or folder.

⚠️Tengsen® Reminder: Please use this option carefully, as once deleted, the file or folder cannot be recovered!

Search

Search (Supports only Chinese, English, and numeric input; available on specific models)

This device includes a touch function to find files by entering keywords for file names. In the music, video, picture, eBook or file list, touch the  magnifying glass icon (in the top-right corner) to enter a keyword and search for the desired file or folder.

Input Method Switch:

Touch the "P" (Chinese), "EN" (English), "#+=", or "123" icon to switch between Chinese Pinyin input, English input, special symbols, numbers, etc.

Tools 1-2

In the main menu, touch the "Tools" icon to access a list of available tools: Calendar, Stopwatch, Alarm Clock (Available on specific models only), Pedometer (Available on specific models only), Calculator, etc. Touch to enter the respective tool.

1. Calendar

Displays both Gregorian and Lunar calendars. Swipe left or touch the "←" icon or press the "→" return button to go back.

2. Stopwatch

Can record 2-3 sets of stopwatch data (some models may only support recording 2 sets of data; please refer to the actual device).

- Touch the "0" icon to reset the stopwatch.
- Touch the ▶ icon to start/pause the countdown.
- Touch the "0" icon to switch between the 1, 2, or 3 timers.

Swipe left or touch the "←" icon or press the "→" return button to go back.

-19-

Tools-2

3. Alarm Clock (Available on specific models only)

- Alarm Switch: Enable/disable the alarm.
- Set Alarm Time: Swipe or touch to select the time
(*※* Tengen's® Reminder: Be sure to touch "OK" to confirm the setting!)
- Alarm Repeat: Set the alarm frequency
(Once/Daily/Weekdays).
- Alarm Sound: Choose between different ringtones or music from the SD card.
- Alarm Volume: Adjust the volume of the alarm sound.

4. Calculator

Perform basic calculations (+, -, x, ÷). Swipe left or touch the " $\leftarrow$ " icon or press the " $\rightarrow$ " return button to go back.

5. Pedometer (Available on specific models only)

In the main menu, touch the "Tools" icon, then touch the "Pedometer" icon to enter the pedometer list:

- enter step counting
- Personal Information
- History Record
- Delete History

1.1. enter step counting

Touch the " $\blacktriangleright$ " icon to begin counting steps.

5.2. Personal Information

Set your height, weight, and step size. After setting, touch "OK" to save and exit.

5.3. History Record

View recorded pedometer data.

5.4. Delete History

Delete all recorded pedometer data.

Movie Convert Tool

The video file formats that this tool can support to convert are as follows:

All media file(*.avi;*.mpeg;*.mpg;*.dat;*.wmv;*.wma;*.asf;*.rm;*.rmv;*.rmvb;*.mov;*.qt;*.vob;*.swf;*.amv;*.3gp;*.flv;*.h264;*.m4v;*.m4a;*.mkv;*.mp4;*.ts)

-20-

Movie Convert Tool

[Software Installation & Conversion Guidelines:]

1. Copy the "Movie Convert Tool V1.3" file to your PC
2. Click on the folder Setup.exe Run Install until the installation is complete
3. Open the "Movie Convert Tool V1.3" software to enter the software interface
4. Click the "input icon" to select the video file you want to convert
5. Generally, the default output file path of the system is "C:\Users\User\Documents\videout\0" (you can also modify it according to your own needs)
6. Click the "icon" to enter the settings of the video you want to roll out
7. In the video settings interface, only select "Video Pixel" (other settings are not required by default)
8. General video pixels: **320x240** (please choose according to the actual display pixels of the product), click OK to confirm
9. Click the "icon" to enter the video conversion, and copy the video file to the MP3 player to play it after the conversion
10. Click the " ? icon" to enter the operation guide of this software

Movie Convert Tool V1.3

File Edit Options Help

Video preview

Output information

Input file: []

Output file: []

Start time: 00:00 End time: 00:00

Running time: 00:00 Total time: 00:00

320x240

Ok Cancel

Setting 1-2

In the main menu, touch the "Setting" icon to access the settings list: Language, Display Settings, Power Saving Shutdown, Timing Shutdown, Date and Time, External Sound Switch, Information, Default Wallpaper, Desktop Theme, Volume Limit, Formatting equipment, Factory Setting, Password Settings, etc. Touch to enter the respective function.

Settings Options:

1. Language
 - Select from Simplified Chinese, English, Japanese, German, Spanish, French, Italian, Hebrew, Polish, Portuguese.
 - 🔗 Note: Some custom models (e.g., TS154) support Korean and Russian.
2. Display Settings
 - Brightness: Adjust brightness level from 1-10.
 - Backlight Timer: Set the backlight timer to 10s, 20s, 30s, or Always On.
 - Screen Saver: Choose from None, Digital Clock, or Analog Clock.
 - 🔗 Note: Some custom models (e.g., TS154) support 11 screen saver clock options.
3. Power Saving Shutdown
 - Set the auto-off time from 0-99 minutes.
 - 🔗 Tengen® Reminder: The default system setting is 10 minutes for power saving shutdown.
4. Timing Shutdown
 - Set the shutdown time from 0-99 minutes.
5. Date & Time
 - Slide to set 12/24-hour format.
 - Set time and date.
 - 🔗 Tengen® Reminder: After setting, click the "OK" icon to save and exit.

Mternal Sound Switch
tly for models with external speakers).

Setting 2-2

7. Information
View device information (model, software date, customer service contact number), and storage information.

8. Default Wallpaper
Choose the default screensaver or desktop.

9. Desktop Theme
Select between Plane setting, Semi-monthly lists, or Waterfall Stream.

10. Volume Limit
Set a custom volume limit to protect hearing.
 **Tengsen® Reminder:** Take care of your ears to protect your hearing!

11. Formatting equipment
 All data will be deleted!  Proceed with caution!

12. Factory Setting
Restore the device to its factory settings.

13. Password Settings
(Only for specific models) Set a 6-digit password for device startup.
If forgotten, use the universal unlock code "888888".
 **Note:** Some settings may vary depending on the device model.
Please refer to the actual device for specific options.

Service

Detailed product service contact information and complaint methods.

If you need the manual in PDF format,
please contact e-mail
 tengsen2009@hotmail.com

Record

In the main menu, touch the "Record" icon to enter the recording interface:

1. Return
 Press the "⏮" return button or touch the "—" icon to return to the previous screen.
2. Menu
 Press the "M" menu button or touch the "... " icon to display function options: Recording Library, Recording File Format, Recording Bitrate (MP3 format: 32kpbs, 64kpbs, 128kpbs, 192kpbs; WAV format: 256kpbs, 512kpbs, 768kpbs, 1024kpbs, 1536kpbs), Segment Record

memory space for recording, not the remaining battery life.

Record

- Delete
 - Touch the  folder icon to access the recording file list, select and play a recording. Press the "M" menu button to open the popup and delete the current file.
- Tengsen's Reminder: Please proceed carefully, as once deleted, the file cannot be recovered.
- Recording Format
 - Touch the "WAV" or "MP3"  icon to select the recording format.
- Recording Bitrate
 - Touch the  icon to choose the recording bitrate. For MP3 format, the available bitrates are 32kbps, 64kbps, 128kbps, and 192kbps; for WAV format, the available bitrates are 256kbps, 512kbps, 768kps, 1024kpbs, and 1536kpbs.
- Start Recording
 - Touch the "O" recording icon to start recording with the selected format and bitrate. Touch the icon again to save the recording file.
 - Pause or resume recording, touch the  or  icon or press the  play/pause button.
- Recording Library
 - Touch the  folder icon to access the recording file list and play any recordings.
- Segment Record
 - Set the segment time to "Off", "30 minutes", "60 minutes", "90 minutes", or "120 minutes". The recording will be automatically saved after each segment.
- File Name
 - Recordings are named in the format "RECxxxx-xx-xx-xx-xx-xx-xx.wav/MP3", where "REC" is followed by:
 - 4-digits for the year · 2-digits for the month · 2-digits for the day · 2-digits for the hour · 2-digits for the minute · A sequence number
 - Displayed as "xxxxxx", automatically updated as recording progresses.
- Remaining Recording Time
 - Display "xxxxxx", automatically calculates and shows the remaining recording time based on available memory space (display battery life).
- Tengsen's Reminder: This remaining time refers to the available memory space for recording, not the remaining battery life.

Picture & Wallpaper

Tengen's Reminder: Music playback is not supported in the background while viewing pictures.

In the main menu, touch the "picture" view icon to enter the picture list. Use the "up/down swiager" to scroll and browse files. Touch the corresponding file to view the picture.

While viewing a picture, touch the screen to display the following options:

1. Return
Press the " " return button or touch the "-" icon to return to the previous screen.
2. Delete
Touch the " " trash can icon to delete the current picture file.
3. Pause / Play / Slide show
Touch the " " or " " icon on the screen or press the ">>| |<" play/pause button to pause or play the slideshow.
4. Previous/Next File
Touch the ">" or "<" icons on the screen or press the " " button to switch to the previous or next picture.
5. Screensaver:
Touch the " " screensaver icon to set the current picture as the screensaver.

6. Wallpaper
Touch the " " wallpaper icon to select the current picture as the wallpaper.

● Wallpaper
In the main menu, touch the "Wallpaper" icon to switch between different wallpapers.

09:18

< Tengen's.bmp >

< [Wallpaper Icon] >

[Icons: Wallpaper, Play/Pause, Home]

Safety warning

Following the warning information provided below to prevent accidents such as fire or explosion,

1. The battery (battery pack or combined battery) shall not be exposed to use in an overheated environment, or it will cause safety risks and harm to people. Do not allow your device to physical impact or damage.
2. Don't put the equipment in the back pocket or hang at the waist.
3. Please use manufacturer-approved batteries, chargers, accessories and supplies.
3. Avoid multi-function socket and battery electrode contact with conductive objects, such as metal or liquid.
4. Don't touch the equipment by wet hand, the device has no waterproof function.
5. Don't use it in a liquid environment or during swimming.
6. If any part of the battery is cracked or damaged, or it becomes very hot, please stop using it immediately.
7. Don't power on or use the device when the battery is exposed.

 It may cause explosion to replace the wrong type of battery, please dispose used batteries according to the instructions.

 Do not use headphones at long volume for a long time in order to avoid hearing damage.



Statement of toxic and harmful substances

Parts of player	List of toxic and harmful substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
PCB board	X	O	O	O	O	O
Plastic	O	O	O	O	O	O
Metal	X	O	O	O	O	O
Battery	X	O	O	O	O	O
Else	X	O	O	O	O	O

O: Indicates the content of the toxic and harmful substance is less than the limit of SJ/T11363-2006.

X: Indicates the content of the toxic and harmful substance is more than the limit of SJ/T11363-2006.

Customer Service

30-day money-back guarantee for any reason

For 30 days after the date of purchase, return your undamaged Tengen product and receive a full refund for ANY reason, 18-month warranty for quality-related issues

For 18 months after the date of purchase,

We take care of all quality-related issues with a REPLACEMENT.

Reminder: Be sure to use your product as directed.

Free user support

Not sure how to get your Tengen product to work properly?

Let our world-class, friendly support team for quick solutions.

Contact us

Mon-Fri 9am - 5pm (PST) service message or email

tengens2009@hotmail.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.