



INSTRUCTION MANUAL

8" MANUAL VACUUM SUCTION CUP MODEL NO. MSC-02

265 lbs. STRONG VERTICAL SUCTION | 8" CUP DIAMETER
with MANOMETER GAUGE PRESSURE CONTROL



ANTIVE

www.antivetools.com

Please read carefully the instruction manual before use!



Operation instructions

Step 1.

Prepare the object's surface.

- Ensure the object's surface to be lifted is smooth, clean, and free of water, grease, or any foreign matter.
- Check that the bottom of the suction cup is smooth, clean, and free of debris.
- Ensure the dust-proof sticky pad (white) remains intact and securely attached.



Step 2.

- **Press the plunger repeatedly to pump air.** You can use either one or both hands for this process - one hand can hold the handle while the other presses the plunger for better control.



Step 3.

- **Check the manometer gauge.**
- When the pointer reaches the **green area**, it indicates that the pressure is sufficient and the object can be lifted.



Step 4.

- **Release the valve pressure.**
- Press the release valve to safely release the pressure and detach the tool from the object.



ANTIVE

Operation recommendations

- This product is not designed for climbing activities or use as a safety device. High-altitude operations are strictly prohibited to prevent accidents. It is only suitable for carrying smooth surfaces such as glass, tiles, porcelain, marble, and aluminum plates.
- Keep the suction cup clean.
- Regularly remove dust and debris from the suction cup during use to maintain optimal performance.
- Store in a dry place.
- Store the product in a dry area away from liquids and moisture to prevent damage.
- Clean dust promptly.
- Dust on the suction cup can reduce its effectiveness. Clean the suction cup regularly to ensure proper functionality.
- Follow maintenance procedures.
- For regular maintenance, contact your local dealer or an authorized after-sales service center.
- Do not wash the product.
- The suction cup is not designed to be washed with water. Use a dry or slightly damp cloth for cleaning.

DISCLAIMER

The manufacturer is not responsible for:

- Unauthorized repairs.
- Use of non-original parts.
- Failure to follow instructions.
- Unauthorized modifications.
- Improper use.

Certificate of Warranty

This Certificate is provided on behalf of Antive Enterprise to customers who purchase the '8" MANUAL VACUUM SUCTION CUPS'. The standard warranty covers 2 years for household use, starting from the day of purchase. For tools used in commercial, business, or industrial settings, the warranty is limited to 1 year, due to the higher levels of wear and tear experienced in these environments.

If any manufacturing defects, material issues, or workmanship problems arise within the warranty period, Antive will repair or replace the tool free of charge, as long as it has been used and maintained according to our safety and operating instructions.

Please refer to the user manual for details on proper operation, and feel free to contact us if you require assistance. Be aware that Antive reserves the right to modify the terms and conditions of the warranty policy without prior notice, so we encourage you to review the most current information on our website.

The Antive warranty covers 2 years for household use and 1 year for commercial use. However, the warranty does not cover:

- Any damage caused by misuse, neglect in usage or maintenance, accidents, exposure to extreme temperatures, acids, water, unsuitable storage, excessive impact, or transport damages.
- Any damage caused by improper use or exceeding workforce.
- Defects caused by spare parts, accessories, or components not made by Antive or not authorized by Antive.
- Normal wear and tear.

Certificate of Warranty

- Antive Tools that have been modified, repaired, or attempted to be repaired by anyone other than Antive-authorized service centers, or tools that have been partly or completely disassembled.
- Parts repaired or replaced by an Antive-authorized service center during the warranty period will carry the remaining warranty duration. Warranty repairs do not extend or renew the original warranty period of the tool.

No entity other than Antive has the authority to change, extend, or add to the given warranty terms and conditions.

These warranty terms shall be governed and interpreted in accordance with the laws of the United States, excluding the law and decree on the international sale of goods. Consumers may have additional statutory rights in their own countries, which are not restricted by these warranty terms. The warranty does not cover compensations for downtime, production loss, injuries, or property damage.

SUBMITTING A WARRANTY CLAIM

To submit a warranty repair claim, don't hesitate to contact us by email, phone, or site. (info@antivetools.com, +1 321 300 4061, www.antivetools.com) Tools returned for warranty repair must be accompanied by a valid order ID, full name, and address of shipment.

A warranty claim must be submitted with as short a delay as possible.
A warranty claim must be submitted within the warranty period.

**JUST REGISTER YOUR PRODUCT BY FOLLOWING THE
INSTRUCTIONS INCLUDED ON THE CARD YOU RECEIVED
IN YOUR PACKAGE.
AND DON'T HESITATE TO CONTACT US FOR ANY
SUPPORT OR INQUIRIES.**

ANTIVE

info@antivetools.com


05

CONTACT INFORMATION

 antive_tools  Antive  antive_tools  antive_tools

 www.antivetools.com  info@antivetools.com

 +1 321 300 4061

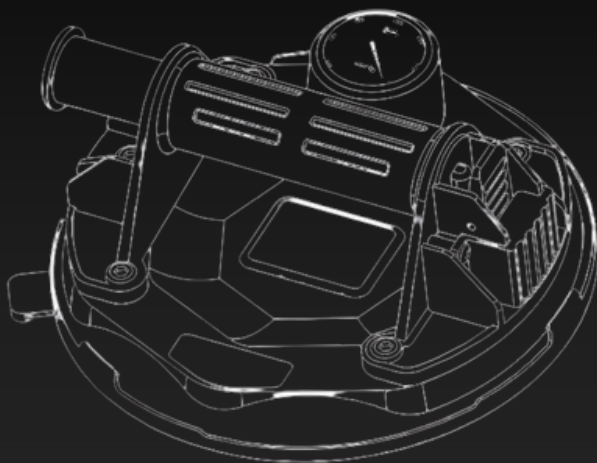

ANTIVE