 


⚡ fuzix

Nova

Rechargeable
Karaoke Speaker

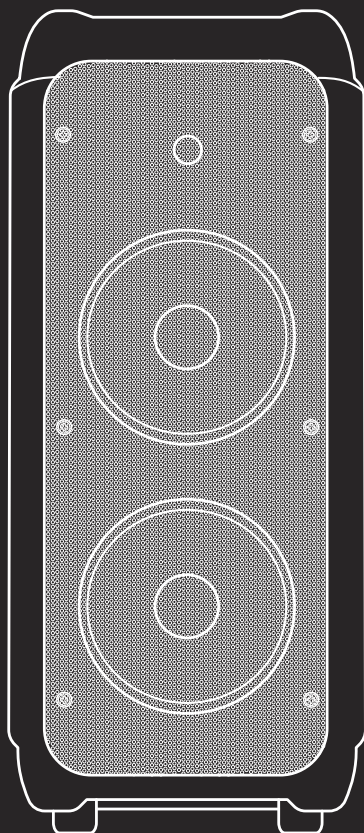

Please read this user manual
carefully before system
connection

Contents

01	Important Safety Measures	3
02	Features	4
03	Connection	4
04	Wireless Instructions	5
05	TWS Connection	5
06	Battery and Charging	6
07	Remote Control	6
08	Control Panel Instructions	7

Thank you

for purchasing our speaker. Please read the manual carefully before operating.

01 Important Safety Measures

Before using this machine, please read all the safety and operating instructions. Please adhere to all the instructions herein, and save this information in a safe place for future use.

 
1 Please ensure the power cord for this unit is out of the path of foot traffic. Do not place heavy objects on the power cord as it will cause damage to the cord. Always firmly grasp the plug and pull the plug from the power supply, never yank the cable in order to pull out the plug. Avoid the use of an extension cable.

2 Ventilation: This unit should be placed in a well ventilated space where it has no less than 10cm ventilation space on either side of it. Do not cover the unit with a cloth or blanket. Do not put it on a bed, sofa, or carpet as this will stifle the ventilation of the unit.

3 Casing Dismantling: DO NOT dismantle the casing. There are no usable parts inside the unit. Make use of a service center in order to have your unit repaired.

4 Should the unit emit any smell or smoke, immediately turn off the power supply. Take the unit to the service center from which you bought it for repairs.

02 Features

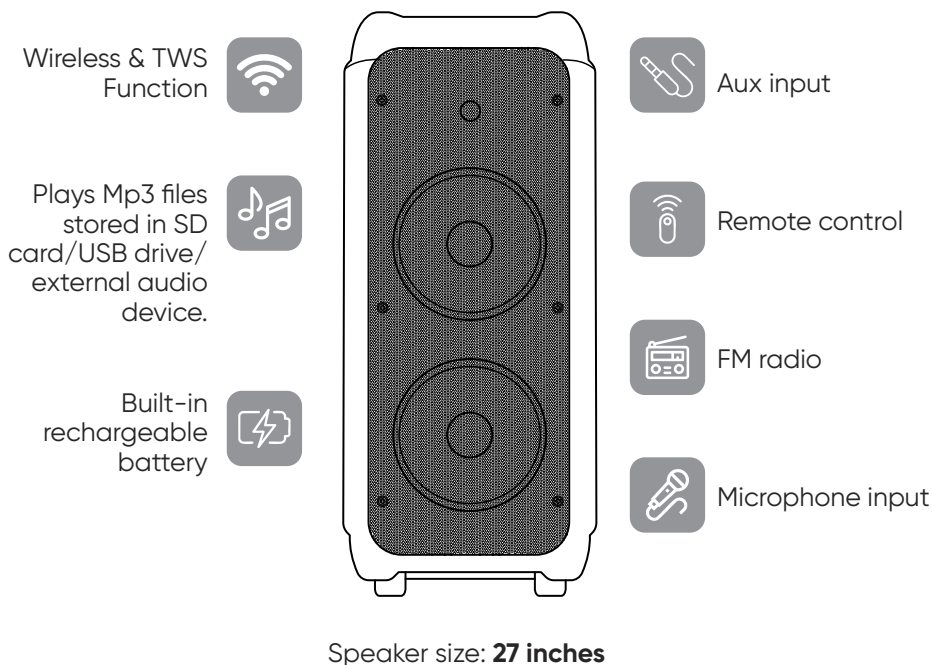

03 Connection

 
This set applies to AC 110V-240V, 50/60Hz

1. AC power: battery can be charged when connected to AC power.
2. Red light on battery is charging, it will change to green once battery complete charge.
3. Internal battery will be charged even device switch off when plugged in to AC power
4. Adjust function keys to your personal audio preference.

04 Wireless Instruction

Change the mode into "BT", the Wireless sign light twinkles, and speaker will give an alarm. Ensure you enable the Wireless function on your Wireless device. Search for Wireless connection until you find device model and pair.

05 TWS Connection

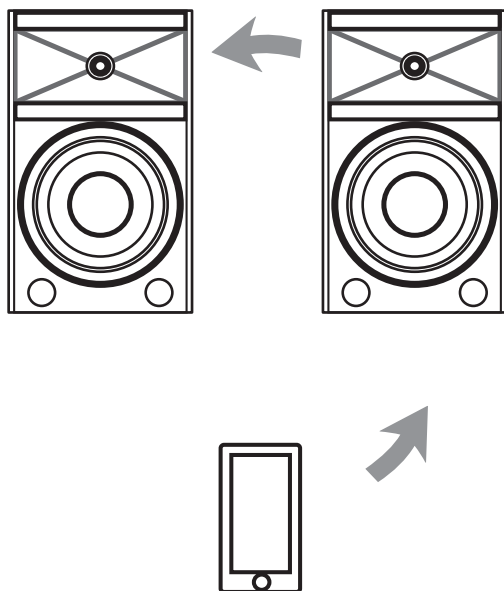

In Wireless mode, press the TWS button and hold it down for three seconds, the primary speaker will sound an alarm and the screen will show "BTST". The secondary speaker switch to Wireless mode it will automatically connect to the primary speaker and the screen will show "BT".

06 Battery and Charging


1. The unit takes approximately 8 hours to fully charge. It will automatically begin charging once the power cord is connected.
2. If the battery power is low may caused sound distortion or stop play, please charge the battery on time.
3. To maximize the battery's lifespan, please charge the battery immediately. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 30 days.
4. To save battery, please power off once stop using.

07 Remote Control



	Standby
	USS/SD/LINE/BT (Audio input)
	Prev/FM CH-
	Play/previous/FM tuner
	Next/FM CH+
	Repeat
	Stop
	Volume up
	Volume down
	Mute
	Equalizer
	Number

 08 Control Panel Instruction

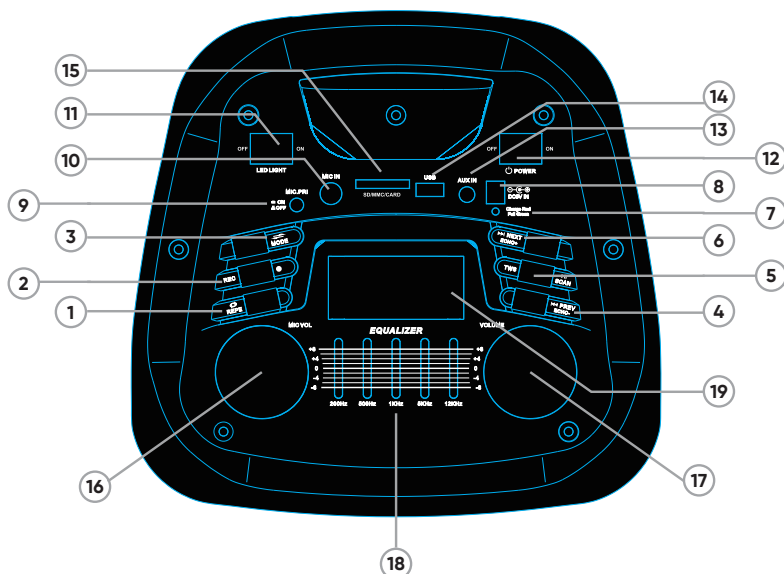

1	REPE:	REPEAT
2	REC	Recording; insert USB/SD card press this button for recording, press again to stop and play recording sound
3	MODE	Mode Select
4	PREV ECHO	Previous Song Echo Adjust
5	SCAN/TWS	Play/Pause/Tws/Fm Station Automatic Search
6	NEXT ECHO	Next Song Echo Adjust
7	CHAR LIGHT	Charging in Red, Full in Green
8	DC9V IN	Dc 9v Charging Input
9	M.PR1	Microphone Priority On/Off Switch

10	MIC.IN	Microphone Input Jack
11	LED LIGHT	On/Off Switch
12	POWER	On/Off Switch
13	AUX	Input
14	USB	USB input
15	SD/MMC CARD	SD/MMC CARD: SD/MMC Card slot
16	MIC.VOL MIC. VOL	Microphone volume increase Microphone volume decrease
17	VOLUME VOLUME	Master volume decrease Master volume increase
18	EQUALIZER	Treble and Bass Adjust
19	DISPLAY SCREEN	

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Customer Support:
info@fuzix.co



www.fuzix.co



[@shopfuzix](https://www.instagram.com/shopfuzix)



[@fuzix](https://www.facebook.com/fuzix)



[fuzix](https://www.youtube.com/fuzix)



[shopfuzix](https://www.spotify.com/shopfuzix)