


REVISED 2017-05-27

PACKAGE CONTENTS


PART	DESCRIPTION	QUANTITY	Stock Part#
AA	Crossbar (Pre-assembled to Fixture Body)	1 pc	913449KIT
BB	Wire Connector	3 pcs	
CC	Mounting Screw (Pre-assembled to Fixture Body)	2 pcs	
DD	Outlet Box Screw	2 pcs	
A	Lock Ball	3 pcs	I823SC
B	Bulb	5 pcs	
C	Bulb Shield (For Halogen Bulb Only)	5 pcs	G13202BS
D	Ceiling Canopy	1 pc	N/A
E	Rod	1 pc	
F	Fixture Assembly	1 pc	
G	Crystal D	1 pc	G12731CR
H	Crystal C	4 pcs	G12730CR
I	Crystal A	37 pcs	G12728CR
J	Crystal B	10 pcs	G12729CR
K	Shade	1 pc	M13299SH

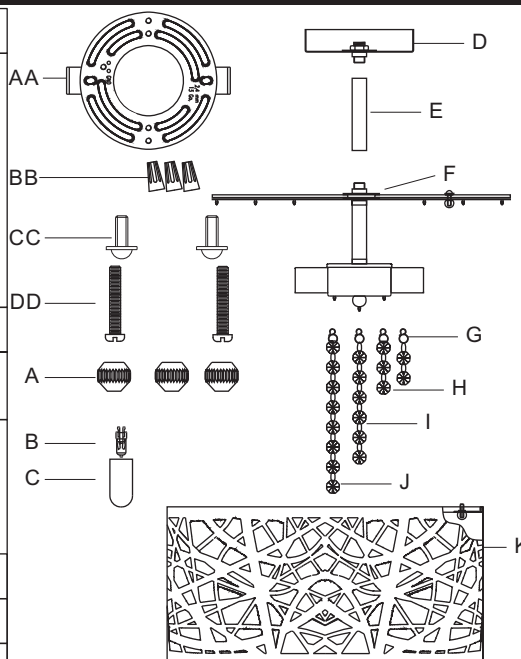

Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-645-3184, Monday - Friday, 7:00 a.m. -4:00 p.m., CST.

HARDWARE CONTENTS Note: Hardware not shown in actual size.

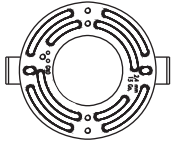

AA Crossbar
x 1



BB Wire Connector
x 3



CC Mounting Screw
x 2



DD Outlet Box Screw
x 2

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING:

- Turn off electricity at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock

CAUTION:

- All electrical connections must be in agreement with local codes, ordinances or the National Electric Code (NEC). Contact your municipal building department to learn about your local codes, permits and/or inspections.
- Risk of fire – most dwellings built before 1985 have supply wire rated for 140°F/60°C. Consult a qualified electrician before installation.
- Do not connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. If you are not sure your lighting system has a grounding means, do not attempt to install this fixture. Contact a qualified, licensed electrician for information with regards to proper grounding methods as required by the local electrical code in your area.
- If a dimmer control switch is used with this fixture, obtain professional advice to determine the correct type and electrical rating required.

PREPARATION

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts


Bulb Recommended: (5) 40W Clear G9 Halogen Bulbs, Alternate (5) LED bulb.

Tools Required for Assembly (not included): Flathead Screwdriver, Phillips Screwdriver, Electrical Tape, Safety Goggles, Ladder.

ASSEMBLY INSTRUCTIONS

STEP 1:


- Pass supply wires and ground wire through the Rod (E) and the Ceiling Canopy (D).
- Thread Rod (E) and the Ceiling Canopy (D) to the fixture.
- Hand tighten until snug.

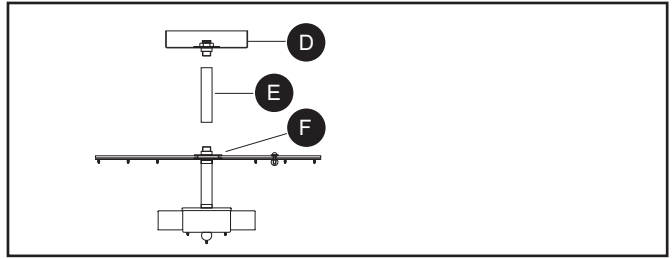

STEP 2:

- Remove the crossbar (AA) from the ceiling canopy on the fixture body.
- Secure the crossbar to the outlet box (not included) with outlet box screws (DD).
- Tighten until snug.


Note: The tab on the crossbar should protrude outward.

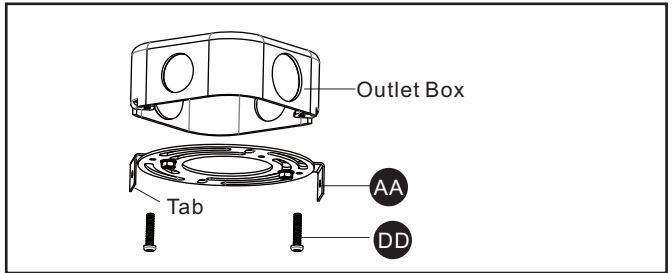

STEP 3:


* **Use Wire Connectors (supplied) to connect the wires.**

- Ground Wire:
 - Wrap supply **ground wire** around **green ground screw** on mounting bracket, no less than 2 inches from the end of the wire. Tighten **ground screw**.
 - Connect fixture **ground wire** to **supply ground wire** with wire connector.
- Supply Wire:
 - Connect the **supply white wire** to the **white fixture supply wire** with wire connector.
 - Connect the **supply black (or red) wire** to the **black fixture supply wire** with wire connector.
 - Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the outlet box.

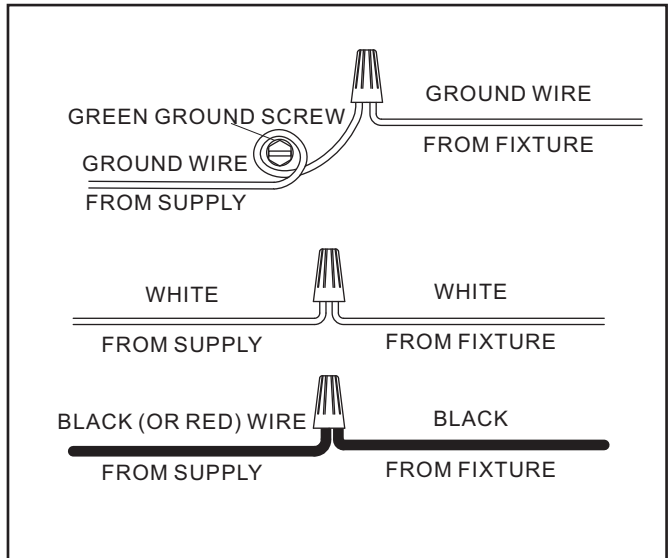

STEP 4:


- Fit excess wire and excess cable inside the outlet box and inside of the fixture canopy.
- Line up the holes on the Ceiling Canopy (D) and the mounting holes on the Crossbar (AA).
- Secure with the Mounting Screws (CC). Tighten until snug.

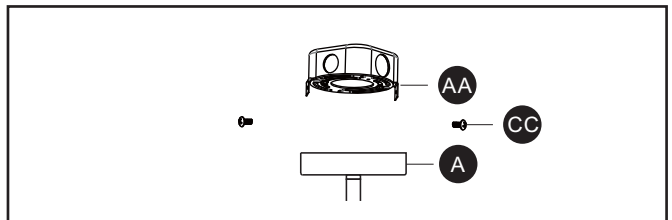

STEP 5:

- Insert bulbs (B) into fixture sockets.
- Cover with bulb shields (C) only if using halogen bulbs. Hand tighten-until snug.**


IMPORTANT: Do not touch the bulb with bare hands, as oil from your skin can damage the bulb; use a soft cloth or gloves.

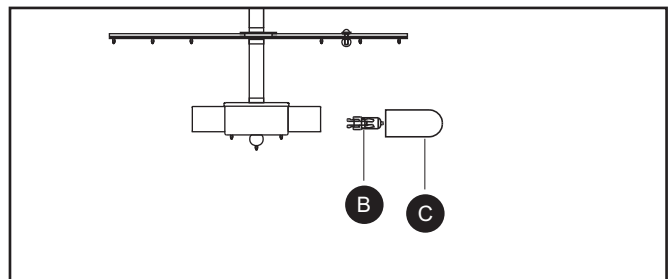

ASSEMBLY INSTRUCTIONS

STEP 6:

- a. Attach crystals (G) to the loops at location D.
- b. Attach crystals (H) to the loops at location C.
- c. Attach crystals (J) to the loops at location B.
- d. Attach crystals (I) to the loops at location A.

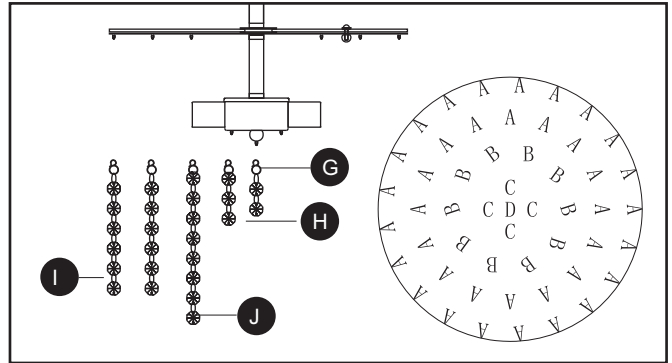


STEP 7:

- a. Attach Shade (K) to Fixture Assembly (F) using Lock balls (A).
- b. Hand tighten until snug.

Note: To prevent fingerprints and scratches on the shade, put on gloves before installing the shade.

Your installation is now complete. Restore electricity and retain this sheet for future reference.

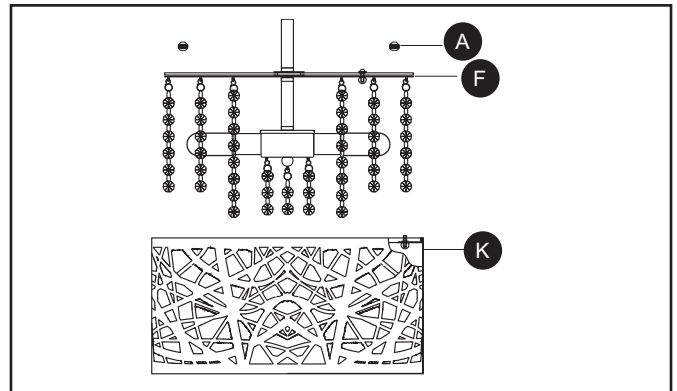

CARE AND MAINTENANCE

- To clean, turn off and wipe with a damp, non-abrasive cloth.

TROUBLESHOOTING

1) The light does not come on at all:

- a) Make sure the wall switch and circuit breaker are on.
- b) Make sure the wiring is correct.

2) Fuse blows or circuit trips when light is turned on.

- a) Check for crossed wires. Ensure wiring is correct.

If unable to fix any of the above issues, please consult a certified electrician.

FIVE-YEAR LIMITED WARRANTY: If during normal use, this PATRIOT LIGHTING® light breaks or fails due to a defect in material or workmanship within five (5) years from the date of original purchase, simply bring this light with the original sales receipt back to your nearest MENARDS® retail store. At its discretion, PATRIOT LIGHTING® agrees to have the light or any defective part(s) repaired or replaced with the same or similar PATRIOT LIGHTING® product or part free of charge, within the stated warranty period, when returned by the original purchaser with the original sales receipt. This warranty; (1) excludes expendable parts; (2) shall be void if this tool is used for commercial and/or retail purposes; and (3) does not cover any losses, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state.



Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-645-3184, Monday - Friday, 7:00 a.m. -4:00 p.m., CST.