

## User Guide

Thank you for purchasing this Samsung product.  
To receive more complete service, please register your  
product at

[www.samsung.com](http://www.samsung.com)

Model \_\_\_\_\_ Serial No. \_\_\_\_\_

To directly go to the page that provides instructions on  
how to use the manual for visually impaired users, select  
the Menu Learning Screen link below.

"Menu Learning Screen" Link

# Contents

## Guide

### Connections

- 7 Connection Guide
- 9 Connecting an Antenna (Aerial)
- 10 Connecting to the network
- 14 Pairing Wireless One Connect
- 17 Displaying your mobile device screen on the TV
- 19 Connecting to a Network via a Mobile Dongle (For India Only)
- 20 Connection Cables for External Devices
- 22 ADB (Auto Data Backup) functions (For India Only)
- 23 Switching between external devices connected to the TV
- 27 Connection Notes
- 30 Using Multi Control
- 30 Using Quick Share
- 31 Using Storage Share
- 31 Using Link to Galaxy Watch

### Remote Control and Peripherals

- 32 About the Samsung Smart Remote (Remote Control)
- 35 About the Standard Remote Control
- 36 Connecting the Samsung Smart Remote to the TV
- 36 Using a mobile remote control
- 37 Controlling External Devices with a Samsung Remote Control - Using the Universal remote setup
- 37 Learn how to use Samsung Smart Remote
- 37 Learn how to use Game Controller
- 38 Using Anynet+ (HDMI-CEC)
- 39 Controlling the TV with a Keyboard, Mouse or Gamepad
- 43 Entering Text using the On-Screen Virtual Keyboard

### Smart Features

- 45 Using Smart Hub
- 50 Using Ambient Mode

- 56 About the Art screen
- 64 About the Generative Wallpaper
- 66 About the Samsung Daily+ screen
- 68 Using Samsung Gaming Hub
- 70 About the For You / Discover screen
- 73 About the Live screen
- 74 About the Apps screen
- 79 About the Settings screen
- 84 Using a Samsung account
- 86 Using Workspace
- 92 Using the User Guide
- 94 Using the Internet
- 95 Using SmartThings
- 100 Using the Samsung Smart Upgrade (For India Only)
- 101 Playing pictures/video/music
- 108 Using Multi View
- 110 Using Auracast
- 112 Using Vision AI Companion

### Advanced Features

- 114 Using Football Mode
- 116 Using AI Mode
- 119 Using Voice Assistants
- 120 Using Bixby
- 126 Using Game Mode
- 129 Using the Game Bar
- 134 Using Now brief
- 137 Configuring Start Screen

### TV Viewing and Recording

- 139 Using the Guide
- 142 Recording Programmes
- 145 Setting Up Schedule Viewing
- 147 Using Timeshift

- 148 Buttons and functions available while recording a programme or Timeshift
- 150 Using the Channel List
- 152 Using the channel edit function
- 153 Using a Personal Favourites List
- 154 TV-Viewing Support Functions

## Picture and Sound

- 162 Adjusting the Picture Quality
- 168 Setting the Viewing Environment for External Devices
- 170 Configuring a Sound Mode and Expert Settings
- 172 Using the Sound Support Functions

## System and Support

- 176 Using the Time Functions and the Timers
- 178 Using the Power and Energy Saving Functions
- 180 Updating the TV's Software
- 182 Using the Parental Settings function
- 183 Audio and Video Functions for the Visually or Hearing Impaired
- 190 Using Other Functions
- 195 HbbTV
- 196 Using a TV Viewing Card ("CI or CI+ Card") (For India Only)
- 199 Teletext Feature

## Precautions and Notes

- 203 Before Using the Recording and Timeshift Functions
- 205 Supported broadcasting audio options
- 206 Read Before Using Apps
- 207 Read Before Using the Internet Function
- 209 Read Before Playing Photo, Video or Music Files
- 212 Supported video codecs (2026 models)
- 227 Supported video codecs (2025 models)
- 240 Supported video codecs (2023/2024 models)
- 257 Supported Refresh Rates
- 259 Read After Installing the TV
- 260 Supported Resolutions for UHD Input Signals

- 261 Resolutions for Input Signals supported by 8K models
- 262 Supported Resolutions for FreeSync (VRR)
- 264 Read Before Connecting a Computer (Supported Resolutions)
- 267 Supported Resolutions for Video Signals
- 269 Read Before Using Bluetooth Devices
- 270 Parental Rating (For Thailand only)
- 271 Licences & Other Information

# Troubleshooting

## Picture Issues

- 272 The screen is flashing or has become dark
- 273 The picture is not bright, or the picture colours do not look clear
- 274 The picture colours are black and white or do not look the way they should look
- 275 The TV automatically turns off by itself
- 275 TV cannot be turned off.
- 275 Unable to power on
- 276 The TV remains on or does not turn on automatically.
- 276 Unable to find a Channel
- 277 The TV image does not look as good as it did in the store.
- 277 Displayed video looks blurry
- 277 The picture is distorted.
- 278 There is a dotted line on the edge of the screen.
- 278 The picture won't display in full screen.
- 278 The Subtitle function in the TV menu is deactivated.
- 278 Subtitles appear on the TV screen.
- 278 The HDR of the connected external device turns off.

## Sound and Noise Issues

- 279 How can I connect an audio device to the TV?
- 279 There is no sound or the sound is too low at maximum volume.
- 279 The picture is good but there is no sound.
- 280 HDMI (eARC/ARC) is connected, and there is no sound.
- 280 The speakers are making an odd sound.
- 281 The sound is interrupted.
- 281 Whenever a function is used on the TV or the channel is changed, the TV voices the activity. The TV explains in voice-over the video scenes displayed on the screen.
- 281 The TV audio is not being played through the Soundbar or A/V receiver.
- 282 The sound is not heard clearly.
- 282 The volume of the external device cannot be adjusted.
- 282 I want to turn the TV and audio device off and on at the same time.

## Channel and Broadcast Issues

- 283 "Weak or No Signal" displayed in TV mode or cannot find channel.
- 283 The TV is not receiving all channels.
- 283 The subtitles are not provided on a digital channel.
- 283 Broadcasting is deactivated.

## External Device Connectivity Issues

- 284 The "Mode Not Supported" message appears.
- 284 The video is OK but there is no audio.
- 284 I want to connect to a PC and mobile device via screen mirroring.
- 285 No screen appears when connecting the TV to an external device.
- 285 I want to connect to a Bluetooth speaker.
- 285 The PC screen does not appear or it flickers.

## Network Issues

- 286 Wireless network connection failed. Unable to connect to a wireless access point. Unable to connect to the network.
- 286 Wired network connection failed.
- 286 Connected to a local network, but not to the Internet.

## Wireless One Connect Issues

- 287 Wireless One Connect cannot be found.
- 288 A message appears saying "Wireless One Connect is disconnected. when viewing content provided by an external input source (e.g., a terrestrial broadcast service, set-top box or game console).
- 288 A message appears saying "The signal strength is low. Adjust the location of your Wireless One Connect." when viewing content provided by an external input source (e.g., a terrestrial broadcast service, set-top box or game console).
- 289 The device does not automatically connect after position adjustment.
- 289 A message appears saying "Please use the enclosed Wireless One Connect power adapter to ensure proper functionality."

## Anynet+ (HDMI-CEC) Issues

- 290 What is Anynet+?
- 290 Anynet+ does not work. The connected device is not displayed.
- 290 I want to start Anynet+. I also want the connected devices to turn on when the TV is turned on.

291 I want to exit Anynet+. It is inconvenient to turn on other devices because the TV also turns on. It is inconvenient because the connected devices (e.g. set-top box) turn off together.

291 The message "Connecting to Anynet+ device..." or "Disconnecting from Anynet+ device" appears on the screen.

291 The Anynet+ device won't play.

## Remote Control Issues

292 The remote control does not work.

293 The mobile remote control does not work.

293 External devices cannot be operated with the TV remote control.

## Recording Issues

294 The Timeshift or recording function cannot be used.

294 Cannot record videos received from an external device or Samsung TV Plus.

294 The "Format Device" message appears when the Timeshift or recording function is used.

294 The recorded files on the TV are not played back on a PC.

## Apps

295 I cannot find the app I want.

295 I launched an app, but it's in a different language. How can I change the language?

295 The app does not work properly. Its image quality is poor.

295 The Smart Hub Home Screen keeps appearing whenever you turn on the TV.

## Media Files

296 Some files are interrupted during playback.

296 Some files can't be played.

## Voice Assistant Issues

297 The microphone is off.

297 The voice commands do not work well.

297 Bixby/Alexa answers although I did not call it.

298 I spoke "Hi, Bixby/Alexa" but Bixby/Alexa does not answer.

298 Voice recognition does not work with the Samsung Smart Remote unlike other features. There is no response even if the Voice Assistant button is pressed.

298 During voice recognition, the heavy load message appears and the function does not work.

298 I want to see weather information of the desired area.

## Other issues

299 The TV is hot.

299 The TV smells like plastic.

299 The settings are lost after 5 minutes or every time the TV is turned off.

299 The TV is tilted to the side.

299 The stand is wobbly or crooked.

300 I want to know how to attach and remove the TV stand.

300 A POP (TV's internal banner ad) appears on the screen.

300 The screen is off, but I hear noise.

300 The TV is making a popping noise.

301 The TV is making a humming noise.

301 The TV narrates the screen events in voice-over.

## Diagnosing TV operational issues

302 Self Diagnosis

303 Cannot select Broadcast Signal in Self Diagnosis.

304 Reset Smart Hub

304 Reset picture

304 Reset sound

## Getting Support

305 Getting support through Remote Management

305 Finding the contact information for service

305 Requesting service

# Accessibility Guidance

## Menu Learning Screen

306 Using the Remote control

308 Using the Accessibility menu

314 Using the TV with Voice Guide on

316 Using the guide

319 Using Schedule Viewing

320 Using the Channel List

322 Recording

325 Using Smart Hub

328 Launching the User Guide

329 Using Bixby

# Guide

Learn how to use various features.

## Connections

You can watch live broadcasts by connecting an antenna cable to your TV and can get access to the network by using a LAN cable or wireless access point. Using various connectors, you can also connect external devices.

### Connection Guide

You can view detailed information about external devices that can be connected to the TV.

 > left directional button >  **Connected Devices** > **Connection Guide** [Try Now](#)


It shows you how to connect various external devices such as video devices, game consoles and PCs using pictures. If you select the connection method and an external device, the connection details appear.

- [Wireless One Connect: Wireless One Connect](#)
- [Audio Device: HDMI \(eARC/ARC\), Optical/Audio Out, USB, Bluetooth, Wi-Fi](#)  
 This function may not be supported depending on the model or geographical area.
- [Video Device: HDMI](#)
- [Smartphone: Screen Sharing \(Smart View\), Screen Sharing \(Tap View\), Samsung DeX, SmartThings, Camera Share, Apple AirPlay](#)
- [PC: HDMI, Screen Sharing \(Wireless\), Easy Connection to Screen, Apple AirPlay](#)
- [Input Device: Remote Control, USB Keyboard, USB Mouse, USB Gamepad, USB Camera, Bluetooth Device](#)
- [Game Console: HDMI](#)
- [External Storage: USB Flash Drive, Hard Disk Drive \(HDD\)](#)

 Using [HDMI Troubleshooting](#), you can check the connection to HDMI cable and external devices (takes approximately 2 minutes).

 Some functions may not be supported depending on the model or geographical area.

 The connection method and available external devices may differ depending on the model.


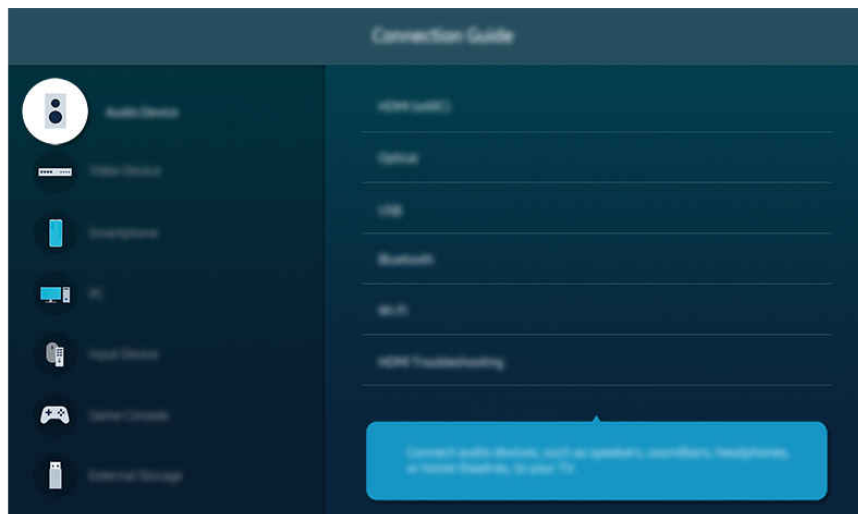


 The image on your TV may differ from the image above depending on the model and geographical area.

## Connecting an Antenna (Aerial)

You can connect an antenna cable to your TV.

- ✎ An antenna connection is not necessary if you connect a cable box or satellite box.
  - Do not use excessive force when connecting the antenna cable; excessive force may cause deformation of the port.
  - To transport the product, first remove the antenna cable to prevent damage to the port.
- ✎ The port on your TV may differ from the following figure depending on the product model and region.

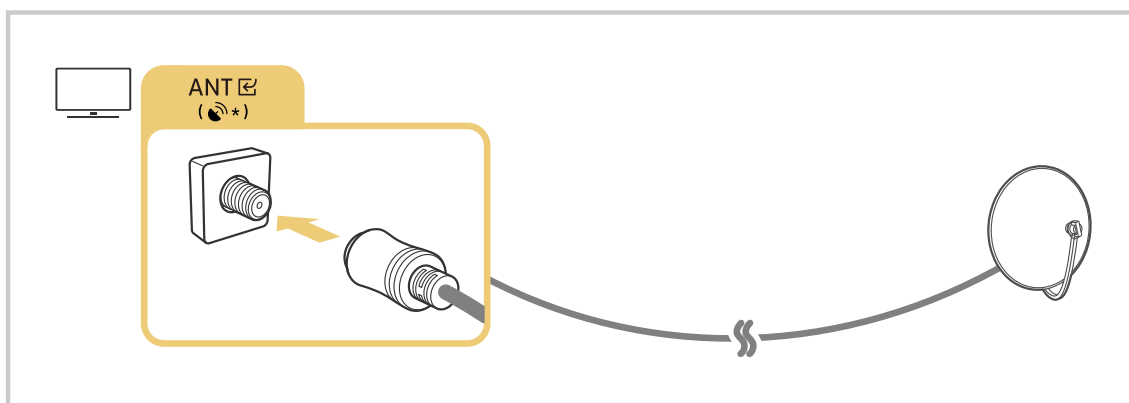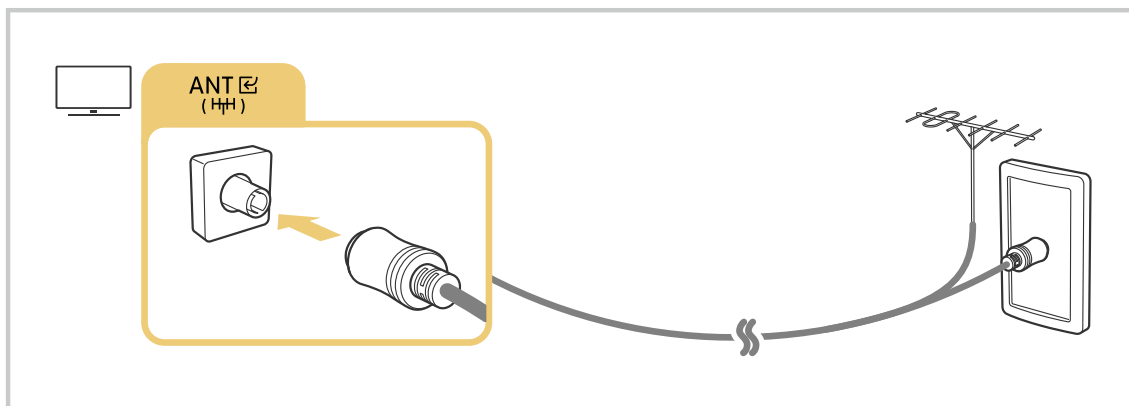

- ✎ A connection method may differ depending on the model or geographical area.

## Connecting to the network

You can get access to the network through your TV.


 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Network](#) > [Network Settings](#) [Try Now](#)

Configure network settings to connect to an available network.

### Establishing a wired network connection

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Network](#) > [Network Settings](#) > [Wired](#)

If you connect a LAN cable, the TV automatically accesses the network.

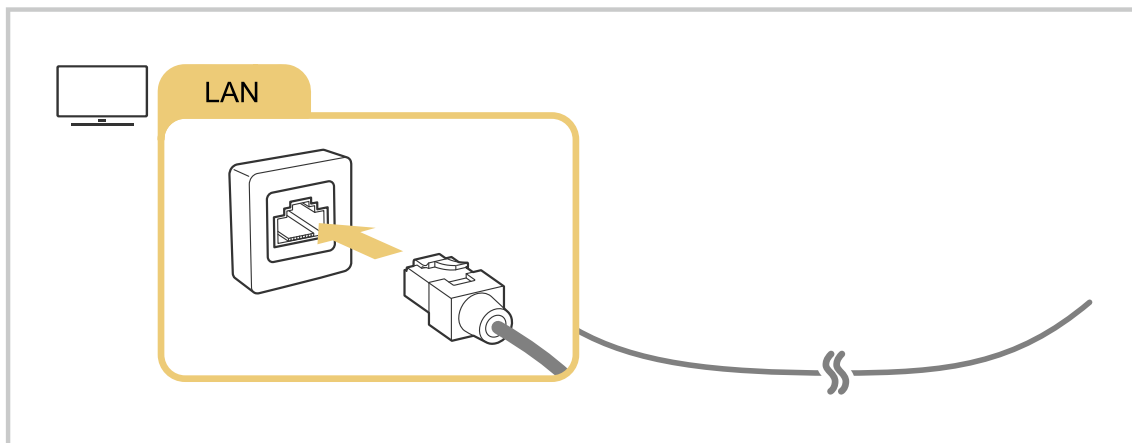



-  If the TV does not automatically connect to the network, refer to "[Wired network connection failed.](#)" in "Troubleshooting".
-  To connect a LAN cable, use a CAT 7 (\*STP type) cable for the connection. (100/10 Mbps)
  - \* Shielded Twisted Pair
-  The TV will not be able to connect to the network if your network speed is below 10 Mbps.
-  This function may not be supported depending on the model.
-  Wired networks are not supported by some models.

## Establishing a wireless network connection

🏠 > left directional button > ⚙️ [Settings](#) > [All Settings](#) > [Connections](#) > [Network](#) > [Network Settings](#) > [Wireless](#)

Make sure that you have the wireless access point's name (SSID) and password settings before attempting to connect. The network name (SSID) and security key are available on the wireless access point's configuration screen. See the wireless access point's user manual for more information.

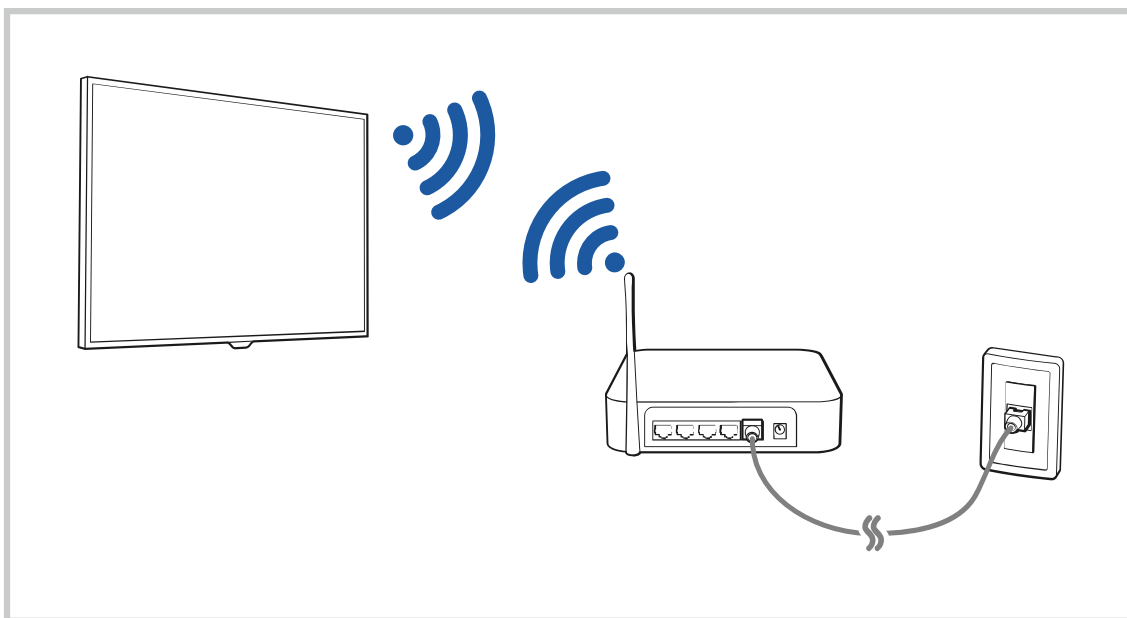

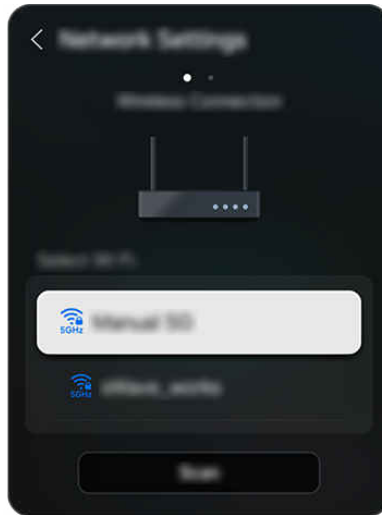

-  The image on your TV may differ from the image above depending on the model and geographical area.
-  If no wireless access point is found, select [Add Network](#) at the bottom of the list and enter the network name (SSID).
-  If your wireless access point has a WPS or PBC button, select [Use WPS](#) at the bottom of the list, and then push the WPS or PBC button on your access point within 2 minutes. The TV will connect automatically.
-  To view or delete previously connected network names (SSIDs), move the focus to [Manage](#), and then press the Select button.
-  To disconnect Wi-Fi, select [Disconnect](#) in  > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Network](#) > [Network Status](#). [Try Now](#)
-  5 GHz or 6 GHz may not be supported depending on the model.

## Checking the network connection status

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Network](#) > [Network Status](#) [Try Now](#)

View the current network status.

## Resetting Your Network

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Network](#) > [Reset Network](#) [Try Now](#)

Restore the network settings to the factory default.

## Turning on the TV with a mobile device

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Network](#) > [Expert Settings](#) > [Power On with Mobile](#) [Try Now](#)

You can turn on the TV using a mobile device connected to the same network as the TV.

 This function is available with a mobile device connected to the TV through the SmartThings app or the Apple AirPlay function.

Apple AirPlay may not be supported depending on the model or geographical area.

## Connecting an IP control device to the TV

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Network](#) > [Expert Settings](#) > [IP Remote](#) [Try Now](#)

You can connect an IP control device to the TV remotely to manage your IP device.

 To use this function, [Power On with Mobile](#) must be turned on.

 Turning this feature on may allow other IP control devices to control your TV. We recommend turning this feature on only if an authorised third-party custom controller is installed and configured specifically for a Samsung TV and if your Wi-Fi network is password protected.

 This function may not be supported depending on the model or geographical area.

## Allowing to connect a wireless network

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Network](#) > [Expert Settings](#) > [Wi-Fi](#) [Try Now](#)

You can enable the connection to Wi-Fi.

 To connect a wireless network, the function must be active.

## Changing the name of the TV

 > left directional button >  [Settings](#) > [All Settings](#) > [Support](#) > [About The TV](#) > [Edit Name](#) [Try Now](#)

You can change the name of the TV on the network.

# Pairing Wireless One Connect

Connect the Wireless One Connect to the TV.


 > left directional button >  **Settings** > **All Settings** > **Connections** > **Wireless One Connect**  
> **Set up Wireless One Connect**

Available Wireless One Connect is searched for and connected.


-  If searching does not proceed, move close to the TV and select **Search** again. Searching for available Wireless One Connect is performed again.
-  If you need to check the OC Name during the connection step, turn over the Wireless One Connect and view the label on the bottom.
-  If you press and hold the PAIR button on the Wireless One Connect for 3 seconds, the device enters pairing mode and can connect to the TV.

## Restrictions when using Wireless One Connect

-  This function may not be supported depending on the model or geographical area.
-  Use the type-C power adapter and cable supplied for exclusive use with Wireless One Connect.
  - The device may not work properly if used with components other than those that came with the device.

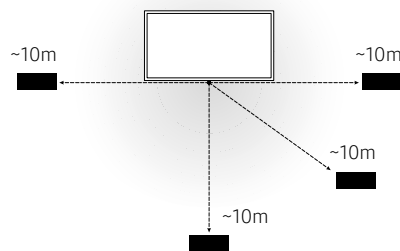

-  Install Wireless One Connect within 10 m of the screen.
  - The effective range may differ, depending on the wireless environment conditions.

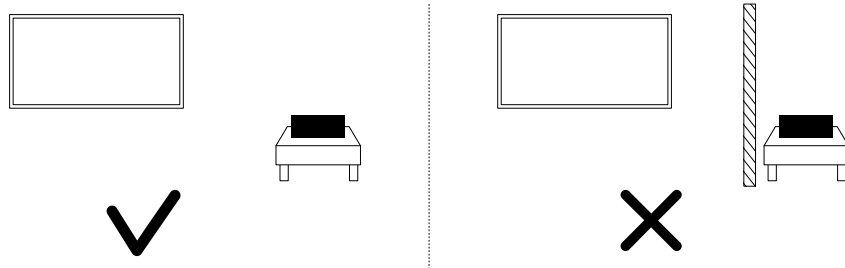

-  Install Wireless One Connect in a location free of obstructions (e.g., concrete walls, metal furniture), which could affect the performance of the wireless signal.
-  Malfunction (e.g., choppy video or audio) may occur, depending on the wireless transmission quality and installation distance.
-  The supplied Wireless One Connect only works with screens of the model that came with it.
-  Connect the USB camera to the USB-C port on the back of the screen device. Do not connect it to the Wireless One Connect.

## Configuring Wireless One Connect

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Wireless One Connect](#)

Configure Wireless One Connect settings.

 This function may not be supported depending on the model or geographical area.

- [Wireless One Connect Status](#)

Manage wireless connections between Wireless One Connect and TV.

Check the connection of the Wireless One Connect, or [Unpair](#) the connected Wireless One Connect. ( > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Wireless One Connect](#) > [Wireless One Connect Status](#) > [Unpair](#))

 If the connection disconnects, refer to the "[Wireless One Connect cannot be found.](#)" section under Troubleshooting.

- [Set up Wireless One Connect](#)

Connect Wireless One Connect to TV.

- [LED Indication](#)

Check the LED on Wireless One Connect for connection and operation status. If you turn off this feature, the LED Indication turns off.

- [Low Signal Check](#)

Get notified when the signal strength between TV and the Wireless One Connect is weak. If you turn off this feature, signal status notifications are not provided.

- [Power Adapter Check](#)

Transmits an alert if the connected power adapter is not the dedicated adapter for Wireless One Connect. If you turn off this feature, alerts are not transmitted.

# Displaying your mobile device screen on the TV

You can watch the screen of your mobile device on the TV screen through Smart View, Apple AirPlay or Tap View.

When you start screen sharing with a mobile device ([Smart View](#) / [Apple AirPlay](#) / [Tap View](#)), the TV screen switches to the [Multi View](#) or mobile device's screen. Watch multiple contents at the same time with the [Multi View](#) screen.

 This function may not be supported depending on the model.

 For more information, refer to "[Using Multi View](#)".

## Using Screen Sharing (Smart View)

For information on how to share the screen with your mobile device, refer to  > left directional button >  [Connected Devices](#) > [Connection Guide](#) > [Smartphone](#) > [Screen Sharing \(Smart View\)](#). [Try Now](#)

- To turn off Screen Sharing (Smart View), disconnect the mobile device or press the  button on the remote control.
- Using the Smart View menu on your mobile device, you can change the settings such as aspect ratio.

## Using Apple AirPlay

Use AirPlay if you are an iPhone or iPad user. For more information, refer to  > left directional button >  [Connected Devices](#) > [Connection Guide](#) > [Smartphone](#) > [Apple AirPlay](#). [Try Now](#)

 This function may not be supported depending on the model or geographical area.

 To use [Apple AirPlay](#), make sure  > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Apple AirPlay Settings](#) is enabled.

## Using Screen Sharing (Tap View)

 This function may not be supported depending on the model.

Tap your mobile device on the TV, you can watch the **Multi View** or mobile device's screen through the TV screen. When you tap a mobile device on your TV while running a music app on your mobile device, the TV screen switches to the **Music Wall** screen.

1. Enable **Tap View, Tap Sound** on your mobile device.

 For more information about configuration, refer to "Enabling Tap View".

2. Turn on the screen of your mobile device.
3. Tap your mobile device on the TV. The TV screen switches to **Multi View, Music Wall** or mobile device's screen.

 When you perform Tap View while in **Ambient** mode or **Art** mode, only the mobile device's screen appears on the TV.

4. Watch the **Multi View, Music Wall** or mobile device's screen on the TV screen.

 This function may not be supported depending on the model.

 This function is available in Samsung mobile devices with Android 8.1 or higher.

 **Music Wall** screen is a function that allows you to enjoy music along with visual video effects that change according to the genre and beat of the music.

 The displayed TV screen may differ depending on the model.

 This function enables Screen/Sound Mirroring by detecting vibrations generated when you tap the mobile device on the TV.

 Be sure to tap away from the TV screen and bezel corners. It may be scratched or broken to the TV or mobile device screen.

 We recommend using your mobile device with the cover in place and lightly tap it on any external edge of the TV.

## Enabling Tap View

Enable Tap View in the SmartThings app.

 This function may not be supported depending on the model.

 Depending on the SmartThings app version, you may need to register the TV with your mobile device.

1. Launch the SmartThings app on your mobile device.
2. Select Settings (≡ > ⚙) in SmartThings app on your mobile device.
3. Set **Tap View, Tap Sound** to on.


 Upon connection for the first time, select **Allow** on a pop-up window of the TV.

## Connecting to a Network via a Mobile Dongle (For India Only)

Make network connection by connecting a mobile dongle to the TV.

You can make the TV to connect to a network via a mobile device by connecting a mobile dongle to the TV. Connect the mobile dongle to the USB port that are marked as Dongle in the TV.

-  This function is not available on certain models in specific geographical areas.
-  When you use a large mobile dongle(Data Card), USB devices may not work properly due to interferences among the USB ports, or the wireless network may not work properly due to interferences from the peripherals and surroundings. In this case, use a USB extension cable to connect a large mobile dongle to a USB port.
-  When using the optical cable or 3G dongle, interference may occur due to the large size of the dongle.
-  **Channel-Bound Apps** is not available when you set up mobile network.
-  If you have any problems using online services, please contact your Internet service provider.
-  To use a mobile dongle, connect the dongle to the USB (5V 0.5A) port. (For the CU8000 model, connect the dongle to the 5V 1A port.)


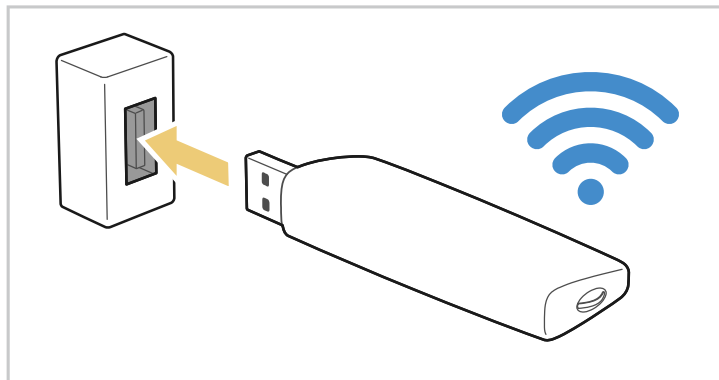


The mobile service providers and their devices that support this function are as follows:

- Airtel (Model No: E3276s LTE, E1731, E303C, E303U, E3131B, E3121B, E8221, E8231, E3276 LTE)
- Idea, Vodafone

## Connection Cables for External Devices

You can view detailed information about the connection cables for external devices that can be connected to the TV.
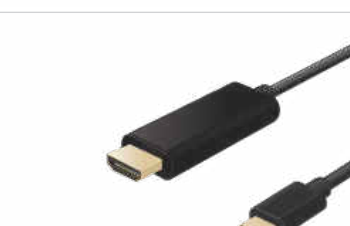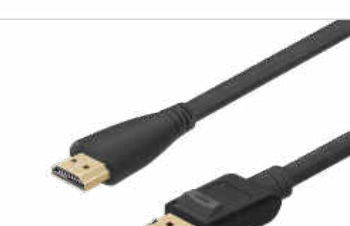
| Cable name               | Image                                                                               | Description                                                                                                                                                                                                                            |
|--------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HDMI to HDMI             |    | Each cable simultaneously transmits digital video and audio signals from an external device to the HDMI port on the TV.<br><br>Cables are divided into various types according to the types of input/output ports on external devices. |
| HDMI to MINI HDMI        |    |                                                                                                                                                                                                                                        |
| HDMI to Micro HDMI       |   |                                                                                                                                                                                                                                        |
| HDMI to USB Type-C       |  |                                                                                                                                                                                                                                        |
| HDMI to DisplayPort      |  |                                                                                                                                                                                                                                        |
| Mini DisplayPort to HDMI |  |                                                                                                                                                                                                                                        |

| Cable name  | Image                                                                               | Description                                                                                                                                                                                                                       |
|-------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DVI to HDMI |    | DVI to HDMI cables can transmit only digital video signals and not audio signals. We recommend that you use HDMI to HDMI cables.                                                                                                  |
| Optical     |    | Optical cables are used to transmit audio signals to external speakers with low signal loss.<br>Optical cables can't transmit video signals.                                                                                      |
| Component   |    | Component cables transmit analogue signals.<br>The video signal is separated and transmitted to the red, green and blue terminals to provide HD (1080i) pictures. The audio signal is transmitted to the red and white terminals. |
| Composite   |  | Composite cables transmit analogue signals.<br>The video signal is transmitted to the yellow terminal and the audio signal is transmitted to the red and white terminals.                                                         |

 Available connection cables may differ depending on the model or geographical area.

## ADB (Auto Data Backup) functions (For India Only)

 This function may not be supported depending on the model or geographical area.

Your mobile device comes close to the TV, the ADB (Auto Data Backup) feature backs up your mobile data such as images and videos into a pre-configured specific folder on a USB storage device or an external hard disk drive connected to the TV. You can also transfer files from the ADB (Auto Data Backup) folder to a Samsung mobile device over Wi-Fi Direct.

- Transferring data from a mobile device to the TV

Your mobile device comes close to the TV, images and videos are copied from your mobile device to a USB storage device or an external hard disk drive connected to the TV.

- Transferring data from the TV to a mobile device

You can select and transfer files from the ADB (Auto Data Backup) folder on the TV to a Samsung mobile device.

### How to Use ADB (Auto Data Backup)

#### 1 ADB (Auto Data Backup) Registration

First, register the TV using the USB Backup app, and then select a USB storage device or an external hard disk drive connected to the TV. The ADB (Auto Data Backup) folder is automatically created on the selected storage device. Then, select folders from your mobile device's gallery, set the password to open the ADB (Auto Data Backup) folder on the selected storage device connected to the TV.

#### 2 Auto File Copy

When your mobile device comes close to the TV, data are automatically copied from the selected folders on your mobile device to the selected storage device connected to the TV.

#### 3 Share files back from the ADB folder to a mobile device

You can also share file back from ADB folder to Samsung Mobile, by first connecting Samsung Mobile with TV over Wi-Fi direct & then select the files to be transferred from TV, and press "Share" option to send files to connected Mobile device.

# Switching between external devices connected to the TV

You can switch between TV programmes and the content of external devices.

 > left directional button >  **Connected Devices**


When you select a connected external device on the **Sources** screen, the output of the selected device is displayed on the TV's screen.

-  On the Standard Remote Control, press the SOURCE button.
-  To control a device (Blu-ray player, game console, etc.) that supports universal remote control with the TV's remote control, connect the device to an HDMI port on the TV, and then turn on the device. The output displayed on the TV is automatically switched to the output of the device or you can configure universal remote control for the device automatically. For more information, refer to "[Controlling External Devices with a Samsung Remote Control - Using the Universal remote setup](#)".
-  When a USB device is connected to the USB port, a pop-up message appears that lets you switch easily to the media content listed on the device.
-  This function may not be supported depending on the device and geographical area.

## Editing the name and icon of an external device

 > left directional button >  **Connected Devices**

You can change the port name for a connected external device or add it to the Home Screen.

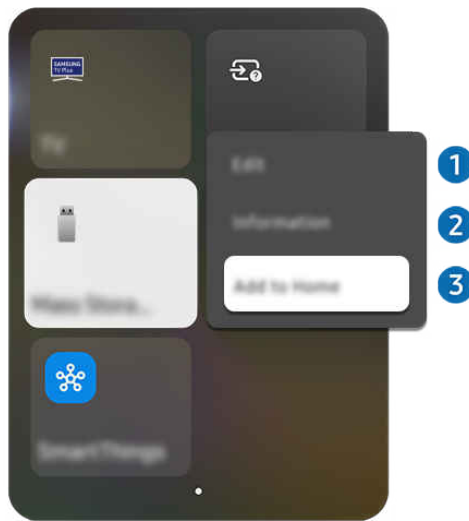

 The image on your TV may differ from the image above depending on the model and geographical area.

1. Move the focus to a connected external device.
2. Press and hold the Select button. The following functions become available.

 Available functions may differ depending on the port type.

### **1** Add to Home

You can add the port of an external device to the Home Screen for quick switching.

### **2** Edit

You can rename the input ports and change the device icons.

### **3** Universal Remote

Set up your Samsung remote as a Universal Remote to easily control external devices.

 This function may not be supported depending on the model or geographical area.

## Using additional functions

On the connected device screen, use the following additional features:

- **SmartThings**

Monitor and control connected home appliances and IoT devices from the screen.

 For more information, refer to "[Using SmartThings](#)."

 This function may not be supported depending on the model or geographical area.

- **Screen Sharing (Smart View)**

You can watch the screen of your mobile device.

 For more information about **Screen Sharing (Smart View)**, refer to "[Displaying your mobile device screen on the TV](#)."

 This function may not be supported depending on the model or geographical area.

- **Quick Share**

Easily transfer and save photos from your Galaxy devices.

 For more information about **Quick Share**, refer to "[Using Quick Share](#)."

 This function may not be supported depending on the model or geographical area.

- **Storage Share**

You can connect to a nearby Galaxy device to access its storage and check stored files.

 For more information about **Storage Share**, refer to "[Using Storage Share](#)."

 This function may not be supported depending on the model or geographical area.

- **Camera Experience**

Connect a USB camera, or use the SmartThings app on your mobile phone to connect a camera.

Connect a camera to use video call, home workout, and other new features.

 For details on how to connect, refer to [Camera Share](#) (🏠 > left directional button > 📱 [Connected Devices](#) > [Connection Guide](#) > [Smartphone](#) > [Camera Share](#)).

 This function may not be supported depending on the model or geographical area.

- **Connection Guide**

Displays device connection instructions.

 For more information, refer to "[Connection Guide](#)".

- **Universal remote setup**

Lets you register external devices to your Samsung remote control and control them using the Remote.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[Controlling External Devices with a Samsung Remote Control - Using the Universal remote setup](#)".

# Connection Notes

When connecting an external device, note the following.

-  The number of connectors and their names and locations may differ with the model.
-  Refer to the external device's operating manual when connecting it to the TV. The number of external device connectors and their names and locations may differ with the manufacturer.

## Connection notes for HDMI

- The following types of HDMI cables are recommended:
  - High Speed HDMI Cable
  - High Speed HDMI Cable with Ethernet
  - Premium High Speed HDMI Cable
  - Premium High Speed HDMI Cable with Ethernet
  - Ultra High Speed HDMI Cable
- Use an HDMI cable with a thickness of 17 mm or less.
- Using a non-certified HDMI cable may result in a blank screen or a connection error.
- Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
- This TV does not support HDMI Ethernet Channel. Ethernet is a Local Area Network (LAN) built with coaxial cables standardised by the IEEE.
- Use a cable shorter than 3 m to get the best UHD viewing quality.
- Many computer graphics adapters do not have HDMI ports, but have DVI or DisplayPort ports instead. If your PC does not support HDMI video out, connect your PC with a DVI to HDMI or HDMI to DisplayPort cable.
- When the TV is connected to an external device such as a DVD/BD player or a set-top box via HDMI, power sync mode will be automatically activated. In the power sync mode, the TV continues to detect and connect external devices via HDMI cable. This function can be deactivated by removing the HDMI cable of the connected device.
  -  This function may not be supported depending on the model.

## Connection notes for audio devices

- To obtain better TV audio quality, connect a soundbar or A/V receiver to the TV.
- If you connect an external audio device using an optical cable, the **Sound Output** setting automatically changes to the connected device. However, to make this happen, you must turn on the external audio device before connecting the optical cable. To manually change the **Sound Output** setting, do one of the following:

 This function may not be supported depending on the model.

- Use the **Quick Settings** screen to change to the connected device:

Use the Select button to select **Receiver (Optical)** on the **Sound Output** menu. (🏠 > left directional button > ⚙️ **Settings** > **Sound Output** > Select button to toggle between sound output modes). [Try Now](#)

- Use the **Settings** screen to change to the connected device:

Select **Receiver (Optical)** on the **Sound Output** menu. (🏠 > left directional button > ⚙️ **Settings** > **All Settings** > **Sound** > **Sound Output**). [Try Now](#)

 Refer to the soundbar's user manual when connecting it to the TV.

- An unusual noise coming from a connected audio device while you are using it, may indicate a problem with the audio device itself. If this occurs, ask for assistance from the audio device's manufacturer.
- Digital audio is only available with 5.1 channel broadcasts.

## Connection notes for computers

- For the resolutions supported by the TV, refer to "[Read Before Connecting a Computer \(Supported Resolutions\)](#)".
- If you want to connect your PC and TV wirelessly, both of them must be connected to each other on the same network.
- When sharing content with other network-based devices such as those in an IP (Internet Protocol) storage system, sharing may not be supported due to the network's configuration, quality or functionality, for example, if the network has a NAS (Network-Attached Storage) device.

## Connection notes for mobile devices

- To use the Smart View function, the mobile device must support a mirroring function such as Screen Mirroring or Smart View. To check whether your mobile device supports the mirroring function, refer to the mobile device's user manual.
- The Screen Sharing (Smart View) feature may not operate smoothly in a 2.4 GHz environment. For a better experience, 5 GHz or 6 GHz is recommended.

 5 GHz or 6 GHz may not be supported depending on the model.

- To use Wi-Fi Direct, the mobile device must support the Wi-Fi Direct function. To check whether your mobile device supports Wi-Fi Direct, refer to the mobile device's user manual.

- The mobile device and your Smart TV must be connected to each other on the same network.

- Use AirPlay if you are an iPhone or iPad user. For more information, refer to  > left directional button >  [Connected Devices](#) > [Connection Guide](#) > [Smartphone](#) > [Apple AirPlay](#). [Try Now](#)

 This function may not be supported depending on the model or geographical area.

- The video or audio may stop intermittently, depending on network conditions.
- When sharing content with other network-based devices such as those in an IP (Internet Protocol) storage system, sharing may not be supported due to the network's configuration, quality or functionality, for example, if the network has a NAS (Network-Attached Storage) device.

## Connection notes for Portrait Mode

- If you connect the Auto Rotating Accessory (sold separately) to the TV, you can use the TV in Portrait Mode.
- To use the computer or console, connected via HDMI to the TV, in Portrait Mode, you need to change the device setting. Change the screen to Portrait Mode from the computer or console.

 Portrait Mode is supported when a computer that uses Windows 10 or later or a console that supports Portrait Mode is connected.

 This function may not be supported depending on the model.

## Using Multi Control

Connect to nearby Galaxy devices to control them using the same keyboard and mouse.

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Multi Control](#)

Turn on [Multi Control](#) to connect nearby Galaxy devices and use them with your keyboard and mouse.

-  To connect to nearby devices, turn on [Multi Control](#), Wi-Fi and Bluetooth on the devices, and logged in with the same Samsung account.
-  This function may not be supported depending on the model or geographical area.
-  This feature may not be supported, depending on the Galaxy device model and the One UI version.

## Using Quick Share

Easily transfer and save photos wirelessly from your Galaxy devices.

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Quick Share](#)

Choose who can share content with you.

-  This function may not be supported depending on the model or geographical area.
- [Change Samsung Account](#)
  - If you're signed in with the same Samsung account as your Galaxy devices, you can easily receive images.  
 For more information, refer to "[Using a Samsung account.](#)"
- [Who can share with you](#)
  - Choose who can share content with you.
- [TV name](#)
  - This name will appear on the other device when you connect.

## Using Storage Share

Connect to a nearby Galaxy device to access its storage and check stored files.

 > left directional button >  **Settings** > **All Settings** > **Connections** > **Storage Share Settings**

Turn on the **Storage Share** feature. The Galaxy devices in the vicinity can be found in the list under **Connected Devices**.

Select the intended device from the list, and access the device storage to check stored files.

-  To connect to those devices, make sure that **Storage Share** mode, Wi-Fi and Bluetooth are enabled and the same Samsung account is logged in on all the devices.
-  This function may not be supported depending on the model or geographical area.
-  This feature may not be supported, depending on the Galaxy device model and the One UI version.

## Using Link to Galaxy Watch

Find out how to connect to your Galaxy Watch and check its connection status.

 > left directional button >  **Settings** > **All Settings** > **Connections** > **Link to Galaxy Watch**

Nearby Galaxy Watches are shown in a list. Select your desired device and connect to it.

 
-  To connect, make sure the Galaxy smartphone and Galaxy Watch are located in the vicinity of the TV, and Bluetooth is enabled and the same Samsung account is logged in on all the devices.
-  This function may not be supported depending on the model.
-  This feature may not be supported, depending on the Galaxy device model and the One UI version.
-  This feature may not work in some apps or on some service screens.

# Remote Control and Peripherals




You can control TV operations with your Remote Control. Pair external devices such as a keyboard for ease of use.

## About the Samsung Smart Remote (Remote Control)

Learn about the buttons on the Samsung Smart Remote (Remote Control).

| Button                                                                                                   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  (Power)                | <p>Press to turn the TV on or off.</p> <p>For The Frame model, When watching TV, press to switch to <b>Art</b> mode. In <b>Art</b> mode, press to switch to the <b>Home</b> screen. Press and hold to turn off the TV completely.</p> <p> For more information, refer to "Using Art Mode".</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|  (MIC / LED)            | <p>Used as MIC when using voice recognition with the remote control.</p> <ul style="list-style-type: none"><li>Do not impact the MIC hole or use a sharp object to poke into the hole.</li><li>The position of the MIC hole may differ depending on the model.</li></ul> <p> This function may not be supported depending on the model or geographical area.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|  (AI/Click to Search) | <p>Opens the <b>AI</b> or <b>Click to Search</b> function.</p> <p> The services opened when this button is pressed depend on the software version.</p> <p> This function may not be supported depending on the model or geographical area.</p> <p><b>[AI]</b></p> <p>Press the button to open the <b>Vision AI Companion</b> function. <b>Vision AI Companion</b> is an interactive AI service that answers your questions and provides the information you need.</p> <ul style="list-style-type: none"><li>Find out the key AI capabilities from the launched Vision AI Companion.</li></ul> <p><b>[Click to Search]</b></p> <p>Press this button while watching a broadcast, to obtain recommended information related to the broadcast.</p> <ul style="list-style-type: none"><li>The type of recommended information may differ, depending on the content provider.</li></ul> <p> This function may not be supported depending on the model or geographical area.</p> |
|  (Voice Assistant)    | <p>Runs Voice Assistant. Press and hold the button, say a command, and then release the button to run Voice Assistant.</p> <p> The supported Voice Assistant's languages and features may differ by geographical region.</p> <p> This function may not be supported depending on the model or geographical area.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

| Button                                                                                                                        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  (Settings / Number / Colour button)         | <p>You can access Setting menu / virtual numeric pad / Colour buttons / Option pad / SmartThings directly.</p> <ul style="list-style-type: none"> <li>Accessing the SmartThings app using this button may not be supported, depending on the model.</li> <li>Use this button to access additional options that are specific to the feature in use.</li> <li>Press to bring up the virtual numeric pad on the screen. Use the numeric keypad to enter numeric values. Select numbers and then select <b>Done</b> or <b>Enter Number</b> to enter a numeric value. Use to change the channel, enter a PIN, ZIP code and etc.</li> </ul> <p> If the Colour Button appears with a number strip on the screen, select the Colour Button and then select a specific colour by using the directional button (up/down/left/right).</p> |
|  (Settings / Number / Option button)         | <p>You can access Setting menu / virtual numeric pad / Option pad / SmartThings directly.</p> <ul style="list-style-type: none"> <li>Accessing the SmartThings app using this button may not be supported, depending on the model.</li> <li>Use this button to access additional options that are specific to the feature in use.</li> <li>Press to bring up the virtual numeric pad on the screen. Use the numeric keypad to enter numeric values. Select numbers and then select <b>Done</b> or <b>Enter Number</b> to enter a numeric value. Use to change the channel, enter a PIN, ZIP code and etc.</li> </ul>                                                                                                                                                                                                                                                                                            |
|  (Colour button)                            | <p>When pressed, coloured buttons appear on the screen. Use this button to access additional options that are specific to the feature in use.</p> <p> This function may not be supported depending on the model or geographical area.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|  (Directional button (up/down/left/right)) | <p>Moves the focus.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|  (Select)                                  | <p>Selects or runs a focused item. When pressed while you are watching a broadcast programme, detailed programme information appears.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|  (Return)                                  | <p>Press to return to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a programme, the previous channel appears.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|  (Smart Hub)                               | <p>Press to switch to the Home Screen.</p> <ul style="list-style-type: none"> <li>If you press this button for more than 1 second, the same function found when pressing the  button is provided.</li> </ul> <p> The  function may not be supported depending on the model or geographical area.</p>                                                                                                                                                                                                                                                                                                                                                   |
   
| Button                                                                                                    | Description                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  (Play/pause)            | <p>When pressed, the playback controls appear. Using these controls, you can control the media content that is playing.</p> <p>To use Game Bar, press and hold the button in <a href="#">Game Mode</a>.</p> <p> Game Bar may not be supported depending on the model or geographical area.</p>                              |
| <br>(Volume)             | <p>Move the button up or down to adjust the volume. To mute the sound, press the button. When pressed for 2 seconds or more, the <a href="#">Accessibility Shortcuts</a> appears.</p> <p>  may not be present, depending on the model.</p> |
| <br>(Channel)            | <p>Move the button up or down to change the channel. To see the <a href="#">Guide</a> or <a href="#">Channel List</a> screen, press the button. When pressed for 1 second or more, the <a href="#">Channel List</a> screen appears.</p> <p>Press and hold the button up or down to quickly change the channel.</p>                                                                                           |
| <br>Launch app<br>button | <p>Launch the app indicated by the button.</p> <p> Available apps may differ depending on the geographical area or contents provider.</p> <p> This function may not be supported depending on the model or geographical area.</p>          |

-  The Samsung Smart Remote may not be provided, depending on the model or geographical area. Use mobile remote control functions from the SmartThings app on your mobile device. For more information, refer to "[Using a mobile remote control](#)."
-  Use the Bluetooth-connected Samsung Smart Remote less than 6 m from the TV. The usable distance may vary with the wireless environmental conditions.
-  The images, buttons and functions on the remote control may differ, depending on the remote control type, TV model or geographical area.
-  To use the Samsung Smart Remote to control a compatible external device that does not support HDMI-CEC (Anynet+), you must configure universal remote control for the device. For more information, refer to "[Controlling External Devices with a Samsung Remote Control - Using the Universal remote setup](#)".
-  To use the Samsung Smart Remote to control a compatible external device that does support HDMI-CEC (Anynet+), connect the device to an HDMI port on the TV using an HDMI cable. For more information, refer to "[Using Anynet+ \(HDMI-CEC\)](#)".
-  Depending on the model and region, a message may appear asking you to hold the remote control correctly if you control the TV while holding the remote control upside down. To turn off the alert, access [Remote Grip Sensor](#). (Home > left directional button > ⚙️ [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Remote Control](#) > [Remote Grip Sensor](#)) (TM236\*, TM256\*)
-  For specific functions of each button on the Bluetooth-connected Samsung Smart Remote, access the [Remote Control Guide](#). (Home > left directional button > ⚙️ [Settings](#) > [All Settings](#) > [Support](#) > [Tips and User Guides](#) > [Remote Control Guide](#))

# About the Standard Remote Control

Learn about the buttons on the Remote Control.

| Button                                                                                        | Description                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  (Power)     | Press to turn the TV on or off.                                                                                                                                                                                           |
| SOURCE                                                                                        | Displays and selects available video sources.                                                                                                                                                                             |
| 0-9 (Number button)                                                                           | Gives direct access to channels.                                                                                                                                                                                          |
| TTX/MIX                                                                                       | Alternately selects Teletext mode, Full TTX / Double TTX / Mix / Live TV.<br> This function may not be supported depending on the model. |
| PRE-CH                                                                                        | Returns to the previous channel.                                                                                                                                                                                          |
| +/- (VOL)                                                                                     | Adjusts the volume.                                                                                                                                                                                                       |
| ^/▼ (CH)                                                                                      | Changes the current channel.<br>Press and hold the button up or down to quickly change the channel.                                                                                                                       |
|  MUTE        | Turns the sound on/off.                                                                                                                                                                                                   |
| GUIDE                                                                                         | Press to display the Guide screen, or press and hold to display the Channel List screen.                                                                                                                                  |
|  (Smart Hub) | Press to switch to the Home Screen.                                                                                                                                                                                       |
| Launch app button                                                                             | Launch the app indicated by the button.<br> Available apps may differ depending on the geographical area or contents provider.           |
| Directional button (up, down, left, right)                                                    | Use to navigate the menu or move the focus to highlight items on the Home Screen.                                                                                                                                         |
|  (Select)  | Selects or runs a focused item. When pressed while you are watching a broadcast programme, detailed programme information appears.                                                                                        |
| RETURN                                                                                        | Returns to the previous menu or channel.                                                                                                                                                                                  |
| EXIT                                                                                          | Exits the menu.                                                                                                                                                                                                           |
| Red, Green, Yellow, Blue (Colour Button)                                                      | Use these buttons according to the directions on the TV screen.                                                                                                                                                           |
| SETTINGS                                                                                      | Displays the main on-screen menu.                                                                                                                                                                                         |
| INFO                                                                                          | Displays information about the current programme or content.                                                                                                                                                              |
| AD/SUBT.                                                                                      | Displays the <a href="#">Accessibility Shortcuts</a> .                                                                                                                                                                    |
| Multimedia Button (Play/Pause/etc.)                                                           | Use these buttons with specific features. Use these buttons according to the directions on the TV screen.                                                                                                                 |

 The Standard Remote Control may not be provided, depending on the model or geographical area. Use mobile remote control functions from the SmartThings app on your mobile device. For more information, refer to "[Using a mobile remote control](#)."

 The images, buttons, and functions of the remote control may differ depending on the model or geographical area.

 This remote control has Braille points on the Power, Channel and Volume buttons and can be used by visually impaired persons.


 If you use the remote control that comes with your TV to control another TV, some functions may not operate normally.

## Connecting the Samsung Smart Remote to the TV

Connect the Samsung Smart Remote to your TV to operate the TV.

When the TV turns on, it automatically pairs with the Samsung Smart Remote through Bluetooth. If the Samsung Smart Remote does not pair to the TV automatically, point it at the front of the TV, then press and hold the  and  buttons simultaneously for 3 seconds or more.

-  This function may not be supported depending on the model or geographical area.
-  The Samsung Smart Remote may not be provided, depending on the model or geographical area. Use mobile remote control functions from the SmartThings app on your mobile device. For more information, refer to ["Using a mobile remote control."](#)

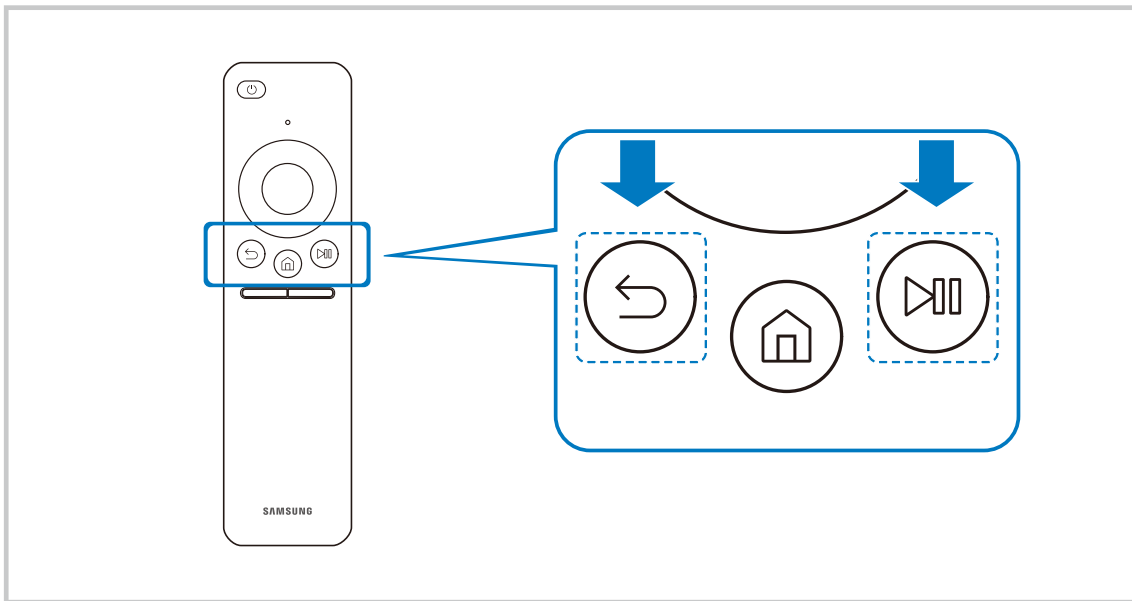

-  The images, buttons and functions of the Samsung Smart Remote may differ with the model or geographical area.

## Using a mobile remote control

Control the TV using the remote control for a mobile device.

Use mobile remote control functions from the SmartThings app on your mobile device. If your TV is not registered in the mobile SmartThings app, open the mobile remote control using the following method.

- Use the power button on the TV to turn it on, and scan the QR code displayed on the screen.
-  This function may not be supported depending on the model.
- Before using the mobile remote control, please refer to the User Guide provided by the mobile remote control.
-  Users may need to update the SmartThings app to the latest version.
-  This function may not be supported depending on the model.
-  The images, buttons, and functions of the mobile remote control may differ depending on the model or geographical area.

# Controlling External Devices with a Samsung Remote Control - Using the Universal remote setup

Control the TV and connected external devices with a Samsung remote control.

 > left directional button >  **Connected Devices** > **Universal remote setup**

You can control all external devices connected to the TV using a single Samsung remote. Run the **Universal remote setup** menu to register external devices.

-  This function may not be supported depending on the model or geographical area.
-  This feature may not be supported on some models, if an external device is connected directly to the screen without using Wireless One Connect.
-  You can also use the **Anynet+ (HDMI-CEC)** function to operate external Samsung devices with your TV's remote control without any additional setup. For more information, refer to "[Using Anynet+ \(HDMI-CEC\)](#)".
-  Specific external devices connected to the TV may not support the universal remote feature.
-  Do not place any obstacles in front of an external device and TV's logo. It may cause improper transmitted signals from the remote control.
-  If you have difficulty controlling external devices with the Universal Remote, try adjusting the positions of the external devices.
-  This function may not operate properly depending on the TV installation environment and the features of external devices.

## Learn how to use Samsung Smart Remote

You can learn how to use Samsung Smart Remote.

 > left directional button >  **Settings** > **Support** > **Tips and User Guides** > **Remote Control Guide**

Find details on how to use the Samsung Smart Remote.

Press the menu to use a variety of functions of the Samsung Smart Remote.

-  This function may not be supported depending on the model.

## Learn how to use Game Controller

You can learn how to use Game Controller.

 > left directional button >  **Settings** > **Support** > **Tips and User Guides** > **Game Controller Guide**

Find details on how to use the Game Controller.

Press the menu to learn more about the functions of each Game Controller button.

-  This function may not be supported depending on the model.
-  Button layouts may vary between controllers.

## Using Anynet+ (HDMI-CEC)

Control an external device connected via Anynet+ (HDMI-CEC) with the remote control.

You can use the TV's remote control to control external devices that are connected to the TV by an HDMI cable and that support Anynet+ (HDMI-CEC). Note that you can only set up and operate Anynet+ (HDMI-CEC) with the remote control.

### Connecting an external device through Anynet+ and using their menus

 > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **External Device Manager** > **Anynet+ (HDMI-CEC)** 

1. Set **Anynet+ (HDMI-CEC)** to **On**.
2. Connect an HDMI-CEC-compliant device to the TV.
3. Turn on the connected external device.

The device is automatically connected to the TV. After the connection process is finished, you can access the menu of the connected device using your TV remote and control the device.

 The connecting process can take up to 2 minutes to complete.

### Read before connecting an Anynet+ (HDMI-CEC) device

-  Anynet+ (HDMI-CEC)-enabled devices must be connected to the TV with an HDMI cable. Note that some HDMI cables may not support Anynet+ (HDMI-CEC).
-  You can configure the TV's Universal Remote to control third-party cable boxes, Blu-ray players and home theatres that do not support HDMI-CEC. For more information, refer to "[Controlling External Devices with a Samsung Remote Control - Using the Universal remote setup](#)".
-  Anynet+ cannot be used to control external devices that do not support HDMI-CEC.
-  The TV remote control may not work under certain circumstances. If this occurs, set up the device as an Anynet+ (HDMI-CEC)-enabled device again.
-  Anynet+ (HDMI-CEC) works only with external devices that support HDMI-CEC and when those devices are either in standby mode or turned on.
-  Anynet+ (HDMI-CEC) can control up to 12 compliant external devices (up to 3 of the same type) except for home theatres. Anynet+ (HDMI-CEC) can control only one home theatre system.
-  To listen to 5.1 channel audio from an external device, connect the device to the TV via an HDMI cable and connect a 5.1 home theatre system directly to the external device's digital audio output connector.
-  If an external device has been set up for both Anynet+ and a universal remote control, the device can be controlled only with the universal remote control.

# Controlling the TV with a Keyboard, Mouse or Gamepad

Connecting a keyboard, mouse or gamepad to make it easier to control the TV.

You can connect a keyboard, mouse or gamepad to control the TV easily.

## Connecting a USB keyboard, mouse or gamepad

 > left directional button >  [Connected Devices](#) > [Connection Guide](#) > [Input Device](#)

Plug the keyboard, mouse or gamepad cable into the USB port.

 This function may not be supported by some apps or external devices.

 XInput USB gamepads are supported.

## Connecting a Bluetooth keyboard, mouse or gamepad

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Bluetooth](#) [Try Now](#)

 If your device was not detected, position the keyboard close to the TV, and then select [Scan](#). The TV scans for available devices again.

 This function may not be supported by some apps or external devices.

 A maximum of four gamepads can be connected, regardless of connection method (e.g., USB or Bluetooth).

- When using two Bluetooth audio devices, it is best to use USB gamepads.
- When using one Bluetooth audio device, up to two Bluetooth gamepads can be connected.

 For more information, refer to the Bluetooth device's user manual.

 This function may not be supported depending on the model or geographical area.

## Using the keyboard and mouse

| Button              | Description                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Directional keys    | Moves the focus                                                                                                                                                                                                                                                                                                                                                                                                  |
| Enter key           | Selects or runs a focused item                                                                                                                                                                                                                                                                                                                                                                                   |
| ESC key             | Press to return to the previous menu, or press and hold to close whatever is running on the screen.                                                                                                                                                                                                                                                                                                              |
| Number keys         | Enter numbers                                                                                                                                                                                                                                                                                                                                                                                                    |
| F1 key              | Turns on or off the TV                                                                                                                                                                                                                                                                                                                                                                                           |
| F2 key              | Displays the Settings menu / numeric keypad / Option pad / SmartThings app<br>Each time you press this button, Settings menu / virtual numeric pad / Option pad / SmartThings app are displayed alternately.                                                                                                                                                                                                     |
| F3 key              | Plays/pauses                                                                                                                                                                                                                                                                                                                                                                                                     |
| F4 key              | Displays the <a href="#">Settings</a> screen                                                                                                                                                                                                                                                                                                                                                                     |
| F5 key              | Displays the Home Screen                                                                                                                                                                                                                                                                                                                                                                                         |
| F6 key              | Displays the Sources screen                                                                                                                                                                                                                                                                                                                                                                                      |
| F7 key              | Displays the <a href="#">Channel List</a>                                                                                                                                                                                                                                                                                                                                                                        |
| F8 key              | Mutes the sound                                                                                                                                                                                                                                                                                                                                                                                                  |
| F9 / F10 key        | Adjusts the volume                                                                                                                                                                                                                                                                                                                                                                                               |
| F11 / F12 key       | Changes the channel                                                                                                                                                                                                                                                                                                                                                                                              |
| Page Up / Page Down | Scrolls a webpage displayed by the <a href="#">Internet</a> app.                                                                                                                                                                                                                                                                                                                                                 |
| Left-click          | Selects and runs an item.<br> This function is not available in some apps.<br> You can click a menu or link to start a function as you do on a PC.                                                                                         |
| Right-click         | Calling up shortcut buttons, such as  /  /+/-/^/√<br>Easily access a menu by right-clicking on the mouse and selecting the menu from among the displayed shortcut buttons. Displayed shortcut buttons may differ, depending on the screen. |

 The key operation may differ depending on some apps or the keyboard and mouse.

## Using the Gamepad

Check the supported gamepads. [Try Now](#)

 This function may not be supported depending on the model or geographical area.

| Manufacturer | Controllers                             | Connection | Force feedback |
|--------------|-----------------------------------------|------------|----------------|
| Microsoft    | Xbox Series X/S controller              | Bluetooth  | 0              |
|              | Xbox One S controller                   | Bluetooth  | 0              |
|              |                                         | USB        | 0              |
|              | Xbox 360 controller                     | USB        | 0              |
|              | Xbox Elite Wireless Controller Series 2 | Bluetooth  | 0              |
|              | Xbox Adaptive controller                | Bluetooth  | -              |
|              |                                         | USB        | -              |
| Sony         | Dualsense Edge                          | Bluetooth  | 0              |
|              |                                         | USB        | 0              |
|              | Dualsense                               | Bluetooth  | 0              |
|              |                                         | USB        | 0              |
|              | DualShock 4                             | Bluetooth  | 0              |
|              |                                         | USB        | 0              |
| Google       | Stadia controller                       | USB        | Not support    |
|              |                                         | Wi-Fi      | Not support    |
| Amazon       | Luna controller                         | Bluetooth  | 0              |
|              |                                         | USB        | 0              |
|              |                                         | Wi-Fi      | Not support    |
| Joytron      | CYVOX DX                                | USB        | 0              |
| Logitech     | F710                                    | USB        | 0              |
|              | F510                                    | USB        | 0              |
|              | F310                                    | USB        | -              |
| PowerA       | MOGA XP5-X Plus Bluetooth controller    | Bluetooth  | -              |
|              |                                         | USB        | -              |
| Nvidia       | Shield controller                       | Bluetooth  | 0              |
|              |                                         | USB        | Not support    |
| Nintendo     | Nintendo Switch Pro                     | Bluetooth  | 0              |
|              |                                         | USB        | 0              |
|              | Nintendo Joy-Con(L/R)                   | Bluetooth  | 0              |

 Some keys are not available on this product depending on controller.

 Force feedback :

"Not support" (This product can't support force feedback.)

"-" (Controllers don't have force feedback function.)

 Tizen TVs will support only XInput mode for the supported gamepads.

 Xbox controllers may require firmware updates.

 Controller audio output (3.5 mm port) is not available on this product.

 Other controllers may or may not work for cloud gaming.

## Using the controller

| Button                                                           | Description                                                                                                                                                                                       |
|------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Left joystick and dpad                                           | 4 way navigation                                                                                                                                                                                  |
| Right joystick                                                   | <ul style="list-style-type: none"> <li>Up / Down : Volume control (Up / Down)</li> <li>Left / Right : Channel control (Up / Down) on TV screen</li> <li>Select (press): Mute the sound</li> </ul> |
| A button or X button (Sony Only)                                 | Enter (OK)                                                                                                                                                                                        |
| B button or O button (Sony Only)                                 | Return (Cancel)                                                                                                                                                                                   |
| Pressing and holding the B button or O button (Sony Only)        | Exit                                                                                                                                                                                              |
| Home button                                                      | Gaming Hub homepage (Gaming Hub supported countries)<br>Smart Hub homepage                                                                                                                        |
| Pressing and holding the Home button                             | (During cloud game play) Quick panel                                                                                                                                                              |
| Option button on the left                                        | Game Bar (when Game Mode is turned on and an external source is connected)                                                                                                                        |
| X button or □ button (Sony Only)                                 | Numeric buttons (123)                                                                                                                                                                             |
| Pressing and holding the left and right joysticks simultaneously | Power off (Turning power on is not possible)<br>On some models, the TV goes into <a href="#">Art</a> mode.                                                                                        |



The button operation may differ depending on some apps or the controller.



If you connect controller to this product by Wi-Fi solution, you cannot use UI navigation function.



Gaming Hub and Cloud game may not be supported depending on the country.

## Setting up the input devices

 > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Keyboard and Mouse** [Try Now](#)

- **Keyboard Settings** [Try Now](#)


You can set up the keyboard with the [Keyboard Language](#) and [Keyboard type](#) functions.

- **Mouse Settings** [Try Now](#)

You can set up the mouse with the [Mouse Pointer Size](#), [Primary Button](#) and [Pointer Speed](#) functions.

## Entering Text using the On-Screen Virtual Keyboard

Use the virtual keyboard to enter text on your TV.

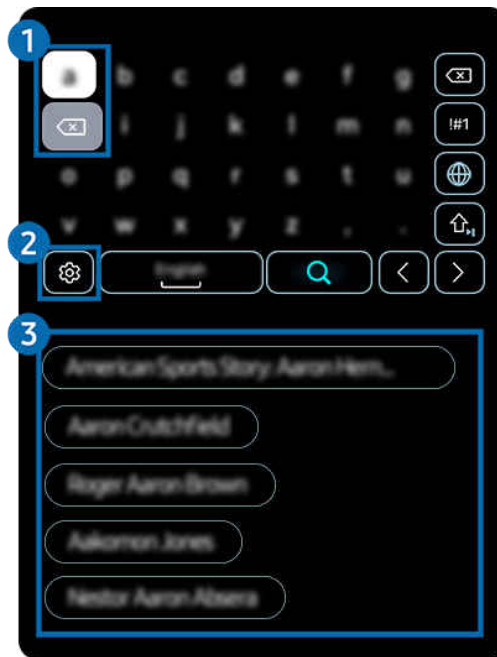

 The image on your TV may differ from the image above depending on the model and geographical area.

### 1 Editing Buttons

By selecting any of pop-up Editing Buttons after entering characters on the virtual keyboard, you can quickly perform the editing function.

 This function is only available when the [Show Editing Buttons](#) feature is turned on.

## 2 Settings

Select  on the virtual keyboard screen. The following options are available:

 The options available may differ depending on the function running currently.

- **Recommend text**
  - **Recommended text**
  - **Reset Recommended Text Memory**
  - **Show Editing Buttons**
- **Languages and Types**

## 3 Recommend text

When you type a word you want to use as a search term, this function displays related suggestions from which you can choose one.

## Entering Text using the remote control's microphone and the on-screen virtual keyboard

When the virtual keyboard is on the screen, press and hold the button  on the Samsung Smart Remote, speak into the microphone on the Samsung Smart Remote, and then release the button. What you say appears on the screen as text.

 Entering text with your voice may not be supported for some functions.

 This function may not be supported depending on the model or geographical area.

 The Samsung Smart Remote may not be supported depending on the model or geographical area.

 The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.

# Smart Features

You can enjoy various apps with Smart Hub.

## Using Smart Hub


[View descriptions of Smart Hub's basic functions.](#)

From Smart Hub, you can use the Internet search function, install and use various apps, view photos and videos or listen to music and perform more functions.

-  Some Smart Hub services are paid services.
-  To use smart functions, you should connect to a network, agree to the terms and conditions, and log in with your Samsung account.
-  Some Smart Hub features may not be supported depending on the service provider, language or geographical area.
-  Smart Hub service outages can be caused by disruptions in your network service.

## Displaying the Home Screen

Press the  button.

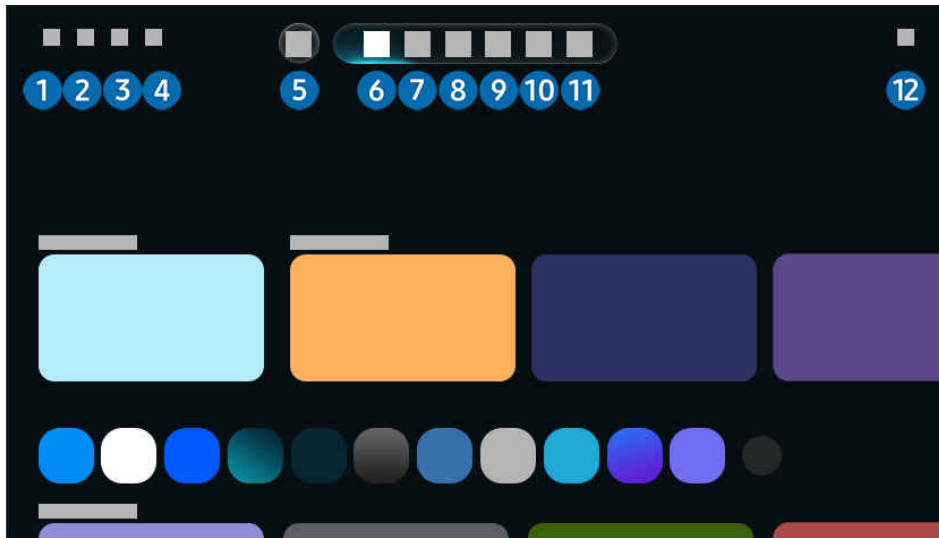

 The image on your TV may differ from the image above depending on the model and geographical area.

### 1 Samsung Account

Go to the [Samsung Account](#) screen to create a new account or sign out of your account.

 For more information, refer to "[Using a Samsung account](#)".

### 2 Search

Search for channels, programmes, movies, and apps offered by Smart Hub.

 To use the Search service, make sure the TV is connected to a network.

 This function may not be supported depending on the model or geographical area.

### 3 Connected Devices

Select an external device that is connected to the TV.

 For more information, refer to "[Switching between external devices connected to the TV](#)".

### 4 Settings

Manage external devices connected to the TV, and configure settings for various functions available on the TV.

 For more information, refer to "[About the Settings screen](#)".

## 5 Vision AI Companion

**Vision AI Companion** is an interactive AI service that answers questions and recommends content and services tailored to the topic or situation.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[Using Vision AI Companion](#)".

## 6 For You / Discover

View a variety of TV programmes. Install various apps offered by Smart Hub, such as video, music and sports apps, and use the apps from the TV. The app makes personalised recommendations based on the user's viewing experience.

 For more information, refer to "[About the For You / Discover screen](#)".

## 7 Ambient / Art

 Available features may differ depending on the model.

 On some models, the **Ambient** mode is integrated in the **Art** mode.

-  **Ambient**

Set your TV to display content you desire, such as the time or weather, when the TV is not used.

To return to TV mode from Ambient mode, double-press the  button. Press the  button to turn off the TV.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[Using Ambient Mode](#)".

-  **Art**

When you are not watching TV or when the TV is turned off, you can use the **Art** mode function to edit image content, such as artworks, photos, or to display the content.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[About the Art screen](#)".

## 8 Live

Watch TV programmes currently on the air. Access the **Guide** screen to check the broadcast schedules and set up scheduled viewing for the programmes you want.

 For more information, refer to "[About the Live screen](#)".

 This function may not be supported depending on the model or geographical area.

## 9 🎮 Game

Play games from the TV screen by connecting a Controller to the TV. Configure settings to optimise the Controller and audio device for playing games.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[Using Samsung Gaming Hub](#)".

## 10 💬 Daily

Provides useful services, such as home training, remote work, karaoke, and early childhood education content, allowing users to conveniently experience different lifestyles.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[About the Samsung Daily+ screen](#)".

## 11 📺 Apps

Install a variety of apps offered by Smart Hub, such as video, music, sports and game apps, and use the apps from the TV.

 For more information, refer to "[About the Apps screen](#)".

## 12 🛡️ Privacy Choices

From your TV, easily manage the privacy policy regarding services related to Smart Hub and verify how personal information is protected.

 To use Smart Hub, you must agree to the Smart Hub service agreement and the collection and use of personal information. Without giving consent, you will not be able to use the additional features and services. You can view the entire text of the [Terms & Privacy](#) by navigating to  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Terms & Privacy](#). [Try Now](#)

 In order to rescind your consent to mandatory terms and conditions related to Smart Hub, launch [Reset Smart Hub](#) ( > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Reset Smart Hub](#)). [Try Now](#)

 This function may not be supported depending on the model or geographical area.

## Launching Multi View automatically When rotating

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Start Screen Options](#) > [Autorun Multi View When Rotating](#)

Multi View runs automatically when you rotate the screen to portrait mode.

 This function may not be supported depending on the model.

 This function is activated when the Auto Rotating Accessory (sold separately) is connected.

## Testing Smart Hub connections

 > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Self Diagnosis](#) > [Smart Hub Connection Test](#) [Try Now](#)

## Resetting Smart Hub

 > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Reset Smart Hub](#) [Try Now](#)

 You can reset the Smart Hub settings. To reset Smart Hub, enter the PIN. You can set the PIN in  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [PIN Settings](#) > [Change PIN](#). [Try Now](#)


# Using Ambient Mode

[Learn about the functions available in Ambient mode.](#)

 > (top of Smart Hub Home screen) >  **Ambient**

Set your TV to display a photo or content you desire when the TV is not used.

-  This function may not be supported depending on the model.
-  On some models, the **Ambient** mode is integrated in the **Art** mode.
-  Press the  button in **Ambient** mode screen to enter to **Ambient** Home.
-  In **Ambient** mode, some functions may not be supported.

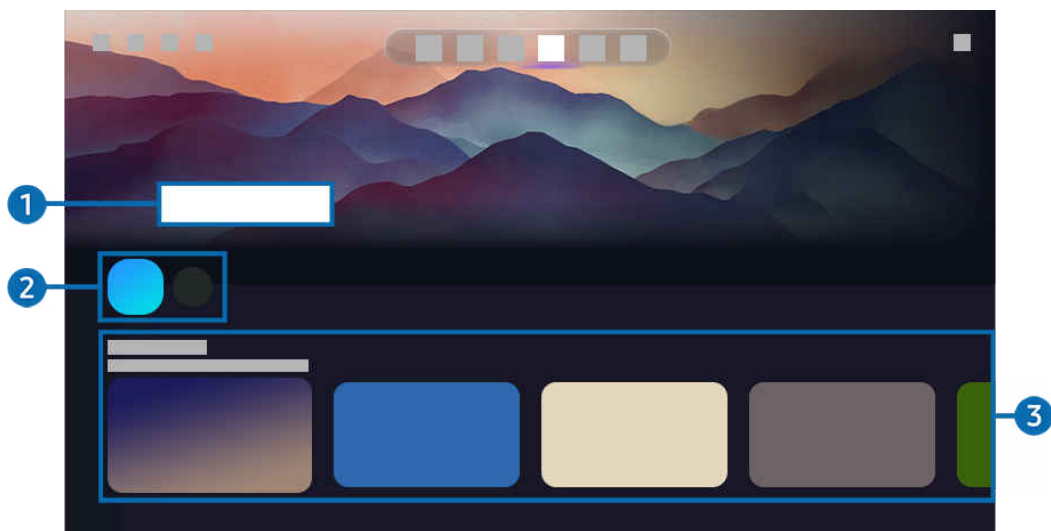

-  The image on your TV may differ from the image above depending on the model and geographical area.

## **1** Getting to Know Ambient Mode

Press [View Help](#) to briefly view information about Ambient mode, including functions.

## **2** 3rd Party App

You can download images from the 3rd Party apps and use them in **Ambient** mode. You can move the app to another location by selecting [Edit List](#) located at the end of the list.

-  Supported 3rd Party apps may vary, depending on the region.
-  Whenever a new 3rd Party apps is released, users can display a wider variety of artwork.

### 3 Function and content preview

Select a preferred content and a preferred background and set them as your **Ambient** mode. While in **Ambient** mode, press the Select button and then the Up directional button on the remote control to view the content details.

 You can use the SmartThings app on a Mobile Device to select a desired content and change the settings. Indicates content perfectly suited for the time of the day.

 Available content categories may differ depending on the model or geographical area.

- **Changing art work**

Change the artwork to display in **Ambient** mode. Press the Select button on the remote control to move the focus to an artwork. Use the left or right directional button to move to the desired art work, and then press Select button on the remote control.

- **View Details**

View detailed information about the selected image.

- **Favourite**

Add or delete specific images in **Favourite** by pressing the Select button and then the Up directional button on the remote control. To view items that are set as **Favourites**, navigate to **Ambient > Favourite**.

-  **Favourite:** The item is not set as Favourite
-  **Favourite:** The item is set as Favourite

- **Edit**

Customise the settings to suit your preferences.

 Available functions may not be supported depending on the model or content.

- **Weather Filter**

You can add a weather effect to content.

- **Time Filter**

You can select any background time format for content.

- **Colour**

Changes the colour of the content.

- **Vibes**

Selects a mood that matches the content.

- **Backgrounds**

Changes the background of the content.

- **Shadow Effects**

Applies a shadow effect that you select to the content.

- **Filter**

You can select an image filter effect to content.

- **BGM Mode**

You can add a background music to content.

- **Screen Settings**

You can adjust the settings such as content brightness, saturation, and colour tone.

- **Brightness**

Adjusts the brightness of the content.

- **Saturation**

Adjusts the saturation of the content.

- **Colour Tone**

Adjusts the colours of the content.

- **Red Tone / Green Tone / Blue Tone**

Adjusts the red, green, blue contrast.

## Selecting Content Category

 Available content categories may differ depending on the model or geographical area.

- **Favourite**

While in **Ambient** mode, press the Select button on the remote control and press ♥ **Favourite** to save the displayed content to **Favourite**.

- **Special Edition**

Allows you to enjoy creative artwork and interior design content created by the world's finest artists and designers.

 This function may not be supported depending on the model or geographical area.

- **Cinemagraph**

Adds a looping animation to a specific part of the photo to make it more attention-grabbing.

- **My Album**

Allows you to set a photo stored in your mobile device or Samsung Cloud as the wallpaper of the **Ambient** mode screen.

 To import photos from your mobile device or Samsung Cloud, use the SmartThings app on your mobile device.

 For more information about how to configure the photo settings, select **How to Select Photos**.

- **Q Collection**

Provides content that is dedicated to Samsung QLED.

 This function may not be supported depending on the model or geographical area.

- **Mood**

Enjoy a range of options to create the right ambience to suit your mood.

 This function may not be supported depending on the model or geographical area.

- **Relaxation**

Relax with a selection of calming content inspired by nature to soothe your mood.

 This function may not be supported depending on the model or geographical area.

- **Décor**

Allows you to select content with a sensible and beautiful design.

 This function may not be supported depending on the model or geographical area.

- **Info**

Allows you to select essential real-time information, such as weather, temperature, time and news.

 This function may not be supported depending on the model or geographical area.

- **Artwork**


Allows you to select content such as world famous photos and artwork.

- **Background Theme**

Allows you to select a background theme provided by Samsung.

 Take a picture of a wall using the SmartThings app on your mobile device to create a custom background theme. When you use this function, there may be a delay in image transmission and optimisation depending on network conditions.

 A created **Background Theme** can be set as the background for content. To set it as the background for content, press the Select button on the remote control while in **Ambient** mode, and select **Edit**.

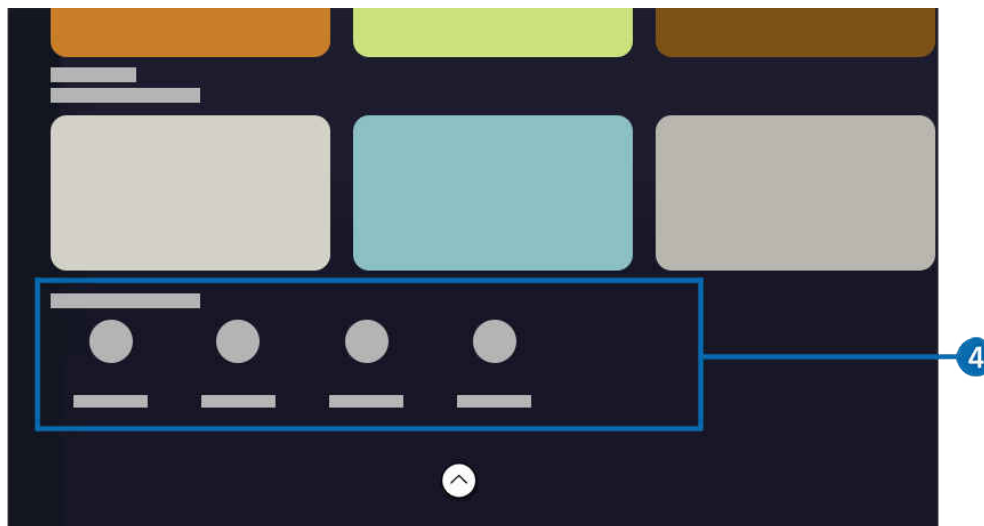

 The image on your TV may differ from the image above depending on the model and geographical area.

#### 4 Ambient Screen Options

Following **Ambient** mode options are configurable:

-  This menu can be found at the bottom of the **Ambient** home. To configure the option settings, scroll down to the far bottom.
-  Available options may vary depending on the model.

- **Auto Brightness**

Changes the auto brightness setting for **Ambient** mode.

-  When this function is set to **Off**, the brightness level of the TV screen is not automatically adjusted in response to the surrounding light level.

- **Sleep After**

Sets the time when the **Ambient** mode screen turns off automatically.

-  If there is no remote control input for the set time, the screen goes off.

- **Reset My Album**

Reset photos saved in **My Album**.

- **What is Ambient?**

Briefly view information about **Ambient** mode, including functions.

### Entering the TV viewing screen from Ambient Mode

To access the TV screen from **Ambient** mode, press either the  or  button to redirect to the **Ambient** mode Home screen and then press the directional buttons on the remote control to select **For You** / **Discover** or **Live**.

-  If the TV is off and the  button is pressed, the  **For You** / **Discover** screen appears.

## About the Art screen

Learn about the functions available in Art mode.

🏠 > (top of Smart Hub Home screen) > 🎨 Art



 The image on your TV may differ from the image above depending on the model and geographical area.

### 1 List of image categories

Choose from images of different categories shown on the screen and press the Select button to see the content related to the selected image or a full-screen view of the selected image. Select [Preview](#) for a full-screen view of the selected image for 30 seconds. If you like an image, you can sign up for [Membership](#).


Add or delete specific images in [Favourites](#) by pressing Select on the remote control. To view items that are set as [Favourites](#), navigate to [My Art Store](#) > [Favourites](#).

- : [Favourites](#) feature disabled / : [Favourites](#) feature enabled

 Available content categories may differ depending on the model or geographical area.

### 2 Recent

View the last-viewed image again.

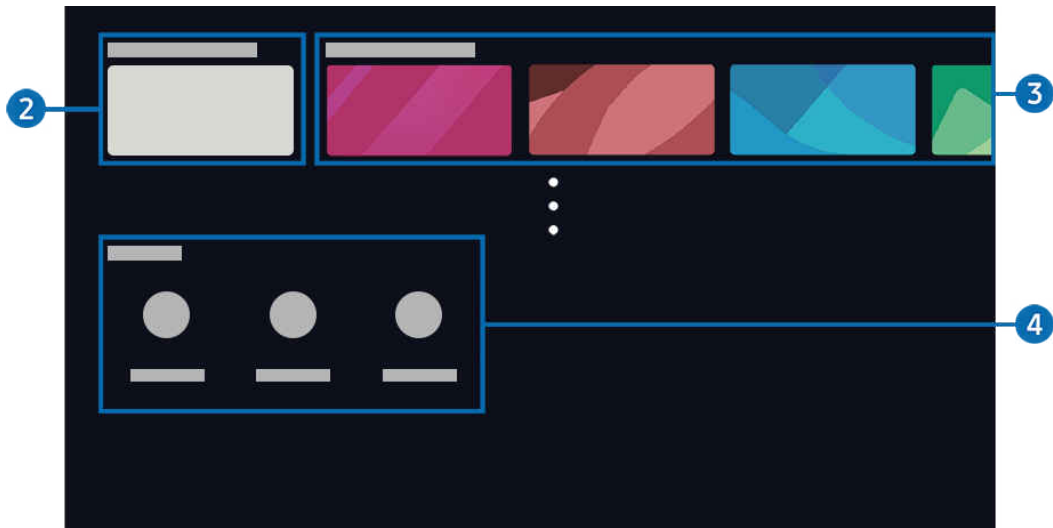

 The image on your TV may differ from the image above depending on the model and geographical area.

### 3 My Art Store

- **My Photos**

Upload and display your photos.

- **Favourites**

Manage images saved in **Favourite**.

- **Display All / Resume Play**

Play images in **Favourite** as a slideshow.

- **Delete**

Select and delete multiple images in **Favourite** simultaneously.

- **Membership**

Sign up for **Membership** to gain full access to artwork so you can change the displayed artwork regularly for variety. Follow the on-screen instructions to proceed with the payment.

- **Payment Info**

View artwork purchase details, and easily purchase artworks by entering required payment information.

 For details about payment information, visit Samsung Checkout (samsungcheckout.com).

- **History**

View the content you recently viewed in **Art** mode, in order.

## 4 Art Options

Configure options related to the **Art** mode screen.

 This menu can be found at the bottom of the **Art** home. To configure the option settings, scroll down to the far bottom.

- **Sleep Options**

- **Sleep After**

The TV automatically turns off if no motion is detected around the TV for a specified period of time. Press the Select button to specify a time period.

- **Motion Detector**

Set the **Motion Detector** for the motion sensor. Press the Select button to set the sensitivity level.

 **Motion Detector** may not be supported depending on the model or geographical area.

- **Night Mode**

The TV automatically turns off if no light is detected around the TV. This mode detects lights around the TV to automatically turn on or off the TV depending on the presence of light. Press the Select button to turn the mode on or off.

 This function may not be supported depending on the model.

- **Art Effect**

The **Art Effect** is turned on by default. This displays content as close as possible to the original artwork.

If you turn off the effect, content is displayed in the customised picture quality.

 This function may not be supported depending on the model.

- **What is Art**

Briefly view information about **Art** mode, including functions.

## Setting the Art Mode

If you select a saved image, the TV goes into **Art** mode. In **Art** mode, press the Select button on the remote control to use the following menu options:

 Settings may differ by image.

- **Changing art work**

Change the artwork to display in **Art** mode. Use the directional button on the remote control to move to the desired art work, and then press Select button.

- **View Details**

Press the Up button on the remote control to select **View Details**. View detailed information about the selected image.

- **Mount**

Press the Up button on the remote control to select **Mount**. Customise the border style and colour to suit your preferences. To save changes, select the desired mat style and colour, and press either the Select or  button.

 Supported border styles may differ if the image aspect ratio is not 16:9 or the image resolution is lower than the recommended resolution.

 Recommended resolution: 1920 x 1080 (for 32LS03F/32LS03H models) or 3840 x 2160

- **Screen Settings**

Press the Up button on the remote control to select **Screen Settings**. Customise the **Art** mode screen settings to suit your preferences.

- **Brightness**

Adjust the screen brightness. Press the Select button to save the change.

- **Colour Tone**

Adjust the image colours. Press the Select button to save the change.

- **Brightness Reset**

Reset the screen brightness to the default value.

## Import images from USB memory

 This function may not be supported depending on the model.

1. Connect the USB memory device storing images to the TV.
2. The USB memory is automatically recognised, and the screen displays a list of image, music, and video files that are stored in the USB memory.

 An alternative way to run the USB memory is to navigate to  > left directional button >  **Connected Devices** and select the USB memory.

3. Navigate to the folder that contains the image file you want to save to the TV, and then select **Options** > **Send to Art Mode**.
4. After selecting an image, select **Send** to view sent images in **My Photos** or make **Art** Mode settings.

 Recommended resolutions (16:9): 1920 x 1080 (32-inch model), 3840 x 2160 (43-inch or larger models)

## Using Art Mode

You can use **Art** mode function to display image content such as artworks or photos when you are not watching TV in full screen mode.

 This function may not be supported depending on the model.

- Press the  button while using the TV, the TV switches to **Art** mode.

 In **Art** mode, the Remote control sensor at the bottom of the TV remains off.

- Press the  button in **Art** mode to enter to **Home** screen.
- Press the  button in **Art** mode to enter to **Art** Home.
- To turn off the TV completely, press and hold the  button on the remote control, or press the TV Controller button of the TV.

Configure operation settings for the power button on the remote control in  > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Remote Control** > **Power Button Option**. This feature is set to **Art/TV** by default.

If you briefly press the power button on the remote control, switches to Art mode or TV mode. If you set this feature to **On/Off**, the TV turns on or off.

 This function may not be supported depending on the model.

 If you use a remote control other than the Samsung Smart Remote, the TV may not be turned off completely.

- In **Art** mode, the brightness and colour tone of your TV are automatically adjusted depending on the ambient, and the TV can be automatically turned off.

 The TV is set by default so that the screen turns off automatically when the ambient light dims in **Art** mode.

- Configure the motion sensor settings by using **Art Options** ( > (top of Smart Hub Home screen) >  **Art** > **Art Options**) at the bottom of the **Art** home displayed on the TV or using the mobile SmartThings app. The TV may automatically turn on or off by detecting user motions and other visual changes.

 This function may not be supported depending on the model or geographical area.

- While in **Art** mode, use the SmartThings app on your mobile device to save photos on the device to the TV.

 This function may not be supported depending on the TV model or mobile device.

 Supported features may differ depending on the version of the SmartThings app.

## Using Art mode with the SmartThings app

You can download the SmartThings app from Google Play Store, Samsung Apps, or the App Store.

If the TV is not registered in your SmartThings app, press + (Add Device) and register the TV before using the mode.

 The features or terminology may vary depending on the version of the SmartThings app.

 On tablet devices, **Art** mode features may not be supported by the SmartThings app.

Once you have installed the SmartThings app on your mobile device, you can use the following functions:

- Selecting an image under **Art** mode.
- Saving photos from a mobile device to the TV: Use the Add picture function to save photos on a mobile device to the TV.
  - **Add Picture** > select 2 to 3 images > **Create Mount**: Combine the 2 to 3 images to create a single image.
  - **My Album** > select content, such as **Dynamic Filter** or **Auto Gallery**, and then press Select Photo to set the content as mobile photos.
- Subscribing to **Membership**.
- Applying border styles and colours to images.
-  (more) > **Sleep Options**
  - Setting the brightness for **Art** mode.
  - Setting **Sleep After**: When no motion is detected for the time specified in **Art** mode, the TV turns off automatically.
  - Setting **Motion Detector**: Set the sensor sensitivity so that the TV turns on or off automatically when motion is detected in **Art** mode.

 **Motion Detector** may not be supported depending on the model or geographical area.
  - Setting **Night Mode**: This mode detects lights around the TV to automatically turn on or off the TV depending on the presence of light.

## Precautions when using Art mode

 Motion Sensor may not be supported depending on the model or geographical area.

- The motion sensor is located at the bottom of the TV. Do not block the sensor at the front of the TV. The motion sensor as well as the brightness and colour tone of the screen can be affected.
- **Art** mode uses algorithms to minimise image burn-in that can be caused by displaying still images on the screen for long periods of time.
- The performance of the sensor may vary depending on the TV installation and operating environment.
  - The screen brightness and colour tone may be affected depending on the colour of the floor on which the TV stands.
  - In an environment where special light sources other than standard light sources (halogen, fluorescent) are used, the sensor's motion recognition performance may vary depending on the positions, types, and number of the light sources.
  - If the area around the TV is too dark or bright, the screen brightness may be limited or the sensor may not work normally.
  - If the TV is installed too high or too low, the sensor may not work normally.
  - The motion sensor may sense motion from a flashing LED, a pet, a car moving outside the window, or other occurrence and start operating.
- Depending on the **Auto Power Off** function settings, the TV may turn off when there is no user input in **Art** mode, such as inputs from the remote control ( > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Power and Energy Saving** > **Auto Power Off**). [Try Now](#)
- The following functions are disabled in **Art** mode.
  -  > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Power and Energy Saving** > **Sleep Timer** [Try Now](#)
  -  > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Power and Energy Saving** > **Off Timer** [Try Now](#)
  -  > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Power and Energy Saving** > **Screen Saver** [Try Now](#)

## About the Generative Wallpaper

The Generative Wallpaper feature allows users to create and display images to suit their preferences.


🏠 > (top of Smart Hub Home screen) > 🌐 Ambient

🏠 > (top of Smart Hub Home screen) > 🎨 Art

🌟 > **Generative Wallpaper**

It is possible to create custom pictures by displaying them on the TV screen.

- ✎ This function may not be supported depending on the model.
- ✎ The location of this feature may differ, depending on the model.
- ✎ There is a limit to the number of **Generative Wallpaper**'s that can be created per day.

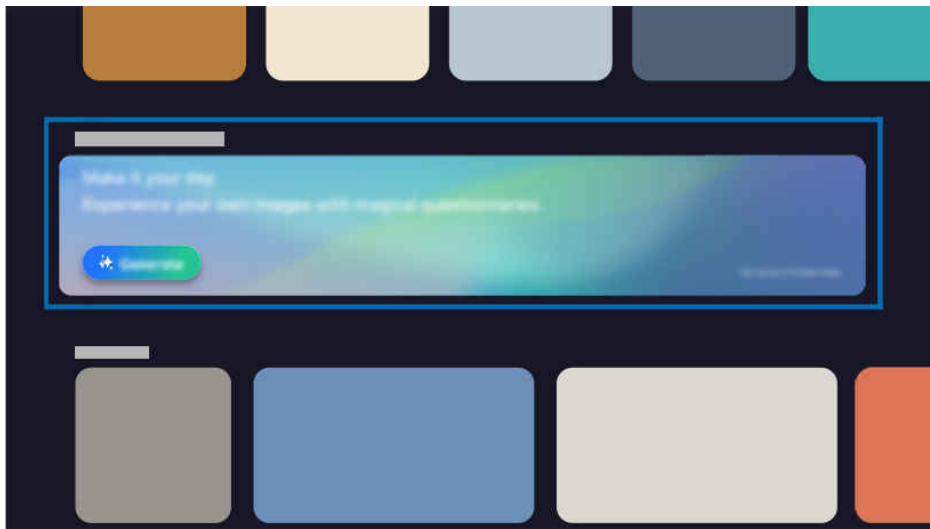

- ✎ The image on your TV may differ from the image above depending on the model and geographical area.

Press the Generative Wallpaper banner or button to activate the feature.

- Selecting a keyword  
Select the desired keyword of interest for the asked question, then related images are displayed.
- Creating Images through Speech  
Press 🗣️ / 🗣️ and say the image you want. The intended image will be created.

- ✎ This function may not be supported depending on the geographical area.

- Saving an image

Select and download a single images of your choice.

Downloaded images are saved to [Ambient](#), [Art](#) mode, or [Generative Wallpaper](#) in [Now brief](#), and saved images can be viewed from the corresponding menu items.

 It is possible to download only one of the displayed images.

 The maximum image size that can be saved may differ, depending on the available memory in the device.

- Displaying Images

Display a specific image by selecting it from among the images saved under the [Generative Wallpaper](#) category.

 Images saved under [Generative Wallpaper](#) can be displayed from [Ambient](#), [Art](#) Mode, or [Now brief](#).

 Saved images can be set as the [Wallpapers](#) for [Now brief](#) ([Now brief](#) > [Edit](#) > [Wallpapers](#)).

- Deleting saved images

Delete images to free up the memory or delete specific images that are no longer needed. From the [Generative Wallpaper](#) category in [Art](#) Mode or [Ambient](#) mode, select [View All](#) and then select and delete the desired images.


 Deleted images cannot be restored.

## About the Samsung Daily+ screen

Easily use a wide variety services provided by [Samsung Daily+](#).

 > (top of Smart Hub Home screen) >  **Daily**

 This function may not be supported depending on the model or geographical area.

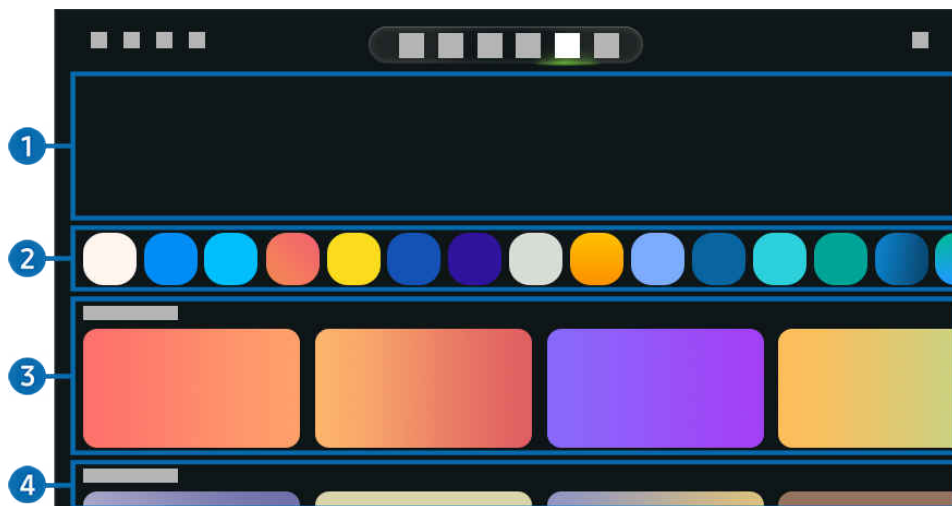

 The image on your TV may differ from the image above depending on the model and geographical area.

Provides useful services, such as home training, remote work, karaoke, and early childhood education content, allowing users to conveniently experience different lifestyles.

### **1** Banner

Provides information related to apps provided by Samsung Daily+.

### **2** App List

Rearrange, add or delete apps, using the edit function.

### 3 Service Apps

This feature provides useful services for everyday life, such as video calls and remote working, as well as health-related services that help with healthcare, such as home training and remote medical treatment. This allows users to conveniently experience different lifestyles, including karaoke and children's content that the whole family can enjoy.

 This function may not be supported depending on the model or geographical area.

 Services supported by this feature may differ, depending on the model and region.

 Various other services are available, in addition to the services shown below.

- **Stingray Karaoke**

With this karaoke service, sing the latest songs with your family and friends.

- **Baby Shark World for Kids**

Provides early childhood education content featuring characters like Baby Shark and Bebefinn. This allows children to learn about a variety of topics, including numbers, the human body, dinosaurs, and space.

- **SmartThings**

Monitor and control connected home appliances and IoT devices from the screen.

 For more information, refer to "[Using SmartThings](#)."

- **Workspace**

Use the remote function to connect to and use a Windows PC, Mac computer, or mobile device from the TV.

 For more information, refer to "[Using Workspace](#)."

 This function may not be supported depending on the model or geographical area.

- **Workout Tracker**

Connect to a nearby Galaxy Watch to view saved exercise data from the TV screen.

 For more information on [Workout Tracker](#), refer to the User Guide provided by Samsung Daily+.

 To connect, make sure the Galaxy smartphone and Galaxy Watch are located in the vicinity of the TV, and Bluetooth is enabled and the same Samsung account is logged in on all the devices.

 This function may not be supported depending on the model.

 This feature may not be supported, depending on the Galaxy device model and the One UI version.

 This feature may not work in some apps or on some service screens.

### 4 App Preview


Provides quick access to frequently used features in the app.

# Using Samsung Gaming Hub

Gamestream a wide variety of games right on your TV through Samsung Gaming Hub. Connect your controller through Bluetooth or USB.

🏠 > (top of Smart Hub Home screen) > 🎮 Game

✎ This function may not be supported depending on the model or geographical area.

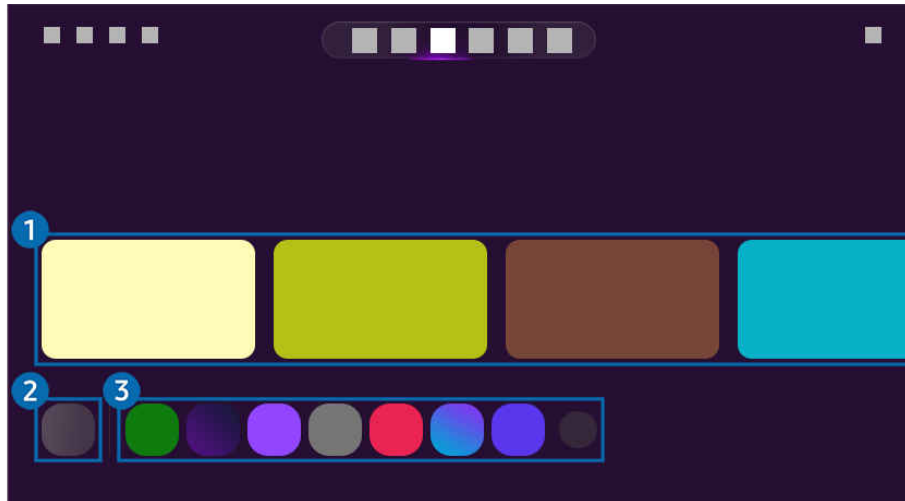

✎ The image on your TV may differ from the image above depending on the model and geographical area.

## 1 Recommended

Explore a wide range of games on Samsung Gaming Hub.


## 2 Controllers

Select a Controller to connect to the TV.

✎ For more information about supported controllers, refer to "[Using the Gamepad.](#)"

## 3 Apps and Devices

Install or remove apps or devices that are required to play games.

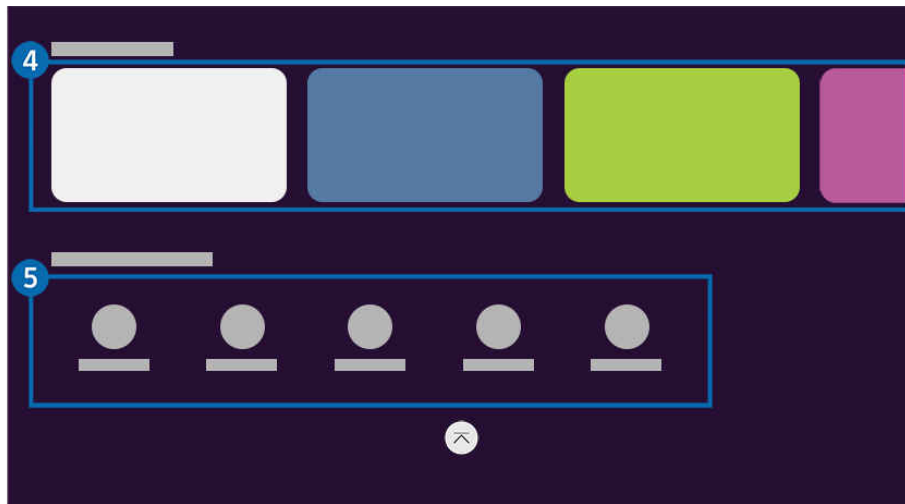

 The image on your TV may differ from the image above depending on the model and geographical area.

#### 4 Game list

Purchase games or subscribe to service offered by the Samsung Gaming Hub. Select a game to view the game details.

 Installation of related apps is required to run some games.

#### 5 Game Activity and Options

 This menu is provided at the very bottom of the Samsung Gaming Hub screen. To configure [Game Activity and Options](#), scroll down to the very bottom.

- [Game Rating Lock](#)

Set the age limit for playing games.

 The age limit is only supported to cloud game browsing domain in Gaming Hub.

- [Personalisation](#)

Tailored content is recommended, according to the games recently played by the user and the content the user is interested in.

- [Gaming Preference](#)

Customise the game content to be displayed depending on the selected gamer type.

- [Audio](#)

Select an Audio Device (e.g. Gaming Headset) to connect to the TV.

- [Music Player](#)

Manage the music to play while playing a game.


 This function may not be supported depending on the model or geographical area.

## About the For You / Discover screen

This screen makes personalised recommendations based on the user's viewing experience.

🏠 > (top of Smart Hub Home screen) > 🏠 **For You / Discover**

✎ The name of this function may appear differently depending on the model or geographical area.

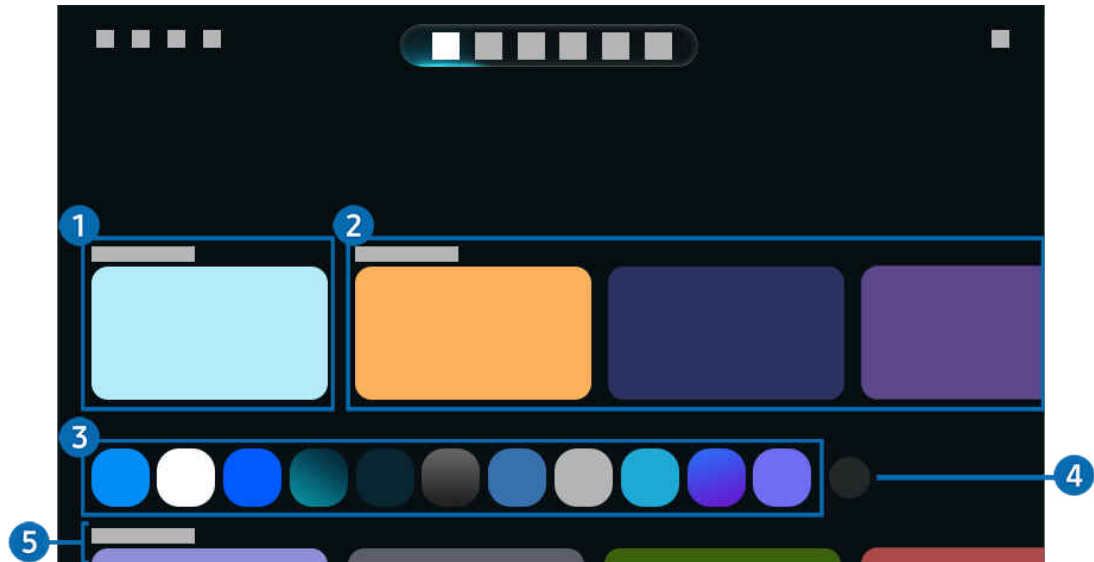

✎ The image on your TV may differ from the image above depending on the model and geographical area.

### 1 Now Playing

Access your last watched TV programme, app or last used input source.

### 2 Search Trends / On Now

✎ The name of this function may appear differently depending on the model or geographical area.

✎ This function may not be supported, depending on the input signal and settings.

✎ This function may not be supported depending on the model or geographical area.

- **Search Trends**

Recommends content that are currently popular in many OTT services.

- **On Now**

Display a list of TV programmes or Samsung TV Plus content items currently being aired.

### 3 App List

Add frequently used apps or delete apps on the Home screen, to suit your preferences.

## 4 Edit List

- **Moving an item**

From the end of the list, select **Edit List**. Move the focus to the app to relocate, and press the Select button on the remote control. Use the left or right button to reposition the app and then press Select. This repositions the app.

- **Alternative, faster way**

Alternatively, move the focus to the app to relocate, press and hold the Select button, and then press the left or right directional button.

- **Removing an item**

From the end of the list, select **Edit List**. Position the focus on the app you wish to remove and then press the Select button on the remote control to display the  icon. To delete the app, use the down directional button to select the  icon. This removes the app from the list on the screen.

Alternatively, move the focus to the app to be deleted, press and hold the Select button, and then use the down directional button to select the  icon.

- **Sort by Most Used**

Automatically sort items by frequency of use. From the end of the list, select **Edit List**. Position the focus on **Sort by Most Used** and then press the Select button on the remote control. The items are automatically sorted. To save this change, select **Done**. To cancel, select **Undo**.



This function may not be supported depending on the model or geographical area.

- **Adding Apps**

From the end of the list, select **Edit List**. Apps that can be added to the app list appear at the bottom of the list. Move the focus to the app to be added and then press the Select button on the remote control. Use the left and right directional buttons to move to the desired position and then press the Select button. The selected app is added to the app list.

## 5 Universal Guide

**Universal Guide** is a function that allows you to search for and enjoy various content, such as TV shows, dramas, and movies, in one place. **Universal Guide** can recommend content tailored to your preferences.

You can use this feature on your mobile device with the Samsung SmartThings app.

-  To access Universal Guide, press the down directional button on the remote control in Home Screen.
-  To enjoy the content from these apps on your TV, they must be installed on the TV.
-  When you watch some paid content, you may need to make a payment using their associated app.
-  Some content may be restricted depending on your network conditions and your subscriptions to paid channels.
-  Parental control is necessary when children use this service.
-  Images may look blurry depending on the service provider's circumstances.
-  This function may not be supported depending on the model or geographical area.
-  All YouTube 8K content recommended and provided through the Home screen of 8K TV is attributed to YouTube.

The picture quality of YouTube 8K Content can be affected by a variety of factors, including location, Internet bandwidth used at home, and Internet access speed.

Depending on your environment, it may be temporarily played at a resolution rather than an 8K resolution.

The recommended connection speed for receiving 8K image quality (8K resolution) is at least 80 Mbps.

The loading time it takes to start watching YouTube 8K Content may vary depending on the Internet bandwidth or Internet access speed you are using at that time.

In the future, depending on the operation policy of Samsung and YouTube services, whether YouTube 8K content is recommended through the Home screen may vary.

This function may not be supported depending on the model or geographical area.

### Media Options

-  This menu can be found at the bottom of the For You / Discover home. To configure option settings, scroll down to the bottom.
-  This function may not be supported depending on the model or geographical area.
- **Preferences:** Select a preferred service to receive content recommendations to suit your preference.
- **Continue Playing:** Choose content providers for **Continue Playing**. You can continue watching different shows in one place from all the **Continue Playing**-supported content providers listed below.
- **Watch Later:** Create a list of videos you want to watch or videos to watch later.
- **Parental Lock:** Redirect to the Parental Lock menu. Turn all parental control settings on or off.
- **Autoplay Sound:** When you browse and preview content, you can set the sound to come out or not automatically.

## About the Live screen

View TV programmes currently on the air. Access the Guide screen to check the broadcast schedules and set up scheduled viewing for the programmes you want.

 > (top of Smart Hub Home screen) >  **Live**



 The image on your TV may differ from the image above depending on the model and geographical area.

 This function may not be supported depending on the model or geographical area.

### 1 Live Banner

Recommended programmes and live broadcast information are displayed.

 This function may not be supported depending on the model or geographical area.

### 2 On Now

Display a list of TV programmes or Samsung TV Plus content items currently being aired.

 This function may not be supported, depending on the input signal and settings.

### 3 Guide

See the programming schedules of different channels on a single screen. Use [Guide](#) to view the daily programme schedule for each broadcaster. You can also find out detailed information about programmes, watch a specific programme, or schedule the recording of a programme.

 For more information about [Guide](#), refer to "[Using the Guide](#)."

 This function may not be supported depending on the model or geographical area.

### 4 Genre

Select a genre to sort and display specific channels to suit your preferences.

 This function may not be supported depending on the model or geographical area.


## About the Apps screen

Download and run various apps from Smart Hub.

 > (top of Smart Hub Home screen) >  Apps

You can enjoy a wide range of content including video, music, sports and game apps by installing the corresponding apps on your TV.

-  To use this feature, the TV must be connected to the network.
-  When Smart Hub is launched for the first time, the default apps are automatically installed. The default apps may differ depending on the model or geographical area.

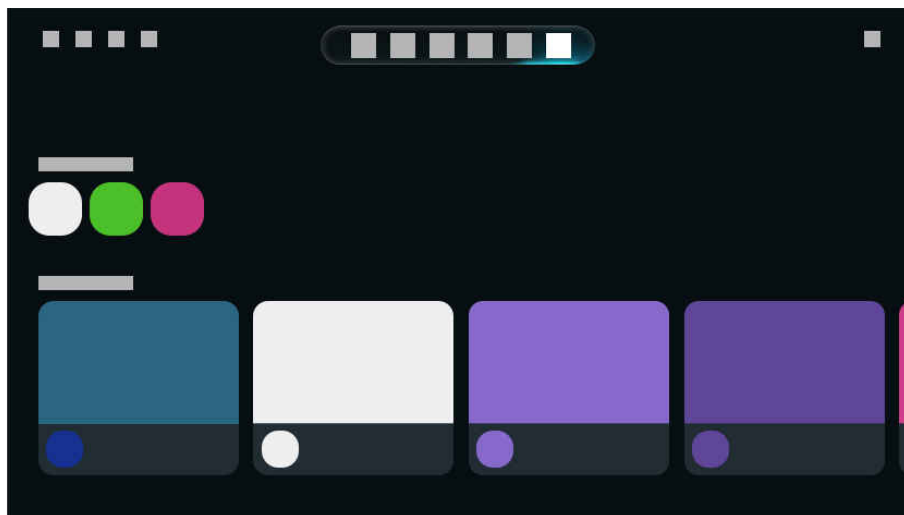

-  The image on your TV may differ from the image above depending on the model and geographical area.

## Installing an app

1. Move to the app you want to install, and then press the Select button. The detailed information screen appears.
2. Select **Install**. When the installation is complete, the **Open** menu appears.
3. Select **Open** to run the app immediately.

 You can view installed apps on the **App Settings** screen.

 If the TV's internal memory is insufficient, you can install some specific apps on a USB device.

 You can run an app installed on a USB device only when the USB device is connected to the TV. If the USB device is disconnected while an app is running, the app is terminated.

 You cannot run an app installed on a USB device on a PC or another TV.

## Launching an app


You can run the app desired from **Downloaded App**.

The icons below appear within the selected app's icon and indicate the following:

-  : The app is installed on a USB device.
-  : The app has a password.
-  : The app needs to be updated.
-  : The app supports the mirroring function.

## About the Apps Settings

 This menu can be found at the bottom of the [Apps](#) home. To configure the option settings, scroll down to the far bottom.

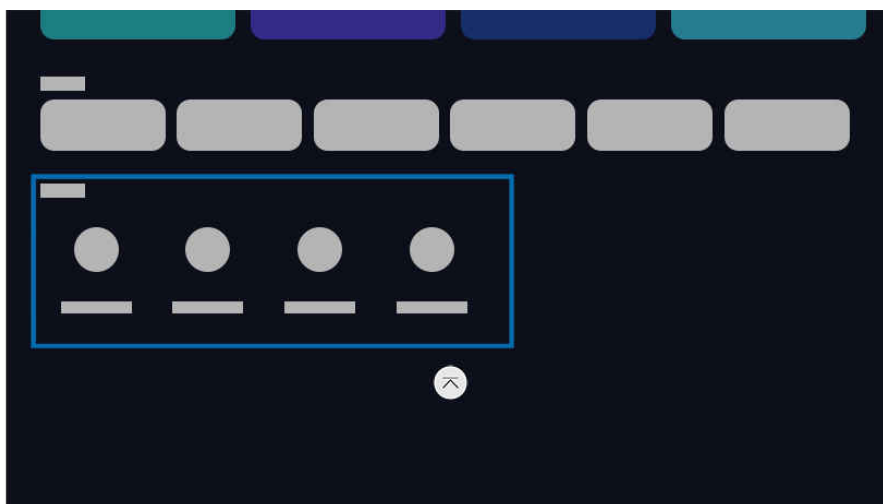

 The image on your TV may differ from the image above depending on the model and geographical area.

- [App Settings](#)

Manage installed apps.

 For details, refer to the 'Managing installed apps' section.

- [Update All](#)

Simultaneously updates all apps that can be updated.

- [Auto update](#)

To automatically update the installed apps, set [Auto update](#) to **ON**.

 Automatic update is enabled only when the TV is connected to the network.

- [Copyright](#)


View the copyright information.

 This function may not be supported depending on the model or geographical area.

## Managing installed apps

To manage installed apps, access [App Settings](#).

 [App Settings](#) can be found at the bottom of the [Apps](#) screen. To access [App Settings](#), scroll down to the bottom.

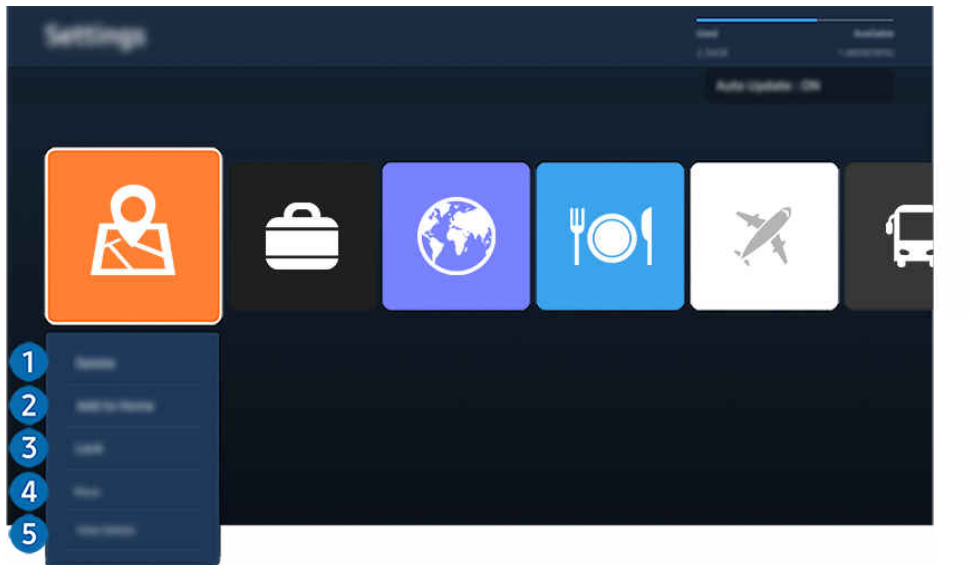

 The image on your TV may differ from the image above depending on the model and geographical area.

### 1 Adding apps to the Home Screen

1. Select an app to add.
2. Select [Add to Home](#).
3. After the Home Screen appears, move the selected app to the desired location.
4. Press the Select button.

The selected app is added to the Home Screen.

 If the selected app is already added to the Home Screen, this function is disabled.

### 2 Removing an app

1. Select an app to delete.
2. Select [Delete](#).

The selected app is deleted.

 Ensure that the related app data is also removed when you remove an app.

 Standard apps cannot be uninstalled.

### 3 Locking and unlocking apps

1. Select an app to lock or unlock.
2. Select [Lock/Unlock](#).

The selected app is locked or unlocked.

 To lock or unlock an app, enter the PIN. You can set the PIN in  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [PIN Settings](#) > [Change PIN](#). [Try Now](#)

### 4 Reinstalling an app

1. Select the app to install again.
2. Select [Reinstall](#).

Reinstallation starts.

### 5 Checking the app information details

1. Select the app to check.
2. Select [View Details](#).

The app information screen appears.

 You can rate an app on the [View Details](#) screen.


## About the Settings screen

Manage external devices connected to the TV, and configure settings for various functions available on the TV.

 > left directional button >  **Settings**

 /  >  **Settings**

 Some screen setting features may not be available on the Smart Hub Home screen.

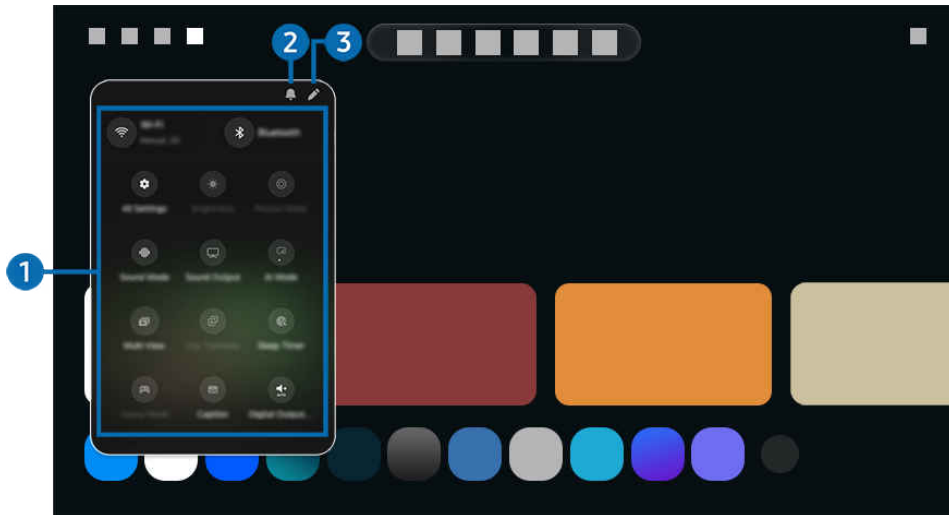

 The image on your TV may differ from the image above depending on the model and geographical area.

### **Settings**

Move the focus to the **Settings** menu to display quick setting options below the menu. Quick Settings can be used to quickly configure frequently used features.

 The **Settings** items may not be supported depending on the model or geographical area.

- **All Settings**

Displays the **Settings** menu for configuring specific settings.

- **Brightness**

Easily configure the screen settings: **Brightness**, **Contrast**, **Sharpness**, **Colour** and **Tint (G/R)**.

- **Picture Mode**

Change the picture mode for the optimal viewing experience. Press the Select button to change the **Picture Mode**.

- **Sound Mode**

You can select a sound mode to optimise your listening experience. To change the sound mode, press the Select button.

- **Sound Output**

You can select which speakers the TV uses for audio output. To change the audio output, press the Select button.

- **AI Mode**

Improves your viewing experience by recognising your content, usage patterns, and the environment around your TV.

 This function may not be supported depending on the model or geographical area.

 For more information about the Intelligent Mode, refer to "[Using AI Mode](#)".

- **Bluetooth**

Connect your TV to Bluetooth devices. This can be done by selecting **Bluetooth** to automatically search for Bluetooth devices.

 Connecting Bluetooth devices may not be supported depending on the model or geographical area.

- **Wi-Fi / LAN**

Check your network connection. To check your network connection or change the connection settings, press the Select button.

 This function may not be supported depending on the model or geographical area.

- **Multi View**

While watching the TV, you can simultaneously view multiple screens that are split.

 For more information, refer to "[Using Multi View](#)".

 This function may not be supported depending on the model or geographical area.

- **Sleep Timer**

You can turn off the TV automatically at a specific time. To change the sleep time, press the Select button.

- **Game Mode**

You can set the **Game Mode** to optimise the TV screen for better gaming performance. To turn **Game Mode** on or off, press the Select button.

 This function is only available when an external input source is being used.

 For more information, refer to "[Using Game Mode](#)".

 This function may not be supported depending on the model or geographical area.

- **Live Translate**

Set your preferences for content with subtitles translated into your preferred language. To configure this setting, press the Select button on the remote control.

 This function may not be supported depending on the model or geographical area.

- **AI Football Mode Pro / AI Football Mode / Football Mode**

Automatically optimises picture and sound quality when watching football matches.

 The name of this function may appear differently depending on the model or geographical area.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[Using Football Mode](#)".

- **Subtitle**

You can watch TV broadcasts with subtitles. To activate or deactivate the **Subtitle** function, press the Select button.

 This function may not be supported depending on the model or geographical area.

- **Digital Output Audio Format**

You can select an output format for digital audio. Note that the **Dolby Digital+** option is only available via HDMI (eARC) for external devices that support the **Dolby Digital+** format.

 This function may not be supported depending on the model or geographical area.

- **Picture Clarity**

You can optimise pictures that contain a lot of motions. To turn this function on or off, press the Select button.

 This function may not be supported depending on the model or geographical area.

- **Colour Tone**

You can select a colour tone suitable for your viewing preferences. To change to a colour tone that you want, press the Select button.

 This function may not be supported depending on the model or geographical area.

- **Energy Saving Solution**

Reduce power consumption by adjusting brightness settings.

 This function may not be supported depending on the model or geographical area.

- **Power and Energy Saving**

Display the **Power and Energy Saving** menu. Reduce energy consumption by changing your power preferences and other energy-saving options.

 This function may not be supported depending on the model or geographical area.

- **Auracast**

You can listen to the TV's audio by connecting to a Bluetooth audio device that supports **Auracast**.

 This function may not be supported depending on the model or geographical area.

 Some models support the **Auracast** feature. For more information about **Auracast**, refer to "Using Auracast".

- **Quick Share**

Easily transfer and save photos wirelessly from your Galaxy devices.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "Using Quick Share".

- **On Timer**

You can set **On Timer** to turn on the TV automatically at a specific time. **On Timer** is only available if the **Clock** has been set.

 This function may not be supported depending on the model or geographical area.

- **Off Timer**

You can set **Off Timer** to shut off the TV automatically at a specific time. **Off Timer** is only available if the **Clock** has been set.

 This function may not be supported depending on the model or geographical area.

- **Support**

Displays the **Support** settings menu.

 These functions may not be supported depending on the model or geographical area.

- **Audio Language**

You can change to the audio language you want to hear. To make adjustments, press the Select button.

 These functions may not be supported depending on the model or geographical area.

## 2 **Notifications**

You can view a list of notifications for all events that occur on your TV. A notification appears on the screen when it is time to schedule viewing, schedule recording, etc.

If you move the focus to **Notifications**, and then press the Select button, a notification window appears on the right and the following functions are available:

-  **Delete All**

You can delete all your notifications.

-  **Settings**

You can select services you want to be notified about.

When you select **Allow sound**, notifications are displayed with a notification sound.

## 3 **Edit**

From the end of the **Settings** list, select **Edit**. You can change the location of functions in the **Settings** screen.

 An alternative way to move a function is to move the focus to the function to move and then press and hold the Select button.

# Using a Samsung account

Create and manage your own Samsung account.

 > left directional button >  [Settings](#) > [All Settings](#) > [Samsung Account](#) [Try Now](#) [Try Now](#)

 You can view the entire text of the Terms & Policy in  > left directional button >  [Settings](#) > [All Settings](#) > [Samsung Account](#) > [My Account](#) > [About Samsung account](#) > [Terms and conditions](#) after logging in to your Samsung account.

 Follow the instructions on your TV screen to create or log in to a Samsung account.

 Samsung account can be used on TV, mobile device and website with one ID.

 This function may not be supported depending on the model.

## Signing in to a Samsung account

 > left directional button >  [Settings](#) > [All Settings](#) > [Samsung Account](#)

Launch the camera on your mobile phone, and scan the QR code to log in to your Samsung account or create a new account.

An alternative way to log in is to select an email address and manually enter your account, or to select a website and access the website from your computer or mobile phone.

## Managing your Samsung account

 > left directional button >  [Settings](#) > [All Settings](#) > [Samsung Account](#) > [My Account](#)

When you sign in to your Samsung account, you can use the following functions:

- [Edit profile](#)

You can edit your account information.

 To protect personal information, enter [Edit profile](#) and then [Sign-in Method](#) is set to [Select your ID and input password \(high security\)](#).

 If you want the TV to log you into your account automatically whenever you turn on the TV, click [Stay Signed In](#).

 When the TV is used by multiple people, turn off [Stay Signed In](#) to protect personal information.

- [Payment Info](#)

You can view or manage your payment information.

- [Subscriptions](#)

View subscription-related information.

 This function may not be supported depending on the model.

- **PIN Setting**

Set or change your PIN.

- **Security and Privacy**

You can read the Privacy Policy for Samsung accounts or change custom service settings.

 This function may not be supported depending on the model.

- **Product Registration**

You can register the current TV or see the registered information. You can easily receive services after product registration.

 You can see the registered information or delete it at the Samsung account website (<https://account.samsung.com>).

- **Back up**

You can back up the TV settings to your Cloud storage. When resetting or replacing the TV, you can also restore its settings with the backed-up settings.

- **About Samsung account**

You can view the user agreement and privacy policy.

 For more information about the terms and conditions, special terms, select [View Details](#).

 This function may not be supported depending on the model.

- **Remove Account**

You can delete an account from the TV. Although you have deleted your Samsung account from the TV, you are not unsubscribed.

 To unsubscribe from your Samsung account, visit the Samsung accounts website (<https://account.samsung.com>).

 This function may not be supported depending on the model.

- **Sign out**

When multiple people share the TV, you can sign out of your account to prevent others from using it.

 This function may not be supported depending on the model.

## Using Workspace

Use the remote function to connect to and use a Windows PC, Mac, or mobile device from the TV.

 > (top of Smart Hub Home screen) >  **Daily** > **Workspace** 

Connect a Windows PC, Mac, or mobile device to the TV to easily use the device.

 For smooth use as in a computer, connect a keyboard and a mouse to your TV in advance.

 This function may not be supported depending on the model.

## Using Screen Sharing (Windows PC) / AirPlay (Mac)

 > (top of Smart Hub Home screen) >  **Daily** > **Workspace** > **Windows PC** > **Screen Sharing**

 > (top of Smart Hub Home screen) >  **Daily** > **Workspace** > **Mac** > **Screen Mirroring**

Follow the instructions on the screen to adjust the PC settings and wirelessly connect the TV to the PC.

 This function is only available for PCs that support wireless screen sharing.

 This function may not be supported depending on the model or geographical area.

 Connection via Windows OS is available in Windows 10 and later versions only.

 Connection via Mac OS is available in AirPlay.

## Using Easy Connection to Screen

 > (top of Smart Hub Home screen) >  **Daily** > **Workspace** > **Windows PC** > **Easy Connection**

You can easily use remote access function after installing **Easy Connection to Screen** on your PC.

Follow the instructions on the screen to download and install the **Easy Connection to Screen** PC app. Then you can easily connect a remote PC.

1. Download the **Easy Connection to Screen** PC app from <http://smsng.co/easy> and then install it on your PC.
2. Log in to the same Samsung account for both TV and PC.
3. When the PC is turned on and connected via the network, **Workspace's** Home Screen displays the PC.

 The **Easy Connection to Screen** PC app is available in Windows 10 and later versions only.

 Depending on the network environment including the firewall configuration, router type, and wireless signal strength, connection problems may occur, such as low speed, disconnection, or limited connection.

 This function may not be supported depending on the model or geographical area.

## Connecting a Remote PC

 > (top of Smart Hub Home screen) >  [Daily](#) > [Workspace](#) > [Windows PC](#) > [Manual Connection](#) 

 > (top of Smart Hub Home screen) >  [Daily](#) > [Workspace](#) > [Mac](#) > [Remote Login](#) 


Provides **Remote Desktop Connection (RDP)** for remotely connecting to a PC running on Windows and **Virtual Network Computing (VNC)** for a PC running on Mac. To remotely connect to a PC, you must enter the IP address of the remote PC or select a saved profile. Enter a correct username and password. If there is any computer that can be accessed via the same network, the found IP is displayed.

-  This function may not be supported depending on the model or geographical area.
-  To register a frequently used PC, move the focus to  [Manage User Profiles](#), and then press the Select button. When a pop-up window appears, select [Add](#), and then enter the PC information.
-  When your PC enters in power saving mode, connection is not available. It is recommended to cancel the power saving mode.
-  It is recommended to connect the wired network because the screen or sound may be interrupted depending on the network condition.

### 1. Configure your computer's settings to use the [Workspace](#) function.

-  Connection to Windows via the RDP protocol is available in Windows 10 Professional or higher.
-  Remote connection to a PC running on Mac via the VNC protocol is only supported for Mac OS X 10.5 or later.
- Windows OS:
  - 1) Right-click the **My PC** icon on Desktop or Windows Explorer and then click **Properties**.
  - 2) Click **Remote Desktop** and select **Activate Remote Desktop**.
- Mac OS:
  - 1) Select **Menu** > **System** > **Preferences** and then click **Sharing**.
  - 2) Select the **Screen Sharing** and **Remote Login** check box.
  - 3) Run the resolution changing app downloaded from App Store and then change the resolution to 1440 x 900 or lower.
-  If you do not change the resolution in Mac OS, the previous image may appear while connecting a remote computer.

2. Enter the required settings for connecting the computer remotely.

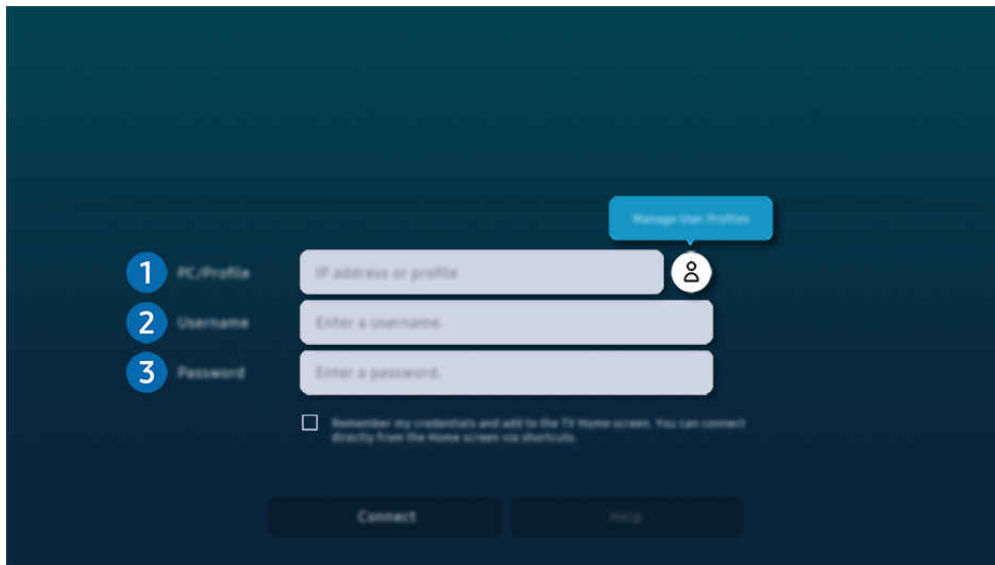


 The image on your TV may differ from the image above depending on the model and geographical area.

## 1 PC/Profile

Enter the IP address or profile of the PC you want to connect to.

- In case of Windows, when the computer to connect is within the same network (router/AP), run "cmd" command in **Settings > Network and Internet > View Network Properties** or in **Start > Run**, and then run "ipconfig" to check the IPv4 address of the computer.
- In case of Mac, you can check the IP address in **Settings > Remote Access**.
- When the TV and computer are not within the same network, it is required to know the public IP and configure the router and AP. Check whether the router connected to the computer supports port forwarding. When the company provides additional security features such as firewall, seek help from a security officer.

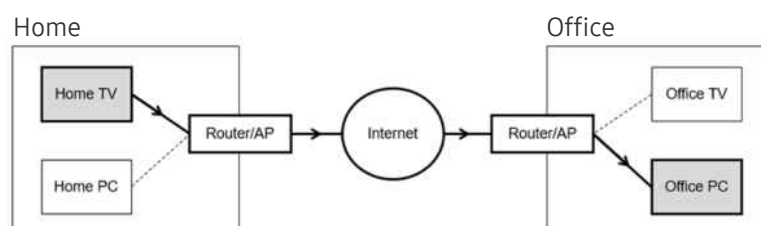

## 2 Username

Enter the Username of the computer. How to check the **Username**:

- Windows OS: **Control Panel > User Account Control**
- Mac OS: **System Preferences > Users & Groups**

## 3 Password

Enter the password for the login account.

 For use of PIN, do not enter PIN but the specified password of the computer.

## Playing Multimedia Content on a Remote PC

When you move the mouse cursor to the top of the screen after accessing a remote computer, the top bar appears. When the sharing folder icon is clicked in the top bar, the folders shared on Windows or Mac OS appear. You can play back any media content in a folder.

 For more information about playing multimedia content, refer to "[Playing pictures/video/music](#)".

To use this function, the folder sharing option on the computer to access must have been enabled as shown below:

- Windows OS:
  1. Run Windows Explorer and then move to the folder to share.
  2. Right-click the folder and then click **Properties**.
  3. After the **Properties** window appears, click the **Sharing** tab and then click **Advanced Sharing**.
  4. After the **Advanced Sharing** window appears, select the **Share this folder** check box.
- Mac OS:
  1. Select **Menu > System Preferences** and then click **Sharing**.
  2. Select the **File Sharing** check box.
  3. To add a folder to share, click the **Add+** button at the bottom.
  4. Select a folder and then click **Add+**.

 It is recommended to connect the wired network because the screen or sound may be interrupted depending on the network condition.

 When playing a video file via a remote computer, the screen or sound breaking may be encountered.

## Controlling your Galaxy device with the keyboard and mouse

 > (top of Smart Hub Home screen) >  **Daily** > **Workspace** > **Multi Control**

Control nearby Galaxy devices with the mouse and keyboard connected to the product.

-  To connect to nearby devices, turn on **Multi Control**, Wi-Fi and Bluetooth on the devices, and ensure that the devices are connected to the same wireless network and logged in with the same Samsung account.
-  This function may not be supported depending on the model or geographical area.

## Using Samsung DeX

Run **Samsung DeX** on your mobile device to connect the software to the TV.

Follow the on-screen instructions to connect **Samsung DeX**. Some models may not be searched when connecting the TV from a mobile device through **Samsung DeX**. If that is the case, follow the instructions shown on the mobile device screen to connect the software.

-  This function is available only on mobile devices that support the wireless Samsung DeX.
-  This function may not be supported depending on the model or geographical area.

## Using Microsoft 365

You can read or create a document after accessing the Microsoft 365 website.

-  Run the site in full screen mode.
-  URL modification is impossible in the Microsoft 365 page.
-  This function may not be supported depending on the model or geographical area.

## Adding the Web Service

Select the **Add Web Service** icon. Use the bookmarking function of the **Workspace** browser, you can add or delete the web service link to or from **Workspace**.

-  To add the web service, you must be signed in to your Samsung account.
-  The number of web services that can be added to **Workspace** is limited.
-  **Workspace** browser not share data with Internet. (Web browser outside from **Workspace**)

## Using Web Service

You can access the web service by selecting the web service icon added to [Workspace](#).

-  The screen on the webpage may differ from that of a computer.
-  You can copy or paste any text. Some image formats are supported.
-  For easy and secured login in Web Service, [Workspace Pass](#) is additionally supported as well as [Samsung Pass](#).

Setting [Samsung Pass](#) or [Workspace Pass](#).

Set [Samsung Pass](#) or [Workspace Pass](#) to Use in  > (top of Smart Hub Home screen) >  [Daily](#) > [Workspace](#) > Run the [Workspace](#) browser (Additionally select Microsoft 365 or [Add Web Service](#)) > [Internet Menu](#) > [Settings](#) > [General](#).

[Workspace Pass](#) allows you to easily manage the web service ID and password without biometric authentication on mobile devices. For this purpose, you must be signed in to your Samsung account. The password is encrypted to be safely stored on your TV.

However, the log in to [Workspace Pass](#) may not work depending on the site policy.

[Workspace Pass](#) only working on [Workspace](#).

-  To securely access the web service, you can use the [Workspace](#) browser's automatic shutdown or clear the history logs.
-  Before accessing the web service, refer to "[Read Before Using the Internet Function](#)".
-  [Workspace](#) browser not share data with Internet. (Web browser outside from [Workspace](#))

The web service supports the following keyboard shortcuts:

- F1: Returns to [Workspace](#)'s Home Screen.
- F5: Refresh.
- F8: Mutes the sound.
- F9/F10: Adjusts the volume.
- F11: Switches between full screen or default screen.

# Using the User Guide

Control and read the manual embedded in your TV.

## Launching the User Guide


 > left directional button >  **Settings** > **Support** > **Tips and User Guides** > **Open User Guide**

You can view the embedded User Guide that contains information about your TV's key features.

 You can download a copy of the User Guide from Samsung's website to view or print on your PC or mobile device (<https://www.samsung.com>).

 Some menu screens cannot be accessed from the User Guide.

## Using the buttons in the User Guide

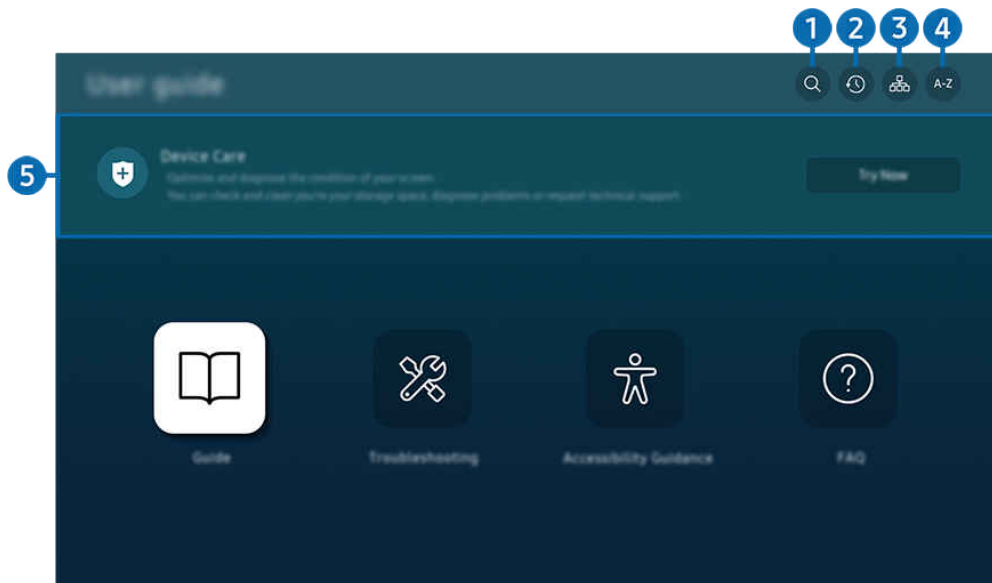

 The image on your TV may differ from the image above depending on the model and geographical area.

### 1 (Search)

Select an item from the search results to load the corresponding page.

### 2 (Recently Viewed Topics)

Select a topic from the list of recently viewed topics.

### 3 (Site Map)

It displays the lists for each item in User Guide.


#### 4 A-Z (Index)

Select a keyword to navigate to the relevant page.

 This function may not be supported depending on the model or geographical area.

#### 5 Device Care

Optimise and diagnose the condition of your TV. You can check and clean your storage space, diagnose problems or request technical support.

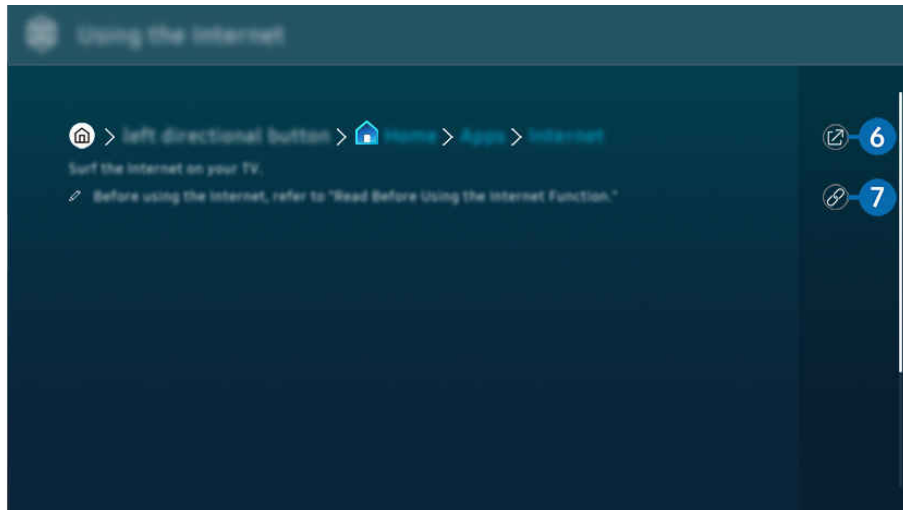

 Words in blue (e.g., [Internet](#)) indicate a menu item.

 The image on your TV may differ from the image above depending on the model and geographical area.

#### 6 (Try Now)

Allows you to access the corresponding menu item and try out the feature right away.

#### 7 (Link)

Access an underlined topic referred to on an User Guide page immediately.

# Using the Internet

Surf the Internet on your TV.

 > (top of Smart Hub Home screen) >  Apps > Internet

When you run **Internet**, you can see recently viewed websites or featured recommendations. When you select a desired website, you can get immediate access to it.

-  This function may not be supported depending on the model or geographical area.
-  You can use the **Internet** function more easily after connecting a keyboard and mouse.
-  You can scroll webpages with the directional button on the Samsung Smart Remote or Remote Control.
-  The webpages may differ from those on a PC.
-  Before using the **Internet**, refer to "Read Before Using the Internet Function".
-  The **Internet** app has an embedded **Samsung Pass Settings** ( > (top of Smart Hub Home screen) >  Apps > Internet > Internet Menu > Settings > Samsung Pass).

With **Samsung Pass**, you can log into the website easily and securely. When you visit the website again, you can log in with **Samsung Pass** Biometrics Authentication on your mobile device without entering your ID and password.

However, this **Samsung Pass** login may not work depending on the website policy. For this purpose, you must have been logged in the mobile device with a Samsung account registered in **Samsung Pass**.

## Using SmartThings

Monitor and control home appliances and IoT devices, connected to SmartThings, from the screen.

🏠 > left directional button > 📺 **Connected Devices** > ⚙️ **SmartThings** [Try Now](#) [Try Now](#)

🏠 > (top of Smart Hub Home screen) > 🌿 **Daily** > ⚙️ **SmartThings** [Try Now](#) [Try Now](#)

You can control the devices registered to the SmartThings cloud with remote control.

✎ This function may not be supported depending on the product or model.

✎ Power consumption may increase as SmartThings will operate when the TV is a low power or standby mode.



✎ The image on your TV may differ from the image above depending on the model and geographical area.

### 1 Place

Displays all places connected via the SmartThings app.

### 2 Map View

You can check the status of registered devices. If you log in with the same account used for the mobile SmartThings app, you can view devices, registered through SmartThings, more intuitively from [Map View](#).

✎ This function may not be supported depending on the model.

### 3 Favourites

View devices or features that have been set as favourites from the [Devices/Routines](#) tab.

### 4 Devices

View devices connected to SmartThings, and use the remote control to select and control any of the connected devices.

For details on SmartThings devices, access <https://partners.smartthings.com/supported-devices>.

 SmartThings devices can also be controlled from the mobile app.

### 5 Routines

View or run scenes created from the Routines tab in the mobile SmartThings app.

### 6 Add Device

Displays the list of devices that can be registered on your TV. You can register any by selecting a device.

 This function may not be supported depending on the model.

### 7 Samsung Account

Go to the Samsung account screen to create a new account or sign out of your account.

 If you are signed out of your Samsung account, select [Sign In](#) to sign in.

### 8 Settings


Edit devices connected to [SmartThings](#), or configure notification settings for the devices. You can also turn on the [Sensors](#) or the SmartThings hub feature.

## SmartThings Quick access

Control most used devices by accessing the [Quick Panel](#), without having to access [SmartThings](#).

[Quick Panel](#) in [SmartThings](#) can be run using the  or  button on the remote control. Select  at the bottom left of the screen.

 This function may not be supported depending on the model or geographical area.

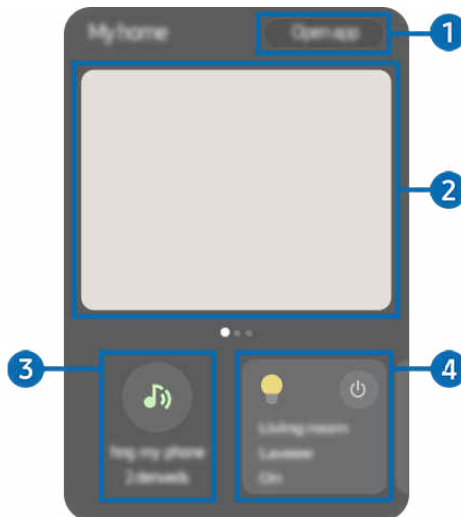

### 1 Open App

Opens the [SmartThings](#) app.

### 2 Camera

View camera streaming. When multiple cameras are connected, switch to a different camera screen using the left and right directional buttons on the remote control.

 This feature is only available when cameras are connected to [SmartThings](#).

### 3 Ring my phone

Make your mobile device ring to help locate it more easily.

 This feature is only available on Galaxy smart phones and tablets.

### 4 Most used

Monitor and easily control frequently used devices.

## Use the SmartThings Hub features [Try Now](#)

Use the SmartThings Hub features on various Samsung products to connect IoT devices (e.g., light bulbs, plugs, or sensors) that are supported by SmartThings.

 > left directional button >  [Connected Devices](#) > [SmartThings](#) > [Settings](#) > [SmartThings Hub](#)

-  This function may require a SmartThings dongle when connecting to Zigbee or Thread, depending on the model.
-  Make sure to log in to the same Samsung account on your TV as your mobile SmartThings app.
-  This function may not be supported depending on the connected device type.

## Register and manage devices via SmartThings [Try Now](#)

### Registering a TV / Smart Appliance / IoT device from the mobile app

Use the mobile SmartThings app to register your TV, smart appliances or various IoT devices. In the mobile app, tap the + (Add Device) to register a device.

\*Connect a doorbell to your TV, to receive a notification of the doorbell video and speak with the visitor while watching TV.

-  Only WWST (Works with SmartThings) certified doorbells are supported. Supported options may vary, depending on the device.
-  \* : This function may not be supported depending on the model.

## Use the screen's sensors via SmartThings [Try Now](#)

When you activate the sensor, you can see the sensor device on the SmartThings Device tab. You can create various IoT scenarios with TV without purchasing a separate IoT sensor.

 > left directional button >  [Connected Devices](#) > [SmartThings](#) > [Settings](#) > [Sensors](#)

-  Each sensor can be activated with user consent.
-  Each sensor may not be supported depending on the model.
-  The sound sensor is supported when the microphone switch at the bottom of the TV is turned on. The TV microphone may not be supported, depending on the model and region.
-  This function may not be supported depending on the model.

## Control SmartThings with Bixby [Try Now](#)

With Bixby on the product, you can control devices connected to SmartThings, as well as the TV, using voice commands.

 This function may not be supported depending on the connected device type.

## Control the display device from the mobile SmartThings app [Try Now](#)

From the mobile SmartThings App, use the TV remote control functionality, such as On/Off, Channel, Volume, and four directional buttons. You can also use [Search](#), [Apps](#), [Ambient](#) mode, [Art](#) mode, Mobile Cam, and other functions from the mobile app.

[Routines](#) in the mobile SmartThings app allows you to automatically run apps installed on the TV.

With [Routines](#), you can turn on the TV at your desired time and automatically run frequently used apps.

## Controlling a display device from the SmartThings app in Galaxy Watch

From the SmartThings app in Galaxy Watch, use the remote-control functions to turn on/off the TV, change channels, adjust the volume or use the directional buttons. If you switch to [Pointer mode](#) while using a remote-control function, it is possible to control the TV with simple hand gestures.

 [Pointer mode](#) may not be supported in some apps or external devices.

 [Pointer mode](#) may not be supported, depending on the Galaxy Watch model and the Wear OS version.

 This function may not be supported depending on the model or geographical area.

## Using the Samsung Smart Upgrade (For India Only)

Smart Upgrade is a one-stop finance solution on smart TV. It can help you track payments, send timely notifications and renew your smart TV hassle-free.

 It needs an internet connection for the latest information and device status. The device will get locked if the internet is not connected for a long period.

 This function may not be supported depending on the model or geographical area.

### Registering Smart Upgrade

When TV is purchased via Smart Upgrade scheme, You must download the application.

1. App is auto install if TV is registered via Samsung Smart Upgrade policy.
2. After Install, you can add apps to the Home Screen.

When you select the Smart Upgrade App in Home Screen, the app will be launched with full payment and purchase details pre-added.

### Using Smart Upgrade

1. Open Smart Upgrade App dashboard for detailed purchase information.
2. Scan the QR code and make payments from the payment tab in the primary navigation menu when the payment is due.

### Troubleshooting

- Payment is due

The device gets locked when the payment date is overdue. To resolve this, make the payment and click [Refresh](#) to unlock.

- No internet connection

The device gets locked when Smart upgrade is not able to get an update on payment status due to lack of internet. To resolve this, connect the smart TV to the internet and the device will be unlocked automatically.

- Incorrect country selected

The device will be locked if the country name selected during setup does not match the country name on your invoice. To unlock, setup the Smart Hub again with "Setup Smart Hub" and change the country as per your invoice.

- Terms & Conditions not selected

The device will get locked if terms & conditions on smart upgrade are not accepted. To unlock, press on "Go to T&C Setup" and follow the steps to do complete setup.

- Low Flash Memory

The device will be locked if App is deleted manually and there is no enough flash memory to download it. To unlock, press on [Reset Smart Hub](#) to reset Smart Hub.

## Playing pictures/video/music

Play media content stored on your TV, USB devices, mobile devices, cameras, PCs, etc.

 > left directional button >  **Connected Devices** > Connected Device [Try Now](#)

You can play media content saved on storage devices, such as USB devices, mobile devices and cameras on the TV.

 You cannot play media content if the content or the storage device is not supported by the TV. For more information, refer to ["Read Before Playing Photo, Video or Music Files"](#).

 Backup important files before connecting a USB device. Samsung is not responsible for damaged or lost files.

You can use the following functions on the media content list screen of a storage device.

- **Filter By**

Filters the media content by type of media.

- **Sort By**

Sorts the content list.

 This function may not be supported depending on the type of external device.

- **Options**

Deletes or plays the selected media content in the media content list. When you select [Refresh](#), the content list is reloaded.

 You can delete only the recorded content. To delete content, change the [Filter By](#) option to [Recorded](#).

 [Recorded](#) may not be supported depending on the geographical area.

## Playing multimedia content on a PC or mobile device

1. Select a device with media content in  > left directional button >  **Connected Devices** > Sources. The media content list in the device appears.
2. Select a media content item from the list.

The selected content is played.

 The content may not be played depending on the encoding method or file format. Furthermore, several functions may be restricted.

 Content on devices connected to the TV via your network may not play smoothly due to network communication problems. If this occurs, use a USB device.

## Playing multimedia content on a USB device

1. Connect a USB device to the USB port.
2. There is a content list browser shown directly.

 If a USB device that contains the content you want to play is already connected to the TV, select the USB device in the  > left directional button >  **Connected Devices** > Sources screen.

3. Select a content item to play from the list.

The selected content is played.

## Listening to your mobile device sound through the TV speaker using Sound Mirroring

Enjoy listening to music in your living space. Visualisations are generated on your TV that alter and respond to the frequency of your music.

1. Search for and connect to your TV from the  (Bluetooth) device list on your mobile device.
2. Select media content to play on your mobile device.

The selected media is played through the TV speaker.

 This function may not be supported depending on the model.

 In some models, the image of the played content may differ depending on the mode.

 If the TV and the soundbar are connected wirelessly, the operation may be restricted.

 Sound Mirroring entry path may be different in some models. ( > (top of Smart Hub Home screen) >  **APPS** > **Mobile Connection** > **Sound Mirroring**)

## Tune Station (MusicTV) functions

Tune Station is an all-purpose dashboard to simplify the entire musical experience when user wants to play music file from USB source.

It provides feature to user like themes, concert mode control, external speakers indicator - all from single display interface.

 This function may not be supported depending on the model or geographical area.

## How to use Tune Station

### Tune Station Registration

1. Search "Tune Station" from App Search and install Tune Station Launcher.
2. After Install, add to home. Now Tune Station App Icon will show on Home Screen.

When you select the Tune Station App icon in Home Screen, app will be launched in full screen and all Music files will be loaded, if USB is attached to TV.

### Launching Tune Station

You can launch Tune Station in following ways:

1. Select Music files on USB storage device or hard disk drive attached to TV. On clicking Music File Tune Station App will be launched.
2. You can manually launch Tune Station from Home Screen. On launch it shows Music files if USB storage device is attached to TV.
3. On clicking any recent played songs from Home Screen, Tune Station App will be launched.

## Buttons and functions available while playing multimedia content

Press the Select button while playing any video, photo or recorded content. The following buttons appear.

 The provided buttons and functions may not be supported depending on the model or geographical area.

 The available buttons and functions may differ with the content you are viewing or playing.

- **Pause / Play**

Pauses or plays the multimedia content.

- **Jump Backward / Jump Forward**

Press the up directional button to move the focus to the playback control bar, and then select the left or right directional button in the playback control bar to move backward or forward by 10 seconds in the video.

- **Move to a specific playback section**, move up the focus on the playback bar, and then select one of the five thumbnails.

 This function may not be supported depending on the file format.

- **Stop**

Stop the contents being played.

- **Previous / Next**

Displays the previous or the next multimedia content file.

If video playback time is 3 seconds or shorter and you press the  button, the video starts from the beginning.

- **Rewind / Fast Forward**

Rewinds or fast forwards the multimedia content. To increase the rewind or fast forward speed up to 3 times faster than normal, select the button repeatedly. To return to normal speed, select the  option or press the  button.

You can use the following functions when the video is paused. Note that with the video paused, the TV does not play audio.

- **Slow Rewind or Slow Forward**: Allows you to play a video slowly backward or forward by selecting the  or  option. There are 3 playback speeds. To change the playback speed, press the option repeatedly. To return to normal speed, select the  option or press the  button.

- **360 Mode**

Provides a 360-degree view for videos and photos.

-  This function may not be supported depending on the file format.
-  Video files using the mjpeg codec do not support a 360-degree view.
-  When a video or photo does not support a 360-degree view, applying 360 rotation to it may cause the screen to look distorted.
-  Videos may be interrupted if 360 rotation is applied during double speed playback.
-  Videos that support a 360-degree view may be interrupted if 360 rotation is simultaneously applied with other functions during playback.
-  This function may not be supported for some resolutions.
-  This function may not be supported depending on the model.

- **360 Auto Rotation**

Automatically adjusts the video's viewing angle by analysing the amount of image changes during playback of a video file that provides a 360-degree view. When this function is started, the rotation starts in a short time.

When **360 Auto Rotation** is focused, press the Select button to change to the following modes:

-  General
-  Dynamic
-  Natural

-  This function is only available when **360 Mode** is selected.
-  When **360 Auto Rotation** is activated, automatic adjustment is followed. The adjustment position may differ depending on the image.
-  The video's viewing angle is manually adjusted in General mode.
-  This function may not be supported depending on the file format.
-  Video files that use the mjpeg codec do not support a 360-degree view.
-  When a video does not support a 360-degree view, applying 360 rotation to it may cause the screen to look distorted.
-  Videos may be interrupted if 360 rotation is applied during double speed playback.
-  Videos that support a 360-degree view may be interrupted if 360 rotation is simultaneously applied with other functions during playback.
-  This function may not be supported for some resolutions.
-  This function may not be supported depending on the model.

- **Repeat**

Plays the current multimedia content repeatedly or all multimedia content files in the same folder repeatedly.

- **Shuffle**

Plays music files in random order.

- **Picture Off**

Plays music files with the screen off.

- **Fit to Screen**

Fits a photo to the screen.

- **Rotate left / Rotate right**

Rotates a photo left or right.

- **Zoom**

Zooms in a photo.

- **Background Music**

Pauses or resumes the background music while the TV displays photos.

 This function is available after enabling the **Background Music** option.

- **Options**

 The available options may differ with the model and content.

| Function                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Slideshow Speed</b>  | <p>Sets the slideshow speed.</p> <p> If there is only one image file in the USB device, the slide show is not played.</p>                                                                                                                                                                                                                                          |
| <b>Slideshow Effect</b> | <p>Applies transition effects to the slide show.</p> <p> If there is only one image file in the USB device, the slide show is not played.</p>                                                                                                                                                                                                                      |
| <b>Background Music</b> | <p>Plays background music as you set in the pop-up window while the TV displays photos.</p> <p> The music files must be saved in the same USB device as the photo files.</p> <p> To pause the background music, select <b>Background Music</b> on the playback screen bottom.</p> |
| <b>Subtitles</b>        | <p>You can set the detailed subtitle options such as the language, sync, size and colour.</p> <p> If subtitles are not displayed correctly, check the encoding setting.</p> <p> This function may not be supported depending on the model or geographical area.</p>              |
| <b>Rotate</b>           | <p>Rotates the video.</p>                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Audio Language</b>   | <p>Changes the audio language.</p> <p> This function is only available if the video supports multi-track sound.</p> <p> This function may not be supported depending on the model or geographical area.</p>                                                                   |
| <b>Information</b>      | <p>Displays detailed information about the current multimedia content.</p>                                                                                                                                                                                                                                                                                                                                                                          |

# Using Multi View


You can view multiple content items through Multi View.

 > left directional button >  **Settings** >  **Multi View** 

 This function may not be supported depending on the model.

To start **Multi View**, navigate to  > left directional button >  **Settings** >  **Multi View**. Next, select the item you want from the Add View list. Or select **Make My Own** to configure a custom layout and screen. You can add or delete a screen in the current **Multi View** screen by pressing the down directional key on the Samsung Smart Remote.

 The number of screens that can be configured may differ, depending on the model.

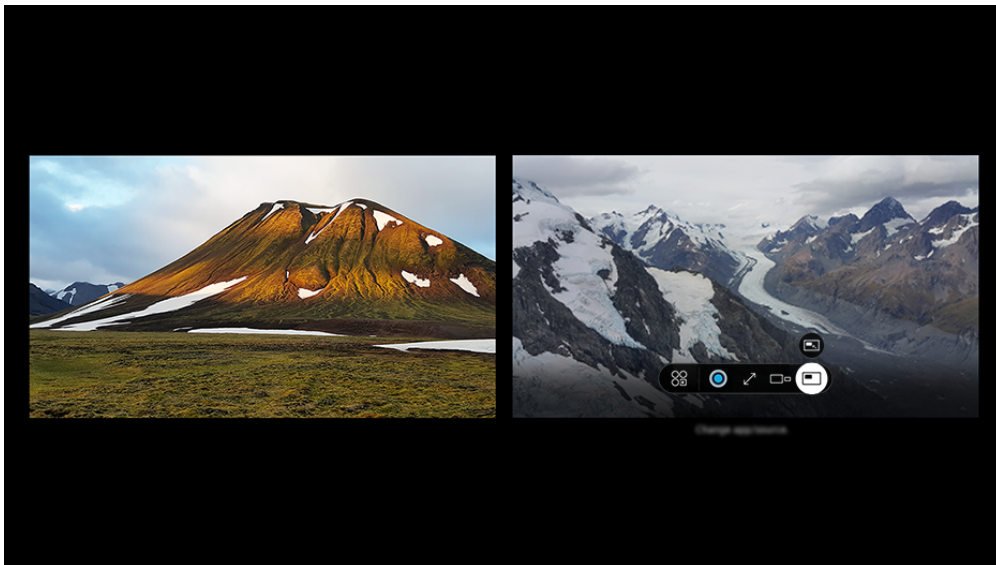

 The image on your TV may differ from the image above depending on the model and geographical area.

When **Multi View** is running, press the Select button to configure the following menus.

 This function and the provided options for each menu icon may not be available depending on the model and region.

-  **App/Source**

You can select from the content list displayed above.

- **Content**

You can view the currently displayed app or source.

 After selecting a content item, you can control the screen or change the app and source.

-  **Maximise**

View the selected screen in full screen mode.

-  **Return to Multi View**

Reduce the maximised screen to the original size, and return to the **Multi View**.

-  **Screen Size**

Selects the desired size of **Multi View**.

-  **Picture-in-Picture**

Selects the position of a small screen on the full screen. The focusing left or right screen appears as small window.

-  **Screen Position**

Selects a position of the **Multi View** screen.

-  **Swap Screen**

Switches between small screen and full screen positions. This displays the full screen as a small screen.

-  **PIP Off**

Turns off the function for viewing a small screen over the full screen. This returns the screen to **Multi View**.

-  **Double Audio**

You will hear the sound of both screens at the same time by adjusting the ratio of each screens sound.

-  **Bluetooth Speaker**

You can hear the sound by connecting the Bluetooth speaker.

-  **Full Screen**

**Multi View** is ended and then the full screen appears.

-  **Delete**

You can delete the selected screen.

To close **Multi View**, press and hold the  button or press the  button on the Samsung Smart Remote.

 This function operates only by TV broadcasts, external devices, or apps that support **Multi View**.

 While running **Multi View**, app casting from your mobile device is run on **Multi View**. This function is not available in some apps.

 In some models, you can view the image on the camera connected to the SmartThings app of your mobile device.

 Q-Symphony is not supported by **Multi View**.

 When an external device that connects to a receiver or Soundbar is used in **Multi View**, sound outputs from the TV speaker, not from the receiver or Soundbar.

## Using Auracast

You can listen to the TV's audio by connecting to a Bluetooth audio device that supports Auracast.

-  This function may not be supported depending on the model.
-  This feature may not be supported depending on the models of the mobile device and Bluetooth audio device.

## Using Auracast

 > left directional button >  **Settings** > **All Settings** > **Sound** > **Expert Settings** > **Auracast**

You can connect a Bluetooth device that supports **Auracast** to the TV.

Connect a Bluetooth audio device to the TV via the mobile device that is connected to the Bluetooth audio device. This can be done by using the Broadcast menu in the Bluetooth settings in the mobile device.

-  The location of the Broadcast menu may differ depending on the mobile device model.
-  This function may not be supported depending on the model.
-  This feature can connect the TV to two or more Bluetooth devices that support **Auracast**, simultaneously.
-  This feature cannot connect the TV to a Bluetooth audio device that supports **Auracast** and a Bluetooth audio device that does not support **Auracast** simultaneously.
-  The **Auracast** feature may not be supported depending on the mobile device model.
-  Audio volume can be adjusted from the mobile device that is connected to the audio device.
-  When this feature is turned on, audio cannot be played from the Bluetooth audio device that is already connected to the TV and does not support **Auracast**.
-  If **Auracast** is turned on and you change the audio output device to the previously connected Bluetooth audio device, **Auracast** automatically turns off.
-  To turn on **Auracast**, change the audio output device to the TV speakers.
-  While **Auracast** is in use, other devices that support wireless connection cannot be used together. (e.g., Bluetooth Speaker, Wi-Fi Speaker, Headset, Soundbar, Gamepad, Keyboard, Mouse, Sound Mirroring, etc.)

## Setting sound quality

 > left directional button >  **Settings** > **All Settings** > **Sound** > **Expert Settings** > **Auracast** > **Audio Quality**

Set the sound quality of **Auracast**.

## Using a password

 > left directional button >  [Settings](#) > [All Settings](#) > [Sound](#) > [Expert Settings](#) > [Auracast](#) > [Use Password](#)

If you set a password, you should enter the password when you connect an audio device to the TV via a mobile device, before using [Auracast](#).

## Changing your password

 > left directional button >  [Settings](#) > [All Settings](#) > [Sound](#) > [Expert Settings](#) > [Auracast](#) > [Reset Password](#)

Change the password you use when connecting to [Auracast](#).

# Using Vision AI Companion

Vision AI Companion offered by intelligent chatbot service that comes with Samsung AI.

Whenever you have a question, press the  button and ask the question. Ask any questions you might have verbally as if you were speaking to another person, and get content and service recommendations relevant to subject matter. Press the  button to explore key AI features.

Vision AI Companion can be launched by selecting  at the top of the Home screen or pressing and holding the  button.

Vision AI Companion is capable of providing a wide range of answers depending on the user environment and questions asked. The services provided depend on execution conditions.

## Before use

-  To use this service, you must agree to the Terms of Use for Smart Hub and Viewing History Information Services. You cannot use this service if you do not agree to the Terms of Use.
-  To use this feature, make sure your TV is connected to a network.
-  You must be logged in to your Samsung account to use this function.

## Caution

-  Depending on the software version, the  button may not open the Vision AI Companion function.
-  This service can't be accessed if the age requirements are not met.
-  If age restriction for content is enabled on your TV, you will need to enter a PIN to use this service.
-  If you change the service language, access to some services or information may be limited.
-  Types of content searched and recommended may vary by content provider.
-  This function may not be supported depending on the model or geographical area.
-  This service provides AI-generated content. There may be an error, so please check again.
-  Provided answers may not include content from some apps.

## Using Vision AI Companion While Viewing

When watching Live TV or Samsung TV Plus, press the  button to receive recommendations for related information and content and to access various AI apps or services.

-  This feature is supported when watching Live TV using an antenna, cable TV receiver / set-top box, or satellite receiver / set-top box, and is not supported by other external inputs or apps.
-  Broadcast service provider setting or registration is required to use this function.
-  Recommendations based on viewed content are provided. Recommendations may vary by service provider.
-  Available features may differ depending on the model or geographical area.

## Other Uses of Vision AI Companion

When using services other than broadcasts, press the  button to explore various AI features. You can access a variety of AI apps or services.

 Available features may differ depending on the model or geographical area.

## Using the Service Through Bixby

When using the Bixby services through speech recognition, navigate to [Enhanced AI Features](#) ( > [Bixby Settings](#) > [Enhanced AI Features](#)) and set it up so that [Vision AI Companion](#) provides answers. After making the setting, press the  button or say the command "Hi, Bixby" to open Bixby and use the [Vision AI Companion](#) service.

 If [Vision AI Companion](#) is unable to answer a question, Bixby can intervene and answer the question.

 A registration or purchase may be required to access recommended content.

 A wide range of answers is possible depending on the question asked. The types and number of recommended content and service options can vary. When a provided answer is not what you are looking for, you may get a more accurate answer if you ask a more specific question.

## Using the Settings Features

On the right side of the [Vision AI Companion](#) main service screen, select the settings menu to view the service-setting-related features.

- [Spoken Responses](#)

Sets Vision AI Companion to provide responses in speech.

- [User Guide](#)

Provides a list of the main features of Vision AI Companion along with helpful information.

- [Terms & Conditions](#)

Shows the history of user acknowledgment required for using the Vision AI Companion service.

# Advanced Features

Use useful features available on your Samsung TV.

## Using Football Mode

Create a more immersive viewer experience when watching football matches by automatically optimising picture and sound quality.

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [AI Football Mode Pro Settings](#) / [AI Football Mode Settings](#) / [Football Mode Settings](#)

 /  >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [AI Football Mode Pro Settings](#) / [AI Football Mode Settings](#) / [Football Mode Settings](#)

 Some screen setting features may not be available on the Smart Hub Home screen.

This feature automatically provides optimum picture and sound quality for watching football matches.

### Before use

-  To use this feature, make sure the latest software version is installed.
-  If a soundbar is connected, only picture optimisation works, and the sound setting automatically switches to the soundbar's sound field mode.
-  To use this feature through Bixby, you must register and log in to a Samsung Account and agree to the collection and use of personal information.

## Caution

-  This function may not be supported depending on the model.
-  This feature's button and functionality may differ, depending on the model.
-  Service performance and operation may differ, depending on the network environment.
-  **Football Mode** is automatically deactivated when **AI Mode** or **EyeComfort Mode** is activated.

- **\*AI Football Mode Pro / AI Football Mode**

Automatically optimises picture and sound quality through real-time AI analysis. This feature automatically adjusts colours and brightness, and remasters sound to enhance the immersive viewer experience when watching football matches. \*\***AI Football Sound Controller** allows users to adjust the volumes of the individual commentator voices and background sound.

-  \*: It is possible to set it up so that the **AI Football Mode Pro** feature automatically runs by recognising football matches. If you select **Auto**, the content you are watching is analysed in real time and the picture and sound quality is automatically adjusted.
-  \*\*: The performance or operation of the service may differ, depending on the original content. Individually set sound volume may be reset if the content changes.
-  This function may not be supported depending on the model.
-  Supported functionality of this feature may differ, depending on the model.

- **Football Mode**

Provides optimum picture and sound quality when watching football matches.

-  This function may not be supported depending on the model.

# Using AI Mode

Let the TV analyse the surrounding and the content you are watching so that it can provide an upgraded viewing experience.

 > left directional button >  **Settings** > **All Settings** > **Advanced Features** > **AI Mode Settings** > **AI Mode**

 /  >  **Settings** > **All Settings** > **Advanced Features** > **AI Mode Settings** > **AI Mode** [Try Now](#)

In **AI Mode**, the TV recognises and analyses the surroundings, noise, the content and your usage patterns to provide the best viewing experience. You can turn the options below on or off. Create your preferred viewing environment.

 This function may not be supported by some modes or apps (e.g., **Game Mode**)

- **AI Picture Mode Settings** [Try Now](#)

- **AI Optimised**

Optimises brightness and provides the best picture quality in real time, based on the lighting condition and the content you're viewing.

- **AI Customisation**

AI recognises the type of content currently being viewed (e.g., Sports Games, Movies, General) and automatically switches to the customised picture quality settings.

Using **AI Customisation Mode Settings**, users can customise the picture quality for each content type.

 Some models, modes or apps may not support this feature.

 Settings that can be adjusted by **AI Customisation** may differ, depending on the region.

- **AI Customisation Mode Settings**

 This feature is available when **AI Picture Mode Settings** is set to **AI Customisation**.

- **Detail Settings**

Customise specific settings, such as Brightness, Contrast, Colour and Colour Tone, for each content type (e.g., Sports Games, Movies, General).

 Available setting items under **Detail Settings** may differ, depending on the region.

- **AI Sound Mode Settings**

- **Active Voice Amplifier / Active Voice Amplifier Pro**

Analyses ambient noise and provides optimal sound depending on the noise.

 This function is available only when the microphone switch at the bottom of the TV is active and the sound output is set to **TV Speaker**. The location of the microphone switch may vary depending on the model or geographical area. The microphone on TV is not supported depending on the model or geographical area.

 While using this function, the TV does not save the data.

 This function may not be supported by some modes or apps (e.g., **Game Mode**).

- **Adaptive Sound+ / Adaptive Sound Pro**

Provides optimised sound quality by analysing the viewing space and the acoustic components of the content.

 This function can be used only when the microphone switch at the bottom of the TV is active and the sound output is set to **TV Speaker**. The microphone on TV is not supported depending on the model or geographical area.

 This function may not be supported by some modes or apps. (For example, **Ambient** Mode, **Game Mode**, **Art** Mode and apps that control the TV sound)

 While using this function, the TV does not save the data.

 This function may not be supported depending on the model.

 The name of this function may appear differently depending on the model.

## – **Adaptive Volume** [Try Now](#)

Automatically adjusts to a specific volume level while you are watching TV. The TV analyses your volume usage history by time period to automatically adjust the volume when you use an app or switch to an external input source.

-  This function is only available when the sound output of the TV is set to **TV Speaker**.
-  This function may not be supported by some apps or external devices.
-  This function's operation affects **Auto Volume** function, but it does not work the other way around.
-  This function operates based on your volume usage history and may not operate if the volume usage history by time period is insufficient.
-  The amount of difference made by this function does not exceed +/- 5 levels from the current volume and this function does not change the current volume if it exceeds 40.

## • **AI Sound Controller / AI Sound Controller Settings / AI Sound Controller Pro Settings**

Analyzes the audio of the currently playing content to adjust the volume of each individual audio object, including Voice, Music, and Effect (or Voice and Background).

-  While using this function, the TV does not save the data.
-  This function may not be supported by some apps or external devices.
-  This function may not be supported depending on the model.
-  The name of this function may appear differently depending on the model.
-  Items adjustable with this feature may differ, depending on the model.
-  To use this feature with Bixby, make sure your TV is connected to a network.
-  To use this feature with Bixby, you need to register and log in to a Samsung Account. Some functions may not be available if you are not logged in to a Samsung Account.
-  The voice assistant is available in a limited number of languages only, and supported functions may differ between regions.
-  The performance or operation of the service may differ, depending on the original content. Individually set sound volume may be reset if the content changes.

# Using Voice Assistants

You can change the settings of a Voice Assistant after selecting it.

## Select the Voice Assistant

 > left directional button >  **Settings** > **All Settings** > **Advanced Features** > **Voice** > **Voice Assistant** 

Select which **Voice Assistant** you would like to help control your TV.

- On models that support speech recognition, users can use Bixby with the SmartThings mobile app. Press and hold the  button on the remote control in the SmartThings mobile app and say your desired command.

 To use this function, the TV must be connected to the network.

 This function and Voice Recognition Solution Partner may not be supported depending on the model or geographical area.

 **Voice Assistant** only supports some languages, and the supported functions may differ depending on the geographical area.

 The **Voice Wake-up** function may not be supported depending on the model, **Voice Assistant** or geographical area.

- **Bixby / Amazon Alexa**

 To use the **Voice Assistant**, follow the instructions on the TV screen to enable the selected **Voice Assistant**.

 To change the settings for **Voice Assistant**, run the Settings menu under each **Voice Assistant** ( > left directional button >  **Settings** > **All Settings** > **Advanced Features** > **Voice** > **Voice Assistant**). 

 To enable the Settings menus for each **Voice Assistant**, log in each **Voice Assistant**.

 For an example of Voice command, see the Settings menus for each **Voice Assistant**.

## Using Bixby

Set Voice Assistant to Bixby. Speak into the microphone on your Samsung Smart Remote or TV to control your TV.

-  This function is available only if Voice Assistant is set to Bixby. (🏠 > left directional button > ⚙️ [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Voice](#) > [Voice Assistant](#)) [Try Now](#)
-  Bixby is available only when the TV is connected to the network.
-  To use Bixby, you must register and sign in to your Samsung account. Some functions may not be supported if you are not signed in to your Samsung account.
-  Bixby only supports some languages and the supported functions may differ depending on the geographical area.
-  Bixby may not be supported depending on the model or geographical area.
-  The microphone on TV is not supported depending on the model or geographical area.

## Starting Bixby with voice

You can immediately start a conversation with Bixby by saying "Hi, Bixby". Say "Hi, Bixby", and the Bixby icon at the bottom of the TV screen is activated in Listen mode. Continue speaking.

-  When the distance to the TV is within 3 to 4 m, optimal performance is provided. If Bixby does not answer, refer to "[I spoke 'Hi, Bixby/Alexa' but Bixby/Alexa does not answer.](#)" in "Troubleshooting".
-  This function may not be supported depending on the model or geographical area.

## Starting Bixby using buttons on the Samsung Smart Remote

You can have conversation with Bixby using the Samsung Smart Remote buttons. Press and hold the  button on your Samsung Smart Remote, say a command, and then release the  button.


For details on how to use Bixby, press the  button once:

- When you press the  button, the  icon appears at the bottom right of the screen. Press the Select button to go to the [Discover Bixby](#) screen.



 The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.

## Learning about the Discover Bixby Screen

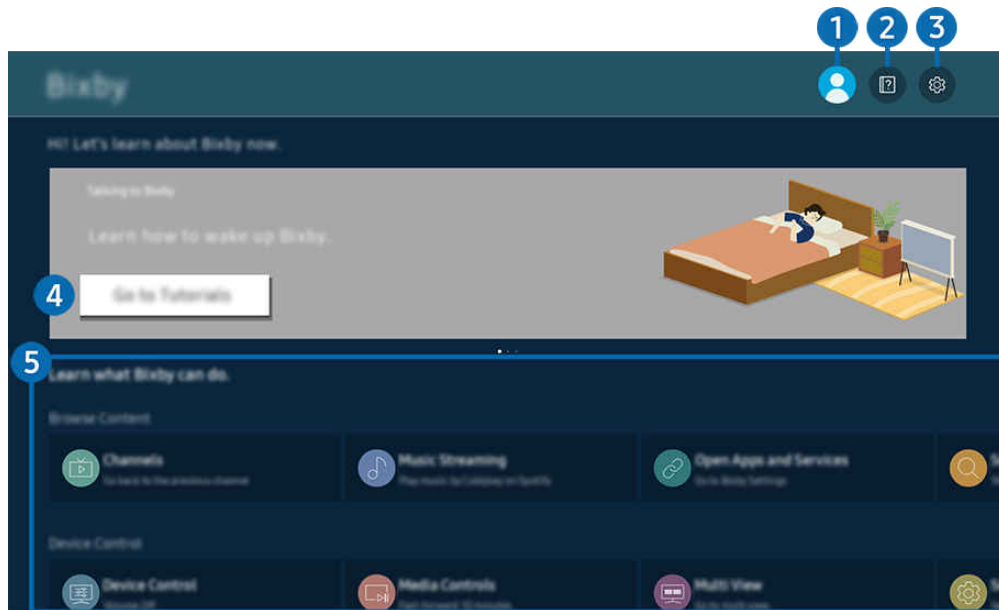

The image on your TV may differ from the image above depending on the model and geographical area.

### 1 Account

Log out after going to the [Samsung Account](#) screen.

If you are signed out of your Samsung account, select [Account](#) to sign in.

### 2 Tutorials

View tutorials related to the Bixby.

### 3 Settings

You can change the settings for using Bixby.

These functions may not be supported depending on the model or geographical area.

These functions can be set in [Bixby Settings](#) ( > left directional button > [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Voice](#) > [Bixby Settings](#)). [Try Now](#)

- [Voice Wake-up](#)

Configure settings on how to wake up Bixby with your voice. You can configure the following settings: [Hands-free wake-up](#), [Voice registration](#), [Using your voice with a Soundbar's microphone](#), [Wake-up phrase](#), [Talk to Bixby without wake-up](#), and [Wake-up Sensitivity](#). ( > [Bixby Settings](#) > [Voice Wake-up](#))

From **Voice Wake-Up**, set **Hands-free wake-up** to operate at all times, and say "Hi, Bixby" when the TV is off. You can use **Now brief** which provides a variety of daily information, even when you are not watching TV.

 For more information about **Now brief**, refer to "[Using Now brief](#)."

 The **Voice Wake-up** function may not be supported depending on the model or geographical area.

 This function can be used only when the microphone switch at the bottom of the TV is active. The microphone on TV is not supported depending on the model or geographical area.

 When the distance to the TV is within 3 to 4 m, optimal performance is provided. If Bixby does not answer, refer to "[I spoke 'Hi, Bixby/Alexa' but Bixby/Alexa does not answer](#)." in "Troubleshooting".

 The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.

- **Voice registration**

Bixby can recognise your voice and provide personalised results. To use this feature, your voice needs to be registered in your account.

 This function may not be supported depending on the model or geographical area

- **Language and voice style**

You can change Bixby's language and voice style.

 The languages of the TV and other apps will not change.

 Bixby only supports some languages.

 This function may not be supported in Bixby depending on the language selected.

- **Bixby Feedback**

Play a sound when Bixby starts and stops listening.

 This function may not be supported depending on the model or geographical area.

- **Enhanced AI Features**

Connect to **Vision AI Companion**, and obtain more advanced AI answers and related content recommendations.

 This function may not be supported depending on the model.

- [Privacy](#)

You can permit or prohibit Bixby from utilising your personal information when you are using Bixby services.

- [About Bixby](#)

Displays the detailed terms and conditions.

#### **4 Recommended commands**

Displays recommended commands you can use to control the TV with Bixby given the current context.

#### **5 All Services**

You can learn the voice commands that let you use Bixby in various situations. Use the directional buttons to move to the desired command, and then press the Select button. You can operate the TV with various voice commands.

## Read Before Using Bixby

- The supported voice interaction languages and features may differ depending on the geographical area.
- If the language set differs from the language of your country, some features are not available.
- Bixby is available only when the TV is connected to the network.
- Even if the TV is connected to the network, there may be no response due to a Bixby server error.
- The existing functional specifications may be changed if Bixby is updated.
- Bixby is available only on TVs that support it and come with remote controls that have a microphone.
- Symbols including "-" and special characters are not supported. Consequently, if a word or sentence contains numeric values or symbols, the function may not operate properly.
- Searched results may not provide complete results.
- You may be required to pay for some apps. Consequently, you may encounter a service application or contract.
- To change the current channel by saying channel names as voice commands, you must finish [Find Your Service Provider](#). [Find Your Service Provider](#) can be set in  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#) > [Service Provider Info & Settings](#). [Try Now](#)

If the settings for the service provider are not configured yet, configure them in  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Factory data reset](#). [Try Now](#)



Service provider settings in initial setup may not be supported on geographical area.

- To use the voice text input function and the search function, you must consent to provisions allowing third parties to collect and use your voice data.
- To use the Bixby function, you must:
  - Agree to Smart Hub's Terms of Use.
  - Agree to a guidance regarding the collection and use of personal information for the Smart Hub service.
  - Consent to the collection and use of personal information for the voice interaction-based service.

## Provisions for using Bixby

- The voice interaction rate differs with the volume/tone, pronunciation and ambient sound environment (TV sound and ambient noise).

# Using Game Mode

You can set the Game Mode to optimise the TV screen for better gaming performance.

## Playing games on an optimised screen

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Game Mode Settings](#) > [Game Mode](#)

 /  >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Game Mode Settings](#) > [Game Mode](#)  
[Try Now](#)

 Some screen setting features may not be available on the Smart Hub Home screen.

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Game Mode](#) [Try Now](#)

When you connect a video game console such as PlayStation and Xbox, [Game Mode](#) is set to [Auto](#). When you connect the other game source such as PC, set the [Game Mode](#) to [On](#) through the above path. You can also set the [Game Mode](#) quickly from Home Screen ( > left directional button >  [Settings](#) > [Game Mode](#) .

 The menu path may differ depending on the model or geographical area.

 This function may not be supported depending on the model or geographical area.

 The game mode is not available for normal TV viewing.

 The screen may shake somewhat.

 When you press and hold the  button on the Samsung Smart Remote for 1 second or more in [Game Mode](#), the [Game Bar](#) appears. This function may not be supported depending on the model.

 When [Game Mode](#) is enabled, [Picture Mode](#) and [Sound Mode](#) are switched to [Games](#) automatically. [Sound Mode](#) may not be automatically switched depending on the selected audio device on the [Sound Output](#) menu.

 When [Game Mode](#) is set to [On](#), some functions are not available.

 To use a different external device on the same port, remove the game console connection, set [Game Mode](#) to [Off](#), and then connect the external device to the port.

 The [Game Mode](#) functions used for Nintendo Switch™ are subject to change without prior notice.

## Setting the Game Mode details

 > left directional button >  **Settings** > **All Settings** > **Advanced Features** > **Game Mode Settings** [Try Now](#)

 These functions may not be supported depending on the model or geographical area.

- **Virtual Aim Point** [Try Now](#)

You can see the virtual aim point on the screen.

 This function may not be supported depending on the model or geographical area.

- **Minimap Auto Detection**

Automatically finds and zooms in on the minimap by analysing the screen when using the **Minimap Zoom** feature.

 This function may not be supported depending on the model or geographical area.

- **Surround Sound** [Try Now](#)

You can make your games more immersive by using intense, three-dimensional sound optimised for games.

 This function may not be supported depending on the model or geographical area.

- **Dynamic Black Equalizer** [Try Now](#)

You can easily detect items or hidden enemies lurking in dark corners by improving visibility and object details in dark scenes without washing out colours and contrast in brighter scenes.

 This function may not be supported depending on the model or geographical area.

- **Game Motion Plus Settings** [Try Now](#)

You can configure the Game Motion Plus settings.

 This function may not be supported depending on the model.

- **Game Motion Plus**

Turn on this function to obtain a softer and clearer picture quality when playing a role-playing game (RPG) or adventure game which involves many dynamic scenes.

- **Blur Reduction**

Reduce game screen blur to optimise fast-moving images.

 This function may not be supported depending on the model or geographical area.

- **Judder Reduction**

Remove flicker from a game video to play the game with a clearer picture quality.

- **LED Clear Motion**

Turn on this function to adjust the LED backlight to make dynamic scenes look clearer.

 This function may not be supported depending on the model.

- **Clear motion**

Turn on this function to make dynamic scenes look clearer.

 This function may not be supported depending on the model.

- **Game Picture Expert**

You can adjust the options for specific picture quality features of your game.

 This function may not be supported depending on the model or geographical area.

- **HDR10+ GAMING**

Basic mode provides the most accurate representation of the game's original creative intent. Advanced mode provides enhanced representation of game content to maximise visual impact.

- **Game HDR**

In accordance with the HGiG (HDR Gaming Interest Group) standard, it sets the optimal image quality for HDR games according to the brightness information of the contents.

 When HDR sources are input in Game Mode, this menu is activated.

 This function may not be supported depending on the model.

 **Game HDR** entry path may be different in some models. (🏠 > left directional button > ⚙️ **Settings** > **All Settings** > **Advanced Features** > **Game Mode Settings** > **Game HDR**)

- **Autorun Game Bar**

Set whether or not to automatically launch the Game Bar, by enabling/disabling game mode or switching between external inputs.

 This function may not be supported depending on the model or geographical area.

# Using the Game Bar

Control the Game Settings Monitoring and Game Enhancer Settings easily by using the Game Bar.


 This function may not be supported depending on the model.

## Starting the Game Bar

When **Game Mode** (🏠 > left directional button > ⚙️ **Settings** > **All Settings** > **Advanced Features** > (**Game Mode Settings**) > **Game Mode**) is **On** or **Auto**, press and hold the  button on your Samsung Smart Remote to start the **Game Bar**. [Try Now](#)

To select whether or not to automatically start **Game Bar** when changing the external input or enabling game mode, enable or disable the **Autorun Game Bar** feature (🏠 > left directional button > ⚙️ **Settings** > **All Settings** > **Advanced Features** > **Game Mode Settings** > **Autorun Game Bar**) (📶 / 📶 > ⚙️ **Settings** > **All Settings** > **Advanced Features** > **Game Mode Settings** > **Autorun Game Bar**).

## Learning about the Game Bar

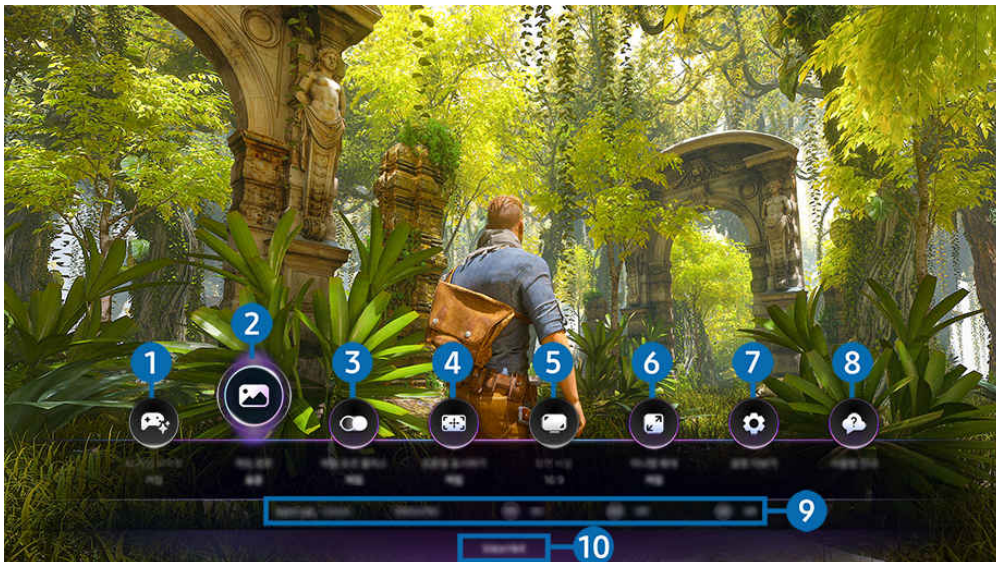

 The image on your TV may differ from the image above depending on the model and geographical area.

### 1 AI Gaming Optimiser

When you launch a game, the AI automatically recognises the title and applies optimum settings for the genre, such as FPS, RPG, RTS, or Racing.

### 2 Game Genre

Specify the Game Picture Mode according to the current game genre. To customise the picture quality, select **Custom 1** or **Custom 2**.

### 3 Game Motion Plus

Turn on this function to obtain a softer and clearer picture quality when playing a role-playing game (RPG) or adventure game which involves many dynamic scenes.

### 4 Virtual Aim Point

Display a virtual aim point on the screen. Manually select your desired type of virtual aim point. When **Auto Hide** is turned on, the virtual aim point is automatically displayed when a situation requiring an aim point is detected in a video.

### 5 Screen Ratio

You can change the screen ratio from **16:9** (previous setting) to Ultra wide (**21:9** or **32:9**).

-  You have to set the resolution from your PC only once at first time.
-  The **Game Bar**'s Screen Ratio can be changed only when the Ultra Wide resolution is supported in a game or PC. Whether or not to support the screen ratio of **21:9** and **32:9** depends on the title of the game so be sure to consult the game company.

### 6 Minimap Zoom

Use the directional buttons and Select button on the remote control to zoom in on specific areas of the game screen and adjust the zoom rate.



- For the Minimap supported resolution, refer to the table below.

| Game Bar Screen Ratio | Resolution set in PC                                 |
|-----------------------|------------------------------------------------------|
| <b>16:9</b>           | 3840 x 2160 (60/*120 Hz)                             |
| <b>21:9</b>           | 2560 x 1080 (60/*120 Hz)<br>3840 x 1600 (60/*120 Hz) |
| <b>32:9</b>           | 3840 x 1080 (60/*120 Hz)                             |

-  \*: The refresh rate may not be supported depending on the model.

## 7 More settings

Configure specific settings to suit your preferences.

## 8 Help guide

View details on how to use each menu item.

## 9 Current status display

- **Input Lag**: Shows the status of game input lag.
- **Resolution**: Shows the resolution of the currently running game.
- **FPS**: Shows the number of frames per second in real time. If **VRR** is active, the frame rate changes.
- **HDR**: Shown as **On** when an HDR game is running.
- **VRR**: Shows the variable refresh rate.

## 10 Voice Hint

View **Voice Hint** for controlling functions using voice commands.

 For more information about **Voice Assistant**, refer to "[Using Voice Assistants](#)."

 This function may not be supported depending on the model or geographical area.

## Using FreeSync

The FreeSync feature allows you to play seamless games without video interruption or delay. To use the FreeSync feature, activate the FreeSync feature from the external device.

 The FreeSync (VRR) function may not be supported depending on the model.

 For resolutions at which FreeSync is supported, refer to "[Supported Resolutions for FreeSync \(VRR\)](#)".

 QN990H, QN990F, The Frame (LS03FW, LS03HW) supports FreeSync Premium Pro only when the input source is connected through MICRO HDMI.

## Setting the Super Ultra Wide Game View

Set your PC Screen resolution to match the selected Screen Ratio in the [Game Bar](#) before activating the Super Ultra Wide Game.

If the TV is connected to a computer and [Game Mode](#) is set to either [ON](#) or [Auto](#), the wide screen ([21:9](#) or [32:9](#)) is activated from the [Game Bar](#).

-  This function may not be supported depending on the model and geographical area.
-  Check if the game supports Ultra Wide resolution ([21:9](#) or [32:9](#)).
-  If you set the resolution on your PC for the first time, you can change the Screen Ratio through the [Game Bar](#) on your TV.

| Game Bar Screen Ratio | Resolution set in PC   |
|-----------------------|------------------------|
| <a href="#">21:9</a>  | 3840 x 1600 (60 Hz)    |
|                       | * 3840 x 1600 (120 Hz) |
|                       | 2560 x 1080 (60 Hz)    |
|                       | 2560 x 1080 (120 Hz)   |
| <a href="#">32:9</a>  | 3840 x 1080 (60 Hz)    |
|                       | 3840 x 1080 (120 Hz)   |

-  \*: The resolution may not be supported depending on the model.
-  The supportable resolutions may differ depending on the model or HDMI port connected to the PC.
-  After setting the resolution, check if the PC's Window or Mac screen changes when you change the Screen Ratio on the [Game Bar](#) of your TV.
-  This function may not be supported depending on the OS or device.
-  If the connected external device is a gaming device, the function does not work even if you change the name of Source to "PC".

 While you are playing a game, the screen ratio cannot be changed. Before running a game, first select the desired screen ratio on the Game Bar and then run the game.

For some games, you need to match the game resolution with the selected screen ratio in the Game Bar.

## Changing the Super Ultra Wide Screen position

When playing a game at the Super Ultra Wide resolution, you can adjust the game screen position to the height of your eyes.

At the Super Ultra Wide resolution, use the / (channel) buttons to move the screen position to the top, centre, or bottom.

## Configuring 144 Hz / 165 Hz / 240 Hz game settings

This feature supports 144 Hz, 165 Hz or 240 Hz gaming, depending on the model.

- Resolutions that support 144 Hz / 165 Hz / 240 Hz are as follows:

| Game Bar Screen Ratio | Resolutions supported at 144 Hz          | Resolutions supported at 165 Hz          | Resolutions supported at 240 Hz          |
|-----------------------|------------------------------------------|------------------------------------------|------------------------------------------|
| 16:9                  | 1920 x 1080p @ 144<br>3840 x 2160p @ 144 | 1920 x 1080p @ 165<br>3840 x 2160p @ 165 | 1920 x 1080p @ 240<br>3840 x 2160p @ 240 |
| 21:9                  | 2560 x 1080p @ 144<br>3840 x 1600p @ 144 | 2560 x 1080p @ 165<br>3840 x 1600p @ 165 | 2560 x 1080p @ 240<br>3840 x 1600p @ 240 |
| 32:9                  | 3840 x 1080p @ 144                       | 3840 x 1080p @ 165                       | 3840 x 1080p @ 240                       |




 This function may not be supported depending on the model.

 Refer to the "[Supported Refresh Rates](#)" section for supported refresh rates by model.

## Troubleshooting of the game screen and audio problems

After changing the Screen Ratio on the [Game Bar](#), if the game screen and sound are not output properly, try to solve the problems as shown below.


- Check to see if the game supports Ultra Wide or your PC supports the Ultra Wide resolution.
- Restart the game after exiting it.
- Select the same resolution as that of the [Game Bar](#).
- When the Screen Ratio changes properly, the screen appears as shown below.
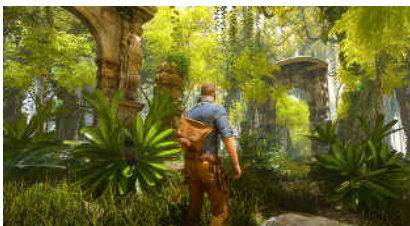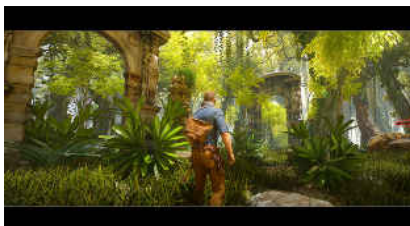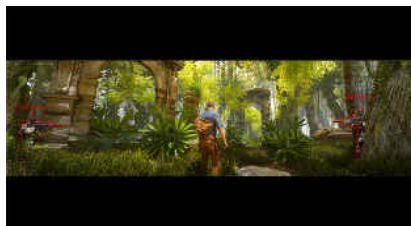
| 16:9                                                                                | 21:9                                                                                 | 32:9                                                                                  |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |  |

## Using Now brief

Even when the TV is off, easily access useful daily information through the smart screen, which switches on when a user is detected or when it is activated by voice.

 This function may not be supported depending on the model or geographical area.

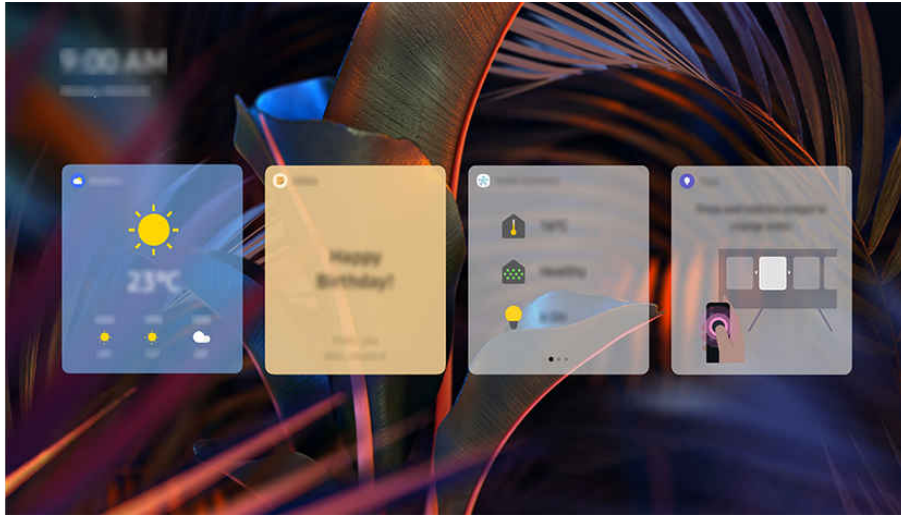

 The image on your TV may differ from the image above depending on the model and geographical area.

## Starting Bixby with voice

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Now brief](#) > [Enable with Voice](#)

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Voice](#) > [Hands-free wake-up](#) > [Always](#)

 The location of this function may vary depending on the model or geographical area.

When the TV is off, say "Hi, Bixby." You can use [Now brief](#) which provides a variety of daily information, even when you are not watching TV.

 For best results, you need to be within 3 to 4 m of your TV. If Bixby does not answer, refer to ["I spoke "Hi, Bixby/Alexa" but Bixby/Alexa does not answer."](#) in "Troubleshooting."

 If you do not want to use [Wallpapers](#) or [Widgets](#) from [Now brief](#), navigate to [Edit](#) from the [Now brief](#) screen and then turn off [Wallpapers](#) or [Widgets](#).

## Starting Now brief through user detection

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Now brief](#)  
> [Enable with User Detection](#)

Turn on [Now brief](#) to automatically display the [Now brief](#) screen if a user is detected in the vicinity, even when the TV is off. [Now brief](#) can be turned on in  > left directional button >  [Settings](#) > [Advanced Features](#) > [Now brief](#)

### Try Now

-  Users are detected by sensing sound and movement around the TV.
-  Users may not be detected properly, depending on the environment in which the TV is used. If this happens, say "[Hi, Bixby](#)" to activate Bixby and then activate [Now brief](#). ( > [Bixby Settings](#) > [Voice Wake-up](#) > [Hands-free wake-up](#) > [Always](#))
-  If [Night Mode](#) is turned on in [Now brief](#) > [Edit](#) > [Settings](#), users are not detected when it is dark around them.
-  When [Inactive Schedule](#) is turned on in [Now brief](#) > [Edit](#) > [Settings](#) > [User Detection](#), users are not detected during a set time period.
-  The images, buttons and functions of the Samsung Smart Remote may differ with the model or geographical area.
-  OLED automatically activate the [Panel Care](#) function when the TV is turned off after being watched for a long time. When the [Panel Care](#) function is operating, the Now brief's user detection function temporarily does not work.

## Information provided in Now brief

Weather, notes, SmartThings (Home Insight, Camera, Energy), music, and many other forms of useful daily information is provided as widgets.

Use [Edit](#) > [Widgets](#) to configure settings so that only specific widgets are displayed.

 Supported widgets may vary depending on the model, region, and environment where the service is used.

## Setting the wallpaper for Now brief

On the [Now brief](#) screen, select [Edit](#) and set the wallpaper.

Choose a wallpaper image or turn off the wallpaper from [Edit](#) > [Wallpapers](#).

 Images saved from [Generative Wallpaper](#) can be used as the Wallpapers. For more information, refer to "[About the Generative Wallpaper](#)."

## Changing the Settings of Now brief

On the [Now brief](#) screen, use the [Edit](#) menu to change settings.

- [User Detection](#)

Navigate to [Edit](#) > [Settings](#) and configure [User Detection](#) On/Off, [Sensitivity](#) or [Inactive Schedule](#) settings. [Inactive Schedule](#) disables the [User Detection](#) feature during a set time period.

- [Screen Timeout](#)

Adjust the off timer time from [Edit](#) > [Settings](#) > [Screen Timeout](#).

- [Night Mode](#)

Navigate to [Edit](#) > [Settings](#) and enable [Night Mode](#) to prevent the [Now brief](#) from turning on when the surrounding is dark, even if a user is detected.

- [Auto Loop](#)

Adjust the page transition time from [Edit](#) > [Settings](#) > [Auto Loop](#).

- [Widget Auto Adjustment](#)

Adjust the order of widgets automatically based on usage frequency and information updates in [Edit](#) > [Settings](#) > [Widget Auto Adjustment](#).

- [Adjust Location](#)

Adjust your TV's location information from [Edit](#) > [Settings](#) > [Adjust Location](#).

 To use this feature, make sure the product is registered with the mobile SmartThings app.

- [Tips](#)

Explore various tips and press the Try it button to try a feature instantly.

# Configuring Start Screen

Configure settings for the start screen that is displayed when turning on the TV or using content.

## Launching Smart Hub automatically

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Start Screen Options](#) > [Start with Smart Hub Home](#) [Try Now](#)

Enabling [Start with Smart Hub Home](#) automatically launches Smart Hub when the TV is turned on. Navigate to this option to enable or disable the feature.

## Launching Samsung TV Plus automatically

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Start Screen Options](#) > [Autorun Samsung TV Plus](#)

Automatically launches Samsung TV Plus when the TV is turned on. If this option is turned off, the last used source will be displayed instead.

 This function may not be supported depending on the model or geographical area.

## Launching Samsung Business TV app automatically

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Start Screen Options](#) > [Autorun Samsung Business TV App](#)

If [Autorun Samsung Business TV App](#) is set to **On**, [Samsung Business TV](#) app is automatically run when you turn on the TV. You can also turn this function on or off. Press the Select button at the current menu.

To use the [Samsung Business TV](#) app on your TV, install the app from Google Play Store or App Store. Use the [Samsung Business TV](#) app by following the screen instructions on the mobile device.

 When [Autorun Samsung Business TV App](#) is set to **On** while [Autorun Last App](#) is turned **On**, the [Samsung Business TV](#) app runs automatically when your TV is turned on.

 This is available in Android 6.0/iOS 9.0 or higher.

 The [Samsung Business TV](#) app on the Home Screen is installed automatically after you consent to the service agreement and the collection and use of personal information.

 This function may not be supported depending on the model or geographical area.

## Automatic casting in Multi View

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Start Screen Options](#) > [Autorun Multi View Casting](#) [Try Now](#)

Casting YouTube content from the mobile device automatically displays the content on Multi View.

 It is available on the screen for any broadcast, external device, or app that supports Multi View.

 This function may not be supported depending on the model.

## Automatic Mirroring from Multi View

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Start Screen Options](#) > [Autorun Multi View Mirroring](#)

If you screen mirror your mobile device, the [Multi View](#) automatically displays the device screen. Navigate to this option to enable or disable the feature.

 This function may not be supported depending on the model or geographical area.

## Launching the last used app automatically

 > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Start Screen Options](#) > [Autorun Last App](#) [Try Now](#)

If [Autorun Last App](#) is set to [On](#), the last used app is automatically run when you turn on the TV. You can turn this function on or off. Press the Select button at the current menu.

 This function may not be supported depending on the app.

 This function may not be supported depending on the model.

# TV Viewing and Recording

Use a variety of convenience features offered by your Samsung TV while watching TV. You can also edit your list of channels and create a list of favourite channels.

## Using the Guide


See the programming schedules of different channels on a single screen.

Press the  $\wedge/\vee$  (Channel) or GUIDE button to access the **Guide** screen.

In the **Guide**, you can see the daily programme schedules for each station, see programme information, choose a programme to watch, and set up a schedule viewing or recording.

-  The button used to access the Guide screen may differ depending on the model.
-  Service Provider settings in initial setup may not be supported on geographical area.
-  The Record function may not be supported depending on the model geographical area.
-  To access information or additional features provided in the **Guide** from analogue channels, you must set Service Provider during the initial configuration stage.
-  To view **Guide**, you must first configure **Time** (🏠 > left directional button > ⚙️ **Settings** > **All Settings** > **General & Privacy** > **Time**)
-  For details on how to use the remote control, refer to the image guide at the bottom right.
-  This function may not be supported depending on the model or geographical area.

## About the Guide screen

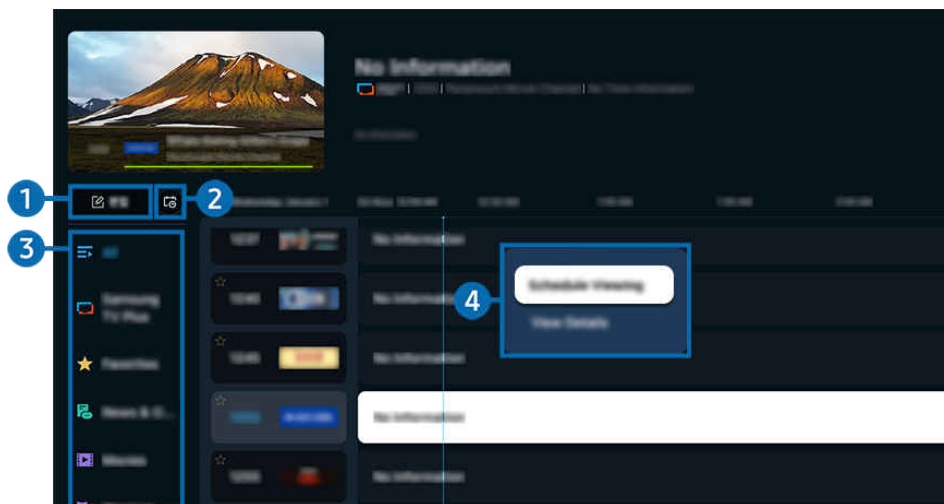

-  The image on your TV may differ from the image above depending on the model and geographical area.

### 1 Edit

Edit channels stored on the TV.

-  For more information, refer to "[Using the channel edit function](#)".
-  The name of this function may appear differently depending on the model or geographical area.

## 2 Schedule Manager

View, edit, or delete your viewing schedules.

 For more information, refer to "[Setting Up Schedule Viewing.](#)"

## 3 Channel Filter

View channels and programmes classified by type.

## 4 Additional options related to broadcast programmes

Navigate to the desired programme and press and hold the Select button to access the following options:

 These functions may not be supported depending on the model or geographical area.

- **Schedule Viewing**

You can schedule the viewing of a broadcast scheduled programme.

- **Cancel Scheduled Viewing**

You can cancel scheduled viewings.

- **View Details**

You can see detailed information about the selected programme. The information may differ or may not be provided depending on the broadcast signal.

- **Record**

You can make a recording of a current programme.

- **Stop**

You can stop the recording function that is currently running.

- **Edit Recording Time**

You can change the start and end times of scheduled programme recordings.

- **Schedule Recording**

You can schedule recording of a broadcast scheduled programme.

- **Cancel Scheduled Recording**

You can cancel scheduled recordings.

## Using additional features from the Guide

From the [Guide](#), press either the  or  button to use additional features.

 These functions may not be supported depending on the model or geographical area.

- [Channel Filter](#)

You can view channels and programmes categorised by the types defined in [Channel List](#).

- [Schedule Manager](#)

You can see the [Recording & Schedule Manager](#) or [Schedule Manager](#) screen.

 For more information about [Schedule Recording](#), refer to "[Recording Programmes](#)".

 For more information about [Schedule Viewing](#), refer to "[Setting Up Schedule Viewing](#)".

- [Aerial Type](#)

You can change the type of broadcast signals the TV receives.

 This function may not be supported depending on the incoming broadcast signal.

# Recording Programmes

Record a current or upcoming programme using a USB device instead of a video recorder.

-  This function may not be supported depending on the model or geographical area.
-  Connect a USB device to use the TV's recording features. Carefully read all related precautions before using a recording feature. For more information, refer to "[Before Using the Recording and Timeshift Functions](#)".
-  You can record only the programmes that are received through an antenna.
-  The  appears next to the programmes and channels scheduled for recording.

## The Instant and Timer Recording options from the Guide

- **Record**
  1. Select a programme that is currently being broadcast and press the Select button.
  2. Select **Record** from the pop-up menu to start recording.
- **Schedule Recording**
  1. Select a programme scheduled to be broadcast, and press the Select button.
  2. Select **Schedule Recording** from the pop-up menu to schedule recording.

## Recording while watching a broadcast

- **Record**
  1. On the Samsung Smart Remote, press the  or  button.
  2. Use the directional buttons to navigate to the control pad.
  3. Select **Record** to start recording.

 Or press the  button while watching a broadcast.
- **Schedule Recording**
  1. Press the Select button while watching a broadcast to load the programme details window.
  2. Use the left or right directional button to navigate to a programme scheduled to be broadcast, and press the Select button.
  3. Select **Schedule Recording** to schedule the recording of the programme.

## Using the recording schedule management screen

1. On the Samsung Smart Remote, press the  or  button.
2. Use the directional buttons to navigate to the control pad.
3. Select either [Schedule Manager](#) or [Recordings](#) to access the [Recording & Schedule Manager](#) screen.

The following options are available on the [Recording & Schedule Manager](#) screen:

 Displayed menu options may vary depending on the model or geographical area.

- [Recordings](#)

Watch Recordings.

 Buttons shown on the display will vary depending on the file being played back. For more information about playback controls, refer to "[Buttons and functions available while recording a programme or Timeshift](#)".

 From the list, select a recording you wish to watch. The selected recording will start to play.

 Move the focus to a recording to display [Play](#), [Delete](#), and [View Details](#) options on the right-side menu.

- [Schedule Recording](#)

Navigate to [Schedules](#) and press [Schedule Recording](#). Add, edit, or cancel a programme recording schedule.

 Specify the [Aerial](#), [Channel](#), [Repeat](#), [Date](#), [Start Time](#), and [End Time](#) settings and then select [Save](#) to schedule a recording of a specific programme at a specific time on a specific date.

 Up to thirty [Schedule Viewing](#) and [Schedule Recording](#) events may be created.

 Ensure that the TV's [Time](#) ( > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Time](#)) setting is correct.

- [Edit](#)

You can set the start and end times for a schedule recording. You can set the start time up to 10 minutes before the programme starts and the end time up to 10 minutes after the programme ends.

- [Delete](#)

Remove a scheduled recording.

- [View Details](#)

See detailed information about a scheduled recording.

- **Settings**

- **Start Recording Early**

Change this setting so that the recording starts slightly earlier than the programme start time shown in the Guide.

- **Continue Recording After**

Change this setting so that the recording ends slightly later than the programme end time shown in the Guide.

- **Symbol Information**

Provide users with the information of the symbol and the explanation about an icon used in the schedule manager.



The menus may not appear depending on the model or geographical area.

## Setting Up Schedule Viewing

Configure the TV to show a specific channel or programme at a specific time and date.

-  This function may not be supported depending on the model or geographical area.
-  The  appears next to programmes that have been configured for a scheduled viewing.
-  To set up a schedule viewing, you must first set the TV's clock ( > left directional button > [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Time](#)) and set the time.

### Using the schedule viewing options from the guide screen

On the [Guide](#) screen, select a programme you would like to view, press the Select button, and then select [Schedule Viewing](#) in the pop-up menu that appears.

### Using the schedule viewing options while watching a programme

1. Press the Select button while watching TV.
2. The programme Info window appears.
3. Select a programme that will be broadcast using the left or right directional buttons.
4. Press the Select button, and then select [Schedule Viewing](#) to schedule viewing of that programme.

## Using the viewing schedule management screen

1. On the Samsung Smart Remote, press the  or  button.
2. Use the directional buttons to navigate to the control pad.
3. Select either [Schedule Manager](#) or [Recordings](#) to access the [Recording & Schedule Manager](#) screen.

 Displayed menu options may vary depending on the model or geographical area.

- [Schedule Viewing](#)

Navigate to [Schedules](#) and press [Schedule Viewing](#). Add, edit, or cancel a programme viewing schedule.

 Up to thirty [Schedule Recording](#) and [Schedule Viewing](#) events may be created.

 Ensure that the TV's [Time](#) ( > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Time](#)) setting is correct.

- [Edit](#)

You can set the start time of a scheduled viewing. If you choose a programme from the [Guide](#), the [Start Time](#) can be set to up to 10 minutes before the programme.

 This function may not be supported depending on the model or geographical area.

- [Delete](#)

You can delete scheduled viewings.

- [View Details](#)

You can view detailed information about scheduled viewings.

# Using Timeshift

Watch scenes you missed and rewind to specific points of the programme using Timeshift.

To activate Timeshift while watching a broadcast, press either the  or  button, and then use the directional buttons on the remote control to select **Timeshift** or press the  button. [Try Now](#)

Save the current broadcast programme you are watching to a USB device to pause at specific scenes, view missed scenes, or rewind to specific points in the timeline.

-  When the Timeshift function is running, some functions are not available in  > left directional button >  **Settings**  
> [All Settings](#) > [General & Privacy](#) > [Broadcasting](#).
-  To use Timeshift, you must connect a USB device for recording.
-  Read all precautions before using the Timeshift function. For more information, refer to "[Before Using the Recording and Timeshift Functions](#)".
-  This function may not be supported depending on the model or geographical area.

# Buttons and functions available while recording a programme or Timeshift

These are the controls and options available while recording broadcasts and using Timeshift.

Press the down directional button to display the control pad with the following options:

 This function may not be supported depending on the model or geographical area.

 The available buttons and functions may differ with the functions.

- **Pause / Play**

You can use the following functions when the video is paused. Note that with the video paused, the TV does not play audio.

- **Slow Rewind** or **Slow Forward**: Use  or  button to slow rewind or slow forward. Available speeds are 1/8, 1/4 and 1/2. Press the corresponding repeatedly to quickly increase the speed in slow mode by up to 3 times. To resume playback at normal speed, select  button.

 While using **Slow Rewind**, you will be able to see the time difference between the recorded broadcast's current time and the rewind time.

- **Jump Backward / Jump Forward**

Press the up directional button to move the focus to the playback control bar, and then select the left or right directional button in the playback control bar to move backward or forward by 10 seconds in the video.

 When the Jump Backward function is activated, you can view the difference between the current recording time and the current rewind time.

- **Rewind / Fast Forward**

Use  or  button to rewind or fast forward.

 This function is not available while you are watching a programme that is currently being broadcast.

- **Stop Recording / Stop Timeshift**

Ends the recording or Timeshift function.

- [Record](#)

You can switch from the Timeshift function to the recording function. When switching to the recording function, you can include the content recorded by the Timeshift function in the new recording.

 This function is only available when the Timeshift function is running.

- [Edit Recording Time](#)

You can set for what period of time the programme will be recorded.

 This function is only available when a programme is being recorded.

- [Go to Live TV](#)

While using Timeshift to view a previous scene, select [Go to Live TV](#) to return to live TV.

 This function may not be supported depending on the model or geographical area.

- [Info](#)

Loads a window containing information about the programme being recorded or Timeshift has been activated for.

- [Schedule Viewing](#) / [Schedule Recording](#)

Add a viewing or recording schedule.

# Using the Channel List

Change the channel or check programmes on other digital channels.

Use the [Channel List](#) screen to change channels or see what programmes are being broadcast on other digital channels. On Standard Remote Control, press the CH LIST button.

 This function may not be supported depending on the model or geographical area.

## Accessing the channel list

Press and hold the  $\wedge/\vee$  (Channel) button to open the [Channel List](#).

## Using the functions on the channel list screen

The [Channel List](#) screen icons indicate the following:

- ★: A favourite channel.
- 🔒: A locked channel.
- 📶: CI card required channel. (For India Only)

 This function may not be supported depending on the model or geographical area.

The following options are accessible from the top left of the [Channel List](#) screen.

- [Terrestrial](#), [Cable](#) or [Satellite](#)

Allows you to choose between [Terrestrial](#), [Cable](#) and [Satellite](#).

 This function may not be supported depending on the incoming broadcast signal.

 This function may not be supported depending on the model or geographical area.

- [Sort](#)

Sorts the list by [Number](#) or by [Name](#).

 This option is only available on digital channels and may not always be available.

Press the left directional button while in the [Channel List](#) screen to access the following options:

- [All](#)

Displays the channels that have been automatically searched.

 The channels received to the currently selected [Terrestrial](#), [Cable](#) or [Satellite](#) are displayed.

- **Samsung TV Plus**

While the TV is connected to the Internet, you can watch popular programmes or highlights for each theme through a virtual channel at any time. As with regular channels, the TV provides the daily programme schedules for **Samsung TV Plus**.

 This function may not be supported depending on the model or geographical area.

- **Channel Type**

Filters the list so that it includes channels of a selected type. However, **Channel Type** can only be used channels contain the type information.

 This function may not be supported depending on the incoming broadcast signal.

- **Genre**

Select a genre to sort and display specific channels to suit your preferences.

 This function may not be supported depending on the model or geographical area.

- **Favourites**

Displays favourite channels from \***Favourites 1 / Favourites**, \***My List 1** through \***Favourites 5 / My List 4**.

 It displays only the **Favourites** that includes the Favourite channel.

 \* : The name of this function may appear differently depending on the model or geographical area.

- **Edit Channels / Edit**

Edit the channels stored on your TV.

# Using the channel edit function

Edit the channels stored on your TV.

## Accessing the channel edit screen

1. Display the [Guide](#) screen, and press [Edit](#) on the left of the screen to access the edit-channel screen.
2. Display the [Channel List](#) screen, and press [Edit Channels](#) / [Edit](#) on the bottom of the screen to access the edit-channel screen.

## Using the channel edit functions

The [Edit Channels](#) / [Edit](#) screen icons indicate the following:

- ★: A favourite channel.
- 🔒: A locked channel.
- 🇮🇳: CI card required channel. (For India Only)

 This function may not be supported depending on the model or geographical area.

Select a channel from the [Edit Channels](#) / [Edit](#) screen to access the following options:

- [Lock](#) / [Unlock](#)

Restrict access to channels that require parental guidance. Locked channels can only be accessed by entering the PIN.

 If you want to use this function or set the password, set  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Parental Settings](#) > [Apply Channel Lock](#) to [On](#).

 For more information on setting the PIN, refer to "[Setting up a password](#)".

- [Delete](#)

After selecting a target channel to remove in [Edit Channels](#) / [Edit](#), select [Delete](#). Removed channels are not displayed in the [Channel List](#).

- [Rename channel](#)

From [Edit Channels](#) / [Edit](#), select the channel you wish to rename and then select [Rename channel](#).

 Only one channel can be renamed at a time.

 This function is only available for analogue broadcasts.

- [Change Number](#)

After selecting a channel to change in [Edit Channels](#) / [Edit](#), select [Change Number](#) to change the channel number.

 This function may not be supported depending on the model or geographical area.

 When a channel number is changed, its channel information is not updated automatically.

- [Restore Samsung TV Plus](#)

You can restore the deleted [Samsung TV Plus](#) channels.

 This function may not be supported depending on the model or geographical area.

- [Save and Exit](#)

Save the changes made under [Edit Channels](#) / [Edit](#) and exit.

## Using a Personal Favourites List

Create frequently watched channels as favourite channels.

On the [Edit Channels](#) / [Edit](#) and [Channel List](#) screens, the ★ icon appears next to favourite channels.

### Creating a Favourites List

1. Access the [Edit Channels](#) / [Edit](#) screen.

 For details on how to access the channel edit screen, refer to "[Accessing the channel edit screen.](#)"

2. Press the left directional button on the remote control to select the desired [Favourites](#).
3. Press the right directional button to select [Add Channels](#).
4. Select the desired channel in the list on the screen.
5. Press [Add](#) to add the selected channel to the favourites list.

Select \*[Favourites](#), \*[My List 1 - My List 4](#) / [Favourites 1 - Favourites 5](#) on the [Edit Channels](#) / [Edit](#) screen and the following functions are available.

 Up to five Favourites can be created, which allows each member of the family to create their own favourites list.

 \* : The name of this function may appear differently depending on the model or geographical area.

- [Add Channels](#)

In the channel list, select one or more channels to add in the favourite list and then select [Add Channels](#).

- [Remove](#)

Removes one or more channels from a favourites list.

- [Change order](#)

Changes the order of one or more channels selected in a favourites list.

- [Rename Favourites](#)

Renames a My List.

- [Save and Exit](#)

Saves and closes the [Edit Channels](#) / [Edit](#) screen.

# TV-Viewing Support Functions

Use the functions that are available while watching TV.

## Scanning for available channels

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#) > [\(Auto Tuning Settings\)](#) > [Auto Tuning](#) [Try Now](#)

-  This function may not be supported depending on the model or geographical area.
-  If the TV is connected to a cable box or satellite box, you do not need to do this.
-  The DVB-T2 system may not be supported depending on the geographical area.
-  The [Auto Tuning Settings](#) may not appear depending on the model or geographical area.

## Selecting the cable network search option

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#) > [\(Auto Tuning Settings\)](#) > [Cable Search Option](#) [Try Now](#)

Sets additional search options such as the frequency and symbol rate for a cable network search.

-  This function may not be supported depending on the model or geographical area.
-  The [Auto Tuning Settings](#) may not appear depending on the model or geographical area.

## Scanning for available channels on standby mode

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#) > [\(Auto Tuning Settings\)](#) > [Standby Auto Tuning](#) [Try Now](#)

Automatically scan for channels while your TV is in standby mode.

-  This function may not be supported depending on the model or geographical area.
-  The [Auto Tuning Settings](#) may not appear depending on the model or geographical area.

## Setting the Wake-up time

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#) > [\(Auto Tuning Settings\)](#) > [Wake-up Timer](#) [Try Now](#)

Schedule timer to turn the TV on and scan channels automatically.

 This function may not be supported depending on the model or geographical area.

 The [Auto Tuning Settings](#) may not appear depending on the model or geographical area.

## Setting the functions for the service provider

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#) > [Service Provider](#) [Try Now](#)

Enable or disable the broadcast service provider feature.

 This function may not be supported depending on the model or geographical area.

## Viewing broadcast service provider info

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#) > [Service Provider Info & Settings](#) [Try Now](#)

Find out who the current broadcast service provider is and look up related information.

 These settings can be configured only for available Service Provider.

## Checking digital channel signal info and strength

 > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Self Diagnosis](#) > [Broadcast Signal](#)

 If your TV is attached to a separate, over-the-air antenna, you can use the signal strength information to adjust the antenna for increased signal strength and improved HD channel reception.

 [Broadcast Signal](#) is only available for digital channels.

 This function may not be supported depending on the model or geographical area.

## Selecting the broadcasting audio option

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Dual Sound](#) [Try Now](#)

Set audio options for stereo or bilingual broadcasts. For more information, refer to "[Supported broadcasting audio options](#)".

 This function may not be supported depending on the model or geographical area.

## Using Programme Rating Lock

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Parental Settings](#)  
> [Programme Rating Lock](#) / [Programme Rating Lock Settings](#) [Try Now](#)

This function is useful for controlling what programmes children can watch on the TV based on their ratings. [Programme Rating Lock](#) / [Programme Rating Lock Settings](#) does not, however, block programmes originating from external sources, such as Blu-ray players, DVD players or USB files.

Every time you access [Programme Rating Lock](#) / [Programme Rating Lock Settings](#), you must enter the security PIN. You must also enter this PIN to watch a blocked programme. To change the PIN, go to  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [PIN Settings](#) > [Change PIN](#). [Try Now](#)

 The name of this function may appear differently depending on the model.

 For more information about how to set your password, refer to "[Setting up a password](#)".

 The [Broadcasting](#) is not available in HDMI or Component mode.

 [Programme Rating Lock](#) / [Programme Rating Lock Settings](#) may not be supported depending on your input signal.

 This function may not be supported depending on the model or geographical area.

## Configuring advanced broadcasting settings

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) [Try Now](#)

## Showing common interface menu (For India Only)

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Common Interface](#) [Try Now](#)

You can view information about common interfaces.

 This function may not be supported depending on the model or geographical area.

- [CI Menu](#)

Show information and settings of CICAM.

- [Application Info](#)

Show the manufacturer of CICAM and information of CAS (Conditional Access System).

- [CICAM PIN Manager](#)

Manage Common Interface Common Access Module (CICAM) PIN. Save PIN or change stored PIN, and then set other PIN options.

 This function may not be supported depending on the model or geographical area.

- [Descramble Mode](#)

- [CAM video transcoding](#)

Configures the setting to transcode the video codec from the CAM automatically. Turn it Off if you do not want to use it.

 You must use a CAM that supports video codec transcoding.

## Tuning broadcast signals manually

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [Manual Scan](#) 

You can scan for all the channels manually and store the scanned channels in the TV.

 This function may not be supported depending on the model or geographical area.

## Tuning digital channels

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [Manual Scan](#) > [Digital Channel Tuning](#)

Select [New](#), and then configure [Channel](#), [Frequency](#) and [Bandwidth](#), and then select [Search](#) to automatically scan and store a list of digital channels in the TV.

 This function may not be supported depending on the model or geographical area.

## Tuning analogue channels

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [Manual Scan](#) > [Analogue Channel Tuning](#)

Select [New](#) and configure [Programme](#), [Colour System](#), [Sound System](#), [Channel](#) and [Search](#) to scan for analogue channels. Then, select [Store](#) to store the scanned channels in the TV.

 This function is only available for analogue broadcasts.

 This function may not be supported depending on the model or geographical area.

## Channel mode

- [P](#) (programme mode)

When tuning is complete, the broadcasting stations in your area have been assigned to position numbers from P0 to P99. You can select a channel by entering the position number in this mode.

- [C](#) (aerial channel mode) / [S](#) (cable channel mode)

These two modes allow you to select a channel by entering the assigned number for each aerial broadcasting station or cable channel.

## Fine-tuning analogue broadcasts

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [Fine Tune](#) [Try Now](#)

 This function is only available for analogue broadcasts.

## Transferring channel list

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [Transfer Channel List](#) [Try Now](#)

You can import or export the channel list to a USB storage. To use this function, the PIN number is required.

- [Import from USB](#): Imports channel list from a USB storage.
- [Export to USB](#): Exports channel list saved in the TV to a USB storage.

 This function is available when USB is connected.

 This function may not be supported depending on the model or geographical area.

## Enabling/Disabling Edit Channel Numbers

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [Edit Channel Numbers](#) [Try Now](#)

Use this to change channel number. When channel number is changed, channel information is not updated automatically.

 This function may not be supported depending on the model or geographical area.

## Deleting CAM operator profile

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [Delete CAM Operator Profile](#) [Try Now](#)

Select the CAM operator to delete.

 This function may not be supported depending on the model or geographical area.

## Setting satellite system

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [Satellite System](#) [Try Now](#)

You can configure a set of satellite dish settings before performing a channel scan.

 This function may not be supported depending on the model or geographical area.

## Changing teletext language

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [Teletext Language Settings](#) > [Teletext Language](#) [Try Now](#)

You can set or change the teletext language. To watch the teletext broadcast in your preferred language, select a language to use in [Primary Teletext Language](#). If this language is not supported, you can watch the teletext broadcast in your secondary preferred language set in [Secondary Teletext Language](#).

 This function may not be supported depending on the model, channel or geographical area.

## Selecting the broadcast audio language

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [Audio Options](#) [Try Now](#)

This is the language you will hear while watching TV if the language is included in the broadcast signal. [Audio Options](#) functions differently for analogue and digital channels.

 This function may not be supported depending on the model or geographical area.

 This function may not be supported depending on the incoming broadcast signal.

- [Audio Language Settings](#)

You can change the audio language you want to hear.

 The available language may differ with the broadcast.

- [Audio Format](#)

You can change the audio format you want to hear.

 The supported audio format may differ with the broadcast programme.

 This option is only available on digital channels.

## Showing TVkey Interface menu

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [TVkey Interface](#) [Try Now](#)

You can use the following functions:

- [TVkey Menu](#): Show TVkey Interface menu.
- [Delete TV Service](#): Show the TVkey operator list to delete.

 This function may not be supported depending on the model or geographical area.

## Postcode for Emergency Broadcasts

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#)  
> [Expert Settings](#) > [Postcode for Emergency Broadcasts](#) > [Postcode](#) [Try Now](#)

Enter your postcode to receive emergency broadcasts for your local area.

 This function may not be supported depending on the model or geographical area.

# Picture and Sound

You can change the settings for the picture and the sound according to your preference.

## Adjusting the Picture Quality

Change the **Picture Mode** and adjust **Expert Settings**.

### Choosing a picture mode

 > left directional button >  **Settings** > **All Settings** > **Picture** > **Picture Mode**

 /  >  **Settings** > **All Settings** > **Picture** > **Picture Mode** **Try Now**

 Some screen setting features may not be available on the Smart Hub Home screen.

You can select the **Picture Mode** that provides the best viewing experience.

 **Entertain** and **Graphic** are supported only when you change the external device name to PC in PC mode.

- **Dynamic**

Makes the picture brighter and clearer in bright viewing environments.

- **Standard**

Is suitable for general viewing environments.

- **Eco**

This screen is provided to save energy.

 This function may not be supported depending on the model or geographical area.

- **Movie**

Is suitable for watching TV or movies in a dark room.

- **FILMMAKER MODE**

This screen mode provides picture quality certified by UHD Alliance. The image defined as **FILMMAKER MODE** automatically switches to **FILMMAKER MODE** while watching.

 This function may not be supported depending on the model or geographical area.

 **FILMMAKER MODE** may look darker than other picture modes.

 You can change **FILMMAKER MODE** to a different **Picture Mode**. However, the changed **Picture Mode** will be maintained even after watching the picture defined by **FILMMAKER MODE**.

 **FILMMAKER MODE™** logo is a trademark of UHD Alliance, Inc.

## Configuring advanced picture settings

 > left directional button >  **Settings** > **All Settings** > **Picture** > **Expert Settings** [Try Now](#)

Configure the screen settings to your taste by using the following functions:

- **Brightness** [Try Now](#)

Adjust the overall picture brightness. The higher the setting's value, the brighter the overall picture.

- **Contrast** [Try Now](#)

Adjust the difference between the darkest and brightest areas between objects and their background. The higher the setting's value, the greater the difference.

- **Sharpness** [Try Now](#)

Adjust the outline sharpness of objects. The higher the setting's value, the sharper the outline.

- **Colour** [Try Now](#)

Adjust the chroma of a video. The higher the setting's value, the darker the chroma.

- **Tint (G/R)** [Try Now](#)

Adjust the colour tone. The higher either value, the redder or greener the video.

- **Auto HDR Remastering** [Try Now](#)

Enjoy HDR-like picture quality – even with SDR content.

 This function may not be supported depending on the model or geographical area.

- **Auto HDR Remastering Pro**

Convert SDR content to be similar to HDR content, and add three-dimensionality through object analysis for each scene.

 This function may not be supported depending on the model or geographical area.

- **HDR Tone Mapping** [Try Now](#)

Automatically adjusts the brightness with tone mapping processing according to the HDR content information.

- **Contrast Enhancer** [Try Now](#)

Automatically adjust the contrast to prevent excessive brightness differences between brighter and darker areas.

- **Shadow Detail** [Try Now](#)

Adjust the brightness of a dim picture. The higher the setting's value, the brighter the dim picture.

- **Gamma** [Try Now](#)

Adjust the medium brightness of a video.

- **Apply Picture Settings** [Try Now](#)

Apply the selected picture settings to the current input source or all input sources.

- **Local Dimming** [Try Now](#)

Maximise the contrast ratio by automatically adjusting brightness for each section of the picture.



This function may not be supported depending on the model or geographical area.

- **Film Mode** [Try Now](#)

Touch up an old video to improve the picture quality for a better viewing experience.



This function is only available when the input signal is TV, or HDMI (1080i).

- **Colour Space Settings** [Try Now](#)

Select a range of colours that can be expressed on the picture.

- **Colour Booster** [Try Now](#)

Select a range of colours that can be expressed on the picture.



This function may not be supported depending on the model or geographical area.

- **Color Booster Pro**

AI classifies colours for each scene and implements optimal colour intensity accordingly.



This function may not be supported depending on the model or geographical area.

- **Colour Tone** [Try Now](#)

Select an appropriate colour tone, according to the viewing situation.

- **White Balance** [Try Now](#)

Adjust the brightness of the colours red, green and blue so that the brightest area of the picture becomes white.

- **Blue Light Reduction**

Ensure eye comfort by limiting blue light and using warmer colours.

 This function may not be supported depending on the model or geographical area.

- **Picture Clarity Settings** [Try Now](#)

Optimise a video that has many dynamic scenes.

 When **LED Clear Motion** or **Clear motion** is set to **On**, the screen is flashing or has become darker than when it is **Off**.

 This function may not be supported depending on the model or geographical area.

- **Picture Size Settings**

Configure the picture size settings. You can change the size of the picture displayed on the TV screen.

- **Peak Brightness**

Adjust the maximum brightness for a brighter screen.

 This function may not be supported depending on the model or geographical area.

- **Reset Picture** [Try Now](#)

Reset the picture settings to the default values.

## Changing to a comfortable display mode suitable for sleep

 > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [EyeComfort Mode Settings](#)

 /  >  [Settings](#) > [All Settings](#) > [Picture](#) > [EyeComfort Mode Settings](#)

 Some screen setting features may not be available on the Smart Hub Home screen.

Enable comfortable display mode, and adjust the mode start and end times.

 The location of this function may vary depending on the model or geographical area.

 This function may not be supported depending on the model.

- [EyeComfort Mode](#)

[EyeComfort Mode](#) syncs the sunrise/sunset times and ambient light intensity. After sunset, the mode provides warmer colours and lower brightness. The sunrise and sunset times can manually be changed.

 This function may not be supported by some models, modes or apps. (e.g., [Ambient Mode](#), [Art Mode](#), and [Game Mode](#)).

 To use [EyeComfort Mode](#), first you need to set the current time. Configure the [Time](#) ( > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Time](#)) setting.

 The sunrise/sunset time sync function provided in [EyeComfort Mode](#) may work differently, depending on the area and network connection.

- [EyeComfort Mode Duration](#)

Set the sunrise and sunset time automatically. Or you can manually select the schedule.

- [Start Time](#)

Set the Start Time manually.

 This function is available only when [EyeComfort Mode Duration](#) is set to [Custom](#).

- [End Time](#)

Set the End Time manually.

 This function is available only when [EyeComfort Mode Duration](#) is set to [Custom](#).

- [EyeComfort Mode Level](#)

Adjust the level of the EyeComfort Mode screen.

## Automatically adjusting image quality

 > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Smart Calibration](#)

Automatically adjust the picture quality of a movie to obtain the quality intended by the movie producer.

 This function may not be supported depending on the model or geographical area.

To use this function, use a Smartphone that is compatible with the function. The list of compatible models is shown below.

- Galaxy models: Galaxy S, Galaxy Note, Galaxy Fold, and Galaxy Flip series models that were released after January 2019.
- iPhone models: Models with a Face ID function that were released after January 2019.

 Supported models may differ depending on the situation.

## Setting the Panel Care

 > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Panel Care](#)

Adjusts settings to protect the screen.

 This function may not be supported depending on the model or geographical area.

- [Pixel Shift](#)

Moves pixels at regular intervals to prevent screen issues.

 When the Pixel Shift mode is used, some of the screen edges may move outside the screen borders and may not be visible. To fix the screen at the home position, turn off the Pixel Shift mode.

 To prevent afterimage when viewing content with a lot of static images, turn on the Pixel Shift mode.

- [Adjust Logo Brightness](#)

Prevents screen issues by lowering the brightness of fixed images, such as logos and banners.

- [Pixel Refresh](#)

Adjusts pixels to provide a clearer screen. Some features, such as reservation, recording and voice recognition, do not work during Pixel Refresh.

 Run this function when there are after-images on the screen.

# Setting the Viewing Environment for External Devices

You can optimise the TV for viewing specific video formats.

## Using Input Signal Plus

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [External Device Manager](#) > [Input Signal Plus](#) [Try Now](#)

Expands the input signal range for HDMI connections.

-  If the [Input Signal Plus](#) feature is turned off, HDR signals sent from an external device cannot be received.
-  When you select the HDMI connector you want to use for [Input Signal Plus](#), and then press the Select button to set the [Input Signal Plus](#) function to [On](#), the TV screen may flicker.
-  When you connect the TV to an external device that supports only the UHD 24 Hz or UHD 30 Hz frequency or any FHD frequency, the [Input Signal Plus](#) function may not be available. In this case, turn off the [Input Signal Plus](#) function.
-  For more information about the supported UHD resolutions, refer to "[Supported Resolutions for UHD Input Signals](#)".
-  For more information about the supported 8K resolutions, refer to "[Resolutions for Input Signals supported by 8K models](#)".

## Using HDMI Black Level

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [External Device Manager](#) > [HDMI Black Level](#) [Try Now](#)

Use HDMI Black Level to adjust the black level to compensate for low black levels, low contrast or dull colours generated by external devices connected to the TV via an HDMI cable.

 This function is only available when the input signal connected to the TV via an HDMI connector is set to RGB444.

## Configuring Media Switching Settings

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Media Switching Settings](#)

Configure specific settings related to media transition.

 This function may not be supported depending on the model.

- [Quick Media Switching](#)

Quickly and seamlessly switches AV streams with different frequencies.

 This feature is available only when a device that supports fast media switching is connected.

- [Picture Adjustment](#)

Display media images smoothly and clearly.

# Configuring a Sound Mode and Expert Settings

Change the Sound Mode and adjust Expert Settings.

## Choosing a sound mode

 > left directional button >  **Settings** > **All Settings** > **Sound** > **Sound Mode** [Try Now](#)

You can select the available sound mode that you prefer for a content type or your listening environment.

 When an external device is connected, **Sound Mode** may change accordingly.

 This function may not be supported depending on the model.

## Configuring advanced sound settings

 > left directional button >  **Settings** > **All Settings** > **Sound** > **Expert Settings** [Try Now](#)

You can personalise the sound quality by adjusting the following settings.

 Supported menu options may vary depending on the **Sound Output** setting.

- **Balance** [Try Now](#)

Adjust the volumes of the left and right speakers to balance the sound levels.

 When the TV is used in portrait mode, the **Balance** function may not work properly.

- **Equaliser** [Try Now](#)

Customise the TV sound by adjusting the volume of high-pitched and low-pitched sounds.

 This function is not available when the **Adaptive Sound Pro** or **Active Voice Amplifier** function is turned on.

 This function is not available when the **Sound Mode** function is set to **Adaptive Sound**, **Games**, or **Amplify**.

 The name and properties of this function may appear differently depending on the connected external device.

- **HDMI-eARC Mode** [Try Now](#)

You can connect an audio device that supports eARC via HDMI-eARC. Muting occurs temporarily during device connection.

 This function may not be supported depending on the model.

- **Digital Output Audio Format** [Try Now](#)

Select a digital audio output format. If you select Auto option, the audio output mode automatically changes to the mode supported by the connected soundbar or A/V receiver.

If you select the **Pass-through** option, audio data is output with no processing.

 This function is available when the input source is HDMI and the receiver is connected via HDMI-eARC.

- **Digital Output Audio Delay** [Try Now](#)

Adjust the output delay time for digital audio.

-  This function is available when the input source is HDMI and the receiver is connected via HDMI-ARC or HDMI-eARC.
-  When the receiver can't process the input source, it may operate in the [Auto](#) option.
-  This function may not be supported depending on the model.

- **Dolby Atmos** [Try Now](#)

When watching Product through the embedded speakers, the virtual surround sound effect of Dolby Atmos can be turned on or off.

If the TV has been installed in portrait mode by using separate accessories, the virtual surround sound effect through the TV speakers does not work.

-  This function may not be supported depending on the model.

- **Auto Volume** [Try Now](#)

Automatically adjusts the sound to a certain level when changing channels or switching to another external input.

- **Simultaneous Optical Output**

The device connected via optical always outputs sound.

-  This function may not be supported depending on the model or geographical area.

- **Auracast**

You can listen to the TV's audio by connecting to a Bluetooth audio device that supports [Auracast](#).

-  This function may not be supported depending on the model.
-  For more information about [Auracast](#), refer to "[Using Auracast](#)."

- **Reset Sound** [Try Now](#)

Reset changed sound settings.

-  Standard audio signals are sampled at 48 kHz while HD audio signals are sampled at 96 kHz.
-  Some SPDIF receivers may not be compatible with HD audio format.

- **HDMI Sound Output**

Specifies where the ARC/eARC sound device(s) will be connected by an external source. You can choose between TV or Wireless One Connect.

ARC/eARC sound output is only available for the device connected to the selected option.

-  This function may not be supported depending on the model

# Using the Sound Support Functions

Configure the sound settings for your TV.

## Selecting speakers

 > left directional button >  **Settings** > **All Settings** > **Sound** > **Sound Output** [Try Now](#)

You can select which speakers the TV uses for audio output.

-  If the soundbar is connected to the TV via both HDMI and Optical, HDMI may be selected first even if you select Optical.
-  External speakers may not be controlled with the Samsung Smart Remote. When an external speaker is enabled, some sound menus are not supported.

Samsung TV supports the Q-Symphony function.

- **Q-Symphony** links speakers that support symphony to your TV speakers, to play sounds from the different speakers simultaneously, offering the ultimate surround sound experience.

 This function may not be supported depending on the model.

Your Samsung TV supports a USB sound device connection.

- USB 2.0 and higher devices are supported.
- Two USB sound devices can be connected at the same time.

 Make sure to connect a USB sound device directly to a USB port. (USB hubs are not supported.)

 Some USB sound device models may not be compatible with the TV.

## Listening to the TV through Bluetooth devices

 > left directional button >  [Settings](#) > [All Settings](#) > [Sound](#) > [Sound Output](#) > [Bluetooth Speaker List](#)

You can connect Bluetooth audio devices to the TV. They must be paired using the TV's Bluetooth function. Refer to the user manual for your audio device such as Bluetooth speaker, soundbar and headphones for detailed connection and usage.

-  If the TV fails to find a Bluetooth audio device, place the device closer to the TV, and then select [Scan](#).
-  When you turn on a paired Bluetooth audio device, the TV detects it automatically, and then displays a pop-up window. Use this pop-up window to activate/deactivate the Bluetooth audio device.
-  The sound quality may be affected by the condition of the Bluetooth connection.
-  Before using a Bluetooth audio device, refer to "[Read Before Using Bluetooth Devices](#)".
-  On some models, you can connect and use two Bluetooth devices simultaneously.
-  If multiple Bluetooth audio devices and Bluetooth input devices are simultaneously connected, sound from the audio devices may be choppy or key data from the input devices may be dropped.  
The number of Bluetooth audio devices for connection can be limited to one device, for a stable game service.
-  If a call comes in while you listen to TV sound with Galaxy Buds, the Buds connects to the mobile phone and the TV sound is muted for connecting to the call.  
When the call is ended, the Buds automatically connects to the TV. This feature is supported only when the TV and mobile phone are connected to the same Samsung account.
-  If the Galaxy Buds is disconnected while listening to TV sound with the Buds, the TV sound is muted.
-  Some models support the [Auracast](#) feature. For more information about [Auracast](#), refer to "[Using Auracast](#)".

## Using Auto-Con. Bluetooth

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Auto-Con. Bluetooth](#)

Automatically connects to the last Bluetooth audio device used.

-  This function may not be supported depending on the model or geographical area.

## Playing TV sounds by configuring Q-Symphony Settings

 > left directional button >  **Settings** > **All Settings** > **Sound** > **Q-Symphony Setting**

Use the **Q-Symphony Setting** feature to configure wired or wireless symphony settings.

-  This function may not be supported depending on the model.
-  Configuring wired symphony settings is possible only when an audio device that supports wired symphony functionality is connected to HDMI or Optical.
-  For audio devices that support Wi-Fi and Q-Symphony, it is possible to configure wireless symphony settings.
-  It is not possible to turn on wired symphony and wireless symphony modes simultaneously.
-  A maximum of five audio devices can be connected simultaneously, depending on the device model and the mode setting.
-  This feature may not be supported, depending on your TV model and audio device.
-  This function is not supported if your TV model is The Frame and installed in portrait orientation. To use the TV in landscape orientation, set up the feature again.

If soundbars or wireless speakers that support Q-Symphony are connected, surround sound configuration can be used when the following conditions are met.

- Make sure two or more wireless speakers are connected to the same wireless network.
- An audio device that supports Wi-Fi is connected to the same wireless network as the TV.

 For details on how to connect and use an audio device that supports Wi-Fi, refer to the device user manual.

 Some wireless audio devices may not support a configuration that includes soundbars.

If you turn on screen mirroring mode while using an audio device that supports Wi-Fi, the connection is disconnected.

Set different configurations by choosing desired audio devices.

 This function may not be supported depending on the model or geographical area.

- **Apply**

Set up your desired symphony configuration by selecting wired or wireless audio devices.

- **Auto Position**

The **Auto Position** feature automatically changes the positions of configured audio devices.

 This function may not be supported depending on the model or geographical area.

 **Auto Position** may not be supported, depending on the models of your wireless audio devices.

 This feature may not work, depending on the TV microphone and sound output settings.

 The perceived position may not match the actual position, depending on the obstacles and reflective characteristics at the site where the audio device is installed.

Position recognition may fail, depending on the environment in which the audio devices are installed.

- **Adjust Position**

Change the positions of audio devices configured in Q-Symphony Mode.

 If you set a wireless audio device as a device for wireless symphony, it is possible to set a position.

 Position setting may not be supported, depending on the wireless audio device.

For device specifications, refer to the user manual for the audio device.

- **Adjust Level**

Adjust the volume of audio devices configured in Q-Symphony Mode.

 **Adjust Level** may not be supported, depending on the models of your wireless audio devices.

# System and Support

You can configure system and support settings such as clock, timers, energy usage and software updates.

## Using the Time Functions and the Timers

Set the current time and use the timer function.

 > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Time** [Try Now](#)

You can set the **Clock Mode** manually or automatically. Once the Clock is set, you can view the current time on the TV anytime.

You must set the clock in the following cases:

- The power cord is disconnected and then connected.
- The **Clock Mode** is changed from **Auto** to **Manual**.
- The TV is not connected to the network.
- No broadcast signals are received.

 This function may not be supported depending on the model or geographical area.

### Setting the clock automatically

 > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Time** > **Clock Mode** > **Auto**

 This function works only when the TV is connected to the network or is receiving digital broadcasts through a connected antenna.

 The accuracy of the time information received may differ with the channel and signal.

 If you get your TV signal from a cable broadcast receiver/set-top box or a satellite receiver/satellite set-top box connected to an HDMI or Component port, you must set the current time manually.

 This function may not be supported depending on the model or geographical area.

## Adjusting the clock for DST and time zone

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Time](#) > [Time Zone](#)  
[Try Now](#)

Selects your time zone.

 This function is only available when the [Clock Mode](#) is set to [Auto](#).

 This function may not be supported depending on the model or geographical area.

- [GMT](#)

Set Greenwich Mean Time (GMT).

- [DST](#)

Automatically adjusts for Daylight Saving Time (DST).

## Changing the current time

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Time](#) > [Time Offset](#)  
[Try Now](#)

[Time Offset](#) adjusts the time through a network connection.

 This function is available only when [Clock Mode](#) is set to [Auto](#), the TV fails to receive time information through normal broadcast signals, and the TV is connected to a network.

 This function may not be supported depending on the model or geographical area.

## Setting the clock manually

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Time](#) > [Clock Mode](#) > [Manual](#)

When [Clock Mode](#) is set to [Manual](#), you can directly enter the current date and time. Select the [Date](#) and [Time](#) by using the directional buttons on the remote control.

When power is cut off and then supplied, the settings for [Date](#) and [Time](#) are reset to deactivate the [On Timer](#). When their settings are assigned again, the [On Timer](#) is activated.

 This function may not be supported depending on the model or geographical area.

# Using the Power and Energy Saving Functions

Use the power saving functions to reduce the TV power consumption.

## Reducing the power consumption of the TV

 > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Power and Energy Saving** [Try Now](#)

Reduce energy consumption by changing your power preferences and other energy-saving options.

- **Energy Saving Solution** [Try Now](#)

Reduce power consumption by adjusting brightness settings.

 This function is not available when the **AI Picture Mode Settings** function is turned on.

- **Brightness Optimisation** [Try Now](#)

Automatically adjust the picture brightness based on the ambient light level.

 This function is not available when the **AI Picture Mode Settings** function is turned on.

 This function may not be supported depending on the model or geographical area.

- **Minimum Brightness** [Try Now](#)

When **Brightness Optimisation** is turned on, you can manually adjust the minimum brightness of the TV screen. This function acts only when the value is less than the setting in  > left directional button >

 **Settings** > **All Settings** > **Picture** > **Expert Settings** > **Brightness**. [Try Now](#)

 This function is not available when the **AI Picture Mode Settings** function is turned on.

- **Motion Lighting** [Try Now](#)

Adjusts the brightness in response to on-screen movements to reduce power consumption.

 This function is not available when the **AI Picture Mode Settings** or **Game Mode** function is turned on.

- **Screen Saver** [Try Now](#)

Activate a screensaver when your TV displays a still image for two hours or more.

 This function may not be supported depending on the model.

 If your TV displays the same still image for 2 minutes, **Screen Saver** is automatically activated. **Screen Saver** cannot be turned off, to ensure protection of pixels. (S8\*F/S9\*F/S8\*H/S9\*H)

- **Auto Power Saving** [Try Now](#)

When the TV is connected to Wi-Fi, this feature checks Wi-Fi signals and remote control usage data to determine whether the TV is used. If the TV is left idle, the feature automatically switches off the screen.

 This function may not be supported depending on the model.

 This feature may not be supported, depending on the Wi-Fi router.

- **Auto Power Off** [Try Now](#)

Automatically turns off the TV to reduce unnecessary power consumption if the TV Controller and the remote control are not used for the set period of time.

 In some regions, the **Auto Power Off** function may not be supported when **Samsung TV Plus** is operating.

- **Power Off Mode**

Choose which screen mode you would like when the power is turned off.

 This function may not be supported depending on the model.

- **Sleep Timer**

You can use this function to automatically shut off the TV after a pre-set period of time. You can set the sleep timer for up to 180 minutes after which it will turn off the TV.

 This function may not be supported in some viewing modes.

- **On Timer**

You can set **On Timer** to turn on the TV automatically at a specific time. **On Timer** is only available if the **Clock** has been set.

 This function may not be supported depending on the model or geographical area.

- **Off Timer**

You can set **Off Timer** to shut off the TV automatically at a specific time. **Off Timer** is only available if the **Time** has been set.

 To use this function, first set the **Time** (🏠 > left directional button > ⚙️ **Settings** > **All Settings** > **General & Privacy** > **Time**)

 This function may not be supported in some viewing modes.

 This function may not be supported depending on the model or geographical area.

# Updating the TV's Software

View your TV's software version and update it if necessary.

 **DO NOT** turn off the TV's power until the update is complete. The TV will turn off and on automatically after completing the software update. Video and audio settings will be reset to their defaults after a software update.

 > left directional button >  [Settings](#) > [Support](#) > [Software Update](#) [Try Now](#)

## Updating through the network

 > left directional button >  [Settings](#) > [Support](#) > [Software Update](#) > [Update Now](#) [Try Now](#)

 Updating from the network requires an active network connection.

## Updating through a USB device

 > left directional button >  [Settings](#) > [Support](#) > [Software Update](#) > [Update Now](#) [Try Now](#)

After downloading the update file from the Samsung website and storing it on a USB device, connect the USB device to the TV to update.

 To update using a USB device, download the update package from Samsung.com to your computer. Then, save the update package in the USB device's top-level folder. Otherwise, the TV will not be able to locate the update package.

## Updating the TV automatically

 > left directional button >  [Settings](#) > [Support](#) > [Software Update](#) > [Auto update](#) [Try Now](#)

If the TV is connected to the network, you can have the TV's software update itself automatically while you are watching the TV. When the background update is completed, it is applied the next time the TV is turned on.

If you agree to the Smart Hub terms and conditions, [Auto update](#) is set to [On](#) automatically. If you want this function disabled, use the Select button to turn it off.

 This function may take a longer time if another network function is running concurrently.

 This function requires a network connection.

## Security updates information

Security updates are provided to strengthen the security of your device and protect your personal information. For more information on security updates, visit <https://security.samsungtv.com>.

 The website supports only some languages.

## Updating through the mobile network

 > left directional button >  [Settings](#) > [Support](#) > [Software Update](#) > [Update with Mobile Network](#) [Try Now](#)

Use a mobile network to update the software.

 This function may not be supported depending on the model or geographical area.

# Using the Parental Settings function

Configure content or app security settings.

 > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Parental Settings**  
**Try Now**

Restrict access to content or apps that require parental guidance. Locked content or apps can be accessed by entering the password.

 These functions may not be supported depending on the model and geographical area.

- **Programme Rating Lock** **Try Now**

This function is useful for controlling what programmes children can watch on the TV based on their ratings.

 For more information, refer to "[Using Programme Rating Lock](#)".

 This function may not be supported depending on the model or geographical area.

- **Apply Channel Lock** **Try Now**

By selecting the menu, you can turn on or off the **Apply Channel Lock** function.

Lock specific channels to prevent children from watching adult content.

 To use this function, the PIN number is required.

- **Channel Lock Settings** **Try Now**

Set the channel to lock or unlock.

- **App Lock**

Set the installed app to lock or unlock.

# Audio and Video Functions for the Visually or Hearing Impaired

You can configure the functions for the visually or hearing impaired.

## Running the accessibility functions

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
[Try Now](#)

## Running Accessibility Shortcuts

The [Accessibility Shortcuts](#) provide easy access to the accessibility functions. To display the [Accessibility Shortcuts](#), press and hold the +/– (Volume) button for 2 seconds or more. You can easily turn on or turn off the functions such as [Voice Guide](#), [Audio Description](#), [Audio Subtitles](#), [Audio Phone Number](#), [Auto Picture Off](#), [Magnification](#), [High Contrast](#), [Relumino Mode](#), [Zoom Menu and Text](#), [Greyscale](#), [Colour Inversion](#), [SeeColors Mode](#), [Learn TV Remote](#), [Menu Learning Screen](#), [Subtitle](#), [Sign Language Zoom](#), [Multi-output Audio](#), [Slow Button Repeat](#), [Auto Menu Sort](#), [Accessibility Settings](#), etc.

-  On the Standard Remote Control, press the AD/SUBT. button or press and hold the MUTE button.
-  Even if the [Voice Guide](#) is set to **Off** or muted, the voice guide for [Accessibility Shortcuts](#) is enabled.
-  The shortcut menus may not appear depending on the model or geographical area.
-  This function may not be supported depending on the model or geographical area.

## Enabling voice guides for the visually impaired

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
> [Voice Guide Settings](#) [Try Now](#)

You can activate voice guides that describe the menu options aloud to aid the visually impaired. To activate this function, set [Voice Guide](#) to **On**. With [Voice Guide](#) on, the TV provides voice guides for channel change, volume adjust, information on current and upcoming programmes, schedule viewing, other TV functions and various content in the [Internet](#) and in [Search](#).

You can go to [Voice Guide](#), and then press the Select button to turn the function on or off.

-  The [Voice Guide](#) is provided in the language that is specified on the TV [Language](#). However, some languages are not supported by [Voice Guide](#) even though they are listed in the TV [Language](#). **English** is always supported.
-  For more information about the TV [Language](#) settings, refer to "[Changing the menu language](#)".

## Changing the volume, speed, pitch and the TV background volume of the Voice Guide

You can configure the [Volume](#), [Speed](#), [Pitch](#) and the [TV Background Volume](#) of the voice guide.

### Audio Description

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
> [Audio Description Settings](#) [Try Now](#)

You can activate an audio guide that provides an audio description of video scenes for the visually impaired. This function is only available with broadcasts that provide this service.

 This function is only available on digital channels.

- [Audio Description](#)

Turns the audio description function on or off.

- [Audio Description Volume](#)

Adjusts the audio description volume.

### Setting the audio subtitles

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
> [Audio Screen](#) [Try Now](#)

Hear on-screen information read aloud through voice guidance.

 This function may not be supported depending on the geographical area.

### The TV screen is turned off but audio continues

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
> [Auto Picture Off](#) [Try Now](#)

Turn off the TV screen and provide only sound to reduce overall power consumption. When you press a button on the remote control other than Volume and Power while the screen is off, the TV screen turns back on.

The screen automatically turns off if the [Auto Picture Off](#) feature is enabled and there is no button input for a certain period of time.

 This function may not be supported depending on the geographical area.

## Enlarge the screen

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Magnification](#) [Try Now](#)

Enlarge the screen to make the picture or text bigger. You can adjust the zoom level or move the zoom area by following the displayed instructions.

 This function may not be supported depending on the model or geographical area.

## White text on black background (high contrast)

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [High Contrast](#) [Try Now](#)

You can change Smart Hub and setting menu screens to white text on a black background and change the transparent TV menus to opaque automatically so that text can be more easily read.

 If [High Contrast](#) is on, some [Accessibility](#) menus are not available.

## Setting the outline emphasis feature for viewers with low vision

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Relumino Mode Settings](#) [Try Now](#)

This feature increases the contrast and brightness of the screen and emphasises the outlines of images, so that viewers with low vision can see the screen more clearly.

This feature is only available when the input signal is TV or HDMI. It may not be available for some videos.

 This input signal may differ depending on the model and geographical area.

- [Together Mode](#)

Shows the screen displayed when [Relumino Mode](#) is turned on and the screen displayed when the mode is turned off, side by side simultaneously.

 This function may not be supported depending on the model or geographical area.

## Enlarging the font (for the visually impaired)

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Zoom Menu and Text](#) [Try Now](#)

You can enlarge the size of the font on the screen. To activate, set [Zoom Menu and Text](#) to [On](#).

## Setting the screen to black and white

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
> [Greyscale](#) [Try Now](#)

You can change the colour of the TV screen to black and white to sharpen blurred edges caused by colours.

 If [Greyscale](#) is on, some [Accessibility](#) menus are not available.

 This function may not be supported depending on the model or geographical area.

## Inverting the screen colour

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
> [Colour Inversion](#) [Try Now](#)

You can invert the colours of the text and background for the setting menus displayed on the TV screen to make it easier to read them.

 If [Colour Inversion](#) is on, some [Accessibility](#) menus are not available.

 This function may not be supported depending on the model or geographical area.

## Setting the colour correction feature for users with colour blindness

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
> [SeeColors Mode](#) [Try Now](#)

This feature helps users with colour blindness experience richer colours. Use this feature to customise the colours for your unique viewing conditions, to experience richer colours on the screen.

 When [SeeColors Mode](#) is in use, some menus are disabled.

 This function may not be supported depending on the model.

## Learning about the remote control (for the visually impaired)

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
> [Learn TV Remote](#) [Try Now](#)

This function helps individuals with a visual impairment to learn the positions of the buttons on the remote control. When this function is activated, you can press a button on the remote control and the TV will tell you its name. Press the  button twice to exit [Learn TV Remote](#).

## Learning about the TV menu

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Menu Learning Screen](#) [Try Now](#)

Learn the menus on the TV screen. Once enabled, your TV will tell you the structure and features of the menus you select.

## Selecting the broadcasting subtitle language

You can select the default subtitle language. The list may vary depending on the broadcast.

- [Primary Subtitle Language](#) [Try Now](#)  
Sets the primary subtitle language.
- [Secondary Subtitle Language](#) [Try Now](#)  
Sets the secondary subtitle language.

 This function may not be supported depending on the model or geographical area.

## Enlarging the sign language screen for the hearing impaired

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Sign Language Zoom Settings](#) [Try Now](#)

You can zoom in the sign language screen when the programme you are watching provides it. First, set [Sign Language Zoom](#) to [On](#), and then select [Edit Sign Language Zoom](#) to change the position and magnification of the sign language screen.

## Watching TV broadcasts with subtitles

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
> [Subtitle Settings](#) [Try Now](#)

Set [Subtitle](#) to [On](#). Then you can watch the programme with the subtitle displayed.

 This function may not be supported depending on the model or geographical area.

 This function has no relationship with the features for controlling sub-titles of DVD or Blu-ray players. To control DVD or Blu-ray subtitles, use the sub-title feature of the DVD or Blu-ray player and the player's remote control.

- [Subtitle](#) [Try Now](#)

Turns on or off the subtitle.

- [Subtitle Mode](#) [Try Now](#)

Sets the subtitle mode.

- [Subtitle Language](#) [Try Now](#)

Sets the subtitle language.

- [Spoken Subtitles](#)

Listen to an audio version of the subtitles. Only available with broadcasts that provide this service.

 This function may not be supported depending on the model or geographical area.

## Listening to the TV through Bluetooth devices (for the hearing impaired)

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
> [Multi-output Audio](#) [Try Now](#)

You can turn on both the TV speaker and Bluetooth headphone at the same time. When this function is active, you can set the volume of the Bluetooth headphone higher than the volume of the TV speaker.

 This function may not be supported depending on the model or geographical area.

 For more information about connecting Bluetooth devices to the TV, refer to "[Listening to the TV through Bluetooth devices](#)".

## Configuring the repeat settings for remote control buttons

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
> [Remote Button Repeat Settings](#) [Try Now](#)

You can configure the operation speed of the remote control buttons so that they slow down when you continually press and hold them. First, set [Slow Button Repeat](#) to [On](#), and then adjust the operation speed in [Repeat Interval](#).

 This function may not be supported depending on the model or geographical area.

## Using Accessibility Shortcut Settings

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Accessibility Shortcut Settings](#) [Try Now](#)

Set the accessibility shortcut to activate when the Volume button is pressed and held.

 This function may not be supported depending on the model or geographical area.

## Using Time to Take Action

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Time to Take Action](#) [Try Now](#)

Choose how long messages, like pop-ups, stay on screen before you take action.

 This function may not be supported depending on the model or geographical area.

## Using Moving Text and Image

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Moving Text and Image](#) [Try Now](#)

Some screen effects may be limited, but this can be helpful for those sensitive to screen motion.

 This function may not be supported depending on the model or geographical area.

## Using Other Functions

You can view other functions.

### Changing the menu language

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Language](#) [Try Now](#)

### Changing the Menu Style

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Menu Style](#)

Change the size and transparency of the menu items displayed on the screen.

 This function may not be supported depending on the model or geographical area.

### Checking the remote control battery level

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Remote Control](#)

You can check the Samsung smart remote's remaining amount of the battery.

 This function may not be supported depending on the model or geographical area.

- [Remote Grip Sensor](#)

Alerts users so that they can hold the remote control correctly, if the remote-control grip sensor senses any incorrect orientation of the remote control. When turned off, the alert turns off.

 This function may not be supported depending on the model or geographical area.

- [Power Button Option](#)

Set extra control options for your remote control's Power button.

 This function may not be supported depending on the model.

### Adjusting the Sound Feedback volume

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Sound Feedback](#)

Adjust the volume of the notification sound when using menu items or selecting options.

 This function may not be supported depending on the model or geographical area.

## Selecting Usage or Retail Mode

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Usage Mode](#) [Try Now](#)

You can set the TV for retail environments by setting [Usage Mode](#) to [Retail Mode](#).

 For all other uses, select [Home Mode](#).

 Use [Retail Mode](#) only in a store. With [Retail Mode](#), some functions are disabled and the TV settings automatically reset after a preset amount of time.

 This function may not be supported depending on the model.

## Setting up a password

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [PIN Settings](#)  
> [Change PIN](#) [Try Now](#)

The PIN input window appears. Enter a PIN. Enter it again to confirm it.

 This function may not be supported depending on the model or geographical area.

 If you forget your PIN, you can reset it with your remote control. With the TV turned on, press the following buttons on the remote control in the order shown to reset the PIN to "0000".

On the Samsung Smart Remote: Press **+/-** (Volume) button. > Volume Up >  > Volume Down >  > Volume Up > .

On the Standard Remote Control: Press  button. > **+** (Volume Up) > Press RETURN button. > **-** (Volume Down) > Press RETURN button. > **+** (Volume Up) > Press RETURN button.

## Setting up the Samsung Account PIN Setting

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [PIN Settings](#)  
> [Samsung Account PIN Setting](#) [Try Now](#)

Set your Samsung account PIN to protect your privacy.

 This function may not be supported depending on the model or geographical area.

## Restoring the TV to the factory settings

 > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Factory data reset**  
**Try Now**

You can restore all TV settings to the factory defaults.

1. Select **Factory data reset**. The security PIN entry window appears.
2. Enter the security PIN, and then select **Reset**. All settings are then reset. The TV turns off and on again automatically and displays the Initial Setup screen.

 For more information on **Factory data reset**, refer to the Simple User Guide that came with the TV.

 If you skipped some steps in the initial setup, run **Set Up TV** ( > left directional button >  **Connected Devices** > TV > Press and hold the Select button > **Set Up TV**), and then configure the settings in the steps you skipped. This function may not be supported depending on the model or geographical area.

 This function may not be supported depending on the model or geographical area.

## Setting up the Button Lock

 > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Button Lock**

You can set the TV Controller button lock. If this function is **On**, you cannot use TV Controller button.

 This function may not be supported depending on the model.

## Setting up the USB Lock

 > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **USB Lock**

You can block connection to any external USB device.

 This function may not be supported depending on the model.

## Setting up the Zero Touch Configuration

 > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Zero Touch Configuration**

Set up the device via Tizen Business Manager. Before using Zero Touch Configuration, register the device at Tizen Business Manager.

 This function may not be supported depending on the model.

## Setting up the SmartThings Settings

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [SmartThings Settings](#)

You can control the devices registered to the SmartThings cloud with remote control.

 This function may not be supported depending on the model.

 For more information, refer to "[Using SmartThings](#)".

## Managing External Devices

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Device Connection Manager](#) [Try Now](#)

When you connect external devices such as mobile devices or tablets connected to the same network as the TV so you can share content, you can view the list of allowed devices and connected devices.

- [Access Notification](#)

Set whether to display a notification when an external device such as a mobile device or tablet attempts to connect to the TV.

- [Device List](#)

Manage a list of external devices registered to the TV.

## Using AirPlay

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Apple AirPlay Settings](#) [Try Now](#)

You can use AirPlay to view content from your iPhone, iPad or Mac on the TV screen.

 This function may not be supported depending on the model or geographical area.

## Using the Maintenance Mode

 > left directional button >  [Settings](#) > [Support](#) > [Maintenance Mode](#)

Protect your personal information while the TV is repaired or used by someone else. Once service mode turns on, access to the apps or content is blocked. To back up data in which settings are saved, connect a USB stick to the TV.

 This function may not be supported depending on the model.

## Using the Cold Weather Mode

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [System Manager](#) > [Cold Weather Mode](#)

 This function is supported only in The Terrace.

 For more information on [Cold Weather Mode](#), refer to the user manual that came with the TV.

 The menu name may differ depending on the model.

## Using Google Cast

 > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Google Cast Settings](#)

[Try Now](#)

Cast films, music, shows, and more from your mobile devices or computer to this TV with Google Cast.

 This function may not be supported depending on the model.

# HbbTV

Access services from entertainment providers, online providers and CE manufactures through HbbTV.

 This function may not be supported depending on the model or geographical area.

 Some channels may not include the HbbTV service.

In some countries, HbbTV is inactive by default. In this case, HbbTV can be used by installing the HbbTV application (the HbbTV Activation Application) in  > left directional button >  Home > Apps.

To set the HbbTV automatic start to on or off, access  > left directional button >  Settings > All Settings > General & Privacy > Broadcasting > Expert Settings > HbbTV Settings and set HbbTV to on or off. (Depending on the geographical area.) [Try Now](#)

You can use the following functions:

- **HbbTV:** Enable or disable data services.
- **Do Not Track:** Ask apps and services not to track your browsing activity.
- **Private Browsing:** Enable Private Browsing to stop the browser from saving your Internet history.
- **Delete Browsing Data:** Delete all saved Cookies.

If you want this function enabled or disabled, use the Select button to turn it on or off.

- HbbTV is not available when Timeshift is running or when a recorded video is being played back.
- An application on HbbTV may malfunction temporarily depending on the circumstances of the broadcast station or application provider.
- An application on HbbTV usually operates only when the TV is connected to an external network. The application may malfunction depending on the network conditions.
- When the HbbTV application is installed and the broadcasting programme supports HbbTV, a red button appears on the screen.
- It is possible to use both Digital Teletext mode and Traditional Teletext mode in several limited channels by pressing the TTX/MIX button on the Standard Remote Control in a toggling manner.
- When you press the TTX/MIX button once in HbbTV mode, Digital Teletext mode of HbbTV is activated.
- When you press the TTX/MIX button twice in HbbTV mode, Traditional Teletext mode is activated.

## Using a TV Viewing Card (“CI or CI+ Card”) (For India Only)


Watches paid channels by inserting your TV Viewing Card (“CI or CI+ Card”) into the COMMON INTERFACE slot.

-  The 2 CI card slots may not be supported depending on the model.
-  Turn the TV off to connect or disconnect a “CI or CI+ Card”.
-  The “CI or CI+ Card” may not supported depending on the model.

### Connecting the “CI or CI+ Card” via COMMON INTERFACE slot with the CI CARD Adapter

-  Only for models with Common interface slot.

#### Attaching the CI CARD Adapter via COMMON INTERFACE slot

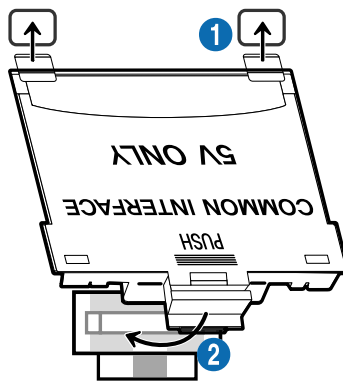

To attach the CI CARD Adapter to the TV, follow these steps:

- 1** Insert the CI CARD Adapter into the two holes on the back of TV.
  -  Please locate the two holes at the back of the TV above the COMMON INTERFACE slot.
- 2** Connect the CI CARD Adapter to the COMMON INTERFACE slot on the back of TV.

## Connecting the “CI or CI+ Card”


Connect the “CI or CI+ Card” to the COMMON INTERFACE slot as shown in the image below.



## Connecting the “CI or CI+ Card” via COMMON INTERFACE slot

 Only for models with Common interface slot.

Connect the “CI or CI+ Card” to the COMMON INTERFACE slot as shown in the image below.

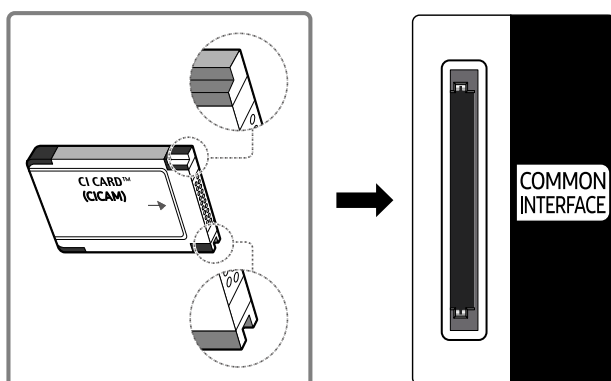

## Using the “CI or CI+ Card”

To watch paid channels, the “CI or CI+ CARD” must be inserted.

- Samsung TV follow up CI+ 1.4 standard. When Samsung TV display the pop-up message, it may happen due to CI+ 1.4 Version inconsistency. If you have a problem, please contact Samsung Service Centre.
  -  Your Samsung TV conforms to the CI+ 1.4 standards.
  -  Where a CI+ Common Interface module is incompatible with Samsung TV then please remove the module and contact the CI+ operator for assistance.
- If you don't insert the “CI or CI+ CARD”, some channels will display the pop-up message.
- The pairing information will be displayed in about 2-3 minutes. If an error message is displayed, please contact your service provider.
- When the configuration of channel information has finished, the message “Updating Completed” is displayed, indicating the channel list is updated.
  -  You must obtain a “CI or CI+ CARD” from a local cable service provider.
  -  When removing the “CI or CI+ CARD”, carefully pull it out with your hands since dropping the “CI or CI+ CARD” may cause damage to it.
  -  Insert the “CI or CI+ CARD” in the direction marked on the card.
  -  The location of the COMMON INTERFACE slot may be different depending on the model.
  -  “CI or CI+ CARD” is not supported in some countries and regions. Check with an authorised dealer to find out if “CI or CI+ CARD” is supported in your locality.
  -  If you have any problems, please contact a service provider.
  -  Insert the “CI or CI+ CARD” that supports the current aerial settings. If not, the screen may not look normal.

# Teletext Feature

Learn how to use Teletext and run the functions provided by Teletext Service.

-  This function is available only in the channel that supports the teletext service.
-  This function may not be supported depending on the model or geographical area.
-  To enter the Teletext feature,
  - On the Samsung Smart Remote: Press the  or  button to move to TTX/MIX, and then press the Select button.
  - On the Standard Remote Control: Press the  TTX/MIX button.
-  To exit from the Teletext feature,
  - On the Samsung Smart Remote: Press the TTX/MIX button on the pop-up list until a live TV programme appears.
  - On the Standard Remote Control: Press the  TTX/MIX button on the remote control until live TV appears.

The index page of the Teletext service gives you information on how to use the Service. For Teletext information to be displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.

-  To change the Teletext page,
  - On the Samsung Smart Remote: Press the numeric button on the TTX menu.
  - On the Standard Remote Control: Press the numeric button.

## On the Samsung Smart Remote

**TTX/MIX (Full TTX / Double TTX / Mix / Live TV):** The teletext mode is activated in the channel that is being watched. Each time you press the TTX/MIX button, the teletext mode changes in the order of **Full TTX → Double TTX → Mix → Live TV**.

- **Full TTX:** The teletext mode appears on the full screen.
- **Double TTX:** The teletext mode appears on the half screen along with the currently viewed channel on the other half.
- **Mix:** The teletext mode appears transparently on the currently viewed channel.
- **Live TV:** It returns to the Live TV screen.

**Colour buttons (red, green, yellow, blue):** If the FASTEXT system is used by the broadcasting company, the different topics on a Teletext page are colour-coded and can be selected by coloured buttons. Press the colour corresponding to the topic of your choice. A new colour coded page appears. Items can be selected in the same way. To display the previous or next page, select corresponding coloured button.

 **Index:** Displays the index (contents) page at any time while you are viewing Teletext.

 **Sub Page:** Displays the available sub-page.

 **List/Flof:** Selects the Teletext mode. If pressed during LIST mode, switches the mode to List save mode. In List save mode, you can save a Teletext page into a list using the  (Store) button.

 **Store:** Stores the Teletext pages.

 **Page Up:** Displays the next Teletext page.

 **Page Down:** Displays the previous Teletext page.

 **Reveal/Conceal:** Displays or hides the hidden text (answers to quiz games, for example). To display the normal screen, press it again.

 **Size:** Displays the teletext on the upper half of the screen in double-size. To move the text to the lower half of the screen, press it again. For normal display, press it once again.

 **Hold:** Holds the display at the current page, in the case that there are several secondary pages that follow automatically. To undo, press it again.

 **Cancel:** Shrinks the Teletext display to overlap with the current broadcast. To undo, press it again.

## On the Standard Remote Control

 On the Standard Remote Control, the Teletext function icons are printed on some remote control buttons. To run a Teletext function, find its icon printed on a remote control button, and then press the found button.

 **TTX/MIX**

**Full TTX / Double TTX / Mix / Live TV:** The teletext mode is activated in the channel that is being watched. Each time you press the  TTX/MIX button, the teletext mode changes in the order of **Full TTX** → **Double TTX** → **Mix** → **Live TV**.

- **Full TTX:** The teletext mode appears on the full screen.
- **Double TTX:** The teletext mode appears on the half screen along with the currently viewed channel on the other half.
- **Mix:** The teletext mode appears transparently on the currently viewed channel.
- **Live TV:** It returns to the Live TV screen.

**Colour buttons (red, green, yellow, blue):** If the FASTEXT system is used by the broadcasting company, the different topics on a Teletext page are colour-coded and can be selected by coloured buttons. Press the colour corresponding to the topic of your choice. A new colour coded page appears. Items can be selected in the same way. To display the previous or next page, select corresponding coloured button.

## SETTINGS

**Index:** Displays the index (contents) page at any time while you are viewing Teletext.

## PRE-CH

**Sub Page:** Displays the available sub-page.

## SOURCE

**List/Flof:** Selects the Teletext mode. If pressed during LIST mode, switches the mode to List save mode. In List save mode, you can save a Teletext page into a list using the  (CH LIST) button.

## CH LIST

**Store:** Stores the Teletext pages.

## CH

**Page Up:** Displays the next Teletext page.

## CH

**Page Down:** Displays the previous Teletext page.

## INFO

**Reveal/Conceal:** Displays or hides the hidden text (answers to quiz games, for example). To display the normal screen, press it again.

 AD/SUBT.

 Depending on the model or geographical area.

**Size:** Displays the teletext on the upper half of the screen in double-size. To move the text to the lower half of the screen, press it again. For normal display, press it once again.


 RETURN

**Hold:** Holds the display at the current page, in the case that there are several secondary pages that follow automatically. To undo, press it again.

 EXIT

**Cancel:** Shrinks the Teletext display to overlap with the current broadcast. To undo, press it again.

Typical Teletext page

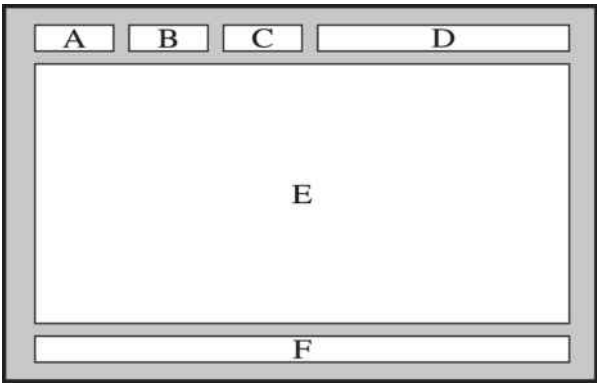

| Part | Contents                                   |
|------|--------------------------------------------|
| A    | Selected page number.                      |
| B    | Broadcasting channel identity.             |
| C    | Current page number or search indications. |
| D    | Date and time.                             |
| E    | Text.                                      |
| F    | Status information. FASTEXT information.   |



# Precautions and Notes

You can get instructions and information that you must read after installation.

## Before Using the Recording and Timeshift Functions

Read these instructions before using Recording and Timeshift.

### Before using the recording and schedule recording functions

 Recording may not be supported depending on the model or geographical area.

- To schedule a recording, set **Clock Mode** to **Auto**. Set the **Time**.
  -  > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Time**
- You can set up a maximum total of 30 **Schedule Viewing** and **Schedule Recording** entries.
- Recordings are DRM-protected and therefore cannot be played back on a computer or on a different TV. In addition, these files cannot be played back on your TV if its video circuit has been replaced.
- For a USB device for recording, it is recommended to use the USB hard disk that supports USB 2.0 or later and 5,400 rpm or higher. However, RAID-type USB hard drives are not supported.
- USB memory is not supported.
- The total recording capacity may differ with the amount of available hard drive space and the recording quality level.
- **Schedule Recording** requires at least 100 MB of free space on the USB storage device. Recording will stop if the available storage space falls below 50 MB while recording is in progress.
- If the available storage space falls below 500 MB while both the Schedule Recording and Timeshift functions are in progress, only the recording will stop.
- The maximum recording time is 720 minutes.
- Videos are played according to the TV settings.
- If the input signal is changed while recording is in progress, the screen will go blank until the change is made. In this case, recording will resume, but  will not be available.
- When using the Record or Schedule Recording function, the actual recording may start a second or two later than the specified time.
- If the Schedule Recording function is operating while a recording is being made on an HDMI-CEC external device, the priority is given to the Schedule Recording.

- Connecting a recording device to the TV automatically deletes abnormally saved recorded files.
- If the [Sleep Timer](#) or [Auto Power Off](#) has been set, the TV will override these settings, continue to record and turn off after the recording has ended.
  -  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Power and Energy Saving](#) > [Sleep Timer](#) [Try Now](#)
  -  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Power and Energy Saving](#) > [Auto Power Off](#) [Try Now](#)

## Before using the timeshift function

 Timeshift may not be supported depending on the model or geographical area.

- For a USB device for recording, it is recommended to use the USB hard disk that supports USB 2.0 or later and 5,400 rpm or higher. However, RAID-type USB hard drives are not supported.
- USB memory or flash drives are not supported.
- The total recording capacity may differ with the amount of available hard drive space and the recording quality level.
- If the available storage space falls below 500 MB while both the Schedule Recording and Timeshift functions are in progress, only the recording will stop.
- The maximum amount of time available for the Timeshift function is 90 minutes.
- The Timeshift function is not available for locked channels.
- Time-shifted videos are played according to the TV settings.
- The Timeshift function may be terminated automatically once it reaches its maximum capacity.
- The Timeshift function requires at least 1.5 GB of free space available on the USB storage device.

## Supported broadcasting audio options

Check the supported broadcasting audio options.

|              | Audio Type | Dual Sound                          | Default          |
|--------------|------------|-------------------------------------|------------------|
| A2 Stereo    | Mono       | Mono                                | Automatic change |
|              | Stereo     | Stereo, Mono                        | Automatic change |
|              | Dual       | Dual I, Dual II                     | Dual I           |
| NICAM Stereo | Mono       | Mono                                | Automatic change |
|              | Stereo     | Mono, Stereo                        | Automatic change |
|              | NICAM Dual | Mono, NICAM Dual-1,<br>NICAM Dual-2 | NICAM Dual-1     |

 If the **Stereo** signal is too weak and an automatic switching occurs, select **Mono**.

 Available only for the stereo signals.

 Available only when the input source is set to **TV**.

## Read Before Using Apps

Read this information before using Apps.

- If you want to download new apps using [Apps](#), first sign in to your Samsung account.
- Due to the product characteristics featured on Samsung Smart Hub, as well as limitations in available content, certain features, applications and services may not be available on all devices or in all territories. Visit <https://www.samsung.com> for more information on specific device information and content availability. Services and content availability are subject to change without prior notice.
- Samsung Electronics takes no legal responsibility whatsoever for any interruption of app services caused by the service provider for any reason.
- Application services may be provided in English only and available content may differ with the geographical area.
- For more information about applications, visit the applicable service provider's website.
- An unstable network connection may cause delays or interruptions. In addition, applications may terminate automatically depending on the network environment. If this occurs, check your network connection and try again.
- Application services and updates may become unavailable.
- Application content is subject to change by the service provider without prior notice.
- Specific services may differ with the version of the application installed on the TV.
- An application's functionality may change in future versions of the application. If this occurs, run the application's tutorial or visit the service provider's website.
- Depending on the service provider's policies, certain applications may not support multitasking.
- For details on how to subscribe or unsubscribe from an app, please contact the service provider.

# Read Before Using the Internet Function

Read this information before using the Internet function.

- File download is not supported.
  - The **Internet** function may not be able to access certain websites, including websites operated by certain companies.
  - The TV does not support playback of flash videos.
  - E-commerce for online purchases is not supported.
  - ActiveX is not supported.
  - Only a limited number of fonts are supported. Certain symbols and characters may not be displayed properly.
  - The response to remote commands and the resulting on-screen display may be delayed while a webpage is loading.
  - Loading a webpage may be delayed or suspended completely depending on the status of the participating systems.
  - Copy and paste operations are not supported.
  - When composing an email or a simple message, certain functions such as the font size and colour selection may not be available.
  - There is a limit to the number of bookmarks and the size of the log file that can be saved.
  - The number of windows that can be opened concurrently is limited.
  - Web browsing speed will differ with the network environment.
  - Embedded videos in a webpage cannot be played at the same time while the PIP (picture-in-picture) function is operating.
-  This function may not be supported depending on the model or geographical area.
- Browsing history is saved from latest to oldest, with the oldest entries being overwritten first.
  - Depending on the types of video/audio codecs supported, you may not be able to play certain HTML5 video and audio files.
  - Video sources from PC-optimised streaming service providers may not play properly on our proprietary **Internet** browser.

## Read before setting up a wireless network connection

### Precautions for wireless network

- This Product supports the IEEE 802.11 a /b /g /n communication protocols. In addition to these communication protocols, some models support all or some of the IEEE 802.11 ac /ax protocols. Video files stored on a device connected to the Product via a Home Network may not play back smoothly.  
 Some of the IEEE 802.11 communication protocols may not be supported depending on the model or geographical area.
- To use wireless network, the TV must be connected to a wireless access point or modem. If the wireless access point supports DHCP, the TV can use a DHCP or static IP address to connect to the wireless network.
- Select a channel that is not currently being used by the wireless access point. If the channel set is currently being used by the wireless access point to communicate with another device, the result is usually interference or a communications failure.
- Most wireless networks have an optional security system. To enable a wireless network's security system, you need to create a password using characters and numbers. This password is then needed to connect to a security-enabled access point.

### Wireless security protocols

The TV only supports the following wireless network security protocols. The TV cannot connect to non-certified wireless access point.

- Authentication Modes: WEP, WPAPSK, WPA2PSK
- Encryption Types: WEP, TKIP, AES

In compliance with the Wi-Fi certification specifications, Samsung TVs do not support WEP or TKIP security encryption in networks running in the 802.11n mode. If the wireless access point supports WPS (Wi-Fi Protected Setup), you can connect the TV to your network using PBC (Push Button Configuration) or a PIN (Personal Identification Number). WPS automatically configures the SSID and WPA key settings.

# Read Before Playing Photo, Video or Music Files

Read this information before playing media content.

## Limitations to the use of photo, video and music files [Try Now](#)

- The TV supports MSC (Mass Storage Class) USB devices only. MSC is a class designation for mass storage devices. Types of MSC devices include external hard drives, flash card readers and digital cameras. (USB hubs are not supported.) These kinds of devices must be connected directly to the USB port. If a USB extension cable is used or two external hard drives are used simultaneously, a USB device cannot be recognised or files contained in the device cannot be read. Do not disconnect USB devices while they are transferring files.
- When connecting an external hard drive, use the USB (HDD 5V 1A) port. We recommend that you use an external hard drive with its own power adapter.
  -  On models without the HDD 5V 1A marking, connect the drive to one of the USB (5V 1.0A/0.5A) ports.
  -  Some models do not support the HDD 5V 1A USB port. On such models that have 5V 1.0A and 5V 0.5A USB ports, connect the drive to one of those ports.
- Certain digital cameras and audio devices may not be compatible with the TV.
- If there are multiple USB devices connected to the TV, the TV might not be able to recognise some or all the devices. USB devices that use high-power input should be connect to the USB (HDD 5V 1A) port.
  -  Some models do not support the HDD 5V 1A USB port. On such models that have 5V 1.0A and 5V 0.5A USB ports, connect the drive to one of those ports.
- The TV supports the FAT, exFAT and NTFS file systems.
- The maximum number of items that can be displayed in the media content list is 8,000. If the connected device has more than 8,000 files or folders in a folder, some files or folders may not be visible.
- Certain files, depending on how they are encoded, may not play on the TV.
- Certain files are not supported on all models.
- Models released in 2025/2026 do not support WMA, WMV or VC1.

## Supported subtitles

### Subtitle formats

| Name                      | Format       |
|---------------------------|--------------|
| MPEG-4 Timed text         | .txt         |
| SAMI                      | .smi         |
| SubRip                    | .srt         |
| SubViewer                 | .sub         |
| Micro DVD                 | .sub or .txt |
| SubStation Alpha          | .ssa         |
| Advanced SubStation Alpha | .ass         |
| SMPTE-TT Text             | .xml         |

### Video formats with subtitles

| Name                      | Container |
|---------------------------|-----------|
| Xsub                      | AVI       |
| SubStation Alpha          | MKV       |
| Advanced SubStation Alpha | MKV       |
| SubRip                    | MKV       |
| VobSub                    | MKV       |
| MPEG-4 Timed text         | MP4       |
| TTML in smooth streaming  | MP4       |
| SMPTE-TT TEXT             | MP4       |
| SMPTE-TT PNG              | MP4       |

 This function may not be supported depending on the model or geographical area.

## Supported image formats and resolutions

| File extension  | Format | Resolution    |
|-----------------|--------|---------------|
| *.jpg<br>*.jpeg | JPEG   | 16320 x 12240 |
| *.png           | PNG    | 4096 x 4096   |
| *.bmp           | BMP    | 4096 x 4096   |
| *.mpo           | MPO    | 15360 x 8640  |
| *.heic          | HEIF   | 16320 x 12240 |

-  The MPO format is supported partly.
-  The HEIF format is may not be supported depending on the model or geographical area.
-  HEIF supports only the single image of grid type (grid) and its minimum resolution must be at least 512 pixels in width or height.

## Supported music formats and codecs

| File extension          | Format | Codec               | Note                                                                                                                                                                                                                          |
|-------------------------|--------|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| *.mp3                   | MPEG   | MPEG1 Audio Layer 3 |                                                                                                                                                                                                                               |
| *.m4a<br>*.mpa<br>*.aac | MPEG4  | AAC                 |                                                                                                                                                                                                                               |
| *.flac                  | FLAC   | FLAC                | Supports up to 16/24 Bit, 48/96/192 kHz, 5.1 channel                                                                                                                                                                          |
| *.ogg                   | OGG    | Vorbis              | Supports up to 2 channels                                                                                                                                                                                                     |
| *.wma                   | WMA    | WMA                 | WMA is supported up to 10 Pro 5.1 channels.<br>WMA lossless audio is not supported.<br> Depending on the model, this may not be supported. |
| *.wav                   | wav    | wav                 |                                                                                                                                                                                                                               |
| *.mid<br>*.midi         | midi   | midi                | Supports type 0 and type 1.<br>Seek is not supported.<br>Supports USB device only.                                                                                                                                            |
| *.ape                   | ape    | ape                 |                                                                                                                                                                                                                               |
| *.aif<br>*.aiff         | AIFF   | AIFF                |                                                                                                                                                                                                                               |
| *.m4a                   | ALAC   | ALAC                |                                                                                                                                                                                                                               |

## Supported video codecs (2026 models)

Find out the supported video codecs and resolution, and other information.

### Supported video codecs (R85H/M9\*H/M8\*H/QN8\*H/S8\*H/The Frame (LS03HE)/U9\*\*\*H)

| File format | Container                                                               | Video codecs                         | Resolution                  | Frame rate (fps) | Bitrate (Mbps)  | Audio codecs                                                                                                                   |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-----------------------------|------------------|-----------------|--------------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 4096 x 2160                 | 4096 x 2160: 60  | 60              | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |
| *.mkv       |                                                                         |                                      |                             | 1920 x 1080: 120 |                 |                                                                                                                                |
| *.asf       |                                                                         |                                      | HEVC (H.265 - Main, Main10) | 4096 x 2160      | 4096 x 2160: 60 |                                                                                                                                |
| *.mp4       |                                                                         | 3840 x 2160: 120                     |                             |                  |                 |                                                                                                                                |
| *.mov       |                                                                         | Motion JPEG                          | 3840 x 2160                 | 30               | 80              |                                                                                                                                |
| *.3gp       |                                                                         | MPEG4 SP/ASP                         | 1920 x 1080                 | 60               | 20              |                                                                                                                                |
| *.vro       |                                                                         | MPEG2                                |                             |                  |                 |                                                                                                                                |
| *.mpg       |                                                                         | MPEG1                                |                             | 30               |                 |                                                                                                                                |
| *.mpeg      |                                                                         | Microsoft MPEG-4 v1, v2, v3          |                             |                  |                 |                                                                                                                                |
| *.ts        |                                                                         | H.263 Sorenson                       |                             |                  |                 |                                                                                                                                |
| *.tp        |                                                                         | VP6                                  |                             |                  |                 |                                                                                                                                |
| *.trp       |                                                                         | AV1                                  | 3840 x 2160                 | 120              | 40              |                                                                                                                                |
| *.flv       |                                                                         |                                      |                             |                  |                 |                                                                                                                                |
| *.vob       |                                                                         |                                      |                             |                  |                 |                                                                                                                                |
| *.svi       |                                                                         |                                      |                             |                  |                 |                                                                                                                                |
| *.m2ts      |                                                                         |                                      |                             |                  |                 |                                                                                                                                |
| *.mts       |                                                                         |                                      |                             |                  |                 |                                                                                                                                |
| *.webm      | WebM                                                                    | VP8                                  | 1920 x 1080                 | 60               | 20              |                                                                                                                                |
|             |                                                                         | VP9 (Profile 0, profile 2 supported) | 3840 x 2160                 | 60               | 80              |                                                                                                                                |
|             |                                                                         | AV1                                  | 3840 x 2160                 | 120              | 40              |                                                                                                                                |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- H.264 FHD is supported up to Level 4.2.
  - TV does not support FMO / ASO / RS.
- HEVC UHD is supported up to Level 5.2.
  - Resolution is changed during video playback (Up to Level 5.1 3840 x 2160 is supported)
- HEVC FHD is supported up to Level 4.1.
- GMC 2 or above is not supported.

## Audio decoders

- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.
- Eclipsa Audio is supported for up to the IAMF V1.1 (Base-Enhanced profile).
  - The Opus core codec is supported.
  - Up to 28 channels are supported when the input audio channel has a 3rd order Ambisonics (projection mode) + 7.1.4 ch configuration.
  - Up to 14 audio elements are supported.
  - Only 48 kHz sampling frequency is supported.

## Supported video codecs (QN7\*H/QN1EH/QN2EH)

| File format | Container                                                               | Video codecs                         | Resolution  | Frame rate (fps)                    | Bitrate (Mbps) | Audio codecs                                                                                                                   |  |  |  |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-------------|-------------------------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|--|--|--|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 4096 x 2160 | 4096 x 2160: 60                     | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |  |  |  |
| *.mkv       |                                                                         | HEVC (H.265 - Main, Main10)          |             | 1920 x 1080: 120                    | 80             |                                                                                                                                |  |  |  |
| *.asf       |                                                                         | Motion JPEG                          | 3840 x 2160 | 30                                  | 80             |                                                                                                                                |  |  |  |
| *.mp4       |                                                                         | MPEG4 SP/ASP                         | 1920 x 1080 | 60                                  | 20             |                                                                                                                                |  |  |  |
| *.mov       |                                                                         | MPEG2                                |             |                                     |                |                                                                                                                                |  |  |  |
| *.3gp       |                                                                         | MPEG1                                |             |                                     |                |                                                                                                                                |  |  |  |
| *.vro       |                                                                         | Microsoft MPEG-4 v1, v2, v3          |             | 30                                  |                |                                                                                                                                |  |  |  |
| *.mpg       |                                                                         | H.263 Sorenson                       |             |                                     |                |                                                                                                                                |  |  |  |
| *.mpeg      |                                                                         | VP6                                  |             |                                     |                |                                                                                                                                |  |  |  |
| *.ts        |                                                                         | AV1                                  | 3840 x 2160 | 3840 x 2160: 60<br>1920 x 1080: 120 | 40             |                                                                                                                                |  |  |  |
| *.tp        |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.trp       |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.flv       |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.vob       |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.svi       |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.m2ts      |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.mts       |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.webm      | WebM                                                                    | VP8                                  | 1920 x 1080 | 60                                  | 20             | Vorbis                                                                                                                         |  |  |  |
|             |                                                                         | VP9 (Profile 0, profile 2 supported) | 3840 x 2160 | 3840 x 2160: 60<br>1920 x 1080: 120 | 80             |                                                                                                                                |  |  |  |
|             |                                                                         | AV1                                  |             |                                     | 40             |                                                                                                                                |  |  |  |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- H.264 FHD is supported up to Level 4.2.
  - TV does not support FMO / ASO / RS.
- HEVC UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- HEVC FHD is supported up to Level 4.1.
- GMC 2 or above is not supported.

## Audio decoders

- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.
- Eclipsa Audio is supported for up to the IAMF V1.1 (Base-Enhanced profile).
  - The Opus core codec is supported.
  - Up to 28 channels are supported when the input audio channel has a 3rd order Ambisonics (projection mode) + 7.1.4 ch configuration.
  - Up to 14 audio elements are supported.
  - Only 48 kHz sampling frequency is supported.

## Supported video codecs (R95H/S9\*H/The Frame (LS03HW))

| File format | Container                                                               | Video codecs                         | Resolution  | Frame rate (fps) | Bitrate (Mbps) | Audio codecs                                                                                                                   |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-------------|------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 4096 x 2160 | 4096 x 2160: 60  | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |
| *.mkv       |                                                                         |                                      |             | 1920 x 1080: 120 |                |                                                                                                                                |
| *.asf       |                                                                         | HEVC (H.265 - Main, Main10)          | 4096 x 2160 | 4096 x 2160: 60  | 80             |                                                                                                                                |
| *.mp4       |                                                                         |                                      |             | 3840 x 2160: 120 |                |                                                                                                                                |
| *.mov       |                                                                         | Motion JPEG                          | 3840 x 2160 | 30               | 80             |                                                                                                                                |
| *.3gp       |                                                                         | MPEG4 SP/ASP                         | 1920 x 1080 | 60               |                |                                                                                                                                |
| *.vro       |                                                                         | MPEG2                                |             |                  |                |                                                                                                                                |
| *.mpg       |                                                                         | MPEG1                                |             |                  |                |                                                                                                                                |
| *.mpeg      |                                                                         | Microsoft MPEG-4 v1, v2, v3          |             | 30               |                |                                                                                                                                |
| *.ts        |                                                                         | H.263 Sorenson                       |             |                  |                |                                                                                                                                |
| *.tp        |                                                                         | VP6                                  |             |                  |                |                                                                                                                                |
| *.trp       |                                                                         | AV1                                  | 3840 x 2160 | 120              | 40             |                                                                                                                                |
| *.flv       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.vob       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.svi       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.m2ts      |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.mts       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.webm      | WebM                                                                    | VP8                                  | 1920 x 1080 | 60               | 20             | Vorbis                                                                                                                         |
|             |                                                                         | VP9 (Profile 0, profile 2 supported) | 3840 x 2160 | 60               | 80             |                                                                                                                                |
|             |                                                                         | AV1                                  |             | 120              | 40             |                                                                                                                                |

 The specified resolution may not be supported depending on the model.

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 FHD is supported up to Level 4.2. (TV does not support FMO / ASO / RS.)
- H.264 UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- HEVC FHD is supported up to Level 4.1.
- HEVC UHD is supported up to Level 5.2.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- GMC 2 or above is not supported.

## Audio decoders

- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.
- Eclipsa Audio is supported for up to the IAMF V1.1 (Base-Enhanced profile).
  - The Opus core codec is supported.
  - Up to 28 channels are supported when the input audio channel has a 3rd order Ambisonics (projection mode) + 7.1.4 ch configuration.
  - Up to 14 audio elements are supported.
  - Only 48 kHz sampling frequency is supported.

## Supported video codecs (M7\*H/M1EH/M2EH/U8\*\*\*H)

| File format | Container                                                               | Video codecs                         | Resolution  | Frame rate (fps) | Bitrate (Mbps) | Audio codecs                                                                                                                   |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-------------|------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 3840 x 2160 | 3840 x 2160: 30  | 50             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |
| *.mkv       |                                                                         |                                      |             | 1920 x 1080: 60  |                |                                                                                                                                |
| *.asf       |                                                                         | HEVC (H.265 - Main, Main10)          | 60          | 50               |                |                                                                                                                                |
| *.mp4       |                                                                         | Motion JPEG                          | 60          | 20               |                |                                                                                                                                |
| *.mov       |                                                                         | MPEG4 SP/ASP                         |             |                  |                |                                                                                                                                |
| *.3gp       |                                                                         | MPEG2                                |             |                  |                |                                                                                                                                |
| *.vro       |                                                                         | MPEG1                                |             |                  |                |                                                                                                                                |
| *.mpg       |                                                                         | Microsoft MPEG-4 v1, v2, v3          | 30          |                  |                |                                                                                                                                |
| *.mpeg      |                                                                         | H.263 Sorenson                       |             |                  |                |                                                                                                                                |
| *.ts        |                                                                         | VP6                                  | 60          | 40               |                |                                                                                                                                |
| *.tp        |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.trp       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.flv       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.vob       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.svi       |                                                                         | AV1                                  |             |                  |                |                                                                                                                                |
| *.m2ts      |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.mts       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.webm      | WebM                                                                    | VP8                                  | 1920 x 1080 | 60               | 20             | Vorbis                                                                                                                         |
|             |                                                                         | VP9 (Profile 0, profile 2 supported) | 3840 x 2160 | 60               | 50             |                                                                                                                                |
|             |                                                                         | AV1                                  | 3840 x 2160 | 60               | 40             |                                                                                                                                |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1.
- H.264 FHD is supported up to Level 4.2. (TV does not support FMO / ASO / RS.)
- HEVC FHD is supported up to Level 4.1.
- HEVC UHD is supported up to Level 5.1.
- GMC 2 or above is not supported.

## Audio decoders

- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.
- Eclipsa Audio is supported for up to the IAMF V1.1 (Base-Enhanced profile).
  - The Opus core codec is supported.
  - Up to 28 channels are supported when the input audio channel has a 3rd order Ambisonics (projection mode) + 7.1.4 ch configuration.
  - Up to 14 audio elements are supported.
  - Only 48 kHz sampling frequency is supported.

## Supported video codecs (QN990H)

| File format | Container                                                               | Video codecs                         | Resolution  | Frame rate (fps)                    | Bitrate (Mbps) | Audio codecs                                                                                                                   |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-------------|-------------------------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 4096 x 2160 | 4096 x 2160: 60                     | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |
| *.mkv       |                                                                         |                                      |             | 1920 x 1080: 120                    |                |                                                                                                                                |
| *.asf       |                                                                         | HEVC (H.265 - Main, Main10)          | 7680 x 4320 | 7680 x 4320: 60                     | 100            |                                                                                                                                |
| *.mp4       |                                                                         |                                      |             | 3840 x 2160: 120                    |                |                                                                                                                                |
| *.mov       |                                                                         | Motion JPEG                          | 3840 x 2160 | 30                                  | 80             |                                                                                                                                |
| *.3gp       |                                                                         | MPEG4 SP/ASP                         | 1920 x 1080 | 60                                  | 20             |                                                                                                                                |
| *.vro       |                                                                         | MPEG2                                |             |                                     |                |                                                                                                                                |
| *.mpg       |                                                                         | MPEG1                                |             |                                     |                |                                                                                                                                |
| *.mpeg      |                                                                         | Microsoft MPEG-4 v1, v2, v3          |             |                                     |                |                                                                                                                                |
| *.ts        |                                                                         | H.263 Sorenson                       | 30          |                                     |                |                                                                                                                                |
| *.tp        |                                                                         | VP6                                  |             |                                     |                |                                                                                                                                |
| *.trp       |                                                                         | AV1                                  | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 80             |                                                                                                                                |
| *.flv       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.vob       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.svi       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.m2ts      |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.mts       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.webm      | WebM                                                                    | VP8                                  | 1920 x 1080 | 60                                  | 20             | Vorbis                                                                                                                         |
|             |                                                                         | VP9 (Profile 0, profile 2 supported) | 7680 x 4320 | 60                                  | 80             |                                                                                                                                |
|             |                                                                         | AV1                                  | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 80             |                                                                                                                                |

 Because the specifications are based on the current 8K connectivity and decoding standards, future connectivity, broadcasting, and decoding standards may not be supported. Upgrading for meeting future standards may require purchase of additional devices.

 Some third-party standards may not be supported.

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- H.264 FHD is supported up to Level 4.2.
  - TV does not support FMO / ASO / RS.
- HEVC UHD is supported up to Level 5.2.
  - Resolution is changed during video playback (Up to Level 5.1 3840 x 2160 is supported)
- HEVC 8K is supported up to Level 6.1.
- HEVC FHD is supported up to Level 4.1.
- GMC 2 or above is not supported.

## Audio decoders

- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.
- Eclipsa Audio is supported for up to the IAMF V1.1 (Base-Enhanced profile).
  - The Opus core codec is supported.
  - Up to 28 channels are supported when the input audio channel has a 3rd order Ambisonics (projection mode) + 7.1.4 ch configuration.
  - Up to 14 audio elements are supported.
  - Only 48 kHz sampling frequency is supported.

## Supported video codecs (2025 models)

Find out the supported video codecs and resolution, and other information.

Supported video codecs (QN1EF/Q7F (98-inch model)/QN7\*F/QN8\*F/S8\*F/The Frame (LS03FA))

| File format | Container                                                               | Video codecs                         | Resolution  | Frame rate (fps) | Bitrate (Mbps) | Audio codecs                                                                                                                   |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-------------|------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 4096 x 2160 | 4096 x 2160: 60  | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |
| *.mkv       |                                                                         |                                      |             | 1920 x 1080: 120 |                |                                                                                                                                |
| *.asf       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.mp4       |                                                                         | HEVC (H.265 - Main, Main10)          | 4096 x 2160 | 4096 x 2160: 60  | 80             |                                                                                                                                |
| *.mov       |                                                                         |                                      |             | 3840 x 2160: 120 |                |                                                                                                                                |
| *.3gp       |                                                                         | Motion JPEG                          | 3840 x 2160 | 30               | 80             |                                                                                                                                |
| *.vro       |                                                                         | MPEG4 SP/ASP                         | 1920 x 1080 | 60               | 20             |                                                                                                                                |
| *.mpg       |                                                                         | MPEG2                                |             |                  |                |                                                                                                                                |
| *.mpeg      |                                                                         | MPEG1                                |             |                  |                |                                                                                                                                |
| *.ts        |                                                                         | Microsoft MPEG-4 v1, v2, v3          |             | 30               |                |                                                                                                                                |
| *.tp        |                                                                         | H.263 Sorenson                       |             |                  |                |                                                                                                                                |
| *.trp       |                                                                         | VP6                                  |             |                  |                |                                                                                                                                |
| *.flv       |                                                                         | AV1                                  | 3840 x 2160 | 120              | 40             |                                                                                                                                |
| *.vob       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.svi       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.m2ts      |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.mts       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.webm      | WebM                                                                    | VP8                                  | 1920 x 1080 | 60               | 20             | Vorbis                                                                                                                         |
|             |                                                                         | VP9 (Profile 0, profile 2 supported) | 3840 x 2160 | 60               | 80             |                                                                                                                                |
|             |                                                                         | AV1                                  | 3840 x 2160 | 120              | 40             |                                                                                                                                |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                   | 1920 x 1080 | 60               | 20             | RealAudio 6                                                                                                                    |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- H.264 FHD is supported up to Level 4.2.
  - TV does not support FMO / ASO / RS.
- HEVC UHD is supported up to Level 5.2.
  - Resolution is changed during video playback (Up to Level 5.1 3840 x 2160 is supported)
- HEVC FHD is supported up to Level 4.1.
- GMC 2 or above is not supported.

## Audio decoders

- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

## Supported video codecs (QEF1/Q7F (except for 98-inch model)/Q8F)

| File format | Container                                                               | Video codecs                         | Resolution  | Frame rate (fps)                    | Bitrate (Mbps) | Audio codecs                                                                                                                   |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-------------|-------------------------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 4096 x 2160 | 4096 x 2160: 60                     | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |
| *.mkv       |                                                                         | HEVC (H.265 - Main, Main10)          |             | 1920 x 1080: 120                    | 80             |                                                                                                                                |
| *.asf       |                                                                         | Motion JPEG                          | 3840 x 2160 | 30                                  | 80             |                                                                                                                                |
| *.mp4       |                                                                         | MPEG4 SP/ASP                         | 1920 x 1080 | 60                                  | 20             |                                                                                                                                |
| *.mov       |                                                                         | MPEG2                                |             |                                     |                |                                                                                                                                |
| *.3gp       |                                                                         | MPEG1                                |             |                                     |                |                                                                                                                                |
| *.vro       |                                                                         | Microsoft MPEG-4 v1, v2, v3          |             | 30                                  |                |                                                                                                                                |
| *.mpg       |                                                                         | H.263 Sorenson                       |             |                                     |                |                                                                                                                                |
| *.mpeg      |                                                                         | VP6                                  |             |                                     |                |                                                                                                                                |
| *.ts        |                                                                         | AV1                                  | 3840 x 2160 | 3840 x 2160: 60<br>1920 x 1080: 120 | 40             |                                                                                                                                |
| *.tp        |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.trp       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.flv       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.vob       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.svi       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.m2ts      |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.mts       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.webm      | WebM                                                                    | VP8                                  | 1920 x 1080 | 60                                  | 20             | Vorbis                                                                                                                         |
|             |                                                                         | VP9 (Profile 0, profile 2 supported) | 3840 x 2160 | 3840 x 2160: 60<br>1920 x 1080: 120 | 80             |                                                                                                                                |
|             |                                                                         | AV1                                  |             |                                     | 40             |                                                                                                                                |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                   | 1920 x 1080 | 60                                  | 20             | RealAudio 6                                                                                                                    |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- H.264 FHD is supported up to Level 4.2.
  - TV does not support FMO / ASO / RS.
- HEVC UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- HEVC FHD is supported up to Level 4.1.
- GMC 2 or above is not supported.

## Audio decoders

- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

## Supported video codecs (F6\*\*\*F/H5\*\*\*F/BEFM/BEFB)

| File format | Container                                                               | Video codecs                         | Resolution  | Frame rate (fps) | Bitrate (Mbps) | Audio codecs                                                                                                                   |  |  |  |  |  |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-------------|------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|--|--|--|--|--|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 1920 x 1080 | 60               | 50             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |  |  |  |  |  |
| *.mkv       |                                                                         | HEVC (H.265 - Main, Main10)          |             | 60               | 50             |                                                                                                                                |  |  |  |  |  |
| *.asf       |                                                                         | Motion JPEG                          |             | 60               | 20             |                                                                                                                                |  |  |  |  |  |
| *.mp4       |                                                                         | MPEG4 SP/ASP                         |             |                  |                |                                                                                                                                |  |  |  |  |  |
| *.mov       |                                                                         | MPEG2                                |             |                  |                |                                                                                                                                |  |  |  |  |  |
| *.3gp       |                                                                         | MPEG1                                |             | 30               | 20             |                                                                                                                                |  |  |  |  |  |
| *.vro       |                                                                         | Microsoft MPEG-4 v1, v2, v3          |             |                  |                |                                                                                                                                |  |  |  |  |  |
| *.mpg       |                                                                         | H.263 Sorenson                       |             |                  |                |                                                                                                                                |  |  |  |  |  |
| *.mpeg      |                                                                         | VP6                                  |             | 60               | 40             |                                                                                                                                |  |  |  |  |  |
| *.ts        |                                                                         | AV1                                  |             |                  |                |                                                                                                                                |  |  |  |  |  |
| *.tp        |                                                                         |                                      |             |                  |                |                                                                                                                                |  |  |  |  |  |
| *.trp       |                                                                         |                                      |             |                  |                |                                                                                                                                |  |  |  |  |  |
| *.flv       |                                                                         |                                      |             |                  |                |                                                                                                                                |  |  |  |  |  |
| *.vob       |                                                                         |                                      |             |                  |                |                                                                                                                                |  |  |  |  |  |
| *.svi       | WebM                                                                    | VP8                                  |             | 60               | 20             | Vorbis                                                                                                                         |  |  |  |  |  |
| *.m2ts      |                                                                         | VP9 (Profile 0, profile 2 supported) |             | 60               | 50             |                                                                                                                                |  |  |  |  |  |
| *.mts       |                                                                         | AV1                                  |             | 60               | 40             |                                                                                                                                |  |  |  |  |  |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                   |             | 60               | 20             | RealAudio 6                                                                                                                    |  |  |  |  |  |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 FHD is supported up to Level 4.2. (TV does not support FMO / ASO / RS)
- HEVC FHD is supported up to Level 4.1.
- GMC 2 or above is not supported.

## Audio decoders

- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

## Supported video codecs (QN9\*F/S9\*F/The Frame (LS03FW))/MR95F)

| File format | Container                                                               | Video codecs                         | Resolution  | Frame rate (fps) | Bitrate (Mbps) | Audio codecs                                                                                                                   |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-------------|------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 4096 x 2160 | 4096 x 2160: 60  | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |
| *.mkv       |                                                                         |                                      |             | 1920 x 1080: 120 |                |                                                                                                                                |
| *.asf       |                                                                         | HEVC (H.265 - Main, Main10)          | 4096 x 2160 | 4096 x 2160: 60  | 80             |                                                                                                                                |
| *.mp4       |                                                                         |                                      |             | 3840 x 2160: 120 |                |                                                                                                                                |
| *.mov       |                                                                         | Motion JPEG                          | 3840 x 2160 | 30               | 80             |                                                                                                                                |
| *.3gp       |                                                                         | MPEG4 SP/ASP                         | 1920 x 1080 | 60               | 20             |                                                                                                                                |
| *.vro       |                                                                         | MPEG2                                |             |                  |                |                                                                                                                                |
| *.mpg       |                                                                         | MPEG1                                |             | 30               |                |                                                                                                                                |
| *.mpeg      |                                                                         | Microsoft MPEG-4 v1, v2, v3          |             |                  |                |                                                                                                                                |
| *.ts        |                                                                         | H.263 Sorenson                       |             |                  |                |                                                                                                                                |
| *.tp        |                                                                         | VP6                                  |             |                  |                |                                                                                                                                |
| *.trp       |                                                                         | AV1                                  | 3840 x 2160 | 120              | 40             |                                                                                                                                |
| *.flv       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.vob       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.svi       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.m2ts      |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.mts       |                                                                         |                                      |             |                  |                |                                                                                                                                |
| *.webm      | WebM                                                                    | VP8                                  | 1920 x 1080 | 60               | 20             | Vorbis                                                                                                                         |
|             |                                                                         | VP9 (Profile 0, profile 2 supported) | 3840 x 2160 | 60               | 80             |                                                                                                                                |
|             |                                                                         |                                      |             | AV1              | 120            |                                                                                                                                |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                   | 1920 x 1080 | 60               | 20             | RealAudio 6                                                                                                                    |

 The specified resolution may not be supported depending on the model.

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 FHD is supported up to Level 4.2. (TV does not support FMO / ASO / RS.)
- H.264 UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- HEVC FHD is supported up to Level 4.1.
- HEVC UHD is supported up to Level 5.2.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- GMC 2 or above is not supported.

## Audio decoders

- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

## Supported video codecs (U8\*\*\*F/Q6F/BEFH)

| File format | Container                                                               | Video codecs                         | Resolution  | Frame rate (fps)            | Bitrate (Mbps) | Audio codecs                                                                                                                   |             |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-------------|-----------------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|-------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 3840 x 2160 | 3840 x 2160: 30             | 50             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |             |
| *.mkv       |                                                                         |                                      |             | 1920 x 1080: 60             |                |                                                                                                                                |             |
| *.asf       |                                                                         |                                      |             | HEVC (H.265 - Main, Main10) | 60             |                                                                                                                                | 50          |
| *.mp4       |                                                                         | Motion JPEG                          | 1920 x 1080 | 60                          | 20             |                                                                                                                                |             |
| *.mov       |                                                                         | MPEG4 SP/ASP                         |             |                             |                |                                                                                                                                |             |
| *.3gp       |                                                                         | MPEG2                                |             |                             |                |                                                                                                                                |             |
| *.vro       |                                                                         | MPEG1                                |             |                             |                |                                                                                                                                |             |
| *.mpg       |                                                                         | Microsoft MPEG-4 v1, v2, v3          |             | 30                          |                |                                                                                                                                |             |
| *.mpeg      |                                                                         | H.263 Sorenson                       |             |                             |                |                                                                                                                                |             |
| *.ts        |                                                                         | VP6                                  |             |                             |                |                                                                                                                                |             |
| *.tp        |                                                                         |                                      |             | 60                          | 40             |                                                                                                                                |             |
| *.trp       |                                                                         |                                      |             |                             |                |                                                                                                                                |             |
| *.flv       |                                                                         |                                      |             |                             |                |                                                                                                                                |             |
| *.vob       |                                                                         |                                      |             |                             |                |                                                                                                                                |             |
| *.svi       |                                                                         | AV1                                  |             |                             |                |                                                                                                                                | 3840 x 2160 |
| *.m2ts      |                                                                         |                                      |             |                             |                |                                                                                                                                |             |
| *.mts       |                                                                         |                                      |             |                             |                |                                                                                                                                |             |
| *.webm      | WebM                                                                    | VP8                                  | 1920 x 1080 | 60                          | 20             | Vorbis                                                                                                                         |             |
|             |                                                                         | VP9 (Profile 0, profile 2 supported) | 3840 x 2160 | 60                          | 50             |                                                                                                                                |             |
|             |                                                                         | AV1                                  | 3840 x 2160 | 60                          | 40             |                                                                                                                                |             |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                   | 1920 x 1080 | 60                          | 20             | RealAudio 6                                                                                                                    |             |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 FHD is supported up to Level 4.2. (TV does not support FMO / ASO / RS)
- H.264 UHD is supported up to Level 5.1.
- HEVC FHD is supported up to Level 4.1.
- HEVC UHD is supported up to Level 5.1.
- GMC 2 or above is not supported.

## Audio decoders

- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

## Supported video codecs (QN900F)

| File format | Container                                                               | Video codecs                         | Resolution  | Frame rate (fps)                    | Bitrate (Mbps) | Audio codecs                                                                                                                   |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-------------|-------------------------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 4096 x 2160 | 4096 x 2160: 60                     | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |
| *.mkv       |                                                                         |                                      |             | 1920 x 1080: 120                    |                |                                                                                                                                |
| *.asf       |                                                                         | HEVC (H.265 - Main, Main10)          | 7680 x 4320 | 7680 x 4320: 60                     | 100            |                                                                                                                                |
| *.mp4       |                                                                         |                                      |             | 3840 x 2160: 120                    |                |                                                                                                                                |
| *.mov       |                                                                         | Motion JPEG                          | 3840 x 2160 | 30                                  | 80             |                                                                                                                                |
| *.3gp       |                                                                         | MPEG4 SP/ASP                         | 1920 x 1080 | 60                                  | 20             |                                                                                                                                |
| *.vro       |                                                                         | MPEG2                                |             |                                     |                |                                                                                                                                |
| *.mpg       |                                                                         | MPEG1                                |             |                                     |                |                                                                                                                                |
| *.mpeg      |                                                                         | Microsoft MPEG-4 v1, v2, v3          |             | 30                                  |                |                                                                                                                                |
| *.ts        |                                                                         | H.263 Sorenson                       |             |                                     |                |                                                                                                                                |
| *.tp        |                                                                         | VP6                                  |             |                                     |                |                                                                                                                                |
| *.trp       |                                                                         | AV1                                  | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 80             |                                                                                                                                |
| *.flv       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.vob       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.svi       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.m2ts      |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.mts       |                                                                         |                                      |             |                                     |                |                                                                                                                                |
| *.webm      | WebM                                                                    | VP8                                  | 1920 x 1080 | 60                                  | 20             | Vorbis                                                                                                                         |
|             |                                                                         | VP9 (Profile 0, profile 2 supported) | 3840 x 2160 | 60                                  | 80             |                                                                                                                                |
|             |                                                                         | AV1                                  | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 80             |                                                                                                                                |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                   | 1920 x 1080 | 60                                  | 20             | RealAudio 6                                                                                                                    |

 Because the specifications are based on the current 8K connectivity and decoding standards, future connectivity, broadcasting, and decoding standards may not be supported. Upgrading for meeting future standards may require purchase of additional devices.

 Some third-party standards may not be supported.

## Supported video codecs (QN950F/QN990F)

| File format | Container                                                               | Video codecs                         | Resolution  | Frame rate (fps)                    | Bitrate (Mbps) | Audio codecs                                                                                                                   |  |  |  |
|-------------|-------------------------------------------------------------------------|--------------------------------------|-------------|-------------------------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|--|--|--|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                       | 4096 x 2160 | 4096 x 2160: 60<br>1920 x 1080: 120 | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>Dolby Digital+<br>MPEG(MP3)<br>MPEG-H<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |  |  |  |
| *.mkv       |                                                                         | HEVC (H.265 - Main, Main10)          | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 100            |                                                                                                                                |  |  |  |
| *.asf       |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.mp4       |                                                                         | Motion JPEG                          | 3840 x 2160 | 30                                  | 80             |                                                                                                                                |  |  |  |
| *.mov       |                                                                         | MPEG4 SP/ASP                         | 1920 x 1080 | 60                                  | 20             |                                                                                                                                |  |  |  |
| *.3gp       |                                                                         | MPEG2                                |             |                                     |                |                                                                                                                                |  |  |  |
| *.vro       |                                                                         | MPEG1                                |             |                                     |                |                                                                                                                                |  |  |  |
| *.mpg       |                                                                         | Microsoft MPEG-4 v1, v2, v3          |             | 30                                  |                |                                                                                                                                |  |  |  |
| *.mpeg      |                                                                         | H.263 Sorenson                       |             |                                     |                |                                                                                                                                |  |  |  |
| *.ts        |                                                                         | VP6                                  |             |                                     |                |                                                                                                                                |  |  |  |
| *.tp        |                                                                         | AV1                                  | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 80             |                                                                                                                                |  |  |  |
| *.trp       |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.flv       |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.vob       |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.svi       |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.m2ts      |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.mts       |                                                                         |                                      |             |                                     |                |                                                                                                                                |  |  |  |
| *.webm      | WebM                                                                    | VP8                                  | 1920 x 1080 | 60                                  | 20             | Vorbis                                                                                                                         |  |  |  |
|             |                                                                         | VP9 (Profile 0, profile 2 supported) | 7680 x 4320 | 60                                  | 80             |                                                                                                                                |  |  |  |
|             |                                                                         | AV1                                  | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 80             |                                                                                                                                |  |  |  |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                   | 1920 x 1080 | 60                                  | 20             | RealAudio 6                                                                                                                    |  |  |  |

 Because the specifications are based on the current 8K connectivity and decoding standards, future connectivity, broadcasting, and decoding standards may not be supported. Upgrading for meeting future standards may require purchase of additional devices.

 Some third-party standards may not be supported.

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- H.264 FHD is supported up to Level 4.2.
  - TV does not support FMO / ASO / RS.
- HEVC UHD is supported up to Level 5.2.
  - Resolution is changed during video playback (Up to Level 5.1 3840 x 2160 is supported)
- HEVC 8K is supported up to Level 6.1.
- HEVC FHD is supported up to Level 4.1.
- GMC 2 or above is not supported.

## Audio decoders

- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

## Supported video codecs (2023/2024 models)

Find out the supported video codecs and resolution, and other information.

Supported video codecs (QLED TV (except for Q6\*C/Q6\*D/QE1C/QE1D/Q7\*C/Q7\*D)/The Frame (except for 32LS03C)/The Serif/S8\*C/S8\*D/S9\*C/S9\*D/DU9)

| File format | Container                                                               | Video codecs                            | Resolution                           | Frame rate (fps) | Bitrate (Mbps) | Audio codecs                                                                                                                |
|-------------|-------------------------------------------------------------------------|-----------------------------------------|--------------------------------------|------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                          | 4096 x 2160                          | 4096 x 2160: 60  | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>WMA<br>Dolby Digital+<br>MPEG(MP3)<br>AC-4<br>G.711(A-Law, μ-Law)<br>OPUS |
| *.mkv       |                                                                         |                                         |                                      | 3840 x 2160: 60  |                |                                                                                                                             |
| *.asf       |                                                                         |                                         |                                      | 1920 x 1080: 120 |                |                                                                                                                             |
| *.wmv       |                                                                         | HEVC (H.265 - Main, Main10)             | 4096 x 2160                          | 4096 x 2160: 60  | 80             |                                                                                                                             |
| *.mp4       |                                                                         |                                         |                                      | 3840 x 2160: 120 |                |                                                                                                                             |
| *.mov       |                                                                         | Motion JPEG                             | 3840 x 2160                          | 30               | 80             |                                                                                                                             |
| *.3gp       |                                                                         | MPEG4 SP/ASP                            | 1920 x 1080                          | 60               | 20             |                                                                                                                             |
| *.vro       |                                                                         | Window Media Video v9 (VC1)             |                                      |                  |                |                                                                                                                             |
| *.mpg       |                                                                         | MPEG2                                   |                                      |                  |                |                                                                                                                             |
| *.mpeg      |                                                                         | MPEG1                                   |                                      |                  |                |                                                                                                                             |
| *.ts        |                                                                         | Microsoft MPEG-4 v1, v2, v3             |                                      | 30               |                |                                                                                                                             |
| *.tp        |                                                                         | Window Media Video v7 (WMV1), v8 (WMV2) |                                      |                  |                |                                                                                                                             |
| *.trp       |                                                                         | H.263 Sorenson                          |                                      |                  |                |                                                                                                                             |
| *.flv       |                                                                         | VP6                                     |                                      |                  |                |                                                                                                                             |
| *.vob       |                                                                         | AV1                                     | 3840 x 2160                          | 120              | 40             |                                                                                                                             |
| *.svi       |                                                                         | WebM                                    | VP8                                  | 1920 x 1080      | 60             | 20                                                                                                                          |
| *.m2ts      |                                                                         |                                         | VP9 (Profile 0, profile 2 supported) | 3840 x 2160      | 60             | 80                                                                                                                          |
| *.mts       |                                                                         |                                         | AV1                                  | 3840 x 2160      | 120            | 40                                                                                                                          |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                      | 1920 x 1080                          | 60               | 20             | RealAudio 6                                                                                                                 |

## Supported video codecs (Q7\*C, 85CU8)

| File format | Container                                                               | Video codecs                            | Resolution  | Frame rate (fps)                    | Bitrate (Mbps) | Audio codecs                                                                                                                |
|-------------|-------------------------------------------------------------------------|-----------------------------------------|-------------|-------------------------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                          | 3840 x 2160 | 3840 x 2160: 60                     | 80             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>WMA<br>Dolby Digital+<br>MPEG(MP3)<br>AC-4<br>G.711(A-Law, μ-Law)<br>OPUS |
| *.mkv       |                                                                         |                                         |             | 1920 x 1080: 120                    |                |                                                                                                                             |
| *.asf       |                                                                         | HEVC (H.265 - Main, Main10)             | 3840 x 2160 | 120                                 | 100            |                                                                                                                             |
| *.wmv       |                                                                         | Motion JPEG                             | 3840 x 2160 | 30                                  | 30             |                                                                                                                             |
| *.mp4       |                                                                         | MPEG4 SP/ASP                            | 1920 x 1080 | 60                                  | 70             |                                                                                                                             |
| *.mov       |                                                                         | Window Media Video v9 (VC1)             |             |                                     |                |                                                                                                                             |
| *.3gp       |                                                                         | MPEG2                                   |             | 60                                  | 60             |                                                                                                                             |
| *.vro       |                                                                         | MPEG1                                   |             |                                     |                |                                                                                                                             |
| *.mpg       |                                                                         | Microsoft MPEG-4 v1, v2, v3             |             | 30                                  | 20             |                                                                                                                             |
| *.mpeg      |                                                                         | Window Media Video v7 (WMV1), v8 (WMV2) |             |                                     |                |                                                                                                                             |
| *.ts        |                                                                         | H.263 Sorenson                          |             |                                     |                |                                                                                                                             |
| *.tp        |                                                                         | VP6                                     |             |                                     |                |                                                                                                                             |
| *.trp       |                                                                         |                                         |             |                                     |                |                                                                                                                             |
| *.flv       |                                                                         |                                         |             |                                     |                |                                                                                                                             |
| *.vob       |                                                                         |                                         |             |                                     |                |                                                                                                                             |
| *.svi       |                                                                         |                                         |             |                                     |                |                                                                                                                             |
| *.m2ts      |                                                                         | AV1                                     | 3840 x 2160 | 120                                 | 80             |                                                                                                                             |
| *.mts       |                                                                         |                                         |             |                                     |                |                                                                                                                             |
| *.webm      | WebM                                                                    | VP8                                     | 1920 x 1080 | 60                                  | 70             | Vorbis                                                                                                                      |
|             |                                                                         | VP9 (Profile 0, profile 2 supported)    | 3840 x 2160 | 3840 x 2160: 60<br>1920 x 1080: 120 | 80             |                                                                                                                             |
|             |                                                                         | AV1                                     | 3840 x 2160 | 120                                 | 80             |                                                                                                                             |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                      | 1920 x 1080 | 60                                  | 70             | RealAudio 6                                                                                                                 |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1.
  - TV does not support FMO / ASO / RS.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- H.264 FHD is supported up to Level 4.2.
  - TV does not support FMO / ASO / RS.
- HEVC UHD is supported up to Level 5.2.
  - Resolution is changed during video playback (Up to Level 5.1 3840 x 2160 is supported)
- HEVC FHD is supported up to Level 4.1.
- VC1 AP L4 is not supported.
- GMC 2 or above is not supported.

## Audio decoders

- WMA is supported up to 10 Pro 5.1 channels, M2 profile.
- WMA1, WMA lossless / Voice are not supported.
- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

## Supported video codecs (Q7\*D, 85DU8)

| File format | Container                                                               | Video codecs                            | Resolution  | Frame rate (fps) | Bitrate (Mbps) | Audio codecs                                                                                                                |
|-------------|-------------------------------------------------------------------------|-----------------------------------------|-------------|------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                          | 4096 x 2160 | 4096 x 2160: 60  | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>WMA<br>Dolby Digital+<br>MPEG(MP3)<br>AC-4<br>G.711(A-Law, μ-Law)<br>OPUS |
| *.mkv       |                                                                         | HEVC (H.265 - Main, Main10)             |             | 1920 x 1080: 120 | 80             |                                                                                                                             |
| *.asf       |                                                                         | Motion JPEG                             | 3840 x 2160 | 30               | 80             |                                                                                                                             |
| *.wmv       |                                                                         | MPEG4 SP/ASP                            | 1920 x 1080 | 60               | 20             |                                                                                                                             |
| *.mp4       |                                                                         | Window Media Video v9 (VC1)             |             |                  |                |                                                                                                                             |
| *.mov       |                                                                         | MPEG2                                   |             |                  |                |                                                                                                                             |
| *.3gp       |                                                                         | MPEG1                                   |             |                  |                |                                                                                                                             |
| *.vro       |                                                                         | Microsoft MPEG-4 v1, v2, v3             |             | 30               |                |                                                                                                                             |
| *.mpg       |                                                                         | Window Media Video v7 (WMV1), v8 (WMV2) |             |                  |                |                                                                                                                             |
| *.mpeg      |                                                                         | H.263 Sorenson                          |             |                  |                |                                                                                                                             |
| *.ts        |                                                                         | VP6                                     |             |                  |                |                                                                                                                             |
| *.trp       |                                                                         | AV1                                     | 3840 x 2160 |                  | 60             |                                                                                                                             |
| *.flv       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.vob       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.svi       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.m2ts      |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.mts       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.webm      | WebM                                                                    | VP8                                     | 1920 x 1080 | 60               | 20             | Vorbis                                                                                                                      |
|             |                                                                         | VP9 (Profile 0, profile 2 supported)    | 3840 x 2160 | 60               | 80             |                                                                                                                             |
|             |                                                                         | AV1                                     | 3840 x 2160 | 60               | 40             |                                                                                                                             |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                      | 1920 x 1080 | 60               | 20             | RealAudio 6                                                                                                                 |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1.
  - TV does not support FMO / ASO / RS.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- H.264 FHD is supported up to Level 4.2.
  - TV does not support FMO / ASO / RS.
- HEVC UHD is supported up to Level 5.2.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- HEVC FHD is supported up to Level 4.1.
- VC1 AP L4 is not supported.
- GMC 2 or above is not supported.

## Audio decoders

- WMA is supported up to 10 Pro 5.1 channels, M2 profile.
- WMA1, WMA lossless / Voice are not supported.
- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

Supported video codecs (Q6\*C/Q6\*D/QE1C/QE1D (except for 32Q6\*C/32Q6\*D)/DU8 (except for 85DU8))

| File format | Container                                                               | Video codecs                            | Resolution  | Frame rate (fps) | Bitrate (Mbps) | Audio codecs                                                                                                                |
|-------------|-------------------------------------------------------------------------|-----------------------------------------|-------------|------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                          | 4096 x 2160 | 60               | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>WMA<br>Dolby Digital+<br>MPEG(MP3)<br>AC-4<br>G.711(A-Law, μ-Law)<br>OPUS |
| *.mkv       |                                                                         | HEVC (H.265 - Main, Main10)             | 4096 x 2160 | 60               | 80             |                                                                                                                             |
| *.asf       |                                                                         | Motion JPEG                             | 3840 x 2160 | 30               | 80             |                                                                                                                             |
| *.wmv       |                                                                         | MPEG4 SP/ASP                            | 1920 x 1080 | 60               | 20             |                                                                                                                             |
| *.mp4       |                                                                         | Window Media Video v9 (VC1)             |             |                  |                |                                                                                                                             |
| *.mov       |                                                                         | MPEG2                                   |             |                  |                |                                                                                                                             |
| *.3gp       |                                                                         | MPEG1                                   |             |                  |                |                                                                                                                             |
| *.vro       |                                                                         | Microsoft MPEG-4 v1, v2, v3             |             | 30               |                |                                                                                                                             |
| *.mpg       |                                                                         | Window Media Video v7 (WMV1), v8 (WMV2) |             |                  |                |                                                                                                                             |
| *.mpeg      |                                                                         | H.263 Sorenson                          |             |                  |                |                                                                                                                             |
| *.ts        |                                                                         | VP6                                     |             |                  |                |                                                                                                                             |
| *.tp        |                                                                         | AV1                                     | 3840 x 2160 | 60               | 40             |                                                                                                                             |
| *.trp       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.flv       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.vob       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.svi       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.m2ts      |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.mts       |                                                                         |                                         |             |                  |                |                                                                                                                             |
|             |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.webm      | WebM                                                                    | VP8                                     | 1920 x 1080 | 60               | 20             | Vorbis                                                                                                                      |
|             |                                                                         | VP9 (Profile 0, profile 2 supported)    | 3840 x 2160 | 60               | 80             |                                                                                                                             |
|             |                                                                         | AV1                                     | 3840 x 2160 | 60               | 40             |                                                                                                                             |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                      | 1920 x 1080 | 60               | 20             | RealAudio 6                                                                                                                 |

## Supported video codecs (CU8 (except for 85CU8))

| File format | Container                                                               | Video codecs                            | Resolution  | Frame rate (fps)                    | Bitrate (Mbps) | Audio codecs                                                                                                                |  |
|-------------|-------------------------------------------------------------------------|-----------------------------------------|-------------|-------------------------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|--|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                          | 4096 x 2160 | 4096 x 2160: 30<br>1920 x 1080: 120 | 100            | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>WMA<br>Dolby Digital+<br>MPEG(MP3)<br>AC-4<br>G.711(A-Law, μ-Law)<br>OPUS |  |
| *.mkv       |                                                                         | HEVC (H.265 - Main, Main10)             |             | 4096 x 2160: 60<br>1920 x 1080: 120 | 100            |                                                                                                                             |  |
| *.asf       |                                                                         | Motion JPEG                             | 1920 x 1080 | 60                                  | 80             |                                                                                                                             |  |
| *.wmv       |                                                                         | MPEG4 SP/ASP                            |             | 60                                  | 60             |                                                                                                                             |  |
| *.mp4       |                                                                         | Window Media Video v9 (VC1)             |             |                                     |                |                                                                                                                             |  |
| *.mov       |                                                                         | MPEG2                                   |             | 30                                  | 60             |                                                                                                                             |  |
| *.3gp       |                                                                         | MPEG1                                   |             |                                     |                |                                                                                                                             |  |
| *.vro       |                                                                         | Microsoft MPEG-4 v1, v2, v3             |             | 30                                  | 20             |                                                                                                                             |  |
| *.mpg       |                                                                         | Window Media Video v7 (WMV1), v8 (WMV2) |             |                                     |                |                                                                                                                             |  |
| *.mpeg      |                                                                         | H.263 Sorenson                          |             |                                     |                |                                                                                                                             |  |
| *.ts        |                                                                         | VP6                                     |             |                                     |                |                                                                                                                             |  |
| *.tp        |                                                                         | AV1                                     | 4096 x 2160 | 4096 x 2160: 60<br>1920 x 1080: 120 | 100            |                                                                                                                             |  |
| *.trp       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.flv       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.vob       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.svi       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.m2ts      |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.mts       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.webm      | WebM                                                                    | VP8                                     | 1920 x 1080 | 60                                  | 40             | Vorbis                                                                                                                      |  |
|             |                                                                         | VP9 (Profile 0, profile 2 supported)    | 4096 x 2160 | 4096 x 2160: 60<br>1920 x 1080: 120 | 100            |                                                                                                                             |  |
|             |                                                                         | AV1                                     | 4096 x 2160 | 4096 x 2160: 60<br>1920 x 1080: 120 | 100            |                                                                                                                             |  |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                      | 1920 x 1080 | 60                                  | 60             | RealAudio 6                                                                                                                 |  |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1.
  - TV does not support FMO / ASO / RS.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- H.264 FHD is supported up to Level 4.2.
  - TV does not support FMO / ASO / RS.
- HEVC UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- HEVC FHD is supported up to Level 4.1.
- VC1 AP L4 is not supported.
- GMC 2 or above is not supported.

## Audio decoders

- WMA is supported up to 10 Pro 5.1 channels, M2 profile.
- WMA1, WMA lossless / Voice are not supported.
- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

## Supported video codecs (CU7/DU7/BEC/BED , 32Q6\*C/32Q6\*D)

| File format | Container                                                               | Video codecs                            | Resolution  | Frame rate (fps) | Bitrate (Mbps) | Audio codecs                                                                                                                |
|-------------|-------------------------------------------------------------------------|-----------------------------------------|-------------|------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                          | 3840 x 2160 | 3840 x 2160: 30  | 50             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>WMA<br>Dolby Digital+<br>MPEG(MP3)<br>AC-4<br>G.711(A-Law, μ-Law)<br>OPUS |
| *.mkv       |                                                                         |                                         |             | 1920 x 1080: 60  |                |                                                                                                                             |
| *.asf       |                                                                         | HEVC (H.265 - Main, Main10)             | 60          | 50               |                |                                                                                                                             |
| *.wmv       |                                                                         | Motion JPEG                             | 1920 x 1080 | 60               | 20             |                                                                                                                             |
| *.mp4       |                                                                         | MPEG4 SP/ASP                            |             |                  |                |                                                                                                                             |
| *.mov       |                                                                         | Window Media Video v9 (VC1)             |             |                  |                |                                                                                                                             |
| *.3gp       |                                                                         | MPEG2                                   |             |                  |                |                                                                                                                             |
| *.vro       |                                                                         | MPEG1                                   |             |                  |                |                                                                                                                             |
| *.mpg       |                                                                         | Microsoft MPEG-4 v1, v2, v3             |             | 30               |                |                                                                                                                             |
| *.mpeg      |                                                                         | Window Media Video v7 (WMV1), v8 (WMV2) |             |                  |                |                                                                                                                             |
| *.ts        |                                                                         | H.263 Sorenson                          |             |                  |                |                                                                                                                             |
| *.tp        |                                                                         | VP6                                     |             |                  |                |                                                                                                                             |
| *.trp       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.flv       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.vob       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.svi       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.m2ts      |                                                                         | AV1                                     |             | 3840 x 2160      |                |                                                                                                                             |
| *.mts       |                                                                         |                                         |             |                  |                |                                                                                                                             |
| *.webm      | WebM                                                                    | VP8                                     | 1920 x 1080 | 60               | 20             | Vorbis                                                                                                                      |
|             |                                                                         | VP9 (Profile 0, profile 2 supported)    | 3840 x 2160 | 60               | 50             |                                                                                                                             |
|             |                                                                         | AV1                                     | 3840 x 2160 | 60               | 40             |                                                                                                                             |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                      | 1920 x 1080 | 60               | 20             | RealAudio 6                                                                                                                 |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 FHD is supported up to Level 4.2. (TV does not support FMO / ASO / RS)
- H.264 UHD is supported up to Level 5.1. (TV does not support FMO / ASO / RS)
- HEVC FHD is supported up to Level 4.1.
- HEVC UHD is supported up to Level 5.1.
- VC1 AP L4 is not supported.
- GMC 2 or above is not supported.

## Audio decoders

- WMA is supported up to 10 Pro 5.1 channels, M2 profile.
- WMA1, WMA lossless / Voice are not supported.
- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

## Supported video codecs (The Frame (32LS03C model))

| File format | Container                                                               | Video codecs                            | Resolution  | Frame rate (fps) | Bitrate (Mbps) | Audio codecs                                                                                                                |  |  |  |  |  |
|-------------|-------------------------------------------------------------------------|-----------------------------------------|-------------|------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|--|--|--|--|--|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                          | 1920 x 1080 | 60               | 50             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>WMA<br>Dolby Digital+<br>MPEG(MP3)<br>AC-4<br>OPUS<br>G.711(A-Law, μ-Law) |  |  |  |  |  |
| *.mkv       |                                                                         | HEVC (H.265 - Main, Main10)             |             | 60               | 50             |                                                                                                                             |  |  |  |  |  |
| *.asf       |                                                                         | Motion JPEG                             |             | 60               | 20             |                                                                                                                             |  |  |  |  |  |
| *.wmv       |                                                                         | MPEG4 SP/ASP                            |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.mp4       |                                                                         | Window Media Video v9 (VC1)             |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.mov       |                                                                         | MPEG2                                   |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.3gp       |                                                                         | MPEG1                                   |             | 30               | 20             |                                                                                                                             |  |  |  |  |  |
| *.vro       |                                                                         | Microsoft MPEG-4 v1, v2, v3             |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.mpg       |                                                                         | Window Media Video v7 (WMV1), v8 (WMV2) |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.mpeg      |                                                                         | H.263 Sorenson                          |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.ts        |                                                                         | VP6                                     |             | 60               | 40             |                                                                                                                             |  |  |  |  |  |
| *.tp        |                                                                         | AV1                                     |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.trp       |                                                                         |                                         |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.flv       |                                                                         |                                         |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.vob       |                                                                         |                                         |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.svi       |                                                                         |                                         |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.m2ts      |                                                                         |                                         |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.mts       |                                                                         |                                         |             |                  |                |                                                                                                                             |  |  |  |  |  |
| *.webm      | WebM                                                                    | VP8                                     |             | 60               | 20             | Vorbis                                                                                                                      |  |  |  |  |  |
|             |                                                                         | VP9 (Profile 0, profile 2 supported)    |             | 60               | 50             |                                                                                                                             |  |  |  |  |  |
|             |                                                                         | AV1                                     |             | 60               | 40             |                                                                                                                             |  |  |  |  |  |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                      |             | 60               | 20             | RealAudio 6                                                                                                                 |  |  |  |  |  |

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 FHD is supported up to Level 4.2. (TV does not support FMO / ASO / RS)
- HEVC FHD is supported up to Level 4.1.
- VC1 AP L4 is not supported.
- GMC 2 or above is not supported.

## Audio decoders

- WMA is supported up to 10 Pro 5.1 channels, M2 profile.
- WMA1, WMA lossless / Voice are not supported.
- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

## Supported video codecs (QN7\*\*C)

| File format | Container                                                               | Video codecs                            | Resolution  | Frame rate (fps)                    | Bitrate (Mbps) | Audio codecs                                                                                                                |  |
|-------------|-------------------------------------------------------------------------|-----------------------------------------|-------------|-------------------------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|--|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                          | 3840 x 2160 | 3840 x 2160: 60<br>1920 x 1080: 120 | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>WMA<br>Dolby Digital+<br>MPEG(MP3)<br>AC-4<br>G.711(A-Law, μ-Law)<br>OPUS |  |
| *.mkv       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.asf       |                                                                         | HEVC (H.265 - Main, Main10)             | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 100            |                                                                                                                             |  |
| *.wmv       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.mp4       |                                                                         | Motion JPEG                             | 1920 x 1080 | 60                                  | 20             |                                                                                                                             |  |
| *.mov       |                                                                         | MPEG4 SP/ASP                            | 1920 x 1080 | 60                                  | 20             |                                                                                                                             |  |
| *.3gp       |                                                                         | Window Media Video v9 (VC1)             |             |                                     |                |                                                                                                                             |  |
| *.vro       |                                                                         | MPEG2                                   |             |                                     |                |                                                                                                                             |  |
| *.mpg       |                                                                         | MPEG1                                   |             |                                     |                |                                                                                                                             |  |
| *.mpeg      |                                                                         | Microsoft MPEG-4 v1, v2, v3             |             |                                     |                |                                                                                                                             |  |
| *.ts        |                                                                         | Window Media Video v7 (WMV1), v8 (WMV2) |             |                                     |                |                                                                                                                             |  |
| *.tp        |                                                                         | H.263 Sorenson                          |             |                                     |                |                                                                                                                             |  |
| *.trp       |                                                                         | VP6                                     |             |                                     |                |                                                                                                                             |  |
| *.flv       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.vob       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.svi       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.m2ts      |                                                                         | AV1                                     | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 80             |                                                                                                                             |  |
| *.mts       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.webm      | WebM                                                                    | VP8                                     | 1920 x 1080 | 60                                  | 20             | Vorbis                                                                                                                      |  |
|             |                                                                         | VP9 (Profile 0, profile 2 supported)    | 3840 x 2160 | 60                                  | 80             |                                                                                                                             |  |
|             |                                                                         | AV1                                     | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 80             |                                                                                                                             |  |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                      | 1920 x 1080 | 60                                  | 20             | RealAudio 6                                                                                                                 |  |

 Because the specifications are based on the current 8K connectivity and decoding standards, future connectivity, broadcasting, and decoding standards may not be supported. Upgrading for meeting future standards may require purchase of additional devices.

 Some 3rd party standards may not be supported.

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1, and H.264 FHD is supported up to Level 4.2. (TV does not support FMO / ASO / RS)
- HEVC UHD is supported up to Level 5.2, and HEVC FHD is supported up to Level 4.1.
- HEVC 8K is supported up to Level 6.1.
- VC1 AP L4 is not supported.
- GMC 2 or above is not supported.

## Audio decoders

- WMA is supported up to 10 Pro 5.1 channels, M2 profile.
- WMA1, WMA lossless / Voice are not supported.
- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

## Supported video codecs (QN8\*\*C/QN8\*\*D/QN9\*\*C)

| File format | Container                                                               | Video codecs                            | Resolution  | Frame rate (fps)                    | Bitrate (Mbps) | Audio codecs                                                                                                                |  |
|-------------|-------------------------------------------------------------------------|-----------------------------------------|-------------|-------------------------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|--|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                          | 4096 x 2160 | 4096 x 2160: 60<br>1920 x 1080: 120 | 60             | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>WMA<br>Dolby Digital+<br>MPEG(MP3)<br>AC-4<br>G.711(A-Law, μ-Law)<br>OPUS |  |
| *.mkv       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.asf       |                                                                         | HEVC (H.265 - Main, Main10)             | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 100            |                                                                                                                             |  |
| *.wmv       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.mp4       |                                                                         | Motion JPEG                             | 3840 x 2160 | 30                                  | 80             |                                                                                                                             |  |
| *.mov       |                                                                         | MPEG4 SP/ASP                            | 1920 x 1080 | 60                                  | 20             |                                                                                                                             |  |
| *.3gp       |                                                                         | Window Media Video v9 (VC1)             |             |                                     |                |                                                                                                                             |  |
| *.vro       |                                                                         | MPEG2                                   |             |                                     |                |                                                                                                                             |  |
| *.mpg       |                                                                         | MPEG1                                   |             |                                     |                |                                                                                                                             |  |
| *.mpeg      |                                                                         | Microsoft MPEG-4 v1, v2, v3             |             |                                     |                |                                                                                                                             |  |
| *.ts        |                                                                         | Window Media Video v7 (WMV1), v8 (WMV2) |             |                                     |                |                                                                                                                             |  |
| *.tp        |                                                                         | H.263 Sorenson                          |             |                                     |                |                                                                                                                             |  |
| *.trp       |                                                                         | VP6                                     |             |                                     |                |                                                                                                                             |  |
| *.flv       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.vob       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.svi       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.m2ts      |                                                                         | AV1                                     | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 80             |                                                                                                                             |  |
| *.mts       |                                                                         |                                         |             |                                     |                |                                                                                                                             |  |
| *.webm      | WebM                                                                    | VP8                                     | 1920 x 1080 | 60                                  | 20             | Vorbis                                                                                                                      |  |
|             |                                                                         | VP9 (Profile 0, profile 2 supported)    | 3840 x 2160 | 60                                  | 80             |                                                                                                                             |  |
|             |                                                                         | AV1                                     | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 80             |                                                                                                                             |  |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                      | 1920 x 1080 | 60                                  | 20             | RealAudio 6                                                                                                                 |  |

 Because the specifications are based on the current 8K connectivity and decoding standards, future connectivity, broadcasting, and decoding standards may not be supported. Upgrading for meeting future standards may require purchase of additional devices.

 Some 3rd party standards may not be supported.

## Supported video codecs (QN900D)

| File format | Container                                                               | Video codecs                            | Resolution  | Frame rate (fps)                    | Bitrate (Mbps)                      | Audio codecs                                                                                                                |    |  |  |
|-------------|-------------------------------------------------------------------------|-----------------------------------------|-------------|-------------------------------------|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|----|--|--|
| *.avi       | AVI<br>MKV<br>ASF<br>MP4<br>3GP<br>MOV<br>FLV<br>VRO<br>VOB<br>PS<br>TS | H.264 BP/MP/HP                          | 4096 x 2160 | 4096 x 2160: 60<br>1920 x 1080: 120 | 60                                  | AC3<br>LPCM<br>ADPCM(IMA, MS)<br>AAC<br>HE-AAC<br>WMA<br>Dolby Digital+<br>MPEG(MP3)<br>AC-4<br>G.711(A-Law, μ-Law)<br>OPUS |    |  |  |
| *.mkv       |                                                                         |                                         |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.asf       |                                                                         | HEVC (H.265 - Main, Main10)             | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 100                                 |                                                                                                                             |    |  |  |
| *.wmv       |                                                                         |                                         |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.mp4       |                                                                         | Motion JPEG                             | 3840 x 2160 | 30                                  | 80                                  |                                                                                                                             |    |  |  |
| *.mov       |                                                                         | MPEG4 SP/ASP                            | 1920 x 1080 | 60                                  | 20                                  |                                                                                                                             |    |  |  |
| *.3gp       |                                                                         | Window Media Video v9 (VC1)             |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.vro       |                                                                         | MPEG2                                   |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.mpg       |                                                                         | MPEG1                                   |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.mpeg      |                                                                         | Microsoft MPEG-4 v1, v2, v3             |             | 30                                  |                                     |                                                                                                                             |    |  |  |
| *.ts        |                                                                         | Window Media Video v7 (WMV1), v8 (WMV2) |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.tp        |                                                                         | H.263 Sorenson                          |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.trp       |                                                                         | VP6                                     |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.flv       |                                                                         |                                         |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.vob       |                                                                         |                                         |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.svi       |                                                                         |                                         |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.m2ts      |                                                                         |                                         | AV1         | 7680 x 4320                         | 7680 x 4320: 60<br>3840 x 2160: 120 |                                                                                                                             | 80 |  |  |
| *.mts       |                                                                         |                                         |             |                                     |                                     |                                                                                                                             |    |  |  |
| *.webm      | WebM                                                                    | VP8                                     | 1920 x 1080 | 60                                  | 20                                  | Vorbis                                                                                                                      |    |  |  |
|             |                                                                         | VP9 (Profile 0, profile 2 supported)    | 7680 x 4320 | 60                                  | 80                                  |                                                                                                                             |    |  |  |
|             |                                                                         | AV1                                     | 7680 x 4320 | 7680 x 4320: 60<br>3840 x 2160: 120 | 80                                  |                                                                                                                             |    |  |  |
| *.rmvb      | RMVB                                                                    | RV8/9/10 (RV30/40)                      | 1920 x 1080 | 60                                  | 20                                  | RealAudio 6                                                                                                                 |    |  |  |

 Because the specifications are based on the current 8K connectivity and decoding standards, future connectivity, broadcasting, and decoding standards may not be supported. Upgrading for meeting future standards may require purchase of additional devices.

 Some 3rd party standards may not be supported.

## Other restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV / MP4 / TS containers.
- The video played on the panel may have a different frame rate than the actual footage.

## Video decoders

- H.264 UHD is supported up to Level 5.1.
  - Resolution is changed during video playback (Up to 3840 x 2160 is supported)
- H.264 FHD is supported up to Level 4.2.
  - TV does not support FMO / ASO / RS.
- HEVC UHD is supported up to Level 5.2.
  - Resolution is changed during video playback (Up to Level 5.1 3840 x 2160 is supported)
- HEVC 8K is supported up to Level 6.1.
- HEVC FHD is supported up to Level 4.1.
- VC1 AP L4 is not supported.
- GMC 2 or above is not supported.

## Audio decoders

- WMA is supported up to 10 Pro 5.1 channels, M2 profile.
- WMA1, WMA lossless / Voice are not supported.
- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 5.1 channels.
- Dolby Digital+ is supported for up to 5.1 channels.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ with the codec.

# Supported Refresh Rates

Find out the refresh rates supported by each model.

## 2023/2024 Models

 Supported specifications may vary from region to region. Visit [samsung.com](https://samsung.com) for more information.

- Models that support up to 50/60 Hz
  - Q6\*C, Q6\*D, QE1C, QE1D, QN700C, Q8\*C/Q8\*D (50-inch and smaller models), DU6, CU7, DU7, DUE6, DUE7, DUE8, BEC, BED, CU8/DU8 (75-inch and smaller models), The Frame/The Serif (50-inch and smaller models)
- Models that support up to 100/120 Hz
  - QLED TV (except for Q6\*C, Q6\*D, QE1C, QE1D, QN700C, Q8\*C/Q8\*D (50-inch and smaller models), QN90D (98-inch models)), S8\*C, S8\*D, S9\*C, S9\*D, CU8/DU8 (85-inch and larger models), DU9, The Frame/The Serif (55-inch and larger models)
- Models that support up to 144 Hz
  - S95D, S90D, QN95D, QN90D (except for 98-inch models), QN95C, S95C, S90C (except for 83-inch model), QN90C (43/50 inches only)
- Models that support up to 240 Hz
  - QN900D

## 2025 Models

 Supported specifications may vary from region to region. Visit [samsung.com](https://samsung.com) for more information.

- Models that support up to 50/60 Hz
  - QEF1, Q6F, Q7F (except for 98-inch model), Q8F, QN80F (50-inch model), QN82F, H5\*\*\*F, HE5\*\*EF, F6\*\*\*F, FE6\*\*EF, U7\*\*\*F, U8\*\*\*F, UE\*\*\*F, The Frame (50-inch and smaller models), BEFM, BEFB, BEFH
- Models that support up to 100/120 Hz
  - QLED TV (except for QEF1, Q6F, Q7F (98-inch model), Q8F, QN80F (50-inch model)), S8\*F
- Models that support up to 144 Hz
  - S90F, QN83F, QN85F, QN80F (except for 50-inch models), QN70F, The Frame (LS03FW), The Frame (LS03FA) (55-inch and larger models), QN1EF, QN90F (115-inch model), MR95F
- Models that support up to 144/165 Hz
  - S95F
- Models that support up to 165 Hz
  - QN900F, QN90F (except for 115-inch models)
- Models that support up to 240 Hz
  - QN990F (except for 98-inch models), QN950F

## 2026 Models

 Supported specifications may vary from region to region. Visit [samsung.com](https://samsung.com) for more information.

- Models that support up to 50/60 Hz
  - QN7\*H (50-inch and smaller models), QN1EH (50-inch and smaller models), QN2EH, QN80H (50-inch model), M7\*H (50-inch and smaller models), M1EH (50-inch and smaller models), M2EH, U8\*\*\*H (43/50/58 inches only), The Frame (50-inch and smaller models)
- Models that support up to 120 Hz
  - S8\*H, QN7\*H (55-inch and larger models), QN1EH (55-inch and larger models), QN2EH, M7\*H (55-inch and larger models), M1EH (55-inch and larger models), M2EH, U8\*\*\*H (55-inch model, 65-inch and larger models)
- Models that support up to 165 Hz
  - S9\*H
- Models that support up to 240 Hz
  - R9\*H, R8\*H, QN8\*H (except for 50-inch models), QN990H, M8\*H, M9\*H, U9\*\*\*H, The Frame (LS03HW), The Frame (LS03HE) (55-inch and larger models)

# Read After Installing the TV

Read this information after installing the TV.

## Picture sizes and input signals

The **Picture Size** is applied to the current source. The applied **Picture Size** will remain in effect whenever you select that source unless you change them.

| Input signal                                                     | Picture size               |
|------------------------------------------------------------------|----------------------------|
| Component                                                        | 16:9 Standard, Custom, 4:3 |
| Digital channel (720p)                                           | 16:9 Standard, Custom, 4:3 |
| *Digital channel (1080i, 1080p)                                  | 16:9 Standard, Custom, 4:3 |
| *Digital channel (3840 x 2160p @ 24/30 Hz)                       | 16:9 Standard, Custom      |
| *Digital channel (3840 x 2160p @ 50/60 Hz)                       | 16:9 Standard, Custom      |
| *Digital channel (4096 x 2160p)                                  | 16:9 Standard, Custom      |
| HDMI (720p)                                                      | 16:9 Standard, Custom, 4:3 |
| *HDMI (1080i, 1080p)                                             | 16:9 Standard, Custom, 4:3 |
| *HDMI (3840 x 2160p)                                             | 16:9 Standard, Custom      |
| *HDMI (4096 x 2160p)                                             | 16:9 Standard, Custom      |
| *HDMI (7680 x 4320p)                                             | 16:9 Standard, Custom      |
| USB (720p)                                                       | 16:9 Standard, Custom, 4:3 |
| *USB (1080i/p @ 60 Hz)                                           | 16:9 Standard, Custom, 4:3 |
| *USB (3840 x 2160p @ 24/30 Hz)                                   | 16:9 Standard, Custom      |
| *USB (3840 x 2160p @ 60 Hz)<br>*USB (4096 x 2160p @ 24/30/60 Hz) | 16:9 Standard, Custom      |
| *USB (7680 x 4320p @ 24/30/60 Hz)                                | 16:9 Standard, Custom      |

 \*: This input signal may differ depending on the model and geographical area.

 The input ports for external devices may differ depending on the model and geographical area.

## Installing an anti-theft lock

An anti-theft lock is a physical device that can be used to protect the TV against theft. Look for the lock slot on the back of the TV. The slot has a  icon next to it. To use the lock, wrap the lock cable around an object that is too heavy to carry and then thread it through the TV's lock slot. The lock is sold separately. The method of using an anti-theft lock may differ for each model. Refer to the lock's user manual for more information.

 This function may not be supported depending on the model or geographical area.

## Supported Resolutions for UHD Input Signals

Check the supported resolution for UHD input signals.

- Resolution: 3840 x 2160p, 4096 x 2160p

 This function may not be supported depending on the model.

 Refer to the "[Supported Refresh Rates](#)" section for supported refresh rates by model.

### If Input Signal Plus is set to Off

| Frame rate (fps) | Colour Depth / Chroma Sampling | RGB 4:4:4 | YCbCr 4:4:4 | YCbCr 4:2:2 | YCbCr 4:2:0 |
|------------------|--------------------------------|-----------|-------------|-------------|-------------|
| 50 / 60          | 8 bit                          | -         | -           | -           | 0           |

### If Input Signal Plus is set to On

- Models that support 50/60 Hz

| Frame rate (fps) | Colour Depth / Chroma Sampling | RGB 4:4:4 | YCbCr 4:4:4 | YCbCr 4:2:2 | YCbCr 4:2:0 |
|------------------|--------------------------------|-----------|-------------|-------------|-------------|
| 50 / 60          | 8 bit                          | 0         | 0           | 0           | 0           |
|                  | 10 bit                         | -         | -           | 0           | 0           |

- Models that support 120 Hz and more

| Frame rate (fps) | Colour Depth / Chroma Sampling | RGB 4:4:4 | YCbCr 4:4:4 | YCbCr 4:2:2 | YCbCr 4:2:0 |
|------------------|--------------------------------|-----------|-------------|-------------|-------------|
| 50 / 60          | 8 bit                          | 0         | 0           | 0           | 0           |
|                  | 10 bit                         | 0         | 0           | 0           | 0           |
| 120              | 8 bit                          | 0         | 0           | 0           | 0           |
|                  | 10 bit                         | 0         | 0           | 0           | 0           |

## Resolutions for Input Signals supported by 8K models

[Check the resolutions for input signals supported by 8K models.](#)

If Input Signal Plus is set to Off

| Frame rate (fps) | Colour Depth / Chroma Sampling | RGB 4:4:4 | YCbCr 4:4:4 | YCbCr 4:2:2 | YCbCr 4:2:0 |
|------------------|--------------------------------|-----------|-------------|-------------|-------------|
| 50 / 60          | 8 bit                          | -         | -           | -           | 0           |

If Input Signal Plus is set to On

- Resolution: 3840 x 2160p, 4096 x 2160p

| Frame rate (fps) | Colour Depth / Chroma Sampling | RGB 4:4:4 | YCbCr 4:4:4 | YCbCr 4:2:2 | YCbCr 4:2:0 |
|------------------|--------------------------------|-----------|-------------|-------------|-------------|
| 50 / 60          | 8 bit                          | 0         | 0           | 0           | 0           |
|                  | 10 bit                         | 0         | 0           | 0           | 0           |
| 120              | 8 bit                          | 0         | 0           | 0           | 0           |
|                  | 10 bit                         | 0         | 0           | 0           | 0           |

- Resolution: 7680 x 4320p

| Frame rate (fps)  | Colour Depth / Chroma Sampling | RGB 4:4:4 | YCbCr 4:4:4 | YCbCr 4:2:2 | YCbCr 4:2:0 |
|-------------------|--------------------------------|-----------|-------------|-------------|-------------|
| 24 / 30 / 50 / 60 | 8 bit                          | 0         | 0           | 0           | 0           |
|                   | 10 bit                         | 0         | 0           | 0           | 0           |

# Supported Resolutions for FreeSync (VRR)

Check the supported resolutions for the FreeSync (VRR) signal.

When **Game Mode** is set to **On** or **Auto**, the FreeSync (**VRR**) function is activated.

-  FreeSync (VRR) is only available in select models.
-  This function may not be supported depending on the model.

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | SCAN        |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|-------------|
| 1920 x 1080                  | 120 Hz         | 135.000                          | 120                           | 297.000                  | progressive |
| 2560 x 1080                  | 120 Hz         | 150.000                          | 120                           | 495.000                  | progressive |
| 2560 x 1440                  | 120 Hz         | 150.000                          | 120                           | 495.000                  | progressive |
| 3840 x 2160                  | 120 Hz         | 270.000                          | 120                           | 1188.000                 | progressive |
| 3840 x 1080                  | 120 Hz         | 137.250                          | 120                           | 549.000                  | progressive |
| 3840 x 1600                  | 120 Hz         | 99.419                           | 120                           | 521.750                  | progressive |
| *4096 x 2160                 | 120 Hz         | 270.000                          | 120                           | 1188.000                 | progressive |
| *7680 x 4320                 | 60 Hz          | 264.000                          | 60                            | 2376.000                 | progressive |

 \*: The resolution may not be supported depending on the model.

- Only models that support 144 Hz are supported.

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | SCAN        |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|-------------|
| 1920 x 1080                  | 144 Hz         | 166.587                          | 144                           | 346.500                  | progressive |
| 2560 x 1080                  | 144 Hz         | 172.339                          | 144                           | 470.830                  | progressive |
| 3840 x 2160                  | 144 Hz         | 323.677                          | 144                           | 1424.180                 | progressive |
| 3840 x 1080                  | 144 Hz         | 166.607                          | 144                           | 653.100                  | progressive |
| 3840 x 1600                  | 144 Hz         | 246.569                          | 144                           | 1035.590                 | progressive |



- Only models that support 165 Hz are supported.

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | SCAN        |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|-------------|
| 1920 x 1080                  | 165 Hz         | 192.788                          | 165                           | 401.000                  | progressive |
| 2560 x 1080                  | 165 Hz         | 192.831                          | 165                           | 524.500                  | progressive |
| 3840 x 2160                  | 165 Hz         | 385.750                          | 165                           | 1543.000                 | progressive |
| 3840 x 1080                  | 165 Hz         | 196.502                          | 165                           | 1053.250                 | progressive |
| 3840 x 1600                  | 165 Hz         | 285.750                          | 165                           | 1143.000                 | progressive |

- Only models that support 240 Hz are supported.

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | SCAN        |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|-------------|
| 1920 x 1080                  | 240 Hz         | 291.587                          | 240                           | 606.500                  | progressive |
| 2560 x 1080                  | 240 Hz         | 291.544                          | 240                           | 793.000                  | progressive |
| 3840 x 2160                  | 240 Hz         | 540.000                          | 240                           | 2376.000                 | progressive |
| 3840 x 1080                  | 240 Hz         | 291.563                          | 240                           | 1166.250                 | progressive |
| 3840 x 1600                  | 240 Hz         | 431.750                          | 240                           | 1727.000                 | progressive |

## Read Before Connecting a Computer (Supported Resolutions)

Check the resolutions supported for PC input signals.

When you connect your TV to a computer, set the computer's video card to one of the standard resolutions listed in the tables below. The TV will automatically adjust to the resolution you choose. Note that the optimal and recommended resolutions are 3840 x 2160 @ 60 Hz (UHD models) and 7680 x 4320 @ 60 Hz (8K models). Choosing a resolution not included in the tables can result in a blank or flickering screen or can turn on only the receiver of the remote control. Refer to the user manual of your graphics card for compatible resolutions.

 The native resolutions are 3840 x 2160 @ 60 Hz (UHD models) and 7680 x 4320 @ 60 Hz (8K models) with the **Input Signal Plus** set to **On**. The native resolution is 3840 x 2160 @ 30 Hz with the **Input Signal Plus** set to **Off**.

 The specified resolution may not be supported depending on the model.

### IBM

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | Polarity<br>(horizontal /<br>vertical) |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|----------------------------------------|
| 720 x 400                    | 70 Hz          | 31.469                           | 70.087                        | 28.322                   | - / +                                  |

### MAC

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | Polarity<br>(horizontal /<br>vertical) |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|----------------------------------------|
| 640 x 480                    | 67 Hz          | 35.000                           | 66.667                        | 30.240                   | - / -                                  |
| 832 x 624                    | 75 Hz          | 49.726                           | 74.551                        | 57.284                   | - / -                                  |
| 1152 x 870                   | 75 Hz          | 68.681                           | 75.062                        | 100.000                  | - / -                                  |

## VESA DMT

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | Polarity<br>(horizontal /<br>vertical) |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|----------------------------------------|
| 640 x 480                    | 60 Hz          | 31.469                           | 59.940                        | 25.175                   | - / -                                  |
| 640 x 480                    | 72 Hz          | 37.861                           | 72.809                        | 31.500                   | - / -                                  |
| 640 x 480                    | 75 Hz          | 37.500                           | 75.000                        | 31.500                   | - / -                                  |
| 800 x 600                    | 60 Hz          | 37.879                           | 60.317                        | 40.000                   | + / +                                  |
| 800 x 600                    | 72 Hz          | 48.077                           | 72.188                        | 50.000                   | + / +                                  |
| 800 x 600                    | 75 Hz          | 46.875                           | 75.000                        | 49.500                   | + / +                                  |
| 1024 x 768                   | 60 Hz          | 48.363                           | 60.004                        | 65.000                   | - / -                                  |
| 1024 x 768                   | 70 Hz          | 56.476                           | 70.069                        | 75.000                   | - / -                                  |
| 1024 x 768                   | 75 Hz          | 60.023                           | 75.029                        | 78.750                   | + / +                                  |
| 1152 x 864                   | 75 Hz          | 67.500                           | 75.000                        | 108.000                  | + / +                                  |
| 1280 x 720                   | 60 Hz          | 45.000                           | 60.000                        | 74.250                   | + / +                                  |
| 1280 x 800                   | 60 Hz          | 49.702                           | 59.810                        | 83.500                   | - / +                                  |
| 1280 x 1024                  | 60 Hz          | 63.981                           | 60.020                        | 108.000                  | + / +                                  |
| 1280 x 1024                  | 75 Hz          | 79.976                           | 75.025                        | 135.000                  | + / +                                  |
| 1440 x 900                   | 60 Hz          | 55.935                           | 59.887                        | 106.500                  | - / +                                  |
| 1600 x 900                   | 60 Hz          | 60.000                           | 60.000                        | 108.000                  | + / +                                  |
| 1680 x 1050                  | 60 Hz          | 65.290                           | 59.954                        | 146.250                  | - / +                                  |
| 1920 x 1080                  | 60 Hz          | 67.500                           | 60.000                        | 148.500                  | + / +                                  |

## VESA CVT

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | Polarity<br>(horizontal /<br>vertical) |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|----------------------------------------|
| 2560 x 1440                  | 60 Hz          | 88.787                           | 59.951                        | 241.500                  | + / -                                  |
| 2560 x 1440                  | 120 Hz         | 192.996                          | 119.998                       | 497.750                  | + / -                                  |

 The resolution may not be supported depending on the model.

 2560 x 1440 @ 60 Hz resolution is not supported in [Game Mode](#).

## CTA-861

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | Polarity<br>(horizontal /<br>vertical) |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|----------------------------------------|
| 1920 x 1080i                 | 50 Hz          | 28.125                           | 50.000                        | 74.250                   | + / +                                  |
| 1920 x 1080i                 | 60 Hz          | 33.750                           | 60.000                        | 74.250                   | + / +                                  |
| *1920 x 1080                 | 100 Hz         | 112.500                          | 100.000                       | 297.000                  | + / +                                  |
| *1920 x 1080                 | 120 Hz         | 135.000                          | 120.003                       | 297.000                  | + / +                                  |
| 3840 x 2160                  | 30 Hz          | 67.500                           | 30.000                        | 297.000                  | - / -                                  |
| *3840 x 2160                 | 60 Hz          | 135.000                          | 60.000                        | 594.000                  | - / -                                  |
| *3840 x 2160                 | 100 Hz         | 225.000                          | 100.000                       | 1188.000                 | + / +                                  |
| *3840 x 2160                 | 120 Hz         | 270.000                          | 120.000                       | 1188.000                 | + / +                                  |
| *4096 x 2160                 | 24 Hz          | 54.000                           | 24.000                        | 297.000                  | + / +                                  |
| *4096 x 2160                 | 30 Hz          | 67.500                           | 30.000                        | 297.000                  | + / +                                  |
| *4096 x 2160                 | 50 Hz          | 112.500                          | 50.000                        | 594.000                  | + / +                                  |
| *4096 x 2160                 | 60 Hz          | 135.000                          | 60.000                        | 594.000                  | + / +                                  |
| *4096 x 2160                 | 100 Hz         | 225.000                          | 100.000                       | 1188.000                 | + / +                                  |
| *4096 x 2160                 | 120 Hz         | 270.000                          | 120.000                       | 1188.000                 | + / +                                  |
| *7680 x 4320                 | 24 Hz          | 108.000                          | 24.000                        | 1188.000                 | + / +                                  |
| *7680 x 4320                 | 30 Hz          | 132.000                          | 30.000                        | 1188.000                 | + / +                                  |
| *7680 x 4320                 | 50 Hz          | 220.000                          | 50.000                        | 2376.000                 | + / +                                  |
| *7680 x 4320                 | 60 Hz          | 264.000                          | 60.000                        | 2376.000                 | + / +                                  |

 \*: The resolution may not be supported depending on the model.

# Supported Resolutions for Video Signals

Check the resolutions supported for video signals.

## CTA-861

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | Polarity<br>(horizontal /<br>vertical) |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|----------------------------------------|
| 720 (1440) x 576i            | 50 Hz          | 15.625                           | 50.000                        | 27.000                   | - / -                                  |
| 720 (1440) x 480i            | 60 Hz          | 15.734                           | 59.940                        | 27.000                   | - / -                                  |
| 720 x 576                    | 50 Hz          | 31.250                           | 50.000                        | 27.000                   | - / -                                  |
| 720 x 480                    | 60 Hz          | 31.469                           | 59.940                        | 27.000                   | - / -                                  |
| 1280 x 720                   | 50 Hz          | 37.500                           | 50.000                        | 74.250                   | + / +                                  |
| 1280 x 720                   | 60 Hz          | 45.000                           | 60.000                        | 74.250                   | + / +                                  |
| 1920 x 1080i                 | 50 Hz          | 28.125                           | 50.000                        | 74.250                   | + / +                                  |
| 1920 x 1080i                 | 60 Hz          | 33.750                           | 60.000                        | 74.250                   | + / +                                  |
| 1920 x 1080                  | 24 Hz          | 27.000                           | 24.000                        | 74.250                   | + / +                                  |
| 1920 x 1080                  | 25 Hz          | 28.125                           | 25.000                        | 74.250                   | + / +                                  |
| 1920 x 1080                  | 30 Hz          | 33.750                           | 30.000                        | 74.250                   | + / +                                  |
| 1920 x 1080                  | 50 Hz          | 56.250                           | 50.000                        | 148.500                  | + / +                                  |
| 1920 x 1080                  | 60 Hz          | 67.500                           | 60.000                        | 148.500                  | + / +                                  |
| *1920 x 1080                 | 100 Hz         | 112.500                          | 100.000                       | 297.000                  | + / +                                  |
| *1920 x 1080                 | 120 Hz         | 135.000                          | 120.003                       | 297.000                  | + / +                                  |
| 3840 x 2160                  | 24 Hz          | 54.000                           | 24.000                        | 297.000                  | + / +                                  |
| 3840 x 2160                  | 25 Hz          | 56.250                           | 25.000                        | 297.000                  | + / +                                  |
| 3840 x 2160                  | 30 Hz          | 67.500                           | 30.000                        | 297.000                  | + / +                                  |
| *3840 x 2160                 | 50 Hz          | 112.500                          | 50.000                        | 594.000                  | + / +                                  |
| *3840 x 2160                 | 60 Hz          | 135.000                          | 60.000                        | 594.000                  | + / +                                  |
| *3840 x 2160                 | 100 Hz         | 225.000                          | 100.000                       | 1188.000                 | + / +                                  |
| *3840 x 2160                 | 120 Hz         | 270.000                          | 120.000                       | 1188.000                 | + / +                                  |

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | Polarity<br>(horizontal /<br>vertical) |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|----------------------------------------|
| *4096 x 2160                 | 24 Hz          | 54.000                           | 24.000                        | 297.000                  | + / +                                  |
| *4096 x 2160                 | 30 Hz          | 67.500                           | 30.000                        | 297.000                  | + / +                                  |
| *4096 x 2160                 | 50 Hz          | 112.500                          | 50.000                        | 594.000                  | + / +                                  |
| *4096 x 2160                 | 60 Hz          | 135.000                          | 60.000                        | 594.000                  | + / +                                  |
| *4096 x 2160                 | 100 Hz         | 225.000                          | 100.000                       | 1188.000                 | + / +                                  |
| *4096 x 2160                 | 120 Hz         | 270.000                          | 120.000                       | 1188.000                 | + / +                                  |
| *7680 x 4320                 | 24 Hz          | 108.000                          | 24.000                        | 1188.000                 | + / +                                  |
| *7680 x 4320                 | 30 Hz          | 132.000                          | 30.000                        | 1188.000                 | + / +                                  |
| *7680 x 4320                 | 50 Hz          | 220.000                          | 50.000                        | 2376.000                 | + / +                                  |
| *7680 x 4320                 | 60 Hz          | 264.000                          | 60.000                        | 2376.000                 | + / +                                  |

 \*: The resolution may not be supported depending on the model.

## VESA CVT

| Resolution<br>(Dots x lines) | Display format | Horizontal<br>frequency<br>(KHz) | Vertical<br>frequency<br>(Hz) | Clock frequency<br>(MHz) | Polarity<br>(horizontal /<br>vertical) |
|------------------------------|----------------|----------------------------------|-------------------------------|--------------------------|----------------------------------------|
| 2560 x 1440                  | 60 Hz          | 88.787                           | 59.951                        | 241.500                  | + / -                                  |
| 2560 x 1440                  | 120 Hz         | 192.996                          | 119.998                       | 497.750                  | + / -                                  |

 The resolution may not be supported depending on the model.

# Read Before Using Bluetooth Devices

Read this information before using a Bluetooth device.

 This function may not be supported depending on the model or geographical area.

## Restrictions on using Bluetooth

- Compatibility issues may occur, depending on the Bluetooth device. (A Mobile exclusive headphone may not be available, depending on the environment.)
- Lip-sync errors may occur.
- The TV and Bluetooth device may disconnect, depending on the distance between them.
- A Bluetooth device may hum or malfunction:
  - When a part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the TV.
  - When the device is subject to electrical variation from obstructions caused by a wall, corner or office partitioning.
  - When the device is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens and wireless LANs.
- If the problem persists, we recommend you use a wired connection.
  - DIGITAL AUDIO OUT (OPTICAL) port
  - HDMI (eARC/ARC) port

## Parental Rating (For Thailand only)

| Alphabet         | Icon                                                                                | Description                                                                                                                                   |
|------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| Allow All        |                                                                                     | The broadcasted rating value is not classified                                                                                                |
| Preschool        |    | Content suitable for preschool aged children 3-5 years old                                                                                    |
| Children         |    | Content suitable for children between 6–12 years old                                                                                          |
| General          |    | Content suitable for general audiences                                                                                                        |
| PG 13<br>(PG-13) |    | Content suitable for people aged 13 and above, but can be watched by those who are under the recommended age if parental guidance is provided |
| PG 18<br>(PG-18) |    | Content suitable for people aged 18 and above, but can be watched by those who are under the recommended age if parental guidance is provided |
| Adults           |  | Content unsuitable for children and youngsters                                                                                                |

## Licences & Other Information

Check the licences and other information and trademarks applied in your TV.

### Dolby Audio

Dolby, Dolby Audio, Dolby Atmos and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2026 Dolby Laboratories. All rights reserved.

 This licence may not be supported depending on the model or geographical area.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

### Open Source License Notice

Open Source used in this product can be found on the following webpage. (<https://opensource.samsung.com>)



POWERED BY



 This licence may not be supported depending on the model or geographical area.



 This licence may not be supported depending on the model or geographical area. Please refer to the [samsung.com](https://www.samsung.com) website for detailed information regarding FreeSync.

# Troubleshooting

The following are troubleshooting solutions for each problem.

## Picture Issues

When the TV has trouble with the picture, these steps may help resolve the problem.

### The screen is flashing or has become dark

If your TV is flickering or dimming sporadically, you may need to disable some of the energy efficiency features.

Disable [Brightness Optimisation](#), [Energy Saving Solution](#), [Motion Lighting](#) or [Contrast Enhancer](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Power and Energy Saving](#) > [Brightness Optimisation](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Power and Energy Saving](#) > [Energy Saving Solution](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Power and Energy Saving](#) > [Motion Lighting](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Expert Settings](#) > [Contrast Enhancer](#) [Try Now](#)

 Some OLED models automatically decrease the screen brightness when the ambient temperature is high, to prevent afterimages.

Run [Picture Test](#). When the tested image quality is normal, check the signal of the connected device.

-  > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Self Diagnosis](#) > [Picture Test](#) [Try Now](#)

## The picture is not bright, or the picture colours do not look clear

If the screen appears too dim, try changing the settings under [Reset Picture](#) or disabling [Brightness Optimisation](#), [Energy Saving Solution](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Expert Settings](#) > [Reset Picture](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Power and Energy Saving](#) > [Brightness Optimisation](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Power and Energy Saving](#) > [Energy Saving Solution](#) [Try Now](#)

Go to [Picture](#) and adjust the [Picture Mode](#), [Brightness](#), [Contrast](#), and [Sharpness](#) settings.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Picture Mode](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Expert Settings](#) > [Brightness](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Expert Settings](#) > [Contrast](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Expert Settings](#) > [Sharpness](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Expert Settings](#) > [Colour](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Expert Settings](#) > [Tint \(G/R\)](#) [Try Now](#)

## The picture colours are black and white or do not look the way they should look

If the product's colours or absolute whites/blacks seem to be off, launch [Picture Test](#).

-  > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Self Diagnosis](#) > [Picture Test](#) [Try Now](#)

If the test results indicate that the problem is not caused by the TV, do the following:

When using the One Connect Box, confirm that its video input connectors are connected to the correct external device video output connectors.

If using a component cable, ensure that the green (Y), blue (Pb), and red (Pr) cables are connected properly. Incorrect connections may cause colour problems or a blank screen.

 Component port may not be supported depending on the model.

Check whether [Greyscale](#) is set to [On](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Greyscale](#) [Try Now](#)

## The TV automatically turns off by itself

If your TV appears to turn off by itself, try disabling some of the TV's energy efficiency functions.

See if [Sleep Timer](#) has been enabled. The [Sleep Timer](#) automatically turns the TV off after a specified period of time.

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Power and Energy Saving](#) > [Sleep Timer](#) [Try Now](#)

If the [Sleep Timer](#) has not been enabled, see if [Auto Power Off](#) or [Off Timer](#) has been enabled and disable it.

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Power and Energy Saving](#) > [Auto Power Off](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Power and Energy Saving](#) > [Off Timer](#) [Try Now](#)

## TV cannot be turned off.

On some models, you can turn off the TV by pressing and holding the Power button. To switch from [Art](#) mode to TV mode or vice versa, short-press the Power button when the TV is on.

Configure operation settings for the power button on the remote control in  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Remote Control](#) > [Power Button Option](#). This feature is set to [Art/TV](#) by default.

If you briefly press the power button on the remote control, switches to Art mode or TV mode. If you set this feature to [On/Off](#), the TV turns on or off.

 This function may not be supported depending on the model.

## Unable to power on

If you are having problems powering on your TV, there are a number of things to check before calling the service department.

Confirm that the TV's power cord is connected correctly at both ends and that the remote control is operating normally.

Make sure that the antenna cable or cable TV cable is firmly connected.

If you have a cable box or satellite box, confirm that it is plugged in and turned on.

If your TV model supports the One Connect Box, check the One Connect Cable connecting the TV to the One Connect Box or check the connection between the TV and One Connect Box.

## The TV remains on or does not turn on automatically.

If the surrounding area is too dark or bright, the motion sensor may not work normally. The performance of the motion sensor may be affected by the installation environment (height, tilt, obstacles). If the clothes you wear or your skin colour is similar to the surrounding shading, the motion sensor may not work properly.

 Motion Sensor may not be supported depending on the model or geographical area.

The TV responds to all visual changes around it (lights, displays, dogs, out-of-window changes and other occurrences). You can adjust the response level by adjusting the sensitivity of the motion detector.

-  > (top of Smart Hub Home screen) >  **Art** > **Art Options** > **Sleep Options** > **Motion Detector**

 **Art Options** can be found at the bottom of the **Art** home. To configure the option settings, scroll down to the far bottom.

 **Motion Detector** may not be supported depending on the model or geographical area.

## Unable to find a Channel

If your TV is not connected to a cable box or satellite box, run **Auto Store** or **Auto Tuning**.

-  > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Broadcasting** > (**Auto Tuning Settings**) > **Auto Store** or **Auto Tuning** 

 The **Auto Tuning Settings** may not appear depending on the model or geographical area.

When using a broadcast receiver such as set-top box and IPTV, check the connection to the TV.

-  > left directional button >  **Connected Devices** > **Connection Guide** 

When the symptom persists, contact your service provider.

## The TV image does not look as good as it did in the store.

Store displays are tuned to a digital UHD channel or HD channel.

Change the output resolution of your devices such as digital broadcast receiver, IPTV and set-top box to UHD or HD.

Be sure to use an HDMI cable to enjoy high quality videos.

-  > left directional button >  [Connected Devices](#) > [Connection Guide](#) > [Video Device](#) > [HDMI](#)

To connect the TV with your PC, make sure that your PC's graphic card supports UHD resolutions.

For more information about the supported UHD resolutions, refer to "[Supported Resolutions for UHD Input Signals](#)".

For more information about the supported 8K resolutions, refer to "[Resolutions for Input Signals supported by 8K models](#)".

-  Make sure that the set-top box or cable box supports the content or broadcast for UHD and set the resolution. For more information, contact your service provider.
-  When using a [Samsung TV Plus](#) channel, check the network connection. When the network speed is slow, the app may not work or the image quality may be poor.

## Displayed video looks blurry

If you notice blurring or juddering on the screen, use the [Picture Clarity Settings](#) function to resolve the issue.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Expert Settings](#) > [Picture Clarity Settings](#)  
[Try Now](#)

## The picture is distorted.

The compression of video content may cause picture distortions, especially in fast moving pictures from sports programmes and action movies.

Remove and reconnect the power cord, and check the remote control battery.

If the signal reception is weak or poor, screen distortion may be visible but it is not a malfunction.

Mobile phones used close to the TV (within 1 m) may cause noise on analogue or digital channels.

-  This function may not be supported depending on the model or geographical area.

## There is a dotted line on the edge of the screen.

Change [Picture Size](#) to [16:9 Standard](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Expert Settings](#) > [Picture Size Settings](#) > [Picture Size](#) [Try Now](#)

Change the output resolution of your external device.

## The picture won't display in full screen.

HD channels will have black bars on either side of the screen when displaying upscaled SD (4:3) content.

Black bars will appear at the top and bottom of the screen when you watch movies that have aspect ratios different from your TV.

Adjust the picture size options on your external device or set the TV to full screen.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Expert Settings](#) > [Picture Size Settings](#) > [Picture Size](#) [Try Now](#)

## The Subtitle function in the TV menu is deactivated.

When an external device is connected with an HDMI or Component cable, the [Subtitle](#) function is unavailable. Adjust the subtitle setting on the external device.

 This function may not be supported depending on the model or geographical area.

## Subtitles appear on the TV screen.

Turn off the [Subtitle](#) function in [Subtitle Settings](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Subtitle Settings](#) > [Subtitle](#) [Try Now](#)

 This function may not be supported depending on the model or geographical area.

## The HDR of the connected external device turns off.

If the [Input Signal Plus](#) feature is turned on, the range of receiving HDMI input signals is expanded, allowing you to view HDR content sent from an external device.

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [External Device Manager](#) > [Input Signal Plus](#) [Try Now](#)

 This function may not be supported depending on the model.

# Sound and Noise Issues

When the TV has difficulties with sound, these steps may help resolve the problem.

## How can I connect an audio device to the TV?

The connection method may differ depending on the audio device such as HDMI (eARC/ARC), Optical, Bluetooth and Wi-Fi.

For more information about how to connect an audio device, run [Connection Guide](#).

-  > left directional button >  [Connected Devices](#) > [Connection Guide](#) > [Audio Device](#)

## There is no sound or the sound is too low at maximum volume.

Check the volume control of your TV, and then check the volume control of the external device (cable box or satellite box, DVD, Blu-ray, etc.) connected to your TV.

Check the cable connection between an external device and the TV, and then try cable connection again.

## The picture is good but there is no sound.

Check the [Sound Output](#) setting. If it is set to [TV Speaker](#), check the volume setting.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Sound](#) > [Sound Output](#) [Try Now](#)

If you are using an external device, check the device's audio output option.

For example, you may need to change your cable box's audio option to HDMI if the box connected to your TV is using an HDMI cable.

To listen to computer sound, connect an external speaker to the computer's audio output connector.

If your TV has a headphone jack, make sure there is nothing plugged into it.

Reboot the connected device by disconnecting and then reconnecting the device's power cord.

With a set-top box or cable box, check the cable connection and reboot the external device. When the symptom persists, contact your service provider.

## HDMI (eARC/ARC) is connected, and there is no sound.

Check whether [Digital Output Audio Format](#) is set to [Pass-through](#).

If a soundbar or A/V receiver that does not support [Dolby Digital+](#) is used and [Pass-through](#) is selected, there is no sound when a [Dolby Digital+](#) source is received.

It is recommended to set [Digital Output Audio Format](#) to [Auto](#) if only limited audio format is supported depending on the performance of the connected soundbar or A/V receiver.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Sound](#) > [Expert Settings](#) > [Digital Output Audio Format](#) > [Auto](#)

## The speakers are making an odd sound.

Run [Sound Test](#).

-  > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Self Diagnosis](#) > [Sound Test](#) [Try Now](#)

Make sure that the audio cable is connected to the correct audio output connector on the external device.

For antenna or cable connections, check the [Broadcast Signal](#). A low signal level may cause sound distortions.

-  > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Self Diagnosis](#) > [Broadcast Signal](#)

## The sound is interrupted.

Sound quality may become affected if the wireless router is close to the Bluetooth speaker. Place the Bluetooth speaker as close as possible to the TV without obstacle between them. Do not place the wireless router close to the Bluetooth speaker body.

To minimise interruptions, we recommend a wireless access point that uses a 5 GHz or 6 GHz frequency. 5 GHz or 6 GHz may not be supported depending on the model.

When the symptom persists, it is recommended to use wired connection such as HDMI (eARC/ARC) and Optical.

## Whenever a function is used on the TV or the channel is changed, the TV voices the activity. The TV explains in voice-over the video scenes displayed on the screen.

Turn off the [Voice Guide](#) function in [Voice Guide Settings](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Voice Guide Settings](#) > [Voice Guide](#) [Try Now](#)

## The TV audio is not being played through the Soundbar or A/V receiver.

Check the Soundbar or A/V receiver's power supply and its settings.

- When connecting the optical cable between the TV and Soundbar or A/V receiver, make sure that the sound output is set [Receiver \(Optical\)](#) on your TV.
- In case of HDMI-eARC connection, make sure that it is connected to the eARC dedicated HDMI port on your TV. However, the eARC can be used only when the Soundbar or A/V receiver supports the eARC feature.

## The sound is not heard clearly.

Change to an appropriate sound mode.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Sound](#) > [Sound Mode](#) [Try Now](#)

When [AI Mode](#) and [Adaptive Sound Pro](#) are turned on, the sound effects are automatically adjusted to the surroundings.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [AI Mode Settings](#) > [AI Mode](#) [Try Now](#)

 This function may not be supported depending on the model.

To optimise the sound depending on the surroundings, select [Adaptive Sound Pro](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [AI Mode Settings](#) > [AI Sound Mode Settings](#) > [Adaptive Sound Pro](#) [Try Now](#)

 This function may not be supported depending on the model.

## The volume of the external device cannot be adjusted.

Check the cable connection between the TV and the external device.

When connecting an external speaker such as home theatre via HDMI, make sure it is connected to the HDMI (eARC/ARC) port on the TV. Make sure that the  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [External Device Manager](#) > [Anynet+ \(HDMI-CEC\)](#) is active on your TV. [Try Now](#)

 If a device is connected via Optical, volume control may not be possible, depending on the device.

## I want to turn the TV and audio device off and on at the same time.

When you connect the Samsung Soundbar to the TV via Bluetooth, the power turns off and on together. It may not be supported depending on the Samsung Soundbar model.

When you connect an audio device that supports HDMI eARC to the HDMI (eARC) port on the TV, the power turns off and on together.

# Channel and Broadcast Issues

When the TV has difficulties receiving broadcasts, these steps may help resolve the problem.

## "Weak or No Signal" displayed in TV mode or cannot find channel.

Make sure that the external device is connected securely and turned on. Move to [Connected Devices](#) to switch to other input sources.

-  > left directional button >  [Connected Devices](#) > Sources

When using a set-top box or cable box, check the broadcast signals or the network that is connected to the external device.

## The TV is not receiving all channels.

Confirm that the coaxial cable is securely connected to the TV.

Run [Factory data reset](#) or [Auto Store](#) or [Auto Tuning](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Factory data reset](#) [Try Now](#)
-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Broadcasting](#) > [\(Auto Tuning Settings\)](#) > [Auto Store](#) or [Auto Tuning](#) [Try Now](#)

 The [Auto Tuning Settings](#) may not appear depending on the model or geographical area.

## The subtitles are not provided on a digital channel.

When watching channels with the antenna cable connected, run [Subtitle Settings](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#) > [Subtitle Settings](#) [Try Now](#)

Some channels may not have subtitle data.

When watching a channel on an external device such as a set-top box and cable box, turn on the subtitle function on the device. For more information, contact your service provider.

 This function may not be supported depending on the model or geographical area.

## Broadcasting is deactivated.

[Broadcasting](#) is only available when Source is set to [TV](#).

[Broadcasting](#) cannot be accessed while you watch TV using a cable box or satellite box.

[Broadcasting](#) cannot be accessed while a recording is in progress or the Timeshift function is running.

 [Record](#) and [Timeshift](#) may not be supported depending on the model or geographical area.

# External Device Connectivity Issues

When the TV has difficulties connecting to external devices such as a PC, game console or mobile device, these steps may help resolve the problem.

## The "Mode Not Supported" message appears.

Adjust the output resolution of the external device to a resolution supported by the TV.

## The video is OK but there is no audio.

If you are using an HDMI connection, check the audio output setting on your PC.

If you are using a DVI to HDMI cable, a separate audio cable is required.

To listen to the computer sound, connect external speakers to the audio output connection of the computer.

## I want to connect to a PC and mobile device via screen mirroring.

To wirelessly connect the TV to your PC, read the instructions at [PC > Screen Sharing \(Wireless\)](#) in [Connection Guide](#), and then try to connect.

-  > left directional button >  [Connected Devices](#) > [Connection Guide](#) > [PC](#) > [Screen Sharing \(Wireless\)](#)

Confirm that the TV and your PC are connected to the same network.

To wirelessly connect the TV to your mobile device, read the instructions at [Smartphone > Screen Sharing \(Smart View\)](#) in [Connection Guide](#), and then try to connect.

-  > left directional button >  [Connected Devices](#) > [Connection Guide](#) > [Smartphone](#) > [Screen Sharing \(Smart View\)](#) [Try Now](#)

If the TV has difficulties connecting to your PC or mobile device due to surrounding radio interferences, change the frequency of the wireless access band, and then try to connect.

## No screen appears when connecting the TV to an external device.

For more information about how to connect an external device, run [Connection Guide](#).

-  > left directional button >  [Connected Devices](#) > [Connection Guide](#) [Try Now](#)

Make sure that the external device is connected securely and turned on. Move to Sources to switch to other input sources.

-  > left directional button >  [Connected Devices](#) > Sources

Using [HDMI Troubleshooting](#), you can check the connection to HDMI cable and external devices (takes approximately 2 minutes).

-  > left directional button >  [Connected Devices](#) > [Connection Guide](#) > [Video Device](#) > [HDMI Troubleshooting](#)

When using a set-top box or cable box, check the broadcast signals or the network that is connected to the external device.

## I want to connect to a Bluetooth speaker.

For more information on how to connect a Bluetooth speaker, see [Audio Device](#) > [Bluetooth](#) in [Connection Guide](#).

-  > left directional button >  [Connected Devices](#) > [Connection Guide](#) > [Audio Device](#) > [Bluetooth](#)

## The PC screen does not appear or it flickers.

When the PC screen does not appear or the PC is not recognised, check the power supply of the PC and then reconnect the HDMI cable between the PC and TV. When the symptom persists, check that the PC is in Sleep mode, and then set [Input Signal Plus](#) to [On](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [External Device Manager](#) > [Input Signal Plus](#) [Try Now](#)

When the set resolution is not matched, it may cause a blank or flickering screen. For the PC supported resolution, refer to "[Read Before Connecting a Computer \(Supported Resolutions\)](#)".

# Network Issues

When the TV has difficulties connecting to the network, these steps may help resolve the problem.

## Wireless network connection failed. Unable to connect to a wireless access point. Unable to connect to the network.

 > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Self Diagnosis](#) > [Smart Hub Connection Test](#) [Try Now](#) [Try Now](#)

Ensure that the network cable is connected and the router is powered on.

Connect your mobile device to the router via Wi-Fi.

Turn the router off and back on again. (Requires 2 to 3 minutes)

If a security key is required, make sure it has been entered correctly.

Unplug the TV's power cord and plug it back in or press and hold the power button for at least 3 seconds.

Make sure that there is no electromagnetic wave generating device placed between the TV and router.

If unable to establish a wireless internet connection, connect the TV to the wireless router via a LAN cable.

If the TV is able to connect to the internet normally via the cable connection, there might be a problem with the wireless router. In this case, try using a different wireless router.

 Wired networks are not supported by some models.

## Wired network connection failed.

Check if the LAN cable is plugged in on both ends. If it is plugged in, check if the access point is turned on. If it is on, turn it off, wait 1 or 2 minutes, and then turn it on.

 Wired networks are not supported by some models.

## Connected to a local network, but not to the Internet.

1. Check if the Internet LAN cable is connected to the access point's external LAN port.
2. Check the DNS setting in [IP Settings](#).

–  > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Network](#) > [Network Status](#) > [IP Settings](#)

 Wired networks are not supported by some models.

# Wireless One Connect Issues

Try the following solutions if you are having issues connecting to Wireless One Connect.

 This function may not be supported depending on the model or geographical area.

## Wireless One Connect cannot be found.

For detailed instructions on connecting to Wireless One Connect, launch [Connection Guide](#).

-  > left directional button >  [Connected Devices](#) > [Connection Guide](#) > [Wireless One Connect](#)

 Check that the connected type-C power adapter and cable are the supplied adapter and cable dedicated for Wireless One Connect.

- The device may not work properly if used with components other than those that came with the device.

Check the connection between the screen and the Wireless One Connect.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Wireless One Connect](#) > [Wireless One Connect Status](#)

If Wireless One Connect is left disconnected from the screen for a long period of time, automatic connection may not work properly. If the connection is disconnected, check the power supply to the Wireless One Connect, and view the LED indicator light colour to check the connection.

| LED Indication | Status            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blue           | Good              | The connection is very good.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Yellow         | Bad               | <p>The connection is not good.</p> <ul style="list-style-type: none"><li>• Adjust the Wireless One Connect position.</li><li>• If it is turned on but disconnected, navigate to the <a href="#">Adjust</a> ( &gt; left directional button &gt;  <a href="#">Settings</a> &gt; <a href="#">All Settings</a> &gt; <a href="#">Connections</a> &gt; <a href="#">Wireless One Connect</a> &gt; <a href="#">Wireless One Connect Status</a> &gt; <a href="#">Adjust</a>) menu, and adjust the Wireless One Connect position until the antenna icon colour becomes blue.</li></ul>                 |
| Red            | Very bad          | <p>The connection is very bad.</p> <ul style="list-style-type: none"><li>• Adjust the Wireless One Connect position or reconnect it.</li><li>• If it is turned on but disconnected, navigate to the <a href="#">Adjust</a> ( &gt; left directional button &gt;  <a href="#">Settings</a> &gt; <a href="#">All Settings</a> &gt; <a href="#">Connections</a> &gt; <a href="#">Wireless One Connect</a> &gt; <a href="#">Wireless One Connect Status</a> &gt; <a href="#">Adjust</a>) menu, and adjust the Wireless One Connect position until the antenna icon colour becomes blue.</li></ul> |
| White          | Power saving mode | <p>If the screen is switched off, the Wireless One Connect is deactivated and enters power saving mode.</p> <ul style="list-style-type: none"><li>• Turn on the screen, then the Wireless One Connect is activated and automatically connected to the screen.</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

 For more information, refer to "[Restrictions when using Wireless One Connect.](#)"

A message appears saying "Wireless One Connect is disconnected. when viewing content provided by an external input source (e.g., a terrestrial broadcast service, set-top box or game console).

The Wireless One Connect may be disconnected or turned off.

Check that the Wireless One Connect is not turned off. Turn it on and wait, then it will automatically connect.

If it is turned on but disconnected, navigate to the [Adjust](#) menu, and adjust the Wireless One Connect position until the antenna icon colour becomes blue.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Wireless One Connect](#) > [Wireless One Connect Status](#) > [Adjust](#)

It automatically connects when the signal strength is sufficient.

A message appears saying "The signal strength is low. Adjust the location of your Wireless One Connect." when viewing content provided by an external input source (e.g., a terrestrial broadcast service, set-top box or game console).

The wireless signal is weak between the screen device and Wireless One Connect.

Navigate to the [Adjust](#) menu, and adjust the Wireless One Connect position until the antenna icon colour becomes blue.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Connections](#) > [Wireless One Connect](#) > [Wireless One Connect Status](#) > [Adjust](#)

It automatically connects when the signal strength is sufficient.

 For more information on Wireless One Connect installation, refer to the "[Restrictions when using Wireless One Connect.](#)"

## The device does not automatically connect after position adjustment.

1. Navigate to [Wireless One Connect Status](#) (🏠 > left directional button > ⚙️ [Settings](#) > [All Settings](#) > [Connections](#) > [Wireless One Connect](#) > [Wireless One Connect Status](#)), and select [Unpair](#).
2. Press and hold the PAIR button on the Wireless One Connect for 3 seconds to enter pairing mode. (In pairing mode, the LED indicator on the side of the Wireless One Connect blinks blue.)
3. Navigate to [Set up Wireless One Connect](#) (🏠 > left directional button > ⚙️ [Settings](#) > [All Settings](#) > [Connections](#) > [Wireless One Connect](#) > [Set up Wireless One Connect](#)), search for the device and reconnect it.

## A message appears saying "Please use the enclosed Wireless One Connect power adapter to ensure proper functionality."

Use only the power adapter that came with the product, to ensure stable operation.

# Anynet+ (HDMI-CEC) Issues

When Anynet+ (HDMI-CEC) isn't working, these steps may help resolve the problem.

## What is Anynet+?

You can use the TV's remote control to control external devices that support Anynet+ (HDMI-CEC) and that are connected to the TV via an HDMI cable. For example, if a connected external device supports Anynet+, you can have the connected device turn on or off when you turn the TV on or off.

## Anynet+ does not work. The connected device is not displayed.

Make sure the device is an [Anynet+ \(HDMI-CEC\)](#) device. From the settings menu on the device, check and confirm that the HDMI-CEC option is enabled.

From the TV, check and confirm that the [Anynet+ \(HDMI-CEC\)](#) feature is set to **On**.

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [External Device Manager](#) > [Anynet+ \(HDMI-CEC\)](#) [Try Now](#)

Check and confirm that the device's power cord is securely plugged in.

Check the device's HDMI cable connection.

[Anynet+ \(HDMI-CEC\)](#) cannot function under specific circumstances. (when the TV is scanning channels or performing [Factory data reset](#))

When connecting or disconnecting an HDMI cable, turn the TV off and then back on again.

## I want to start Anynet+. I also want the connected devices to turn on when the TV is turned on.

Check if the Anynet+ device is properly connected to the TV, and then select [Anynet+ \(HDMI-CEC\)](#) menu to see if [Anynet+ \(HDMI-CEC\)](#) is set to **On**.

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [External Device Manager](#) > [Anynet+ \(HDMI-CEC\)](#) [Try Now](#)

I want to exit Anynet+. It is inconvenient to turn on other devices because the TV also turns on. It is inconvenient because the connected devices (e.g. set-top box) turn off together.

To turn off the Anynet+ function of a device connected to the TV, turn off the [Anynet+ \(HDMI-CEC\)](#) function of the device.

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [External Device Manager](#)  
> [Anynet+ \(HDMI-CEC\)](#) [Try Now](#)

When [Anynet+ \(HDMI-CEC\)](#) is turned off, the soundbar connected via the HDMI (eARC) port does not turn off and on together with the TV. To prevent a specific device connected to the TV from turning off automatically, turn off the HDMI-CEC function on a specific device connected to the TV.

**The message "Connecting to Anynet+ device..." or "Disconnecting from Anynet+ device" appears on the screen.**

You cannot use the remote control when the TV is configuring Anynet+ or switching to the TV viewing screen.

Use the remote control after the TV has completed the Anynet+ configuration or has switched to the TV viewing screen.

**The Anynet+ device won't play.**

You cannot use the play function when [Factory data reset](#) is in progress.

# Remote Control Issues

When the remote control isn't working, these steps may help resolve the problem.

## The remote control does not work.

The connection between the remote control and the TV may be lost.

Point the Samsung Smart Remote at the front of the TV, and then press and hold the  and  buttons simultaneously for 3 seconds or more.

To reset a previously connected remote control, press and hold the  and  buttons simultaneously for more than 3 seconds. The remote control connection is reset.

Also, if the remote control does not work properly or its response is very slow, the battery might be low or dead.

- Charge the remote control by using the USB port (C-type) on the bottom, or turn over the remote to expose the solar cell.
  - You can check remaining battery of Samsung Smart Remote with solar cell in  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Remote Control](#).

 This function may not be supported depending on the model.

- If the remote control has batteries, replace them with new ones.

## The mobile remote control does not work.

If the TV cannot be controlled with the previously used mobile remote control, try the following methods:

- Reconnect the TV from the SmartThings app.
  - If the TV is in an offline state in the mobile SmartThings app, use the offline device diagnosis function to reconnect to the TV.
  - If the connection still fails, delete and re-register the TV from the SmartThings app.
-  This function may not be supported depending on the model.
- Check that the TV power cable is plugged in properly.
  - If the TV power cable is not plugged in properly, the mobile remote control will display an error message and may not work.
- Use the mobile remote control close to the TV.
  - The mobile remote control may not work if it is too distant from the TV.
- Scan the QR code on the screen.
  - Press the power button at the bottom of the TV to turn it on, and scan the QR code on the screen to restart the mobile remote control.

 This function may not be supported depending on the model.

## External devices cannot be operated with the TV remote control.

Check the cable connection between the TV and external devices.

When the symptom persists, set it manually in  > left directional button >  [Connected Devices](#) > [Universal remote setup](#).

# Recording Issues

When Timeshift or Schedule recording aren't working, these steps may help resolve the problem.

## The Timeshift or recording function cannot be used.

Check if there is a storage device connected to the TV.

Recording will automatically stop if the signal becomes too weak.

Check the free space on the storage device.

The function will not work if there isn't enough storage space on the USB device.

Before using the recording function, be sure to read all precautions. For more information, refer to "[Before Using the Recording and Timeshift Functions](#)".

 This function may not be supported depending on the model or geographical area.

## Cannot record videos received from an external device or Samsung TV Plus.

The recording function is only available for digital broadcast channels received by the TV. You cannot record videos received from an external device or [Samsung TV Plus](#).

 This function may not be supported depending on the model or geographical area.

## The "Format Device" message appears when the Timeshift or recording function is used.

To use the recording function, the storage device connected to the TV must have been already formatted.

Formatting the storage device deletes all data from it, and the storage device is formatted in NTFS.

 This function may not be supported depending on the model or geographical area.

## The recorded files on the TV are not played back on a PC.

The recorded files on the TV can only be played back on the same TV. Those video files cannot be played back on a PC or other TV.

 Playback may not work properly if the recording file has a problem. If the problem persists, check the recording file.

 This function may not be supported depending on the model or geographical area.

# Apps

When apps aren't working, these steps may help resolve the problem.

## I cannot find the app I want.

To use smart functions, you should connect to a network, agree to the terms and conditions, and log in with your Samsung account. If these settings were not configured during the initial setting process, you can configure Smart Hub settings by running [Apps](#) from the Home Screen.

-  > (top of Smart Hub Home screen) >  [Apps](#)

If Smart Hub settings are complete but the app you want cannot be found on the Home Screen, you can find the app from  [Search](#) or [Apps](#). To add frequently used apps to the Home Screen, run the [Add to Home](#) feature from [Apps](#).

-  > (top of Smart Hub Home screen) >  [Apps](#) > [App Settings](#) > List of installed apps > [Add to Home](#)

## I launched an app, but it's in a different language. How can I change the language?

Languages supported by an app may be different from the TV [Language](#) set in the menu.

The ability to change the language depends on the app's provider. Change the language from the settings menu in the app.

## The app does not work properly. Its image quality is poor.

Check the network connection. When the network speed is slow, the app may not work or its image quality may be poor.

Uninstall and reinstall the app. For more information about app uninstallation, refer to "[Managing installed apps](#)".

The services of your application are not provided by the TV but by the application service provider.

Refer to the Help section on the application service provider's website.

## The Smart Hub Home Screen keeps appearing whenever you turn on the TV.

Turn off the [Start with Smart Hub Home](#) function in [Start Screen Options](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Start Screen Options](#) > [Start with Smart Hub Home](#) 

# Media Files

When files don't play, this may help resolve the problem.

## Some files are interrupted during playback.

This problem may occur with unsupported files or high-bitrate files. Most files can be played back, but some files may not play smoothly.

## Some files can't be played.

Some files that use an unsupported codec may not be played back.

Make sure that the codec is supported by the TV. For more information about the supported codecs, refer to "[Read Before Playing Photo, Video or Music Files](#)".

# Voice Assistant Issues

When the Voice Assistant isn't working, these steps may help resolve the problem.

## The microphone is off.

Turn on the microphone switch at the bottom of the TV. Each time the switch is turned on or off, the screen displays a pop-up window showing whether the microphone is turned on or off.

-  If the microphone is turned off, all voice recognition features and some sound features involving the microphone do not work.
-  The position and appearance of the microphone switch may differ depending on the model.
-  This function may not be supported depending on the model or geographical area.

## The voice commands do not work well.

Voice commands may differ depending on the [Voice Assistant](#).

Refer to the command examples for each [Voice Assistant](#).

- [Bixby](#):  >  [Discover Bixby](#)
- [Amazon Alexa](#):  > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Voice](#) > [Amazon Alexa Settings](#) [Try Now](#)

-  This function and Voice Recognition Solution Partner may not be supported depending on the model or geographical area.
-  The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.

## Bixby/Alexa answers although I did not call it.

The TV may recognise an ambient noise or everyday conversation as a call to Voice Assistant.

Turn off the [Hands-free wake-up](#) function or set the [Wake-up Sensitivity](#) to [Low](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Voice](#) > [Bixby Settings](#) > [Voice Wake-up](#)
-  >  [Bixby Settings](#) > [Voice Wake-Up](#)

-  This function and Voice Recognition Solution Partner may not be supported depending on the model or geographical area.
-  The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.

## I spoke "Hi, Bixby/Alexa" but Bixby/Alexa does not answer.

When the TV is far from you or the ambient noise is so loud, the TV may be unable to recognise your voice.

- When the distance to the TV is within 3 to 4 m, optimal performance is provided. Please look at your TV screen and speak.

Turn on the [Hands-free wake-up](#) function.

-  >  [Bixby Settings](#) > [Voice Wake-up](#) > [Hands-free wake-up](#)

 This function and Voice Recognition Solution Partner may not be supported depending on the model or geographical area.

 The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.

## Voice recognition does not work with the Samsung Smart Remote unlike other features. There is no response even if the Voice Assistant button is pressed.

The connection between the remote control and the TV may be lost. Try pairing the remote control with the TV.

Point the Samsung Smart Remote at the front of the TV, and then press and hold the  and  buttons simultaneously for 3 seconds or more.

To reset a previously connected remote control, press and hold the  and  buttons simultaneously for more than 3 seconds. The remote control connection is reset.

Also, if the remote control does not work properly or its response is very slow, the battery might be low or dead.

- Charge the remote control by using the USB port (C-type) on the bottom, or turn over the remote to expose the solar cell.
  - You can check remaining battery of Samsung Smart Remote with solar cell in  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Remote Control](#).

 This function may not be supported depending on the model.

- If the remote control has batteries, replace them with new ones.

## During voice recognition, the heavy load message appears and the function does not work.

Unplug and then plug the TV power cord and then try again after 1 minute and 30 seconds. It may take a while if the voice recognition server is being inspected.

## I want to see weather information of the desired area.

Say with the area name included.

## Other issues

Use these procedures to resolve other issues that may occur in relation to the product.

### The TV is hot.

Watching TV for an extended period of time causes the panel to generate heat.

The heat from the panel is dissipated through internal vents running along the top of the TV.

The bottom, however, may feel hot to the touch after extended use.

Children watching TV need constant adult supervision to prevent them from touching the TV.

This heat, however, is not a defect and does not affect the TV's functionality.

### The TV smells like plastic.

This smell is normal and will dissipate over time.

### The settings are lost after 5 minutes or every time the TV is turned off.

If **Usage Mode** is set to **Retail Mode**, the TV's audio and video settings are automatically reset every 5 minutes.

Change **Usage Mode** to **Home Mode**.

-  > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Usage Mode** > **Home Mode**

 This function may not be supported depending on the model or geographical area.

### The TV is tilted to the side.

Remove the base stand from the TV and reassemble it.

### The stand is wobbly or crooked.

Refer to the Unpacking and Installation Guide and make sure that the stand is assembled correctly.

## I want to know how to attach and remove the TV stand.

For details on how to attach the stand, refer to the Unpacking and Installation Guide.

To remove the stand, follow the attachment steps in reverse order.

The Unpacking and Installation Guide can be downloaded from the Samsung Electronics website at <https://www.samsung.com/support/>.

## A POP (TV's internal banner ad) appears on the screen.

Change [Usage Mode](#) to [Home Mode](#).

-  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Usage Mode](#) > [Home Mode](#)

 This function may not be supported depending on the model or geographical area.

## The screen is off, but I hear noise.

Even when the screen is off, noise may be heard if the product performs tasks in the background. Noise will not be heard after the tasks are completed.

- For example, noise may be heard when SmartThings is operating or the network is reconnected through Wi-Fi

## The TV is making a popping noise.

The expansion and contraction of the TV's outer casing may cause a popping noise.

This does not indicate a product malfunction.

The TV is safe to use.

## The TV is making a humming noise.

Your TV utilises high-speed switching circuits and high levels of electrical current. Depending on the TV's brightness level, the TV may seem slightly noisier than a conventional TV.

Your TV has undergone strict quality control procedures that meet our demanding performance and reliability requirements.

Some noise coming from the TV is considered normal and is not an acceptable cause for an exchange or refund.

## The TV narrates the screen events in voice-over.

To turn off [Voice Guide](#), move the focus from [Accessibility Shortcuts](#) to [Voice Guide](#) and then press the Select button. You can turn on or off [Voice Guide](#). To run [Accessibility Shortcuts](#), see the following:

- Press and hold the  $\pm$  (Volume) button on your Samsung Smart Remote or Remote Control.
- Press the AD/SUBT. button on the Standard Remote Control or press and hold the MUTE button.

# Diagnosing TV operational issues

You can diagnose issues with your TV and Smart Hub and run reset functions.

## Self Diagnosis

 > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Self Diagnosis](#) [Try Now](#)

Check whether the product is displaying images and playing sounds normally. Check whether modules and sensors are working normally. You can also configure settings related to Smart Hub reset.

 Some functions may not be supported depending on the model or geographical area.

- [Power](#)

View information on the power supply history.

- [Video Test](#)

Play test videos to check for problems with the screen.

- [Sound Test](#)

Play test sounds to check the sound quality.

- [Smart Hub Connection Test](#)

Check the network connection.

- [Bluetooth](#)

Check whether the Bluetooth module is working normally.

- [Acceleration Sensor](#)

Check whether the Acceleration Sensor is working normally.

- [Mic Test](#)

Check whether the microphone module is working normally.

- [HDMI Test](#)

Check the external device signal, signal history and HDMI cable connection, and check for an HDMI-CEC connection that is functioning abnormally.

- [SW Version Information](#)

Check the currently installed software version, and update the software to the latest version, if necessary.

- [Wireless One Connect Test](#)

Check the Wireless One Connect Test power supply and connection, and check that it operates properly.

- [Picture Test](#)

Use test photos to check for problems with the screen.

- [Remote Control](#)

Check for problems with the Remote Control connection or buttons.

- [Wi-Fi](#)

Check whether the Wi-Fi module is working normally. The result may appear to be a failure if there is no available access point (AP) in the vicinity.

- [IoT Module](#)

Check whether the IoT Module is working normally.

- [Light sensor](#)

Check whether the light intensity sensor is working normally.

- [Broadcast Signal](#)

Check the condition of the current broadcast signal.

## Cannot select Broadcast Signal in Self Diagnosis.

Verify that the current channel is a digital channel.

[Broadcast Signal](#) is only available for digital channels.

-  > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Self Diagnosis](#) > [Broadcast Signal](#)

 This function may not be supported depending on the model or geographical area.

## Reset Smart Hub

Resets all Smart Hub settings to their factory defaults and deletes all information related to Samsung accounts, linked service accounts, Smart Hub service agreements and Smart Hub applications.

-  > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Reset Smart Hub](#) [Try Now](#)

## Reset picture

Resets current picture settings to the default settings.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Picture](#) > [Expert Settings](#) > [Reset Picture](#) [Try Now](#)

## Reset sound

Resets current sound settings to the default settings.

-  > left directional button >  [Settings](#) > [All Settings](#) > [Sound](#) > [Expert Settings](#) > [Reset Sound](#) [Try Now](#)

# Getting Support

Get help directly from Samsung if you have a problem with your TV.

## Getting support through Remote Management

 > left directional button >  **Settings** > **Support** > **Remote Management** [Try Now](#)

After consenting to our service agreement, you can use **Remote Management** to access Remote Support and have a Samsung service technician diagnose your TV, correct problems and update your TV's software remotely via the web. You can also turn **Remote Management** on and off.

 This function requires a network connection.

## Finding the contact information for service

 > left directional button >  **Settings** > **Support** > **About The TV** [Try Now](#)

You can view the address of the Samsung website, the call centre phone number, your TV's model number, your TV's software version, Open Source License and other information you may need to get service support from a Samsung Service Centre or the Samsung website.

Press **Edit Name** to change the unique TV name to be shown on the network.

 You can also view information by scanning the QR code of your TV.

 You can also start this function by pressing and holding the  button for 5 or more seconds. For the Standard Remote Control, press and hold the  (Play) button for 5 or more seconds. Continue holding the button until the customer information pop-up window appears.

## Requesting service

 > left directional button >  **Settings** > **Support** > **Device Care** > **Request Support** [Try Now](#)

You can request service when you encounter a problem with the TV. Select the item matching the problem that you encountered, enter the required item, move the focus to **Next**, and then press the Select button. Select **Request Now** > **Send** or **Schedule Appointment** > **Request** > **Send**. Your service request will be registered. The Samsung Contact Centre will contact you to set up or confirm your service appointment.

 You must agree to the terms and conditions for the service request.

 This function may not be supported depending on the geographical area.

 This function requires a network connection.

# Accessibility Guidance

Provides a menu and a remote control guide that aid the visually impaired.

## Menu Learning Screen

Learn the menus on the TV screen. Once enabled, your TV will tell you the structure and features of the menus you select.

## Using the Remote control

You can see the description of the buttons on the Samsung Smart Remote or Remote Control.

 The Samsung Smart Remote or Remote Control may not be supported depending on the model or geographical area.

## Orientation of the Samsung Smart Remote or Remote Control

Hold the remote control with the buttons facing towards you. The side with the button in the upper left is the top of the remote control.

## Description of the Samsung Smart Remote or Remote Control

 The images, buttons and functions of the remote control may differ with the model or geographical area.

From top to bottom and left to right:

- The  button is at the top left.
- Of the three buttons below the  button on the Bluetooth-connected Samsung Smart Remote, the left one is the  button, the center one is the  button, and the right one is the  button.

 The  button may not be provided, depending on the model or geographical area.

- There is a small LED (microphone) to the right of the  button on the Bluetooth-connected Samsung Smart Remote, which is not noticeable by hand.
- If you press the  button and then select the numeric/colour button and press the right directional button, while viewing a programme, the [Recordings](#), [Schedule Manager](#), [Timeshift](#), [Stop](#) (when Record or Timeshift is running), [Info](#), red, green, yellow and blue options appear.

 [Record](#) and [Timeshift](#) may not be supported depending on the model or geographical area.

 This function may not be supported depending on the geographical area.

- Press the  button to receive recommendations for related information and content and be provided with AI apps or services.

 The type of recommended information may differ, depending on the content provider.

 This function may not be supported depending on the geographical area.

 Available services may differ, depending on the software version.

- Of the 2 buttons below the  button on the Remote Control that comes with M70H/U8000F/U8000H, the left one is the  button and the right one is the  button.
- You can access Setting menu / virtual numeric pad / Colour buttons / Option pad / SmartThings directly. Displays a virtual numeric keypad on the screen for use when typing in numbers. Use the  button to access function-specific additional features which vary depending on the function running on the product.
- Below the two (or three) buttons below the  button is the directional button featuring an inner ring and an outer ring. The inner ring is the Select button, and the outer ring is a four-way (up, down, left, and right) directional button.
- Underneath the directional button are three buttons, one on the left, one on the right and one in the centre. The one on the left is the  button and the one on the right is the  button. The round button in the middle is the  button.
- If you press the  button while watching a TV programme, the screen you are watching stops and a control bar appears. You can select [Rewind](#), [Play](#), [Pause](#), [Fast Forward](#), [Stop Timeshift](#), [Record](#), [Go to Live TV](#) or [Info](#). You can press the up directional button to go to the playback screen and check the time that the actual broadcast programme is running and the timeshift time.
  -  You can use the [Slow Rewind](#) or [Slow Forward](#) functions when you select the [Pause](#) option.
  -  To use Record or Timeshift, you must connect a USB device.
  -  This function may not be supported depending on the model or geographical area.
- Underneath the  button are two thin horizontal buttons. These buttons protrude higher above the surface than the other buttons on the remote control. The one on the left is the volume button and the one on the right is the channel button. Push up from beneath or down from above to use these as rocker buttons to change the channel or volume.
  - Briefly press the  $\pm$  (Volume) button to mute the sound.
  - Press and hold the  $\pm$  (Volume) button to open the [Accessibility Shortcuts](#) menu.
  - Briefly press the  $\wedge/\vee$  (Channel) button to open the [Guide](#).
  - Press and hold the  $\wedge/\vee$  (Channel) button to open the [Channel List](#).

 This function may not be supported depending on the model or geographical area.

# Using the Accessibility menu

View how to use the Accessibility menu functions and description of its functions.

 This function may not be supported depending on the model or geographical area.

## Running the Accessibility Shortcuts menu

You can turn on or turn off the accessibility functions such as [Voice Guide](#), [Audio Description](#), [Audio Subtitles](#), [Auto Picture Off](#), [Magnification](#), [High Contrast](#), [Relumino Mode](#), [Zoom Menu and Text](#), [Greyscale](#), [Colour Inversion](#), [SeeColors Mode](#), [Subtitle](#), [Sign Language Zoom](#), [Sign Language Guide](#), [Slow Button Repeat](#), [Auto Menu Sort](#), and you can move to the [Learn TV Remote](#), [Menu Learning Screen](#), [Learn Gesture Functions](#), [Multi-output Audio](#), and [Accessibility Settings](#) pages.

- Samsung Smart Remote / Remote Control

On the Samsung Smart Remote or Remote Control, there are two thin horizontal rocker buttons next to each other located slightly below the middle of the remote. The one on the left is the volume button. Press and hold the volume button to open the [Accessibility Shortcuts](#) menu.

Even if the [Voice Guide](#) is set to [Off](#) or muted, when you press and hold the volume button, the voice guide for [Accessibility Shortcuts](#) is enabled.

- Standard Remote Control

Press the AD/SUBT. button or press and hold the MUTE button to open the [Accessibility Shortcuts](#) menu.

## Running the Accessibility menu functions using the General menu

 > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Accessibility](#)  
[Try Now](#)

You can also go to the [Accessibility](#) menu from the TV settings menu. This provides more options, for example, to change the speed of Voice Guide.

The TV will not verbalise this menu unless [Voice Guide](#) is already turned on.

1. Press the  button.
2. Use the directional buttons to move the focus to the  [Settings](#) at the top left of the screen.
3. Press the Select button and navigate to [All Settings](#). Press Select to load the TV's Set menu.
4. Press the down directional button to reach [General & Privacy](#), and then press the Select button to open this menu.

5. Place the focus on [Accessibility](#), and press the Select button to open the menu.
6. The menu will appear with [Voice Guide Settings](#) as the first selection. Highlight [Voice Guide Settings](#), and then press the Select button.
7. A menu appears with the options to change [Voice Guide](#), [Volume](#), [Speed](#), [Pitch](#) and [TV Background Volume](#).
8. Select the menu using the directional buttons, and then press the Select button.

 The menus are activated when [Voice Guide](#) is on.

## Running the Accessibility menu functions using Bixby

 This function is available only if Voice Assistant is set to Bixby. (🏠 > left directional button > ⚙️ [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Voice](#) > [Voice Assistant](#)) [Try Now](#)

 Bixby may not be supported depending on the model or geographical area.

To use Bixby, the TV must be set up and tuned and must be connected to the network. You can connect the TV to the network during the initial setup or do it later through the settings menu.

There are many commands you can say to control the TV. These can be used together with [Voice Guide](#) to give you voice input and voice output. You can use the Samsung Smart Remote but the TV must be connected to the network.

To speak a command, press and hold the  button (located near the top right of the Samsung Smart Remote, directly right the  button) and say the command, and then release the  button. The TV will confirm the command.

For example you can:

- Turn Voice Guide on

Press the  button on the Samsung Smart Remote, and then say "Voice Guide on".

- Turn Audio Description on

Press the  button on the Samsung Smart Remote, and then say "Audio Description on".

- Turn High Contrast on

Press the  button on the Samsung Smart Remote, and then say "High Contrast on".

 The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.

 This function may not be supported depending on the model or geographical area.

## Learning about the Accessibility menu functions

- **Voice Guide Settings**

This function works on every screen on the TV and when turned on verbally tells you what the TV's current settings are and verbally provides details about the programme you are watching. For example, it tells you the selected volume and the current channel and gives you programme information. It also reads out the programme information from the **Guide** screen.

 This function may not be supported depending on the model or geographical area.

- **Audio Description Settings**

You can activate an audio guide that provides an audio description of video scenes for the visually impaired. This function is only available with broadcasts that provide this service.

 This function may not be supported depending on the model or geographical area.

- **Audio Screen**

Hear on-screen information read aloud through voice guidance.

 This function may not be supported depending on the model or geographical area.

- **Audio Subtitles Settings**

This feature is intended for visually impaired viewers and audibly reads captions displayed on video content. You can change the volume or speed of audible captions.

 This function may not be supported depending on the model or geographical area.

- **Audio Phone Number**

Phone numbers in shopping content are automatically detected and read aloud through voice guidance.

 This function may not be supported depending on the model or geographical area.

- **Auto Picture Off**

Turn off the TV screen and provide only sound to reduce overall power consumption. When you press a button on the remote control other than Volume and Power while the screen is off, the TV screen turns back on.

- **Magnification**

Enlarge the screen to make the picture or text bigger. You can adjust the zoom level or move the zoom area by following the displayed instructions.

 This function may not be supported depending on the model or geographical area.

- **High Contrast**

To display all menus with an opaque black background and a white font, providing maximum contrast.

 If **High Contrast** is on, some **Accessibility** menus are not available.

- **Relumino Mode Settings**

This feature increases the contrast and brightness of the screen and emphasises the outlines of images, so that viewers with low vision can see the screen more clearly.

This feature is only available when the input signal is TV or HDMI. It may not be available for some videos.

 This input signal may differ depending on the model and geographical area.

- **Together Mode**

Shows the screen displayed when **Relumino Mode** is turned on and the screen displayed when the mode is turned off, side by side simultaneously.

 This function may not be supported depending on the model or geographical area.

- **Zoom Menu and Text**

You can enlarge important elements on the menu such as the names of programmes.

- **Greyscale**

You can change the colour of the TV screen to black and white to sharpen blurred edges caused by colours.

 If **Greyscale** is on, some **Accessibility** menus are not available.

 This function may not be supported depending on the model or geographical area.

- **Colour Inversion**

You can invert the colours of the text and background displayed on the TV screen to make it easier to read the text.

 If **Colour Inversion** is on, some **Accessibility** menus are not available.

 This function may not be supported depending on the model or geographical area.

- **SeeColors Mode**

This feature helps users with colour blindness experience richer colours. Use this feature to customise the colours for your unique viewing conditions, to experience richer colours on the screen.

 When **SeeColors Mode** is in use, some menus are disabled.

 This function may not be supported depending on the model.

- [Learn TV Remote](#)

Learn the names and functions of the buttons on remote control. On this screen, pressing the power button (top left button) will turn off the TV, but when any other button is pressed the TV will say the button name and briefly tell what that button does. This teaching mode helps you to learn the location and operation of the buttons on the remote without affecting normal TV operation. Press the  button twice to exit [Learn TV Remote](#).

 This function may not be supported depending on the model.

- [Menu Learning Screen](#)

Learn the menus on the TV screen. Once enabled, your TV will tell you the structure and features of the menus you select.

- [Subtitle Settings](#)

You can view the subtitle in programmes that provide broadcast subtitles.

 When watching a channel on an external device such as set-top box and cable box, turn on the subtitle function on the device. For more information, contact your service provider.

 This function may not be supported depending on the model or geographical area.

- [Sign Language Zoom Settings](#)

You can zoom in the sign language screen when the programme you are watching provides it.

 This function may not be supported depending on the model or geographical area.

- [Multi-output Audio](#)

You can turn on both the TV speaker and Bluetooth headphone designed for the hearing impaired at the same time. The hearing impaired can then set the volume of their Bluetooth headphone higher than the volume of the TV speaker without affecting the volume of the TV speaker, allowing both the hearing impaired and their families to listen to the TV at comfortable sound levels.

 This function may not be supported depending on the model or geographical area.

- **Remote Button Repeat Settings**

You can configure the operation speed of the remote control buttons so that they slow down when you continually press and hold them.

- **Auto Menu Sort**

Automatically sorts your frequently used menu items.

 This function may not be supported depending on the model or geographical area.

- **Accessibility Shortcut Settings**

Set the accessibility shortcut to activate when the Volume button is pressed and held.

 This function may not be supported depending on the model or geographical area.

- **Time to Take Action**

Choose how long messages, like pop-ups, stay on screen before you take action.

 This function may not be supported depending on the model or geographical area.

- **Moving Text and Image**

Some screen effects may be limited, but this can be helpful for those sensitive to screen motion.

 This function may not be supported depending on the model or geographical area.

# Using the TV with Voice Guide on

Turn on Voice Guide that describes the menu options aloud to aid the visually impaired.

## Changing channel

You can change the channel in three of ways. Every time you change channels, the new channel details will be announced. The ways to change the channel are below.

- **Channel List**

Press and hold the  $\wedge/\vee$  (Channel) button to open the **Channel List**. Use the up or down directional button to move to a channel and press the Select button.

- $\wedge/\vee$  (Channel) button

Of the two buttons that protrude from the centre of the Samsung Smart Remote or Remote Control, the right one is the  $\wedge/\vee$  (Channel) button. Push up or pull down the  $\wedge/\vee$  (Channel) button to change the channel. Press the up or down of CH button on the Standard Remote Control to change the channel.

- Number button

Use the  or  button on the Samsung Smart Remote or Remote Control to open the virtual numeric pad, enter a number, and then select **Done**. On the Standard Remote Control, press the numeric buttons to enter a channel number.

## Using on-screen number entry via the Samsung Smart Remote or Remote Control

Use the virtual numeric pad to enter numbers (for example, to enter a channel number or to enter a PIN).

Press the  or  button on the Samsung Smart Remote or Remote Control and the virtual numeric pad with 2 rows appears on screen. Voice Guide speaks “**virtual numeric pad, 6**” which indicates that the number strip is on screen and the focus is on the number 6. This strip has the following buttons:

- In the top row, a list of Most Watched Channel is shown.
- On the bottom row: From the far left: Colour pad, TTX/MIX, **1, 2, 3, 4, 5, 6, 7, 8, 9, 0**, Delete

 The menus may not appear depending on the model or geographical area.

 The options that you can select in the virtual numeric pad may vary depending on the viewing mode.

Use the left and right directional buttons to move along the row, and then press the Select button to choose the numeric pad. When you have finished selecting all the numbers you need (for example, 123), press the directional button to move to the **Done** option, and then press the Select button to finish.

When entering a channel number, you can enter the number, and then select the **Done** option on the top row or you can enter the channel number and wait. After a short while, the channel will change and the virtual numeric pad will disappear from the screen.

## Changing volume

- Samsung Smart Remote / Remote Control

Use the **+/-** (Volume) button on the left to change the volume. Every time you change the volume, the new volume level will be announced.

Of the two buttons that protrude from the centre of the Samsung Smart Remote or Remote Control, the left one is the **+/-** (Volume) button. Push up or pull down the **+/-** (Volume) button to change the volume.

- Standard Remote Control

Press the up or down of VOL button on the Standard Remote Control to adjust the volume.

## Using programme information

When watching TV, press the Select button to view programme information which then appears at the top of the screen. Voice Guide will say programme subtitles or audio descriptions if they are available. To view more detailed programme information, press and hold the Select button. Voice Guide will say more details such as a synopsis of the programme.

Press the left or right directional button to see what you can watch next on the same channel. Press the up or down directional button to move to other channels and see which programmes are currently being broadcast on them.

Press  to go back or close the programme details.

 This function may not be supported depending on the model or geographical area.

## Using the guide

See an overview of each channel's programme lineup.

When you want to know the programme information for each channel while watching a broadcast programme, press the  $\wedge/\vee$  (Channel) button on the Samsung Smart Remote or Remote Control. Use the directional buttons to view the programme information.

You can see the daily programme schedules for each broadcaster and programme information in the [Guide](#). You can select programmes to schedule for viewing or recording.

You can also open the [Guide](#) using Bixby. Press and hold the  button on your Samsung Smart Remote, and then say "Guide".

-  This function may not be supported depending on the model or geographical area.
-  The information in the [Guide](#) is for digital channels only. Analogue channels are not supported.
-  If the [Time](#) is not set, the Guide is not provided. Set the [Time](#) first. ( > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Time](#))
-  The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.

If you need to set the clock again, follow the steps below.

1. Press the  button.
2. Use the directional buttons to move the focus to the  [Settings](#) at the top left of the screen.
3. Press the Select button and then use the directional buttons to move the focus to the [All Settings](#).
4. Press the Select button to open the TV's [All Settings](#) menu.
5. Use the up and down directional buttons to move to the [General & Privacy](#) menu, and then press the Select button.
6. Use the up and down directional buttons to move to the [Time](#) menu, and then press the Select button.
7. Select the [Clock Mode](#) menu, press the Select button, and then select [Auto](#) or [Manual](#).

 If you select [Manual](#), you can move to the [Date](#) or [Time](#) menu below to set the time or date.

When you open the [Guide](#), a table grid of channels and programmes is displayed. In the top rows, the selected filter type and the time are shown. Each row has a channel name on the left and programmes on that channel on the right.

In the [Guide](#), use the up and down directional buttons to move between channels and use the left and right directional buttons to move between programmes at different times within a channel.

You can also use the  or  button to enter a channel number and go to that channel directly. You can use the  button to move to the programme currently broadcasting.

When you move the focus to a programme, you will hear the detailed informations about the selected programme. When you move the focus to a different channel, you will hear the channel name and number and the programme details. If you move to a different day, you will hear the day announced for the first programme you reach on that day. The day is not repeated, so if you are not sure what the day is, you can move forwards and backwards 24 hours and then the day will be announced.

## To view a programme on now

In the [Guide](#), move to the programme currently broadcasting, and then press the Select button to go to live TV on the selected channel and programme.

## Other options in the guide

In the [Guide](#), move to a broadcast scheduled programme, and then press the Select button. A pop-up menu listing the functions below appears.

Use the up and down directional buttons to move within this menu, and then press the Select button to choose an item. Press  to close the menu and go back to the [Guide](#).

 For the programme you are currently watching, press the Select button.

- [Record](#)

You can record the programme that you are currently watching or a programme on another channel.

 This function may not be supported depending on the model or geographical area.

- [Stop](#)

You can stop the recording function that is currently running.

 This function may not be supported depending on the model or geographical area.

- **Edit Recording Time**

You can change the start and end times of scheduled programme recordings.

 This function may not be supported depending on the model or geographical area.

- **Schedule Viewing**

You can schedule the viewing of a broadcast scheduled programme.

- **Schedule Recording**

You can schedule recording of a broadcast scheduled programme.

 This function may not be supported depending on the model or geographical area.

 For more information on [Schedule Recording](#), refer to "[Recording](#)".

- **Cancel Scheduled Viewing**

You can cancel your scheduled viewings.

 This function may not be supported depending on the model or geographical area.

- **Cancel Scheduled Recording**

You can cancel your scheduled recordings.

 This function may not be supported depending on the model or geographical area.

- **View Details**

You can see the detailed information on the selected programme. The information may differ with the broadcast signal. If the information is not provided with the programme, nothing appears.

Press the Select button on the [View Details](#) option. This will open the details pop-up window for that programme which will display a synopsis. The details pop-up window contains detailed information and the [OK](#) option. After reading the detailed information, press the Select button on the remote control to close the pop-up window.

# Using Schedule Viewing

Configure the TV to show a specific channel or programme at a specific time and date.

 This function may not be supported depending on the model or geographical area.

The  icon appears next to programmes that have been configured for a schedule viewing.

 To set up a schedule viewing, you must first set the TV's clock ( > left directional button >  **Settings** > **All Settings** > **General & Privacy** > **Time**).

## Setting up a schedule viewing

You can set up a schedule viewing on two screens.

- **The Guide Screen**

On the **Guide** screen, select a programme you would like to view, and then press the Select button. Select **Schedule Viewing** on the pop-up menu that appears.

- **The Programme Info Screen**

Press the Select button while watching the TV. The Programme Info window appears. Select a broadcast scheduled programme by using the left or right directional buttons, and then press the Select button. You can schedule watching the programme by selecting **Schedule Viewing**.

## Cancelling a scheduled viewing

You have two ways to cancel a scheduled viewing.

- Cancelling a scheduled viewing from the **Guide**

1. Press the  $\wedge/\vee$  (Channel) button to access the **Guide**.
2. Move to the programme to cancel the viewing schedule, and press the Select button.
3. Move to **Cancel Scheduled Viewing**, and then press the Select button.
4. When a pop-up message asking you to cancel the selected scheduled viewing appears, select **Yes**. The scheduled viewing is cancelled and the **Guide** screen appears.

- Cancelling a scheduled viewing from **Schedule Manager** or **Recordings**

1. On the Samsung Smart Remote, press the  or  button.
2. Use the directional buttons to move to the control pad.
3. Press the Select button to open **Schedule Manager** or **Recordings**.

 If the TV supports the **Recordings** function, press the directional buttons to move to **Schedules**.

4. Press the up directional button to move to the **Schedules** option.
5. Use the down directional button to move to the list of programmes scheduled to view.
6. Use the right directional button to move to the **Delete** option, and then press the Select button to delete the selected item.

 This function may not be supported depending on the model or geographical area.

# Using the Channel List

See how to list the channels available on your TV.

Using [Channel List](#), you can change the channel or check programmes on other digital channels while watching TV.

 This function may not be supported depending on the model or geographical area.

Press and hold the  $\wedge/\vee$  (Channel) button to open the [Channel List](#).

 The focus is on the channel you are currently watching, and the name and number of the channel, along with the programme title, are displayed.

Use the up and down directional buttons to move within the channel list (or use the  $\wedge/\vee$  (Channel) button to go up and down a page at a time). You can also use the  or  button to enter a channel number and go to that channel directly.

Press the left directional button in the [Channel List](#) to move to the Category list. Use the up and down directional buttons to move within this list. Press the Select button to choose a category you want from the Category list. The Category list contains [All](#), [Samsung TV Plus](#), [Favourites](#) and [Channel Type](#). Use the up and down directional buttons to move to a channel you want to view, and then press the Select button.

 This function may differ depending on the model or geographical area.

- [Edit Channels](#)

Edit the channels stored on your TV.

- [All](#)

Displays the channels that have been automatically searched.

 The channels received to the currently selected [Terrestrial](#), [Cable](#) or [Satellite](#) are displayed.

- [Samsung TV Plus](#)

While the TV is connected to the network, you can watch popular programmes or highlights for each theme through a virtual channel at any time. As in a general channel, it provides the daily programme schedules of [Samsung TV Plus](#).

 This function may not be supported depending on the model or geographical area.

- **Favourites**

Displays \***Favourites**, \***My List 1 - My List 4 / Favourites 1 - Favourites 5**. Use the up and down directional buttons to move between the lists of favourites. Highlight the one you want, and then press the Select button. The channel list will now show only the channels in this list.

 \*: The name of this function may appear differently depending on the model or geographical area.

- **Channel Type**

Filters the list so that it includes channels of a selected type. However, **Channel Type** can only be used channels contain the type information.

 This function may not be supported depending on the incoming broadcast signal.

- **Genre**

Select a genre to sort and display specific channels to suit your preferences.

 This function may not be supported depending on the model or geographical area.

# Recording

Recording a programme to an external hard drive connected via USB.

-  This function may not be supported depending on the model or geographical area.
-  Read all precautions before using the recording feature. For more information, refer to "[Before Using the Recording and Timeshift Functions](#)".

## Using the instant and schedule recording options from the guide screen:

To record a programme that is on now, open the [Guide](#) by pressing the  $\wedge/\vee$  (Channel) button, move to the programme, and then press the Select button. You will get a pop-up menu. Use the up and down directional buttons to move to [Record](#). Press the Select button to record the programme. You will be returned to the programme guide. Recording automatically ends at the time when the programme ends.

To stop recording, press the down directional button while the programme being recorded is displayed. The control bar appears. Move the focus to [Stop Recording](#), and then press the Select button. When a popup window appears, select [Stop](#).

To record a programme that is on later, move to the programme in the [Guide](#), and then press the Select button. You will get a pop-up menu. Use the up and down directional button to move within this menu. Move to the [Schedule Recording](#), and then press the Select button. You will hear a message saying the programme has been set to record and then you will be returned to the programme guide.

The  icon is placed visually next to the programme title to show it is set to record. To find out if a programme is set to record or to cancel a scheduled recording, press the Select button on the programme. If it is already set to record, then the option on the menu will be [Cancel Scheduled Recording](#). You can press the Select button to cancel the scheduled recording or just press the  button to go back to the programme guide without cancelling the recording.

## Recording the programme you are watching

To display a menu for recording a programme or starting the Timeshift function, press the  button twice or press the  button, and then press the Select button while watching the programme. You can select the following functions on the menu:

- **Record**  
Immediately starts to record the programme you are watching.
- **Timeshift**  
Starts the Timeshift function.
- **Stop**  
Stops the recording or the Timeshift function that is running.
- **Info**  
Displays the details about the programme you were watching.

## Scheduling recording from the programme info window

Press the Select button while viewing a programme to display the programme info window. In the programme info window, use the left and right directional buttons to select a broadcast scheduled programme, and then press the Select button. To schedule a recording for the programme, select **Schedule Recording**.

## Changing the recording time

When recording a live programme you can specify how long you want to record for.

Press the down directional button to display the control bar at the bottom. Press the left or right directional buttons to move to **Edit Recording Time**, and then press the Select button. A slider scale appears and you will hear the recording time currently set. Use the left and right directional buttons to change the time, and then press the Select button. You will hear a menu that gives information about the recording time. To return to the programme you are watching, press the  button on the remote.

 The maximum recording time differs depending on the capacity of the USB device.

## Viewing recorded programmes

1. On the Samsung Smart Remote, press the  or  button.
2. Use the directional buttons to move to the control pad.
3. Select either [Schedule Manager](#) or [Recordings](#) to access the [Recording & Schedule Manager](#) screen.

To play a programme, use the up and down directional buttons to move between programme titles. Press the Select button to play the programme or press the right directional button to move to a list of options. Use the up and down directional buttons to move between the options in this list. You can play, remove or delete the programme or view the programme details.

Select the [Play](#) option to play the programme. The programme will start. If you have watched part of this programme before, you will get a pop-up menu on screen allowing you to [Play](#) (from start), [Continue Playing](#) (from where you left off) or [Cancel](#). Use the left and right directional buttons to move to the required option, and then press the Select button.

 This function may not be supported depending on the model or geographical area.

## Deleting a recorded programme

You can delete any recorded programme.

1. Go to the list of [Recordings](#) to delete a recorded programme.
2. Use the up and down directional buttons to move to the recording you want to delete.
3. Press the right directional button to move to a list of 3 options.
4. Press the down directional button to move to the [Delete](#) option, and then press the Select button.

 You will be asked if you want to remove the selected item.

5. Press the left directional button to move to the [Delete](#) button, and then press the Select button to delete the programme title.

 The programme will be deleted and you will be returned to the list of [Recordings](#).

# Using Smart Hub

Learn how to use Smart Hub to access apps, games, movies and more.

## Smart Hub

Use a variety of Smart Hub content offered by your Samsung TV.

-  Some Smart Hub services are for pay services.
-  To use smart functions, you should connect to a network, agree to the terms and conditions, and log in with your Samsung account.
-  Some Smart Hub features may not be supported depending on the service provider, language or geographical area.
-  Smart Hub service outages can be caused by disruptions in your Internet service.

Press the  button. You are redirected to the Home Screen of the content you are currently using. Move the focus to the top of the Smart Hub Home Screen and then use the directional buttons to move the focus to other items.

Use a variety of Smart Hub content, as follows: [Samsung Account](#), [Search](#), [Connected Devices](#), [Settings](#), [Vision AI Companion](#), [For You / Discover](#), [Live](#), [Game](#), [Ambient](#) or [Art](#), [Daily](#), [Apps](#), [Privacy Choices](#).

-  Supported Smart Hub content may vary depending on the model and geographical area.

## Using the Smart Hub Home Screen

At the very top of the Smart Hub Home Screen are the following fixed menus. You can quickly and easily use the listed menu items to access the main TV settings or external devices, search and apps.

- [Samsung Account](#)

Go to the [Samsung Account](#) screen to create a new account or sign out of your account.

-  For more information, refer to "[Using a Samsung account](#)".

-  [Search](#)

Search for channels, programmes, movies, and apps offered by Smart Hub.

-  To use the Search service, make sure the TV is connected to a network.
-  This function may not be supported depending on the model or geographical area.

-  [Connected Devices](#)

Select an external device that is connected to the TV.

-  For more information, refer to "[Switching between external devices connected to the TV.](#)"

-  [Settings](#)

Manage external devices connected to the TV, and configure settings for various functions available on the TV.

-  For more information, refer to "[About the Settings screen](#)".

-  **Vision AI Companion**

**Vision AI Companion** is an interactive AI service that answers questions and recommends content and services tailored to the topic or situation.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[Using Vision AI Companion](#)."

-  **For You / Discover**

View a variety of TV programmes. Install various apps offered by Smart Hub, such as video, music and sports apps, and use the apps from the TV. The app makes personalised recommendations based on the user's viewing experience.

 For more information, refer to "[About the For You / Discover screen](#)."

-  **Ambient** /  **Art**

 Supported features may vary depending on the model.

 On some models, the **Ambient** mode is integrated in the **Art** mode.

-  **Ambient**

Set your TV to display content you desire, such as the time or weather, when the TV is not used.

To return to TV mode from Ambient mode, double-press the  button. Press the  button to turn off the TV.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[Using Ambient Mode](#)".

-  **Art**

When you are not watching TV or when the TV is turned off, you can use the **Art** mode function to edit image content, such as artworks, photos, or to display the content.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[About the Art screen](#)".

-  **Live**

Watch TV programmes currently on the air. Access the [Guide](#) screen to check the broadcast schedules and set up scheduled viewing for the programmes you want.

 For more information, refer to "[About the Live screen.](#)"

-  **Game**

Play games from the TV screen by connecting a Controller to the TV. Configure settings to optimise the Controller and audio device for playing games.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[Using Samsung Gaming Hub.](#)"

-  **Daily**

Provides useful services, such as home training, remote work, karaoke, and early childhood education content, allowing users to conveniently experience different lifestyles.

 This function may not be supported depending on the model or geographical area.

 For more information, refer to "[About the Samsung Daily+ screen.](#)"

-  **Apps**

Install a variety of apps offered by Smart Hub, such as video, music, sports and game apps, and use the apps from the TV.

 For more information, refer to "[About the Apps screen.](#)"

-  **Privacy Choices**

From your TV, easily manage the privacy policy regarding services related to Smart Hub and verify how personal information is protected.

 To use Smart Hub, you must agree to the Smart Hub service agreement and the collection and use of personal information. Without giving consent, you will not be able to use the additional features and services. You can view the entire text of the [Terms & Privacy](#) by navigating to  > left directional button >  [Settings](#) > [All Settings](#) > [General & Privacy](#) > [Terms & Privacy](#). [Try Now](#)

 In order to rescind your consent to mandatory terms and conditions related to Smart Hub, launch [Reset Smart Hub](#) ( > left directional button >  [Settings](#) > [Support](#) > [Device Care](#) > [Reset Smart Hub](#)). [Try Now](#)

 This function may not be supported depending on the model or geographical area.

# Launching the User Guide

Open the user guide embedded in your TV.

 > left directional button >  [Settings](#) > [Support](#) > [Tips and User Guides](#) > [Open User Guide](#)

You can view the embedded User Guide containing information about your TV's key features.

 Alternatively, you can download a copy of the User Guide from Samsung's website (<https://www.samsung.com>).

 Words in blue (e.g., [Internet](#)) indicate a menu item.

The User Guide's Home Screen contains 1 row of menu icons. Use the left and right directional buttons to move within a row. Press the Select button to open the section you want to read.

 You can use the directional buttons on the remote control to use the functions on the top such as [Search](#), [Site Map](#), and [Index](#).

The User Guide contains a section called "**Learn TV Remote**" in "**Accessibility Guidance**". This is particularly useful for people who cannot easily see the buttons on the control or who are not clear what each button does. When you are viewing this section of the User Guide, pressing the buttons on the remote control will not affect the TV.

## Using Bixby

[Set Voice Assistant to Bixby. A guide to using Bixby to control your TV.](#)

To use Bixby, your TV must be connected to the network and you must use the microphone on your Samsung Smart Remote.

To use Bixby, press and hold the  button on the Samsung Smart Remote, say a command into the microphone on the remote, and then release the button to run Bixby.

-  This function may not be supported depending on the model or geographical area.
-  The existing functional specifications may be changed if Bixby is updated.
-  This function is available only if Voice Assistant is set to Bixby. ( > left directional button >  [Settings](#) > [All Settings](#) > [Advanced Features](#) > [Voice](#) > [Voice Assistant](#)) [Try Now](#)
-  The supported language may differ depending on the geographical area.
-  The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.

## Running Bixby

Press and hold the  button on the Samsung Smart Remote. Bixby is activated in the listening mode, the Bixby icon appears at the bottom of the TV screen. Say a command, and then release the button. The TV provides feedback on how it understands the command, and then performs the commanded task.

-  If the TV does not understand the command, try again with more precise pronunciation.
-  This function may not be supported depending on the model or geographical area.
-  You can find a detailed description of the voice commands at [Discover Bixby](#). Press the  button. The  icon appears at the bottom right of the screen. Press the Select button to go to the [Discover Bixby](#) screen.
-  The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.