



Pet Grooming Kit & Vacuum

User manual

Please read this manual carefully before using the product and keep them properly.

Content

Safety Tips	1
Pack List	2
Quick Start	3
Care & Maintenance	7
Specification	10
Fault Analysis	11
Warranty	12

| Safety Tips

Thank you for purchasing. Please read all instructions before use.

1. Please keep your hands DRY before any operations.
2. Please keep away from inflammable and explosive environments.
3. Never let children and intellectual disabilities use this product alone.
4. Please install the filter properly before turning the power on to protect the motor.
5. Do not use the machine to suction smoke or liquids.
6. With built-in thermal protection, it will shut down the motor when overheating. If it happens, please unplug the machine and wait for the temperature to drop.
7. Please clean the dust cup and filter in a timely manner to ensure the device functions properly.
8. Please be careful when using attachments with cutting edges.
9. Do not submerge the machine in water for cleaning.
10. Do not use or keep the machine in humid places such as the bathroom.
11. Please use it only with a specified voltage. Find information with the specified voltage on the bottom of the machine.
12. Please unplug the machine after use.



1.Never use the machine on wet fur & wet hair

2. UK: Please do not place at a high place to avoid falling


DE: Bitte nicht an einer hohen Stelle platzieren, um St ü rze zu vermeiden

FR: Ne pas placer l'appareil en hauteur pour é viter qu'il ne tombe


IT: Non posizionarlo in alto per evitare cadute

ES: No lo coloque en un lugar alto para evitar ca í das

Pack List

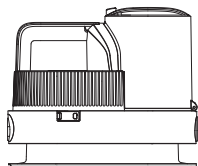


Vacuum Device x1

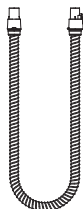

Hose x1




Nozzle x1

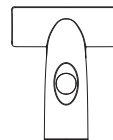


Hair Remove Brush x1




Electric Clipper x1

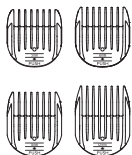


Clipping Comb x1

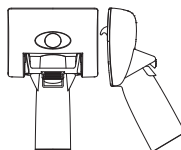

De-matting Brush x1

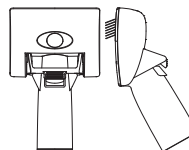

Slicker Brush x1

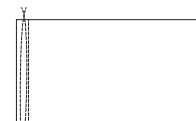

Storage Bag



Drying Hose x1




Round Nozzle x1



Narrow Nozzle x1



Manual x1

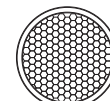


(Inside the vacuum)


Filter x1

Quick Start

Step 1. Assemble Dust Cup


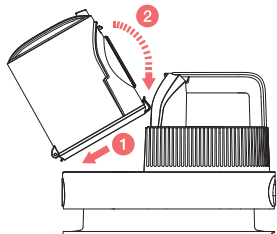


1. Gently place the dust cup in the direction of the arrow. The sound of the button indicates that it has been fastened. Make sure it's well fixed.

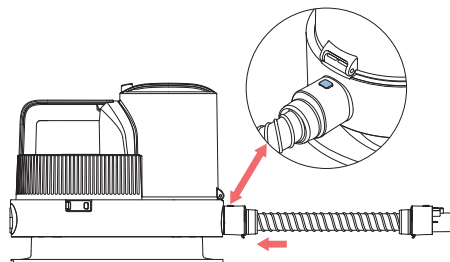


2. Connect the hose to the device by pressing the button of the hose.

Step 2. Connect Accessories To The Hose

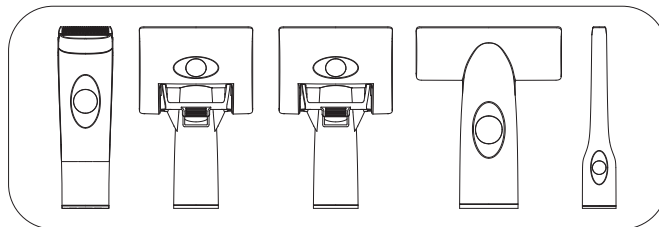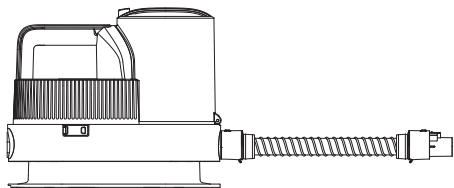


Quick Start

Step 3. Installation Of Nozzles

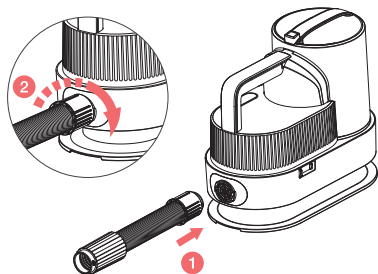

1. Rotate one end of the hose clockwise and install it to the connector of the main unit.

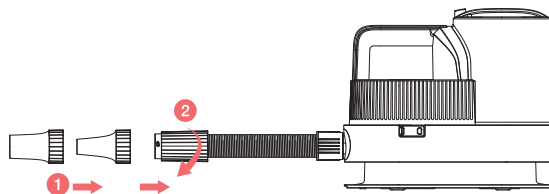

2. Insert any nozzles into the joint of the handle to ensure that the installation is firm.

Step 4. Plug In And Turn On The Machine



Eco Mode



Standard: 45°C



Standard Mode




Warm: 50°C



Turbo Mode




Hot: 55°C

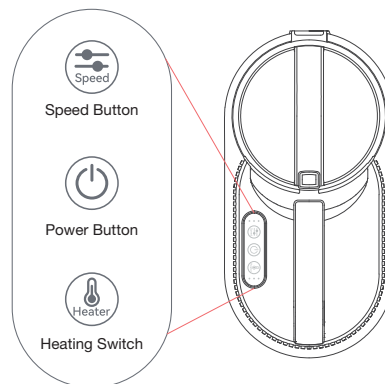


Note: Please start from Eco mode to make our furry friends get used to the vacuum.

Quick Start

1. Air Drying Hose

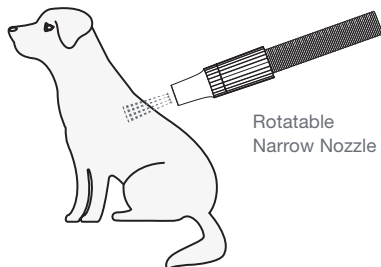



1. Dries hair gently using smooth air.

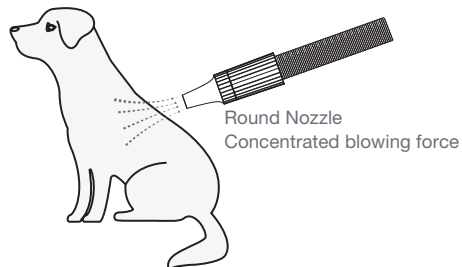


2. Fast, precise airflow for controlled styling, one section at a time.

2. Electric Clipper

1. According to different needs of hair style to choose guard comb.(optional use)

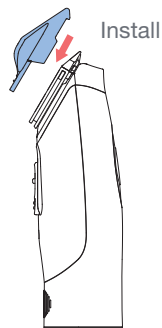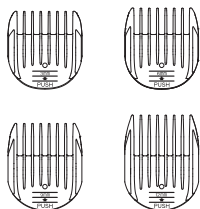


2. Adjust the hair retention length.

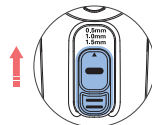

Slide Up to Decrease the hair length from 2mm-1.5mm-1mm-0.5mm.

Note: Please do Not press the self-locking button in the middle when sliding up

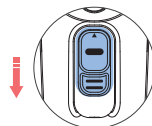


Slide Down to Increase the hair length from 0.5mm-1mm-1.5mm-2mm.

Note: Please press the self-locking button in the middle when sliding down

Quick Start

3. De-matting Brush

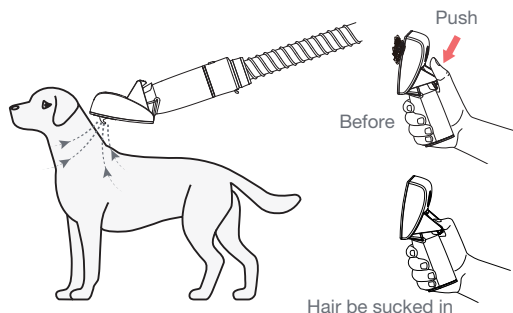


- Gently eliminates tangles, knots, dander, and trapped dirt.

Tips: Be careful with the blade part.


Suggestion: We suggest replace slicker brush every 3 months.

4. Slicker Brush

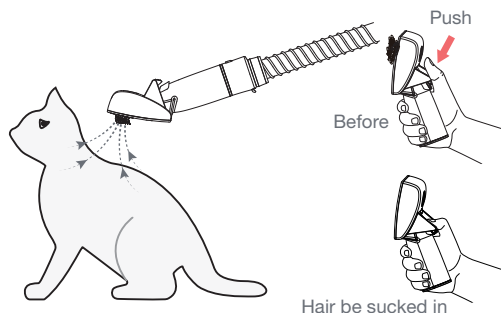


- Easily removes loose hair, shedding mats, tangled hair, dander, and dirt from your lovely pets.

5. Hair Remove Brush

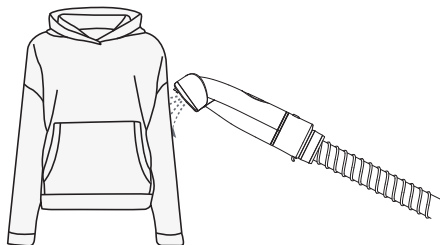

- Effectively removes pet hairs from your clothes, sofa, bed.


6. Nozzle

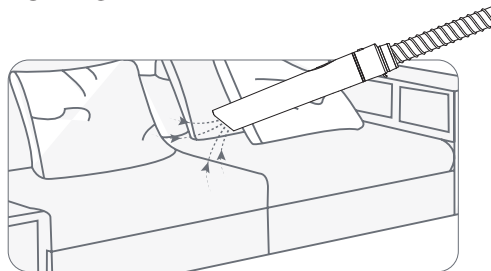


- Easily cleans dirt and pet hair from sofa, carpet, keyboard, also hair clipper.

Care & Maintenance

Clean Dust Cup

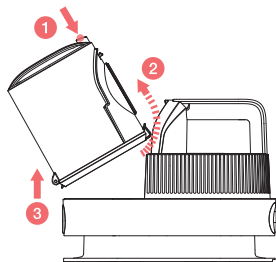


1. Press the button, and slightly lift the dust cup in the direction of arrow.

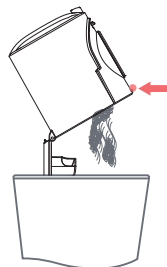


2. Open and empty the dust cup.

Tips: The dust cup must be dry before install it back to machine.

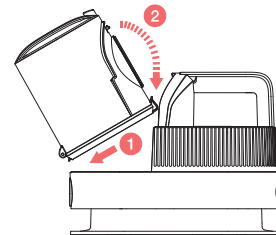


3. Install the dust cup in the direction of the arrow.


Clean Electric Clipper

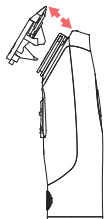

1. Make sure the button slides down to the bottom first. Push outward to remove the blade.

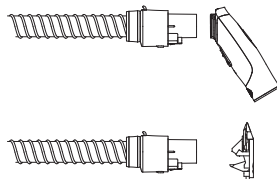

2. Suction the debris from the blade and clipper.

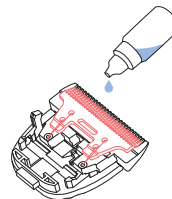


3. Drop some lubricant (not included) on the blade.




4. Don't wash the electric clipper body with water.

Care & Maintenance


Clean Filter

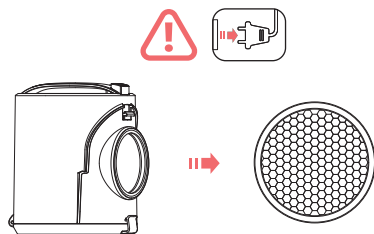


1. Remove the dust cup, take out the filter.

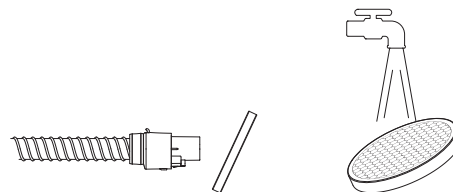

2. Suction the filter or wash it for cleaning.

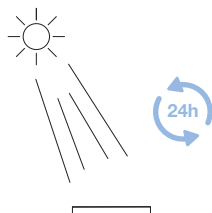

3. Dry filter in a ventilated place for at least 24 hours after cleaning.

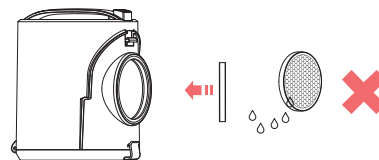

4. Install the filter back to the original place after it is completely dry, please be sure to install it properly.

Notes:



- Filter should be cleaned at least every other month.
- Do unplug the power before cleaning.
- Filter must be dried before install back into the machine.
- Undried filter can cause short circuits and machine malfunctions.

Care & Maintenance

Hose Storage



Winding the hose clockwise on the vacuum, then clip the hose head on the side slot.

Note: If the connecting pipe is broken, the electric shear push will not be able to be used, please keep the connecting pipe properly.

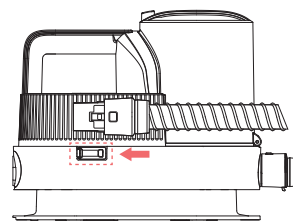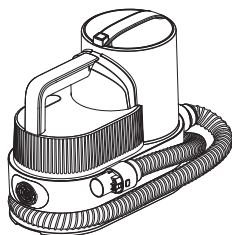

Power Cord Storage

Winding and placing the power cord properly at the bottom of the vacuum.

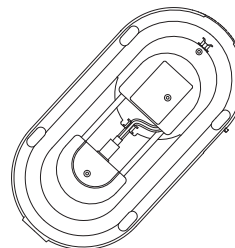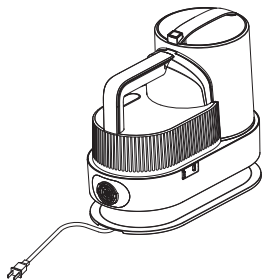

Specifications

Capacity	2.5L
Rated power	vacuum 650W, vacuum+dryer 1100W
Vacuum degree	≥11KPa
Wind Speed	80m/s (with max suction speed)
Temperature setting	Standard 45°C, Warm 50°C, Hot 55°C
Noise	≤62dB
Power cord length	2.5m
Suction hose length	1.5m
Retractable dryer hose length	1.5m after stretching
Net Weight	2.8kg
Product Size	L322 × W166 × H274mm

Fault Analysis

Fault	Possible causes	Solution
The motor does not turn	1. Check whether the power plug is firmly inserted. 2. Check whether the power outlet has electricity. 3. Check whether the vacuum cleaner switch is on.	Re-enter the power supply, ensure that the power outlet has power, and turn on the switch.
Weakened suction	1. Check the filter element for animal hair. 2. Check whether the hair in the dust cup is too full.	Remove the hair in time.
There is a abnormal noise in operation	Check whether the filter element is blocked.	1. Remove blockages in time. 2. If there is still abnormal noise after removing the blockage, stop using it immediately and contact the company's after-sales department in time.
Sudden stop	1. The power cord plug is not plugged in. 2. The dust cup is blocked or the air outlet is blocked, causing the motor thermostat to start protection.	1. Reinsert the power cord plug. 2. Turn off the power switch, clean up the dust cup garbage, and wait 30 minutes before turning it on.

| Warranty

1. 12 months warranty from the purchase date. Limited free repair for the purchased product. Consumables and accessories are not subject to warranty.
2. Within the warranty period, if the machine is damaged or malfunctions during general use, it will be repaired free of charge . If it cannot be repaired, a replacement will be provided.
3. The following conditions are paid repairs even during the warranty period:
 - ① Damage caused by misuse or carelessness.
 - ② Damage in transit.
 - ③ Damage caused by pets (biting, scratching, etc.)
 - ④ Damage caused by fire, flood, earthquake, hurricane or other natural disasters.
 - ⑤ Damage during use other than general household use (long-term commercial use, etc.)
4. This warranty does not cover any of the following conditions:
 - ① Product purchased from sales channels without authorization (secondary market, auctions, etc.)
 - ② Disassembles or repairs the product without permission.
 - ③ Consumables and accessories.
5. Shipping costs will be borne or reimbursed by us when the product is covered by warranty service. However, cost of packaging materials will not be covered.
6. If it is not covered by the warranty, shipping costs and repair fees will be charged when returning.
7. The warranty period of the replacement product is based on the original order's warranty.
8. Repair or replacement is only valid in certain countries or areas.
9. Please contact us for further guidance if any issues .
10. Warranty terms may be updated without notice. We reserves the right to it. All repairs and replacement services will be handled under the latest warranty terms.

