


Bluetooth Fouble Spray Fragrance Machine

Operation Instructions

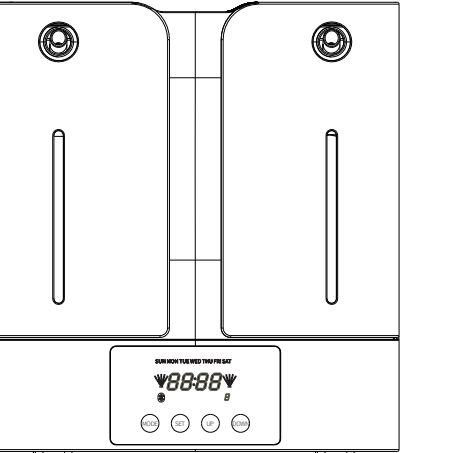


Please (The f



1 manual carefully and keep it properly before using the product.
erence only, and the products are subject to the real thing.)


Product Parts

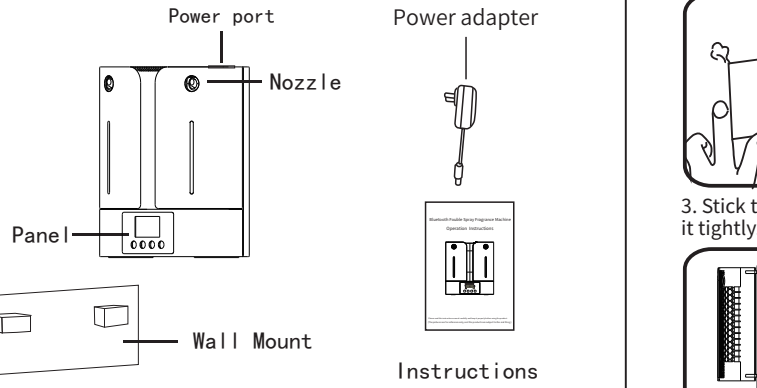

Basic Parameter

Name	Intelligent fragrance machine	Power	8W
Model	C800A/C800B	Voltage	DC 12V
Usable area	800m ²	Noise	<40dba
Weight	0.96kg	Net weight	1.4kg
Size	220*95*240mm	Operative norm	GB4706.1-2005


Operating Procedure

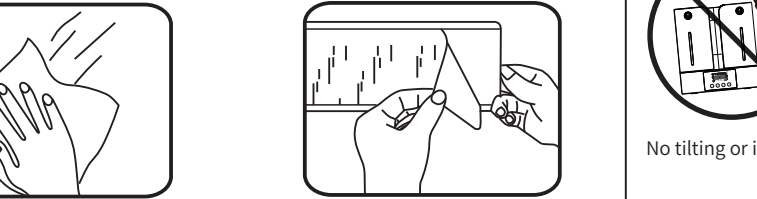


1.Clean the location to paste.
(Paste as the same flat.)

2.Uncover the protective film on
the back plate.


Operating Procedure

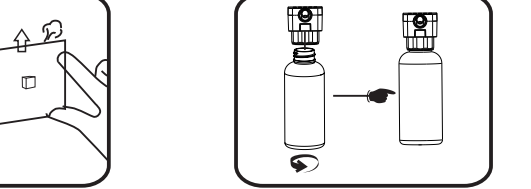


3. Stick to the wall and press
it tightly.

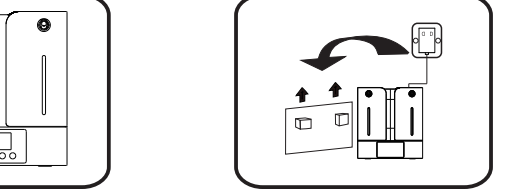

5. Put the atomizing module
into the whole machine and
cover the door on the right.

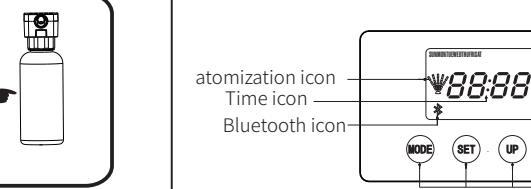


4. Rotate the bottle filled with
essential oil to the atomizing
module according to the figure.

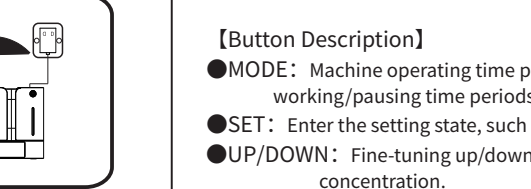

6. Hang up the whole machine
and turn on the power, select
the mode or use the mobile
phone to set custom settings.

Warning item

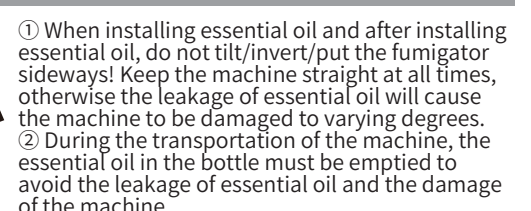


No tilting or inversion.

① When installing essential oil and after installing
essential oil, do not tilt/invert/put the fumigator
sideways! Keep the machine straight at all times,
otherwise the leakage of essential oil will cause
the machine to be damaged to varying degrees.

② During the transportation of the machine, the
essential oil in the bottle must be emptied to
avoid the leakage of essential oil and the damage
of the machine.

③ The machine must be kept upright when
loading essential oil, and cannot be turned
upside down or tilted, otherwise it may damage
the internal accessories of the machine.

Schema Specification

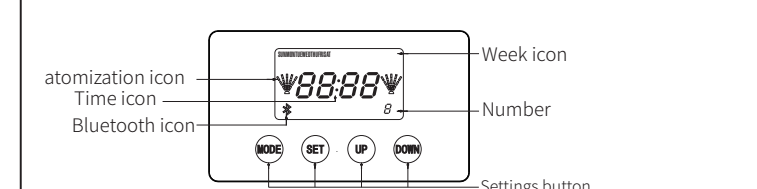

【Button Description】
●MODE: Machine operating time periods can be set, along with machine
working/pausing time periods.
●SET: Enter the setting state, such as time setting, week setting, etc.
●UP/DOWN: Fine-tuning up/down, adjustable time data, date and fragrance
concentration.

【Custom reset】
●Press and hold the MODE button for 5S to restore the factory
settings, and the buzzer will ring twice.
Default custom spray 50S interval 120S s.
【Name and password reset】
●Press and hold the SET button for 5S to restore the name and
password, and the buzzer will ring for 3 times.
Password reset is restored to the original password 9999.

【Time adjustment】
●Press SET three times to enter the time adjustment interface,
the hour flashes, and the UP key and DOWN key are adjustable;
Press the SET key for the second time, the minute flashes,
and the UP key and the DOWN key are adjustable;
Press SET for the third time, the week light flashes,
and the UP key and the DOWN key are adjustable;
Press the SET key for the fourth time to return to the clock interface;

Set the running time period

●Press the MODE key for the first time: enter the start time setting of
the first running time period, the mode display 1 and, the fogging icon
is on, press the SET key at this time, and the UP key DOWN key can set
the starting hour, minute, and week respectively (initially 8:00 A total
of seven days are working every day. If you need to not work on that
day, you need to press UP to select one of the days, and then press
the DOWN key to cancel the date that does not need to work, and
vice versa. On the day of work, the week light is on, and if the week
light is not on, it means that it does not work that day).

● Press the MODE key for the second time: enter the first running
period end time setting mode to display 1 and, the atomization icon
is not on, at this time press the SET key UP key DOWN key to set the
end of the hour and minute (initial 23:59).

● Press the MODE key for the third time: It shows the working time of
the machine, press the UP key DOWN key to set.

● Press the MODE key for the fourth time: You can set the machine
pause time, and press the UP key DOWN key to set.

● Press the MODE key 5: Set the time period settings for the second,
third, fourth, and fifth cycles (the operation method is the same as the
first cycle steps). In the absence of any operation, return to the time
interface for 10 seconds. Precautions:

1. When setting the running time period, the shutdown time cannot
precede the start time;

2. If the running time period needs to span 00:00, it needs to be
separated into two time periods to be set separately

APP Setup Steps

1: the whole machine is connected to the power supply;
2: Open the machine to scan the dimension code;
3: The picture below shows downloading the APP dimension code.



4: Enter the APP, click the bluetooth mode,click ○ the refresh
icon, and click the Best Core BLE.
As shown in Figure 1, Figure 2 and Figure 3 below.

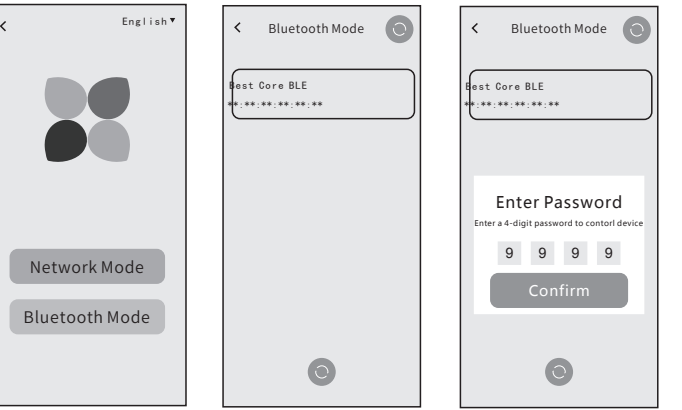


Figure 1 Figure 2 Figure 3

APP Setup Steps

5: After the input
password is confirmed,
go to the page as shown
in Figure 4, click+to
increase the working
time period, as shown in
Figure 5, up to 5 time
periods can be added.

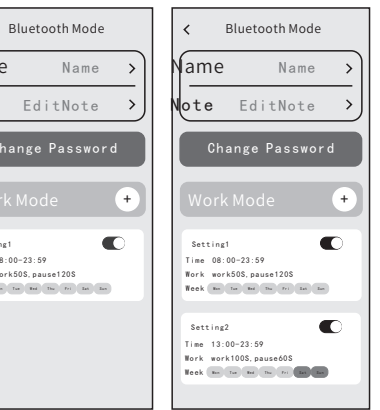


Figure 4

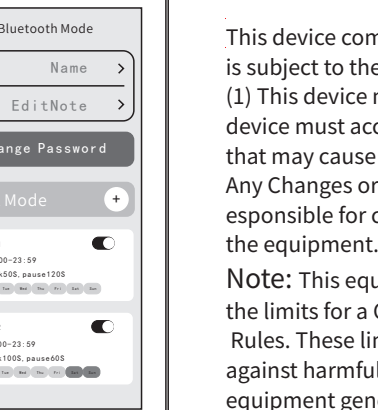


Figure 5

6. Click on any time slot, as shown in Figure 6
① In week mode, you can choose whether the week icon is
lit or not. For example, if the icons on Thursday and Saturday
are not lit, they will not work on Thursday and Saturday (if
they are lit, they will work; if they are not lit, they will not
work);
② Time period setting, sliding up and down into the time
setting, starting at 08: 00 and ending at 20: 30 in Table 6;
③ Spray frequency setting, sliding up and down into the
frequency setting, the spray time is 5S-300S, and the interval
time is 5 s-900 s. Click OK to complete the setting. (The spray
time and interval time increase or decrease in 5S).

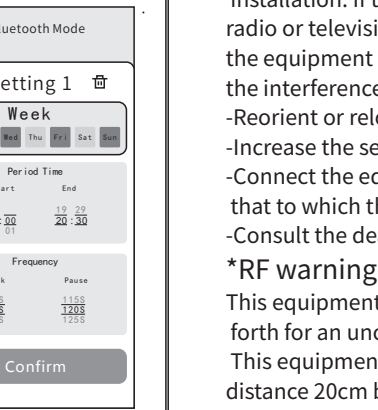


Figure 6

FCCaution.

This device complies with part 15 of the FCC Rules. Operation
is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this
device must accept any interference received, including interference
that may cause undesired operation.
Any Changes or modifications not expressly approved by the party r
esponsible for compliance could void the user's authority to operate
the equipment.

Note: This equipment has been tested and found to comply with
the limits for a Class B digital device, pursuant to part 15 of the FCC
Rules. These limits are designed to provide reasonable protection
against harmful interference in a residential installation. This
equipment generates uses and can radiate radio frequency energy
and, if not installed and used in accordance with the instructions,
may cause harmful interference to radio communications. However,
there is no guarantee that interference will not occur in a particular
installation. If this equipment does cause harmful interference to
radio or television reception, which can be determined by turning
the equipment off and on, the user is encouraged to try to correct
the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from
that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

***RF warning for Mobile device:**
This equipment complies with FCC radiation exposure limits set
forth for an uncontrolled environment.
This equipment should be installed and operated with minimum
distance 20cm between the radiator & your body.

Daily Maintenance And Maintenance

1. Be sure to unplug the power plug before cleaning the product.
Product appearance stains can be wiped clean with a soft and
clean rag. When it is necessary to remove stubborn stains, be
sure to use a mild and neutral cleaner.

2. Do not immerse the main unit in water, and keep the outside
of the main unit dry.

3. When the product is not used for a long time, it is
recommended to clean the internal atomizing head. The specific
operation is as follows: add alcohol to the empty bottle, run for
5 minutes, then turn off the equipment and clean the alcohol
in the bottle.

4. Clean and maintain the atomizing head with alcohol every 1-2
months.

The Method Of Dealing With Anomalies

Breakdown 1	No display
Possibility Reason	Is the power adapter plugged in? Power adapter damaged.
Solution	Self-checking. Replace the power supply or send it for maintenance.
Breakdown 2	oil leak
Possibility Reason	The essential oil bottle is not rotated in place, or the machine is tilted.
Solution	Self-checking.
Breakdown 3	No atomization
Possibility Reason	Power supply is not connected, sealing ring is missing, The current time is not within the set time.
Solution	Send it to maintenance after self-inspection.

The Method Of Dealing With Anomalies

Breakdown 4	Small atomization amount
Possibility Reason	Atomizer blocked or air pump damaged.
Solution	Replace parts or send them for repair.
Breakdown 5	Abnormal sound of equipment.
Possibility Reason	Atomizer blocked or air pump damaged.
Solution	Send it to maintenance after self-inspection.

After-sales Service

1. If you have a non-human fault or can't work normally when using this
product, please contact the sales point of this product to replace the
qualified products. Because of different fault situations, sometimes it is not
a product quality problem. Please read this manual carefully before
returning this product to the point of sale.

2. We hereby declare that this product has passed the inspection and attach
the product manual. If you operate this product normally according to this
manual and the product itself fails, this product enjoys a one-year free
warranty.

3. If this product breaks down during the quality guarantee period, please
bring the product manual and accessories to the sales department for
maintenance. However, if any of the following situations occur, even during
the warranty period, we can't repair it for free:
① It has been more than one year since the product was purchased when
the product failed and requested maintenance.
② Product failure caused by war, earthquake, fire, typhoon, flood and other
irresistible natural disasters.
③ This product is scratched, stained and damaged in appearance during
use.
④ Failure due to unauthorized disassembly, assembly and maintenance.
⑤ Failure caused by falling, improper operation or illegal use.
⑥ Failure caused by using this product as other products.