

Haier

User Manual

HWM75-1279

HWM85-1479



Thanks for purchasing a Haier Product

Please read these instructions carefully before using this appliance. The instruction contain important information which will help you get the best out of the appliance and ensure safe and proper installation, use and maintenance

Keep this manual in a convenient place so you can always refer to it for the safe and proper use of the appliance.

If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and safety warnings.

Accessories

Check the accessories and literature in accordance with this list:

1x Use & care manual



1x Base Cover



 
1X Drain hose bracket



1x Inlet Hose



5x Blanking Plugs



Cautions	4
Before Use	7
Functions	10
Maintenance	18
Trouble-Shooting	20
Technical Data	23
After Sales Service	24

Legend



Yes



No



Optional



Caution




Attention

Before switching the appliance on for the first time

Do...

- ✓ Make sure that the transport bolts are removed.
- ✓ Use a separate earthed socket for the power supply.
- ✓ Make sure that the plug is accessible.
- ✓ Hold the plug and not the electric cable when unplugging the mains supply.
- ✓ Make sure that the fuse in the power circuit is rated for 10Amps.
- ✓ Keep away from heat sources and direct sun light to prevent plastic and rubber components from aging.
- ✓ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- ✓ Check that hose joints and connections are firm and no water can leak. If joints are loose or there is leakage, turn off the water supply and refit. Do not use the washing machine until the hoses are properly fixed.

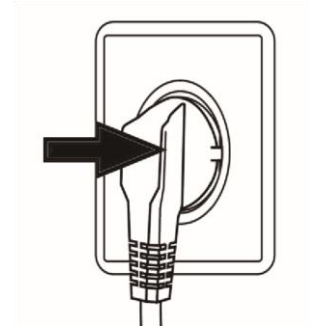

Do Not...

- ✗ Touch or use the appliance when barefoot or with wet or damp hands or feet.
- ✗ Use flammable detergent or dry cleaning agent.
- ✗ Use any flammable sprays in close vicinity to the appliance.
- ✗ Remove or insert the plug in presence of flammable gas.
- ✗ Allow children or infirm persons to play with the appliance or packing materials.
- ✗ Install the appliance outdoors in a damp place, or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ✗ Place the washing machine directly on carpet.

During daily use of the appliance

Do...

- ✓ Pull up zips and fix loose threads to prevent the items from being entangled. If necessary, put small items into a laundry bag or pillow case.
- ✓ Turn off the machine after each wash program and switch it off at the mains to save electricity and for safety. Wipe clean the lower part of the porthole of any remaining water.
- ✓ Keep the door slightly open when the washing machine is not in use to prevent formation of odours.
- ✓ The power cord must be replaced by the manufacturer, service agent or qualified persons, if it is damaged.
- ✓ Ensure that the appliance is not used by people with reduced physical, sensory or mental capabilities, lack of experience and knowledge without supervision or instruction by a person that responsible for their safety.
- ✓ Supervise children to ensure that they do not play with the appliance.

Do not...


- ✗ Touch the washer glass door during the washing process, it gets hot on the 60 & 90 cycles.
- ✗ Place heavy objects or sources of heat or damp on top of the appliance.
- ✗ Hot wash foam rubber or sponge-like materials.
- ✗ Open the detergent distribution drawer during the wash cycle.
- ✗ Force the washer door pen, the door is fitted with a self-lock device and will open shortly after the washing procedure is ended.
- ✗ Open the washer door if the water level is visibly over the porthole.
- ✗ Cover the washing machine with a cover so that may keep dampness in.

Saving Tips

- ⚠ Achieve the best use of energy, water, detergent and time by using the recommended maximum load size
- ⚠ Do not exceed the detergent dosages indicated in the manufacturer's instructions.
- ⚠ The Eco-Ball –a special system in the outlet- will prevent detergent loss from the drum to avoid detergent loss into the environment.
- ⚠ Use "Prewash" for heavily soiled laundry only. Save detergent, time, water and energy consumption by not selecting "Prewash" for slightly too normal soiled laundry.
- ⚠ Save energy and time by selecting a high spin speed to reduce the water content in laundry before using a tumble dryer.
- ⚠ Choose a proper washing temperature. Modern detergents can wash with very good result already in lower temperature than 60°C. Only use higher temperature than 60°C for heavily soiled laundry.


Description

This diagram may be slightly different from the layout of the washing machine you have just purchased.

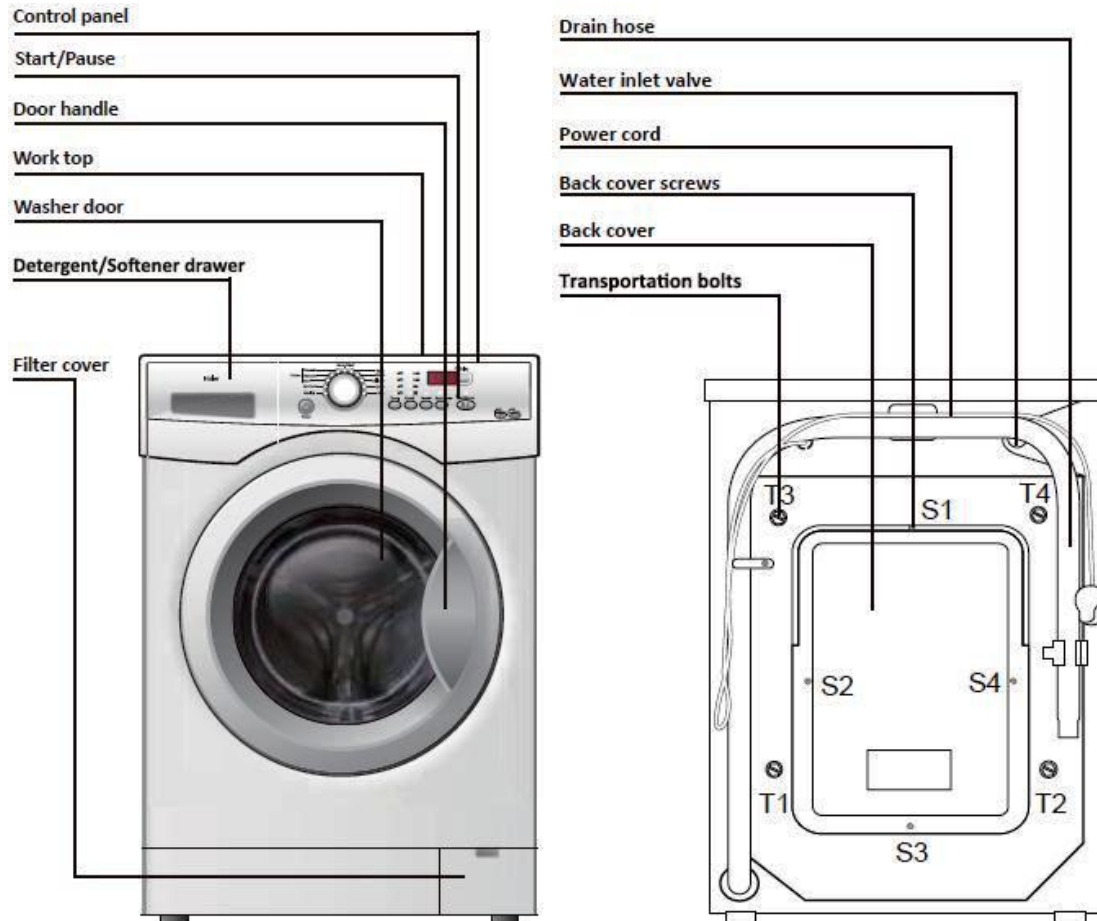

Unpacking the washing machine


Remove all the packing materials prior to use, including the polystyrene base. Upon opening the package, water drops may be seen on the plastic bag and the porthole. This is normal, resulting from water tests in the factory.

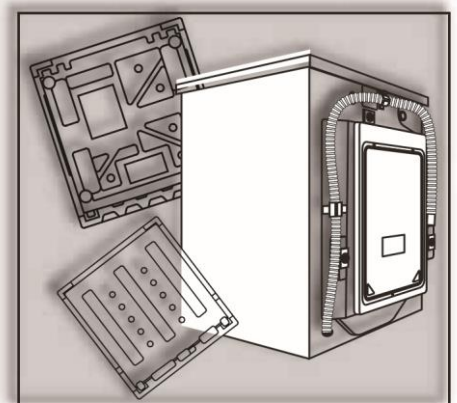

Installation

Fitting the base cover

Before removing the transportation bolts, please fix the base cover to the bottom of the washing machine. Lay down the machine (fig1) screw off the feet and adjust the base cover with the four holes corresponding to the screw holes of the feet. Then screw the feet back on through the cover and fix it securely to the bottom of the machine (fig2).

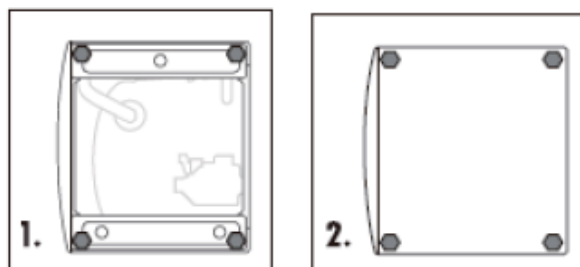

The base keeps out any dampness and reduces the noise


Removing the transportation bolts

The transportation bolts are designed for clamping, anti-vibration components inside the washing machine during the transportation process

- ✓ Remove the back cover. Fig 1.
- ✓ Remove the four bolts on the rear side and take out the synthetic stabilisers from within the machine Fig 2
- ✓ Replace the back cover. Fig 3.
- ✓ Fill the holes left by the bolts with blanking plugs. Fig 4.


⚠ When replacing the back cover, ensure the convex surface is facing outwards, and insert the back cover between the gaps as shown in Fig. 5.

⚠ Keep the transportation bolts and synthetic stabilisers in a safe place for later use

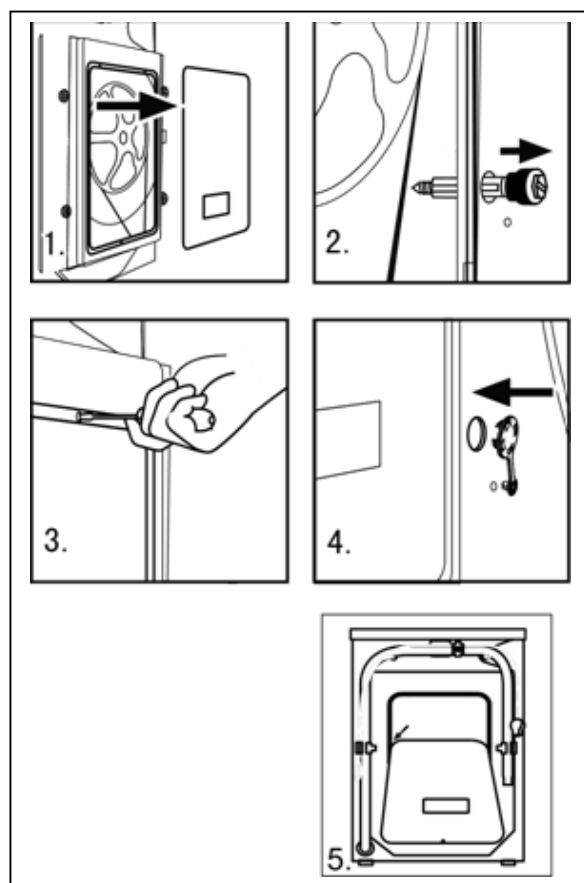

Adjusting the feet


There are adjustable feet under the bottom of the washing machine. Before use, they should be adjusted so that the machine is level. This will minimize vibrations and noise during use. It will also reduce wear and tear. We recommend using a spirit level to level the appliance. The floor should be as stable and flat as possible.

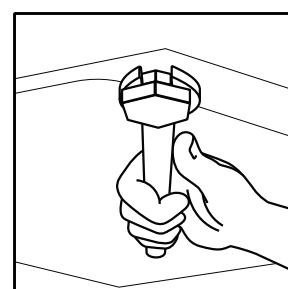

Before use

Inlet Hose


- ✓ Connect the nut on the inlet hose to the connector on the water valve (fig1).
- ✓ Apply inlet hose to a water tap with cold, fresh water (fig2).

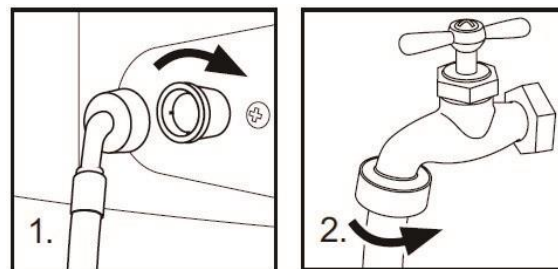

- ⚠ **Use the hose-set supplied with the appliance. Old hose-sets should not be reused.**

Drain Hose

- ✓ Use the drain hose bracket to keep the end of the drain hose retained and prevent the outflow of water (fig1). Do not extend the length of the drain hose; if an extended hose is required, please consult a serviceman.
- ✓ The height of the drainage outlet must be 80-100 cm. Fix the drain hose to the clip at the back of the washing machine to prevent it from dropping off (fig2).

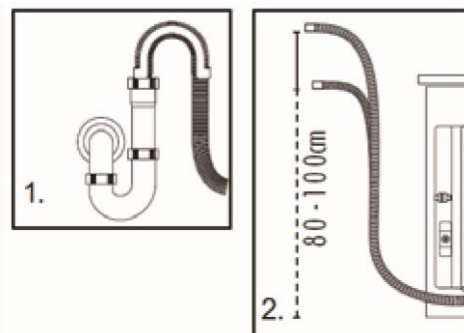



- ⚠ **The drain hose should not be submerged in water and should be securely fixed and leak-free. If the drain hose is placed on the ground or if the pipe is at a height of less than 80cm, the washing machine will continuously drain while being filled (self-siphoning).**

Connecting to the power supply

Before connecting to the power supply, check:



- ✓ The socket is adequate for the maximum power of the washing machine (For safety, fuses in the power circuit should be rated for no less than 10A).
- ✓ The voltage should meet the requirement.
- ✓ The power outlet should be capable of accepting the washing machine plug.
- ✓ Connect the machine to an earthed socket outlet.

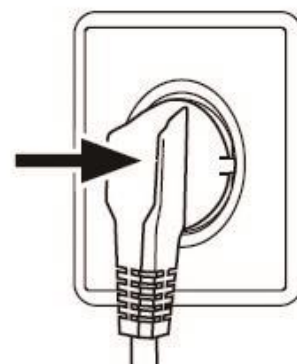

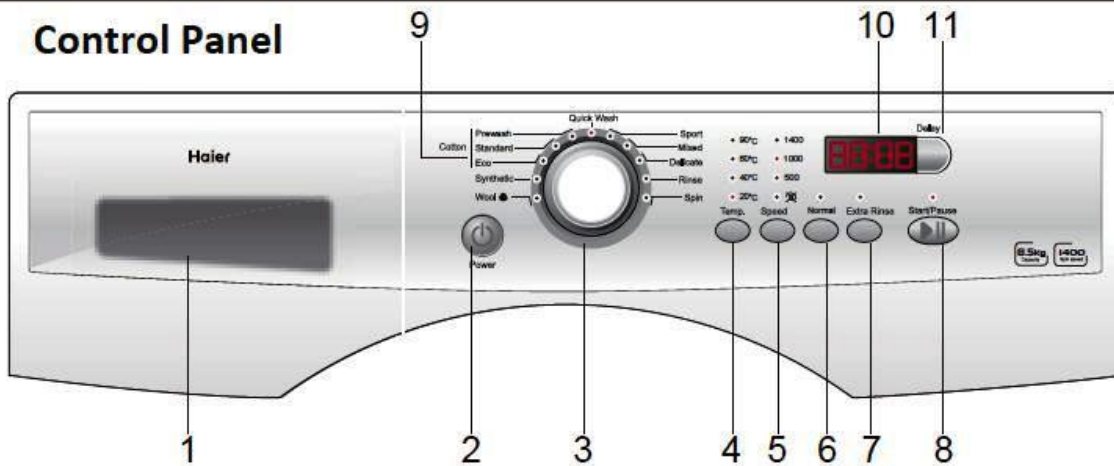




- 1. Detergent/Softener Drawer
- 2. Power Button
- 3. Program Dial
- 4. Wash Temp
- 5. Spin Speed
- 6. Normal washing button
- 7. Extra Rinse
- 8. Start/Pause Button
- 9. ECO
- 10. LED Display
- 11. Delay

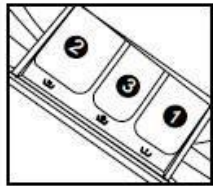Operational Functions

Nº	Function	Explication
1	Detergent distribution drawer	<p>Open the drawer, three compartments can be seen: Compartment 1: Prewash detergent Compartment 2: Detergent for programs 1 to 9. Compartment 3: Softener, conditioning agent.</p> <p>The recommendation on the type of detergents is suitable for the various washing temperatures, please refer to the manual of detergent.</p> 
2	Power Button	Press this button to switch on the washing machine. Press it again to switch it off. Press this button gently for 2 seconds to switch off the machine as buttons are soft touch sensitive.
3	Program Dial	By turning the knob clockwise/counterclockwise, the required program can be selected. There are 11 programs available. After a program is selected, the corresponding light will go on.
4	Wash Temp	Touch this button lightly, the washing temperature will be displayed on the indicator. Select a temperature according to the type of laundry. Note: If there is no indicator light displayed, it means cold wash.
5	Spin Speed	Touch this button lightly to select the desired speed. When a speed is set, it will be displayed on the indicator. Note: If there is no indicator light displayed, it means no spinning.
		 Different water temperatures and spinning speeds can be set for different laundries. Wash using the default settings if there is no special requirement.
6	Normal washing	Press "Normal" button to increase the washing time during the main washing stage. This feature is applicable for full loads of normally soiled clothes and partial loads of heavily soiled clothes. The illuminated icon indicates the function is selected. This button needs to be selected before starting a program.

- | | | |
|----|---------------------------|--|
| 7 | Extra Rinse | <p>Press this button, the washing machine will perform additional rinses. Press the button once to select one additional rinse. The display will show "P-1". Press the button repeatedly and the screen will display "P-2" or "P-3", indicating two or three additional selected rinses. The "extra rinse light" is activated and flashes during the performance. "P-1/2/3" is displayed alternating with the remaining time. The light turns off and the display disappears when the extra rinse ends.</p> <p> Select this function when programe 1-9 is selected.</p> |
| 8 | Start/Pause Button | <p>When the washing machine is connected to the power socket and a program is selected, lightly touch this button to start operation. During a wash cycle, touch it lightly ,operation will stop and the digits on the screen start blinking. Touch it again to resume operation. To cancel a wash program during a wash cycle, touch this button, when the digits on the screen start blinking, press the Power switch, the program will be cancelled.</p> |
| 9 | ECO | <p>Before a washing program,select this program to set the washing load (1/2Full),the washing machine will automatically adjust the water consumption and washing time.</p> |
| 10 | LED Display | <p>Information as remaining wash time and error messages will be shown here.</p> <p> After a wash program is started the display will go on and the remaining wash time decreases. As the water pressure and temperature may differ, the remaining time may be adjusted accordingly. When the laundry is not balanced during spinning, the time may be automatically prolonged.</p> |
| 11 | Delay | <p>Touch this button lightly, the washing machine will start operation after a period of time and the corresponding indicator will go on. The range is 0.5-24 hours; each touch of this button increases a half hour. After the button is set, press the Start/Pause button to start countdown of the set time (the time is displayed on the screen until the program ends).</p> <p> The delay time must be longer than the program time otherwise the washing machine will start the wash program directly.</p> |

To cancel audible alarm

Alarm sound can be cancelled if it is required (not recommended)


Switch on the washing machine and turn the program knob to spin cycle, then press the "Delay" and "Extra rinse" button, hold on for 3 seconds.

The message "BEEP OFF" will be displayed on the screen, indicating that the alarm sound has been cancelled.

To reinstate audible alarm

Switch on the washing machine and turn the program knob to spin cycle, then press the "Delay" and "Extra rinse" button, hold on for 3 seconds.The "BEEP ON" message will be displayed on the screen, indicating that the alarm sound has been reinstated.

Program Modes

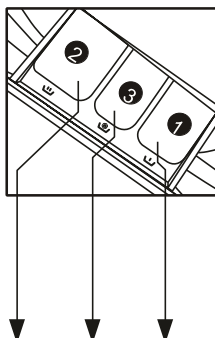

- 1 Detergent compartment for prewash mode
- 2 Detergent compartment
- 3 Softener compartment

Program	Max Temp	Pre-set	2	3	1	Fibre Type	Pre-set spin speed
ECO	0-90°C	40°C	✓	⊙	✗	Cotton fabric	1000rpm
Wool	0-40°C	20°C	✓	⊙	✗	Woolen fabric	500rpm
Delicate	0-40°C	20°C	✓	⊙	✗	Cotton fabric	500rpm
Mixed	0-60°C	40°C	✓	⊙	✗	Cotton or synthetic	1000rpm
Synthetic	0-60°C	40°C	✓	⊙	✗	Chemical fibre fabrics	1000rpm
Standard	0-90°C	40°C	✓	⊙	✗	Cotton fabrics	1000rpm
Pre-Wash	0-90°C	40°C	✓	⊙	✓	Heavy soiled	1000rpm
Sport	0-40°C	20°C	✓	⊙	✗	Sport wear	1000rpm
Quick Wash	0-20°C	20°C	✓	⊙	✗	Cotton or synthetic	1000rpm
Rinse	--	--	✗	⊙	✗	None	1200/1400rpm
Spin/Drain	--	--	✗	✗	✗	None	1200/1400rpm


Yes ✓

Optional ⊙




No ✗

Consumption Table




Program	Max Load	Temp.	Washing Time
ECO	4 kg	40°C	1:18 h
Wool	1 kg	20°C	0:59 h
Delicate	4 kg	20°C	1:01 h
Mixed	7.5/8.5 kg	40°C	1:18 h
Synthetic	4 kg	40°C	1:10 h
Standard	7.5/8.5 kg	40°C	3:52 h
Pre Wash	7.5/8.5 kg	40°C	1:46 h
Sport	4 kg	20°C	0:25 h
Quick Wash	4 kg	20°C	0:15 h
Rinse	/	/	0:24 h
Spin/Drain	/	/	0:12 h

-  **The actual water temperature may differ from the declared cycle temperature. If the machine is used for commercial purposes the warranty will be void. Do not use for purposes other than that which the machine is designed for. Follow the instructions given on the label of each garment and wash only machine-washable garments.**


HWM75-1279

-  Cotton standard, 40°C, 1200rpm and the normal option selected is recommended water and energy saving cycle for normally soiled, everyday washing.
-  The detergent dosage: rated capacity* 12.5g*75% and anti-foam aid is 15g.
-  Detergent dissolvent method: Dissolve the detergent first and pour the dissolved detergent into the machine when the main wash starts.

HWM85-1479


-  Cotton standard, 40°C, 1400rpm and the normal option selected is recommended water and energy saving cycle for normally soiled, everyday washing.
-  The detergent dosage: rated capacity* 12.5g*75% and anti-foam aid is 17g.
-  Detergent dissolvent method: Dissolve the detergent first and pour the dissolved detergent into the machine when the main wash starts.

Washing Methods

 This washing machine is for domestic use only. If the machine is used for commercial purpose the guarantee will not be valid anymore. Do not use it for purposes other than that which it was designed. Follow the instructions given on the label of each garment and only wash machine washable garments.


Power Supply

Connect the washing machine to the power supply (220V to 240V AC 50Hz)

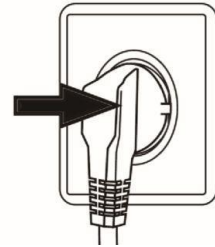

Water Connection

Turn on the tap. The water must be clean and clear.

 Before use, check for leaks in the joints between the tap and the inlet hose by turning on the tap.




Preparing the laundry

Sort out the clothes according to fabric type (cotton, synthetics, wool or silk) and to how dirty they are.

Separate white clothes from coloured ones. Wash them first by hand to check if they fade or colours run.

Empty pockets (keys, coins, etc.) and remove hard decorative objects (E.g. brooches).




 **Attention: Small objects (like buttons, etc.) or sharp items (zips & buckles) may cause damage to the machine which is not covered by the manufactures warranty.**

Garments without hems, underwear, and finely woven textile such as fine curtains are to be put into wash bag (it is better not to wash them in a washing machine).

Close zippers and hooks, make sure the buttons are sewn on tightly and place small items such as socks, belts, bras, etc. in the wash bag.

Unfold large pieces of fabric such as bed sheets, bedspreads, etc.

Turn shirts inside out.

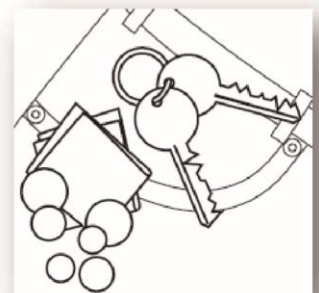

First Wash

When first using the washing machine, let it run unloaded for one complete program to prevent the laundry from being tainted by oil or dirty water from within the machine. You should run the machine without laundry, but with detergent, with a 60°C program.

Open the washer door put in the laundry piece by piece. Close the door tightly.



Loading the appliance

Open the washer door put in the laundry piece by piece. Close the door tightly.

Do not overload the washing machine.

Selecting Detergent

The washing efficiency and the performance are determined by the quality of detergent used. Special non-foaming detergent produces good washing results. Use specific detergents for synthetic and woollen goods. Do not use dry cleaning agents such as trichloroethylene and similar products.



Do not add more detergent than needed; otherwise, it may cause the following situations and the washing machine may malfunction impacting on the life of the machine.




Due to the increasing foam, the rinse me will be longer than normal;



The foam may overflow from the detergent drawer because of increased pressure of the foam.



The foam may remain in the machine after the final spin and require cleaning out of the machine

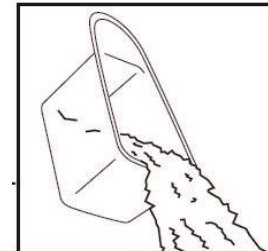

Recommendation:



Clean the detergent drawer once a week.



When using the prewash program, please add half of the recommended dosage.



Please follow the dosage recommendations on the powder or liquid detergent package.

Adding Detergent

Slide out the detergent drawer and put the required detergent and softening agent into the corresponding compartments. Push back the drawer gently. (Refer to the instructions on the drawer)




For prewashing program, detergent should be added to both compartments 1 and 2.



For other programs, do not add detergent to compartment 1.



Use liquid detergent according to the instructions on its package. Do not use liquid detergent if the prewash mode or "Delay" is selected.

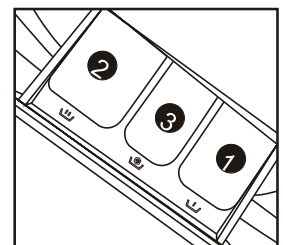


Functions

 Do not overuse softener; otherwise, it will damage the artificial fibres.

Selecting wash program

To get the best washing results, an appropriate washing program should be selected according to the laundry type. Please turn the program knob to select the right program.

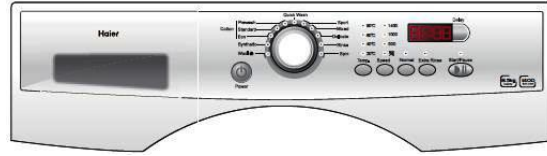

Selecting addition functions

Select the required options. (Refer to the "Control panel" pages 10, 11 and 12)

Setting washing temperature

Press and hold down the temperature button until the desired temperature is selected.

Setting spin speed

Press and hold down the speed button until the desired speed is selected. See "Operational functions" on the "Control panel" pages (10 and 11) for selecting temperature and spin speed. Set to the value recommended by the garment care instructions/preprogrammed settings.










































Washing

Press the Start/Pause button. The washing machine will operate according to the pre-set programs. The washing machine will stop operation automatically when a washing cycle ends. The "End" sign will appear on the display. Open the washer door and remove the laundry.

After washing

Turn off the water supply and unplug the power cord. Open the washer door to prevent formation of moisture and odors. Leave the door open while not used.

Care Chart

 Machine Wash, COLD	 Hand Wash	 Tumble Dry, NO HEAT	 Do Not Tumble Dry Line Dry	 Iron, Steam or Dry, with LOW HEAT
 Machine Wash, WARM	 Do Not Wash	 Tumble Dry, LOW HEAT	 Drip Dry	 Iron, Steam or Dry, with MEDIUM HEAT
 Machine Wash, HOT	 Bleach as needed Any bleach, like Clorox [®] may be safely used	 Tumble Dry, MEDIUM	 Dry Flat	 Iron, Steam or Dry, with HIGH HEAT
 Machine Wash, COLD Permanent Press	 Non-chlorine Bleach as needed Use only a color-safe bleach, like Clorox 2 [®]	 Tumble Dry, HIGH	 Don't dry clean	 Do Not Iron with Steam
 Machine Wash, WARM Permanent Press	 Do Not Bleach No bleach product should be used including detergents with bleach - or follow bleach package test procedures to test for bleach safety.	 Tumble Dry, Permanent Press, NO HEAT	 Dry on clothes hanger	 Do Not Iron
 Machine Wash, HOT Permanent Press	 Wool Mark	 Tumble Dry, Permanent Press, LOW HEAT	 Tumble dry, Medium heat	 Dryclean May appear with additional letters and/or lines Take this item to a professional drycleaner
 Machine Wash, COLD Gentle Cycle		 Tumble Dry, Gentle Cycle, NO HEAT	 Tumble dry, low heat	 Do Not Dryclean
 Machine Wash, WARM Gentle Cycle		 Tumble Dry, Gentle Cycle, LOW HEAT	 Don't tumble dry	 Dry cleaning with any solvent
 Machine Wash, HOT Gentle Cycle		 Tumble Dry, Gentle Cycle, MEDIUM		 Dry cleaning with pericloride

Load Reference

Material	Made of	Load in grams
Bed Sheet	Cotton	Approximately 800
Blanket	Wool	Approximately 3000
Blended fabric clothes	/	Approximately 800
Jackets	Cotton	Approximately 800
Jeans	/	Approximately 800
Overalls	Cotton	Approximately 950
Ladies Pyjamas	/	Approximately 200
Shirts	/	Approximately 300
Socks	Blended Fabric	Approximately 50
T-Shirts	Cotton	Approximately 300
Underwear	Blended Fabric	Approximately 70

Disposal

The presence of this symbol on the product, accessories or materials that goes with this information indicates that at the end of its useful life the product or its electronic accessories (ex. charger, headset, USB cable) should be disposed with other household waste.



To prevent possible damage to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them. This will promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased the product or the relevant local authorities to find out how they can take this item for environmentally safe recycling and safe.

Business users should contact their supplier and check the conditions of the purchase. This product and its electronic accessories should not be mixed with other commercial waste.

Cleaning and Care

After washing

Turn off the water supply (fig1) and pull out the electricity plug after each wash (fig2). Open the washer door to prevent formation of moisture and odours. If the washing machine is left idle for a long period, drain the water in the machine and replace the drain hose.



Fig 1

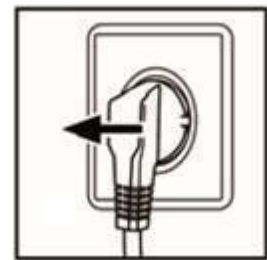



Fig 2

Cleaning the detergent drawer

Clean the detergent distribution drawer regularly.

Removing detergent drawer

Slide out the draw until the release is visible. Flush it clean with water and then replace it.

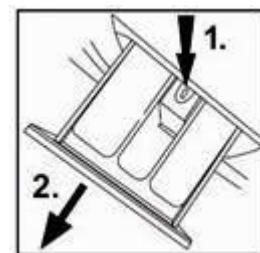

Cleaning the machine

Unplug the machine during cleaning and maintenance. Use a soft cloth dampened with soap liquid to clean the machine case and rubber components. Do not use organic chemicals or corrosive solvents.

Cleaning the filter

Clean the filter once a month:

Open the bottom cover. (fig1)


Pull out the drain tube (about 150mm) (fig2) remove the plug and allow any water to drain into a shallow dish. (fig3)

After the draining process is complete, refit the plug into the hose and refit the hose into the housing (fig4 & 5).


Remove the filter by turning counter clockwise (fig6).

Flush the filter clean with running water (fig7).

Replace the filter by turning clockwise and remount the cover (fig8).

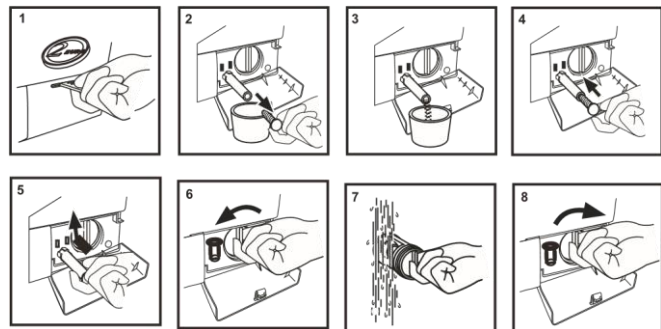


 The filter must be in place, or it may lead to leakage.

 Place a container under the drain pump filter, to collect any excess water that may come out of the drain pump

Water inlet valve and inlet valve filter


To prevent blockage to the water supply by ingress of foreign substances, clean the water inlet valve and inlet valve filter regularly.

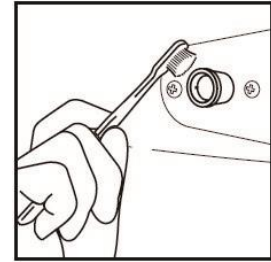


Moving the machine

If the machine is to be moved to a distance location, replace the transportation bolts removed before installation as shown below this will prevent damage.


Remove the back panel (fig1)

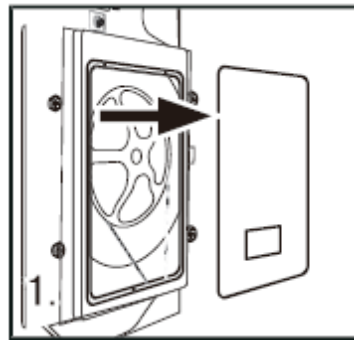


Remove the blanking plugs (fig2).

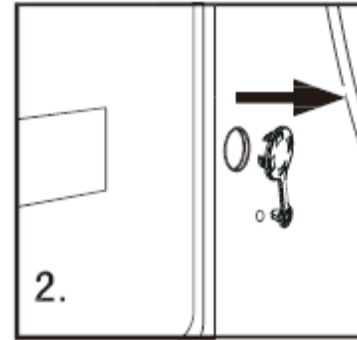

Insert the synthetic stabilizers and the transportation bolts, tighten the bolts with a spanner (fig3).

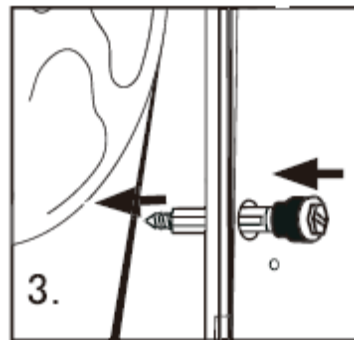

Replace the rear cover (fig4).

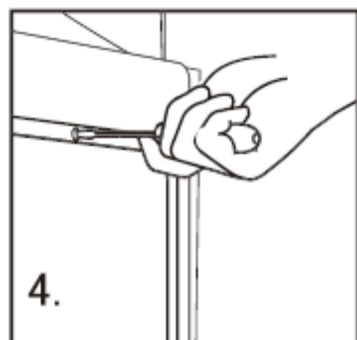





Long periods of disuse

If the washing machine is left idle for a long period, pull out electrical plug and turn off the water supply. Open the washer door to prevent formation of moisture and odours. Leave the door open while not in use.

Display Codes

Display Codes and Special functions

Codes	Causes	Solutions
Err1	Door is not properly shut.	Shut the door properly, and then press the Start/Pause button.
Err2	Drainage error, water not emptied within 6 minutes.	Clean the filter and check the drain hose for blockage. If error still exists, please contact the maintenance personnel.
Err3	Temperature sensor not properly connected or damaged.	Contact the maintenance personnel.
Err4	Heater error (Appears at the end of a cycle).	Contact the maintenance personnel.
Err5	Water level not met in 8 minutes. The height of the drain hose is below 80 cm. The drain hose is in water.	Make sure that tap is turned on, and water pressure is normal. If problem still exists, please contact the maintenance personnel. Install drain hose within 80-100 cm of height. Make sure the drain hose is not in water.
Err7	Motor Error	Contact the maintenance personnel.
Err8	Water exceeds protective level.	Contact the maintenance personnel.
End	End of wash cycle.	
19:30	Status information: Preset time for delayed operation	
1.25	The remaining time is 1hour 25 minutes	
UNb	Washing machine has an unbalanced load protection function. When unbalanced weight is greater than allowable maximum, the washing machine will not spin and will run at a speed to avoid abnormal vibration and noise	<ol style="list-style-type: none"> 1. In case washing 1 piece of laundry (carpet, bed sheet, table sheet, etc.) make it symmetrical inside the drum. 2. Lower the wet weight of laundry pieces by wringing manually and placing them back in the drum symmetrical position. 3. Take out and then reposition the laundry pieces inside the washing machine in a more balanced position on the inner wall of the drum. 4. Add 1 or 2 pieces of laundry into the drum to reduce the unbalanced load effects. 5. Restart the spin cycle by closing spin programme. In case the failure persists, please ask a qualified technician to repair it.

-  Control panel lock function: Press the "Delay" and the "Start/Pause" buttons simultaneously for 3 seconds after starting a program. It can no longer be changed by operating buttons or knobs. To unlock press the "Delay" and "Start/Pause" buttons again for 3 seconds.
-  Power-off memory function: In case of abrupt power failure or the need to cut off the power during a program cycle, the present settings will be saved and the preset operation will resume when the power is on again.
-  To cancel a program. Press the "Start/Pause" button, then switch off the power and the program is automatically cancelled. Turn the program selector again to choose another program.
-  During the spin process, if too much foam is inspected, in order to protect the motor, the washing machine will eliminate the foam automatically; the motor will stop and the drain pump will drain the water continuously for 90 seconds. If it happens more than 3 times, the motor will stop until the end of cycle without spinning.

Trouble-Shooting

Problem	Causes	Solutions
Washing machine fails to operate.	<ul style="list-style-type: none"> ✘ Poor connection to the power supply. ✘ Power failure. ✘ The washer door is not properly closed. ✘ Machine has not been switched on. 	<ul style="list-style-type: none"> ✓ Check connection to the power supply. ✓ Check the power supply. ✓ Close the washer door properly. ✓ Make sure the machine is switched on.
Washing machine cannot be filled with water.	<ul style="list-style-type: none"> ✘ The "Start/Pause" button is not pressed. ✘ Water tap is not turned on. ✘ Water pressure is less than 0,03 MPa. ✘ The inlet hose is kinked. ✘ Water supply failure. ✘ The program knob is not properly set. ✘ The washer door is not properly closed. ✘ The inlet hose filter is blocked. 	<ul style="list-style-type: none"> ✓ Press the "Start/Pause" button. ✓ Turn on the water tap. ✓ Check water pressure. ✓ Check the inlet hose. ✓ Ensure the water supply. ✓ Set the program knob properly. ✓ Close the washer door properly. ✓ Unblock the inlet hose filter.
Machine is draining while being filled.	<ul style="list-style-type: none"> ✘ The height of the drain hose is below 80 cm. ✘ The drain hose is in water. 	<ul style="list-style-type: none"> ✓ Install drain hose within 80-100 cm of height. ✓ Make sure the drain hose is not in water.
Drainage failure.	<ul style="list-style-type: none"> ✘ Drain hose is blocked. ✘ Drain hose end is higher than 100 cm above the floor level. ✘ The filter is blocked. 	<ul style="list-style-type: none"> ✓ Unblock the drain hose. ✓ Make sure the drain hose end is lower than 100 cm above floor level. ✓ Unblock the filter.
Strong vibration while spinning.	<ul style="list-style-type: none"> ✘ Not all transportation bolts have been removed. ✘ Washing machine is located on an uneven surface or is not level. ✘ Machine load is over 7.5/8.5kg. 	<ul style="list-style-type: none"> ✓ Remove all transportation bolts. ✓ Make sure the washing machine is on an even surface and levelled. ✓ Reduce amount of laundry in the drum.
Operation stops before completing wash cycle.	<ul style="list-style-type: none"> ✘ Water or electricity failure. 	<ul style="list-style-type: none"> ✓ Check the power supply or water supply.
Operation stops for a period of time.	<ul style="list-style-type: none"> ✘ Washing machine gives an error message. ✘ Washing machine is in soaking cycle? 	<ul style="list-style-type: none"> ✓ Check display codes. ✓ Press the rinse hold button or the Start/pause button again to cancel
Excessive foam in the drum, which is spilled to the distribution drawer.	<ul style="list-style-type: none"> ✘ The detergent is not a low-foaming type or for manual wash. ✘ Excessive use of detergent. 	<ul style="list-style-type: none"> ✓ Check if your detergent is appropriate. ✓ Reduce amount of detergent in the distribution drawer.
Automatic adjustment of the washing time.	<ul style="list-style-type: none"> ✘ The washing program duration will be adjusted 	<ul style="list-style-type: none"> ✓ This is normal and doesn't affect the functionality.
Spinning fails	<ul style="list-style-type: none"> ✘ Unbalance of the laundry 	<ul style="list-style-type: none"> ✓ Add clothes or run a spinning program again.

Technical Data

Basic technical information regarding the appliance.

	HWM75-1279	HWM85-1479
Power source	220 - 240V~/50Hz	220 - 240V~/50Hz
Max. working current (A)	10	10
Water pressure (MPa)	$0.03 \leq P \leq 1$	$0.03 \leq P \leq 1$
Nominal load (kg)	7.5	8.5
Spinning speed (r/min)	1200	1400
Washing programs	11	11
Max power (W)	2000	2000
Dimensions (HxDxW mm)	850 x 650 x 595	850 x 650 x 595
Net weight (kg)	74	74
Power consumption of the off-mode(W)	0,48	0,48
Power consume on of the left-on mode(W)	0,48	0,48



If after checking the trouble-shooting part, the problem is not solved. Please check the Warranty Card included with the product.