

# CW03



## Introduction

SilverStone's Crown CW03 is a full featured HTPC enclosure designed for the most discerning home theater enthusiasts. With the venerable Lascala LC18 model as the starting point, the CW03 improves every aspect of the former case from specification to user impression. LC18's excellent grade-A 7" Hitachi LCD is retained, but additional engineering breakthroughs enable CW03's integrated LCD to now support resolutions up to an incredible 1920 x 1200 pixels, a feat never before seen in a screen of its size. This specification allows CW03's to be used in conjunction with any full HD television on the market. Supplementing the LCD is an advanced touch panel capable of digital pen function (digital pen support in Vista only) or standard mouse movements. In addition to the primary touchscreen control, a multi-functional remote is included to complete an impressive list of media features. To house all the new technology, an intelligent cooling layout is reinforced with thick aluminum frame finished to high-end home theater component standards. The styling of CW03 is a blend of classic lines and high-tech looks, making it the perfect flagship chassis for SilverStone's Crown series.

## CW03Multimedia Kit




Remote control, CDs

## Specification

|                       |                                                                                      |                                     |
|-----------------------|--------------------------------------------------------------------------------------|-------------------------------------|
| <b>Model</b>          | SST-CW03B-MT(black)                                                                  |                                     |
|                       | SST-CW03S-MT(silver)                                                                 |                                     |
| <b>Material</b>       | All aluminum body, zinc-coated steel structural support                              |                                     |
| <b>Motherboard</b>    | ATX, Micro ATX                                                                       |                                     |
| <b>Multimedia</b>     | 7" touchscreen, IR, remote with on/off function<br>iMON media center software        |                                     |
| <b>Resolution</b>     | Native resolution: 800 x 480<br>Supported resolutions: 640 x 480 ~ 1920 x 1200 @60Hz |                                     |
| <b>Driver Bay</b>     | External                                                                             | 5.25" x 2<br>3.5" converter bay x 1 |
|                       | Internal                                                                             | 3.5" x 6 (vibration dampening)      |
| <b>Cooling System</b> | Rear                                                                                 | 2x 80mm fan, 2050rpm                |
|                       | Bottom                                                                               | 2x 80mm fan, 2050rpm                |
| <b>Expansion Slot</b> | 7                                                                                    |                                     |
| <b>Power Supply</b>   | Optional Standard PS2(ATX) maximum depth:220mm                                       |                                     |
| <b>Expansion Card</b> | Support to 11.25 inch length expansion card                                          |                                     |
| <b>Net Weight</b>     | 8 kg                                                                                 |                                     |
| <b>Dimension</b>      | 430mm(W) x 184mm(H) x 436mm(D)                                                       |                                     |
| <b>Extra</b>          | Touchscreen pen, 250mm D-sub connector, rackmount ears                               |                                     |

# Product overview

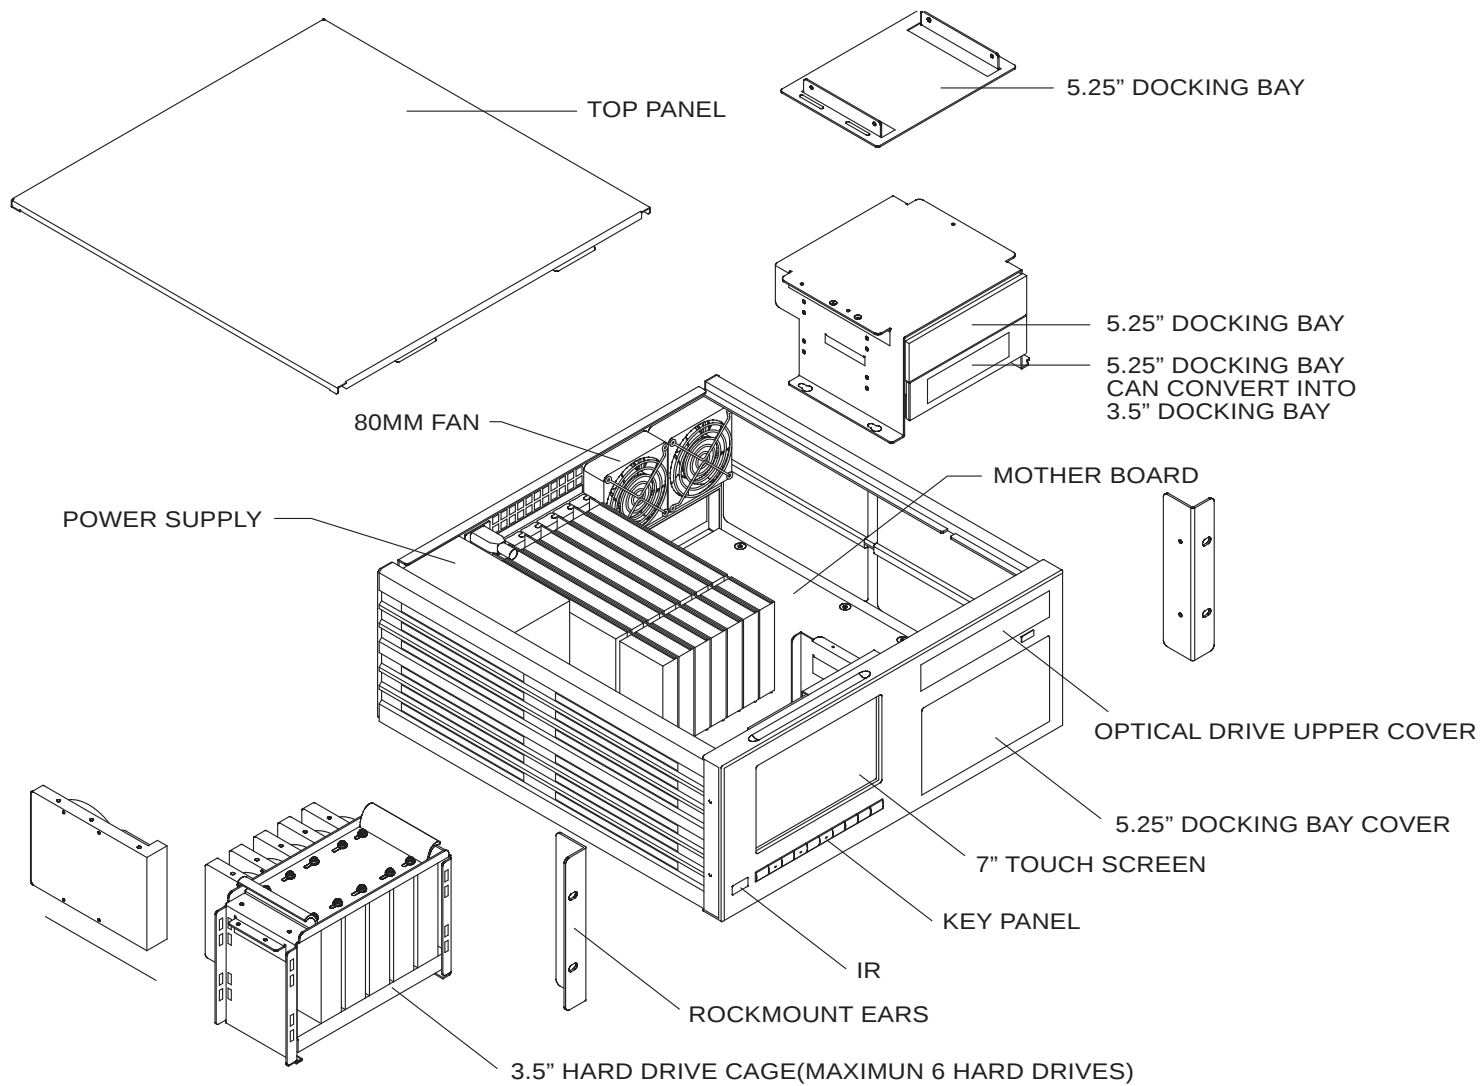


| PICTURE | ITEM                             | PIECE | PURPOSE                                                |
|---------|----------------------------------|-------|--------------------------------------------------------|
|         | Remote                           | 1     | System remote                                          |
|         | D-SUB 15P M/M                    | 1     | Connect monitor and graphic card to deliver the signal |
|         | Power supply 24p extension cable | 1     | IR remote to power on/off                              |
|         | Fan converting cable             | 3     | Convert 3pin fan to 4 pin                              |
|         | Rockmount ears                   | 2     | For placing to rack mount cabinet                      |
|         | Digital touch pen                | 1     | Operating on touchscreen                               |
|         | CD-rom                           | 2     | Driver/software for touchscreen                        |
|         | Installation guide               | 1     | System installation guide                              |
|         | Included package                 | 1     | Assemble parts                                         |

|  |                         |
|--|-------------------------|
|  | MOTHERBOARD STANDS      |
|  | SCREWS                  |
|  | SCREWS                  |
|  | SCREWS                  |
|  | WASHER                  |
|  | VIBRATION DAMPENING PAD |

**This is a unique product, please read the following detailed installation guide we have prepared meticulously for you.**

01

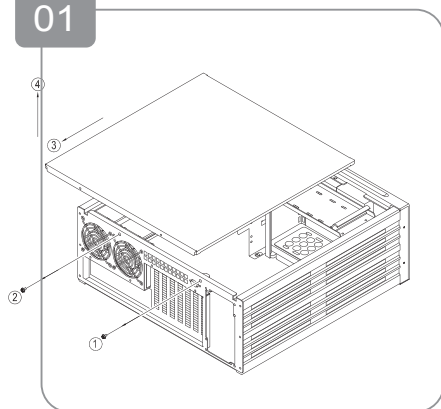

ENGLISH Remove screws and top panel as shown

DEUTSCH Loesen Sie die Schrauben des Deckels um diesen abzunehmen

ESPAÑOL Destornille los tornillos y saque el panel superior como se muestra.

FRANÇAIS Retirez les vis et le panneau supérieur comme montré

ITALIANO Estrarre le viti ed il pannello superiore come mostrato


РУССКИЙ Открутите шурупы и снимите верхнюю панель, как показано на рисунке.

中 文 請依圖示卸下螺絲與上蓋

日 本 語 図のようにネジと上部パネルを外します。

한 국 어 그림에서와 같이 나사와 상부 패널을 제거하십시오.

02

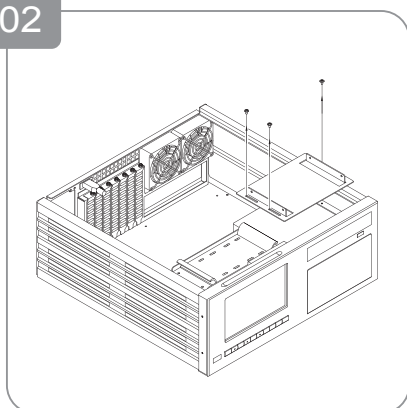

ENGLISH Remove the three screws and the upper optical drive bracket

DEUTSCH Loesen Sie die drei Schrauben am oberen Rahmen des optischen Laufwerks

ESPAÑOL Destornille los tres tornillos y saque la abrazadera del disco óptico superior

FRANÇAIS Retirez les trois vis et le casier à lecteur optique du dessus

ITALIANO Svitare le tre viti ed il supporto dell'unità ottica superiore


РУССКИЙ Открутите три шурупа и снимите верхний кронштейн оптического диска.

中 文 請依圖示卸下三顆螺絲與上層光碟機機架

日 本 語 ネジ3本を外し、上側光学ドライブブラケットを外します。

한 국 어 3개의 나사와 상부 광 드라이브 브라켓을 제거하십시오.

03

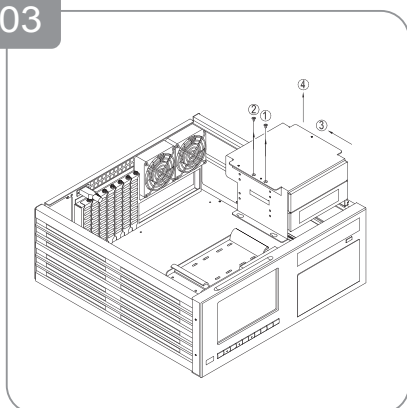

ENGLISH Remove the screws and main optical drive bracket

DEUTSCH Loesen Sie die Schrauben am Rahmen des optischen Hauptlaufwerks

ESPAÑOL Destornille los tornillos y saque la abrazadera del disco óptico principal

FRANÇAIS Retirez les vis et le casier à lecteur optique principal

ITALIANO Svitare le viti ed il disco ottico principale

РУССКИЙ Открутите шурупы и снимите верхний кронштейн главного оптического диска.

中 文 請依圖示卸下螺絲與主光碟機機架


日 本 語 ネジおよびメイン光学ドライブブラケットを外します。

한 국 어 나사와 메인 광 드라이브 브라켓을 제거하십시오.

05

# Installation Guide

04

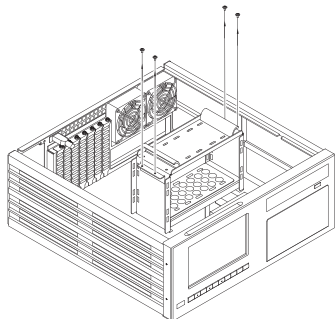

ENGLISH Remove the screws and 3.5" hard drive cage

DEUTSCH Loesen Sie die Schrauben am Kaefig der 3,5" Festplatte

ESPAÑOL Saque los tornillos y la caja del disco duro de 3.5"

FRANÇAIS Retirez les vis et le casier à disques durs 3.5"

ITALIANO Svitare le viti ed il box dell'hard disk da 3.5"


РУССКИЙ Открутите шурупы и снимите корзину для жесткого диска форм-фактора 3,5 дюйма.

中 文 請卸下螺絲與3.5寸硬碟架

日 本 語 ネジおよび3.5" ハードディスクドライブケースを外します。

한 국 어 나사와 3.5" 하드 드라이브 케이스를 제거 하십시오.

05

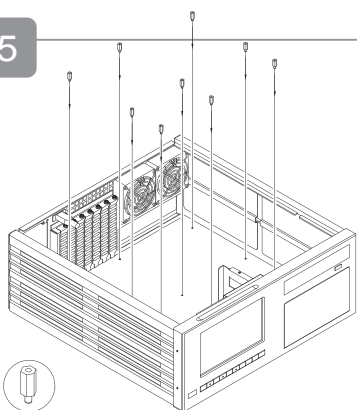

ENGLISH Fasten and secure the standoffs on the motherboard tray as required

DEUTSCH Befestigen und sichern Sie die Abstandsbolzen am Motherboardboden wie verlangt

ESPAÑOL Aprete los separadores sobre la bandeja de la placa madre como se requiere

FRANÇAIS Vissez et fixez les plots sur le support de la carte mère selon vos besoins

ITALIANO Avvitare e fissare i distanziatori sul vassoio della scheda madre come richiesto


РУССКИЙ Надежно закрепите опоры на лотке для материнской платы.

中 文 請依需求將主機板螺柱鎖固於主機板

日 本 語 必要なマザーボードトレイのスペーサーを固定します。

한 국 어 메인보드 트레이에 지지대를 필요한 만큼 설치한 후 단단히 조여주십시오.

06

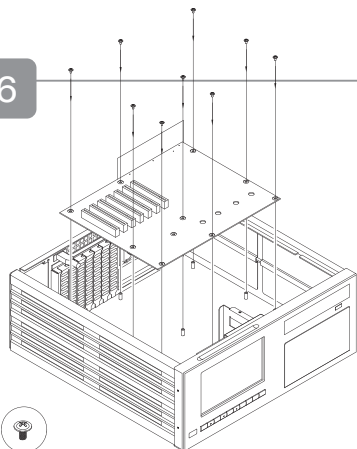

ENGLISH Install the motherboard and secure it with the included screws

DEUTSCH Setzen Sie das Motherboard ein und befestigen Sie es mit den enthaltenen Schrauben

ESPAÑOL Instale la placa madre y sujetela con los tornillos incluidos

FRANÇAIS Installez la carte mère et fixez-la avec les vis fournies

ITALIANO Installare la scheda madre e fissare con le viti incluse

РУССКИЙ Установите материнскую плату и закрепите ее прилагающимися шурупами.


中 文 安裝主機板於機箱內並以內附螺絲鎖固

日 本 語 マザーボードを取り付け、付属のネジで固定します。

한 국 어 메인보드를 트레이에 설치하고, 동봉된 나사로 고정시키십시오.

# Installation Guide

07

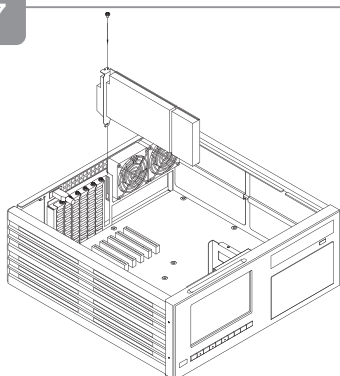

ENGLISH Install graphic card and expansion cards as needed

DEUTSCH Setzen Sie Grafikkarte und Erweiterungskarte, wenn benoetigt, ein

ESPAÑOL Instale la tarjeta gráfica y la tarjeta de expansión como se requiere.

FRANÇAIS Installez la carte graphique et les cartes d'extension selon vos besoins

ITALIANO Installare la card grafica e la expansion card come richiesto


РУССКИЙ Установите графическую карту и карты расширения.

中 文 請依需求安裝顯示卡與擴充卡

日 本 語 必要なグラフィックスカードおよび拡張カードをインストールします。

한 국 어 그래픽카드나 기타 필요한 확장카드 등을 설치하십시오.

08

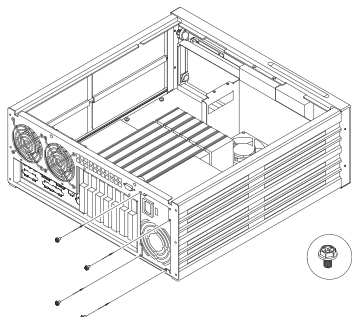

ENGLISH Install your power supply as shown with the included screws. (Power supply can be installed in either direction depending on thermal requirements)

DEUTSCH Bringen Sie das Netzteil mit den enthaltenen Schrauben wie gezeigt an. (Sie koennen das Netzteil in zwei verschiedene Richtungen einbauen, um die Kuehlung an Ihre verwendeten Komponenten anzupassen)

ESPAÑOL Instale la fuente de alimentación como se muestra con los tornillos incluidos (la fuente de alimentación puede ser instalada en ambas las direcciones según los requisitos de refrigeración).

FRANÇAIS Installez votre alimentation comme montré avec les vis fournies. (L'alimentaion peut être installé dans n'importe quel sens selon les contraintes thermiques)

ITALIANO Installare l'alimentatore come mostrato con le viti incluse.(l'alimentatore può essere installato in entrambi i sensi a seconda dei requisiti termici).


РУССКИЙ Установите блок питания, как показано на рисунке, и закрепите его прилагающимися шурупами. (Блок питания может быть ориентирован в любом направлении в заисимости от требований к охлаждению).

中 文 請依圖示安裝電源供應器 (電源供應器可依據散熱需求正反方向安裝)

日 本 語 電源を図のように付属のネジで固定します。  
(電源は冷却方法に合わせてどちらの向きでも取り付け可能です)

한 국 어 파워서플라이를 그림과 같이 나사를 이용하여 설치하십시오. (파워 서플라이는 냉각팬의 위치 혹은 방법에 따라 2가지 방향으로 설치 가능합니다. )

09

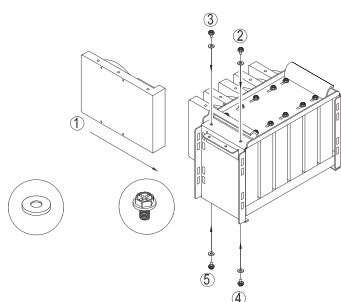

ENGLISH Secure hard drives into the hard drive cage (picture 4) with the included screws and vibration dampening pads

DEUTSCH Befestigen Sie die Festplatte mit den enthaltenen Schrauben und Vibrationsdaemmungspolstern im Festplattenkaefig (Bild 4)

ESPAÑOL Sujete los discos duros en sus caja (foto 4) con los tornillos incluidos y las placas anti-vibración

FRANÇAIS Fixez les disques durs dans leur casier(image 4) avec les vis et les fixations anti vibrations fournies

ITALIANO Fissare gli hard disk nel loro box (foto 4) con le viti incluse ed i cuscinetti anti-vibrazione.

РУССКИЙ С помощью шурупов и антивибрационных подкладок, входящих в комплект поставки, закрепите жесткие диски в корзине для жесткого диска (рисунок 4).

中 文 將硬碟裝入硬碟架(圖四)中，並以內附螺絲與避震墊鎖固


日 本 語 ハードディスクドライブをハードディスクドライブケースに付属のネジと防振パッドで取り付けます(図4)

한 국 어 하드디스크를 하드드라이브 케이스(그림 4)에 동봉된 나사와 진동방지 패드를 이용해 고정시키십시오.

07

# Installation Guide

10

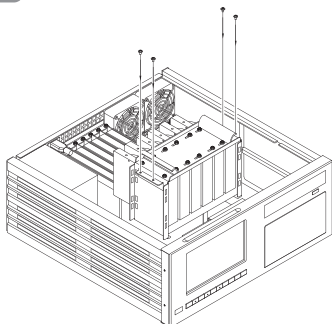

**ENGLISH** Please reinstall the 3.5" hard drive cage and secure it

**DEUTSCH** Setzen Sie den Festplattenkäfig wieder in das Gehäuse ein

**ESPAÑOL** Reinserte la abrazadera del disco duro en el chasis

**FRANÇAIS** Remettez le casier à disques durs dans le boîtier

**ITALIANO** Reinserire il supporto dell'hard disk nel chassis


**РУССКИЙ** Вставьте кронштейн жесткого диска обратно в корпус.

**中 文** 請裝回3.5" 硬碟架並以螺絲鎖固

**日 本 語** ハードディスクドライブブラケットをシャーシに戻します

**한 국 어** 3.5" 하드드라이브 케이지를 재설치 하고 고정시키십시오.

11

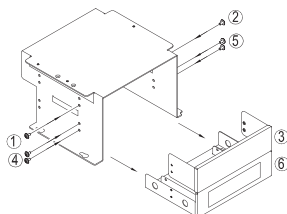

**ENGLISH** Remove the screws and then remove the panel and 5.25 docking bay as shown.

**DEUTSCH** Entfernen Sie die Schrauben und dann die Abdeckplatte fuer das 5.25 Anschlussfeld, wie angezeigt

**ESPAÑOL** Destornille los tornillos, saque el panel y la bahía docking de 5.25" como se muestra

**FRANÇAIS** Retirez les vis et ensuite retirez le panneau et la baie d'accueil 5.25 comme montré.

**ITALIANO** Svitare le viti, quindi il pannello e l'alloggiamento docking bay da 5.25" come mostrato.


**РУССКИЙ** Открутите шурупы и затем снимите панель и отсек для стыковки на 5,25 дюйма, как показано на рисунке.

**中 文** 請依圖示卸下螺絲後取下擋板與5.25寸轉接架

**日 本 語** 図のようにネジを外し、パネルおよび5.25ドッキングベイを取り外します。

**한 국 어** 나사를 먼저 제거한 후, 패널을 제거한 다음 5.25" 도킹베이를 그림에서와 같이 제거하십시오.

12

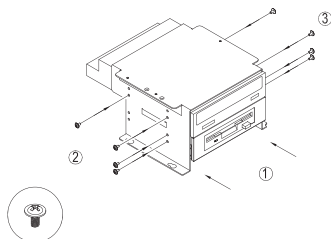

**ENGLISH** Place the optical drive and docking bay in correct position of main optical drive bracket, and then secure with included screws

**DEUTSCH** Plazieren Sie das optische Laufwerk und das Anschlussfeld an der richtigen Position auf dem optischen Hauptlaufwerkrahmen und befestigen sie mit den enthaltenen Schrauben.

**ESPAÑOL** Coloque el disco óptico y la bahía docking en la posición correcta en la abrazadera del disco óptico principal y sujetelo con los tornillos.

**FRANÇAIS** Mettez le lecteur optique et la baie d'accueil dans la bonne position dans le casier principal, puis fixez-les avec des vis

**ITALIANO** Collocare il disco ottico ed il docking bay in posizione corretta nel supporto del disco ottico principale e fissare con le viti incluse.

**РУССКИЙ** Поместите оптический диск и отсек для стыковки в предназначенные для них места кронштейна главного оптического диска и закрепите прилагающимися шурупами.


**中 文** 請將光碟機與轉接架正確地安裝至主光碟機機架後以內附螺絲鎖固

**日 本 語** 光学ドライブおよびドッキングベイをメイン光学ドライブブラケットの正しい位置に取り付け、付属のネジで固定します。

**한 국 어** 광 드라이브와 도킹베이를 메인 광 드라이브 브라켓에 올바르게 위치시키고 동봉된 나사로 고정시키십시오.


# Installation Guide

13

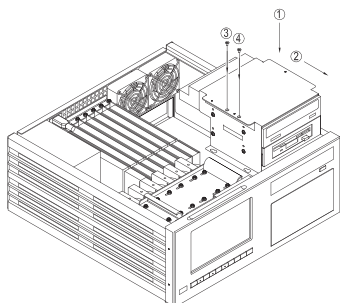


|          |                                                                                     |
|----------|-------------------------------------------------------------------------------------|
| ENGLISH  | Reinstall the main optical drive bracket into the chassis and secure it             |
| DEUTSCH  | Befestigen Sie den optischen Hauptlaufwerksrahmen wieder im Chassis und sichern ihn |
| ESPAÑOL  | Reinstale la abrazadera del disco óptico principal en el chasis y sujete.           |
| FRANÇAIS | Réinstallez le casier 5.25 principal dans le boîtier et fixez-le.                   |
| ITALIANO | Reinstallare il supporto del disco ottico principale nel chassis e fissare.         |
| РУССКИЙ  | Заново установите и закрепите в корпусе кронштейн главного оптического диска.       |
| 中 文      | 將主光碟機機架安裝回機箱內並以螺絲鎖固                                                                 |
| 日 本 語    | メイン光学ドライブブラケットをケースに戻してネジ止めします。                                                      |
| 한 국 어    | 메인 광 드라이브 브라켓을 케이스에 재설치 하고 고정시키십시오.                                                 |

14

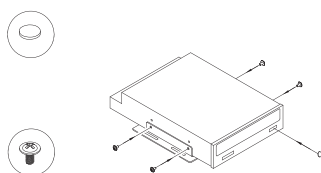

|          |                                                                                                                                                                             |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ENGLISH  | If the optical drive's button can not reach, place the optical drive on the upper optical drive bracket and secure it with the included screws.                             |
| DEUTSCH  | Wenn der optische Laufwerksschalter nicht erreicht werden kann, platzieren Sie das Laufwerk im oberen Laufwerkrahmen und sichern es mit den enthaltenen Schrauben.          |
| ESPAÑOL  | Si no se puede alcanzar el botón del disco óptico, coloquelo en la abrazadera del disco óptico superior y fijelo con los tornillos incluidos.                               |
| FRANÇAIS | Si le bouton du lecteur optique ne peut pas être atteint, mettez le lecteur optique dans le casier du dessus et fixez-le avec les vis fournies.                             |
| ITALIANO | Se è difficile raggiungere il pulsante del disco ottico, collocarlo nel supporto del disco ottico superiore e fissarlo con le viti incluse.                                 |
| РУССКИЙ  | Если кнопка оптического диска оказалась вне пределов досягаемости, поместите оптический диск в верхний кронштейн оптического диска и закрепите его прилагающимися шурупами. |
| 中 文      | 如光碟機的按鍵無法觸及機箱按鍵，請將光碟機放置於上層光碟機機架並以螺絲鎖固                                                                                                                                       |
| 日 本 語    | 光学ドライブのボタンが届かない場合は、光学ドライブを上側光学ドライブブラケットに入れ、付属のネジで固定します。                                                                                                                     |
| 한 국 어    | 광 드라이브 버튼이 닿지 않는다면, 광 드라이브를 상부 광 드라이브 브라켓에 설치하고 동봉된 나사로 고정시키십시오.                                                                                                            |


15

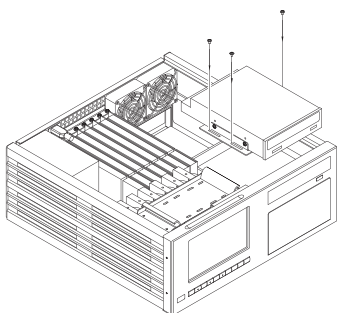

|          |                                                                                              |
|----------|----------------------------------------------------------------------------------------------|
| ENGLISH  | Reinstall the upper optical drive bracket into the chassis and secure it.                    |
| DEUTSCH  | Befestigen Sie den oberen optischen Laufwerkrahmen wieder im Chassis und sichern ihn         |
| ESPAÑOL  | Reinstale la abrazadera del disco óptico superior en el chasis y segurela con los tornillos. |
| FRANÇAIS | Remettez le casier 5.25 du dessus dans le boîtier et fixez-le.                               |
| ITALIANO | Reinstallare il supporto dell'unità ottica superiore nel chassis e fissare.                  |
| РУССКИЙ  | Заново установите и закрепите в корпусе верхний кронштейн главного оптического диска.        |
| 中 文      | 將上層光碟機機架安裝回機箱內並以螺絲鎖固                                                                         |
| 日 本 語    | 上側光学ドライブブラケットをケースに戻し固定します。                                                                   |
| 한 국 어    | 상부 광 드라이브 브라켓을 케이스에 재 설치하고 고정시키십시오.                                                          |

# Installation Guide

16

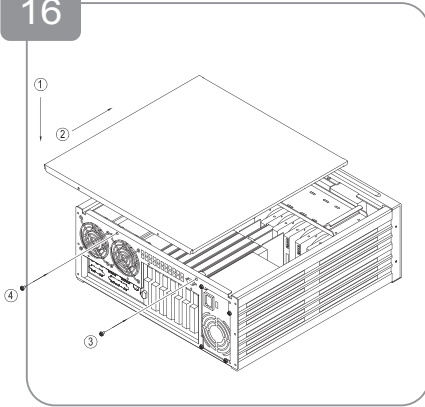

ENGLISH

Make sure all necessary cables and wires are connected, then reinstall the top panel and secure with screws

DEUTSCH

Versichern Sie sich, dass alle noetigen Anschuesse und Stecker verbunden sind und schrauben Sie den Deckel wieder auf das Gehaeuse

ESPAÑOL

Asegurese de que los cables estén conectados, luego recoloque el panel superior y fíjelo con los tornillos.

FRANÇAIS

Vérifiez bien que tout les câbles sont correctement branchés, puis réinstallez le panneau supérieur et fixez-le avec des vis.

ITALIANO

Assicurarsi di aver collegato correttamente tutti i cavi, reinstallare il pannello superiore e fissare con le viti.

РУССКИЙ

Убедитесь, что все необходимые провода и кабели подключены, и затем установите на место и закрепите шурупами верхнюю панель.

中 文

請確認所有必須的線材與線路都已連接後，將上蓋裝回並以螺絲鎖固


日 本 語

必要なリード線やケーブルを全て接続してから、上部パネルをケースに戻しネジで固定します。

한 국 어

모든 케이블과 선이 잘 연결되었는지 확인한 후 상부 패널을 나사로 고정시키십시오.

17

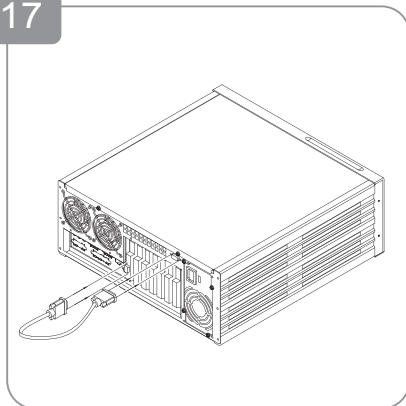

ENGLISH

Connect the VGA cable to the graphic card from the touch screen

DEUTSCH

Verbinden Sie das VGA Kabel mit der Grafikkarte des Touchscreen

ESPAÑOL

Conecte el cable VGA con la tarjeta gráfica de la pantalla táctil.

FRANÇAIS

Branchez le câble VGA de l'écran tactile vers la carte graphique.

ITALIANO

Connettere il cavo VGA alla card grafica del touch screen.

РУССКИЙ

Подключите VGA-кабель сенсорного экрана к графической карте.

中 文

請將VGA線從觸控板連接至顯示卡


日 本 語

タッチスクリーンからのVGAケーブルをグラフィックスカードに接続します。

한 국 어

터치 스크린의 VGA 케이블을 그래픽 카드에 연결하십시오.

18

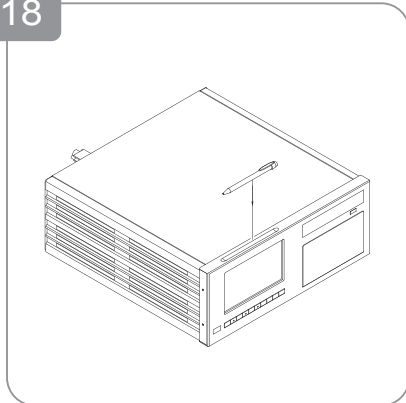

ENGLISH

Touch screen pen can be placed on top of front panel

DEUTSCH

Der Touchscreenstift kann oben auf der Frontverkleidung platziert werden

ESPAÑOL

La pluma de la pantalla táctil puede ser colocada encima del panel frontal

FRANÇAIS

Les tylet de l'écran tactile peut être placé sur le dessus du panneau frontal.

ITALIANO

La digital pen del touch screen può essere collocata sul pannello frontale.

РУССКИЙ

Ручку сенсорного экрана можно поместить на верху передней панели.

中 文

觸控筆可至於前面板上

日 本 語


タッチスクリーンペンはフロントパネルの上に置けます。

한 국 어

터치스크린 펜은 전면 패널의 상부에 놓을 수 있습니다.

# Installation Guide

19

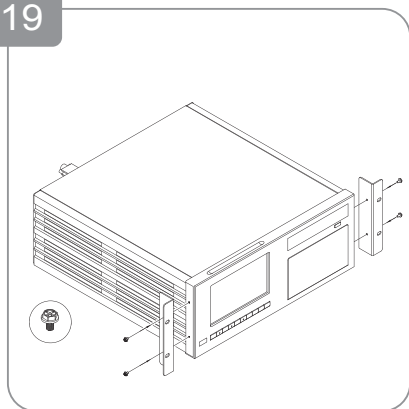

**ENGLISH** Please install rack mounts ears before placing CW03 into a rack mount cabinet.

**DEUTSCH** Befestigen Sie Rack-Halterungsschellen, bevor Sie CW03 in einen Rack-Halterungskasten geben.

**ESPAÑOL** Instale los accesorios para en montaje en rack antes de colocar el CW03 en el armario rack.

**FRANÇAIS** Veuillez installer les fixations latérales avant de mettre le CW03 dans un rack.

**ITALIANO** Installare i supporti rack prima di collocare il CW03 nella console rack.






**РУССКИЙ** Перед монтированием CW03 в стойке поставьте рэковое крепление.

**中 文** 在將CW03裝上機架前請裝上機櫃固定片

**日 本 語** CW03をラックマウントキャビネットに設置する場合は、ラックマウントハンドルを取り付けてください。

**한 국 어** 랙마운트 캐비닛에 설치하려면, 랙마운트 브라켓을 먼저 설치하십시오.


## 7" TOUCH PANEL

    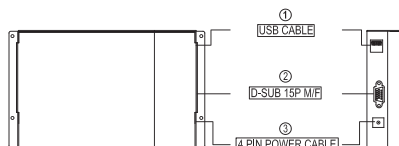

|                            |                |                                                                                                                                                              |
|----------------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7" TOUCH PANEL             | PIXEL PITCH    | 0.1905MM                                                                                                                                                     |
|                            | ERIGHTNESS     | 300CD/MM                                                                                                                                                     |
|                            | CONTRAST EATIO | 200:1                                                                                                                                                        |
|                            | VIEWING ANGLE  | 65/65/45-61(L/R/U/D)                                                                                                                                         |
|                            | RESPONSE TIME  | 30MS                                                                                                                                                         |
| INPUT SIGNAL               | VIDEO          | RGB ANALOG(75 OHMS,0.7/1.0 VP-P)                                                                                                                             |
|                            | FREQUENCY SYNC | FV:50-75HZ<br>H/V SEPARATED(TTL)POSITIVE/NEGATIVE                                                                                                            |
| NATIVE RESOLUTION          |                | 800*480                                                                                                                                                      |
| OTHER SUPPORTED RESOLUTION |                | 640*480,800*600,1024*768,1280*800,1280*1024,1366*768,1600*1024,1600*1200,1680*1050,1920*1080                                                                 |
| MAX. RESOLUTION            |                | 1920*1200@60HZ(MAX.)                                                                                                                                         |
| INPUT CONNECTOR            |                | 15-PIN MINI D-SUB                                                                                                                                            |
|                            |                | DC IN,DC TO HEAD                                                                                                                                             |
| POWER CONSUMPTION          |                | AC 100-240V 50/60H(UNIVERSAL)                                                                                                                                |
|                            |                | 36W(MAX.)                                                                                                                                                    |
| CONTROLS                   | USER FUNCTION  | POWER(SOFT),MANUAL,DOWN,UP,AUTO IMAGE ADJUST                                                                                                                 |
|                            | CSD FUNCTION   | CONTRAST,BRIGHTNESS,AUTO IMAGE ADJUST,H.POSITION,H.PHASE,V.POSITION,H.WIDTH,SHARPNESS,COLOR TEMPERATURE(6500K,USER),INFORMATION,OSD POSITION,LANGUAGE,RECALL |
| OPERATING CONDITIONS       | TEMPERATURE    | 32°F TO 104°F(0°C TO 40°C)                                                                                                                                   |
|                            | HUMIDITY       | 10-90%(NON-CONDENSING)                                                                                                                                       |


# Touch Package User Guide

1

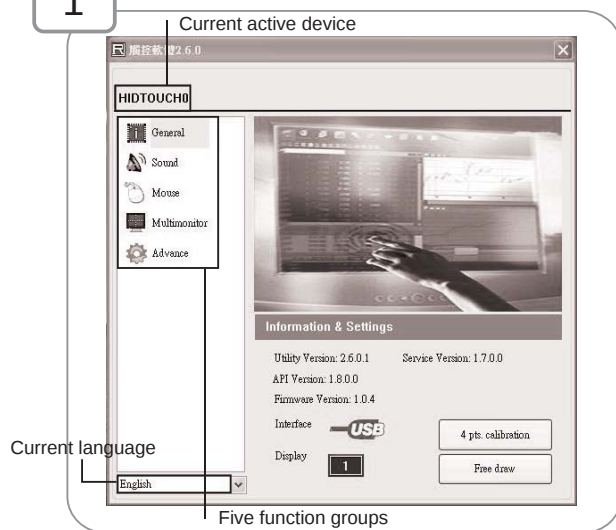

1. Please install touch package software (setup.exe or setup64.exe) from included "AIM CD.
2. After install, please click on Touch Package icon to open up setting menu for touchscreen
3. Touch package provides a complete touch control solution including resistive touch panel and optical touch panel. Touch package software is a utility and used for adjusting our touch control devices to optimize our touch solution. Touch package contains 5 function groups (see Pic1). general, sound, mouse, multi-monitor, and Advance. This user guide will explain all of information or parameters in function group order.

2

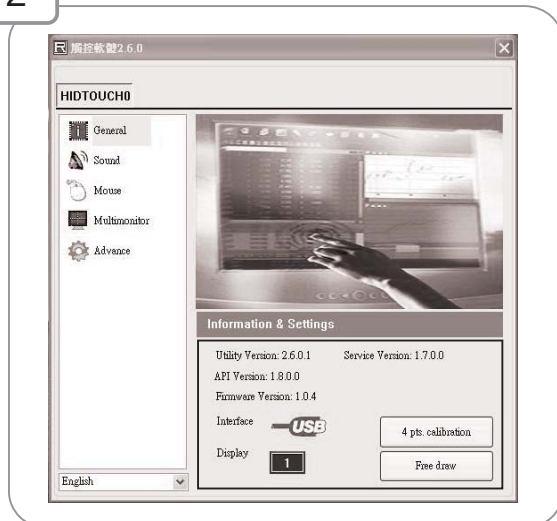


## 1 、 General page

There are 7 information items and 2 tool function in the general page (see Pic2). The followings is to explain all the items.

1. Utility version : Touchpack.exe version.
2. Service version : Touchpackservice.exe version.
3. API version : touchapi.dll version.
4. Driver version : Rs232 device driver version.
5. Firmware version : Our touch controller's code version.
6. Interface : Touch controller's communication interface. It can be USB or RS232.
7. Display : This controller is reporting the mouse point to system display number.
8. 4 pts. calibration : This is the simplest calibration way to support customer to made touchdevice report correct position.
9. Free draw : This is a tool to user to draw mouse point to indicate how precise your touch solution now.

3

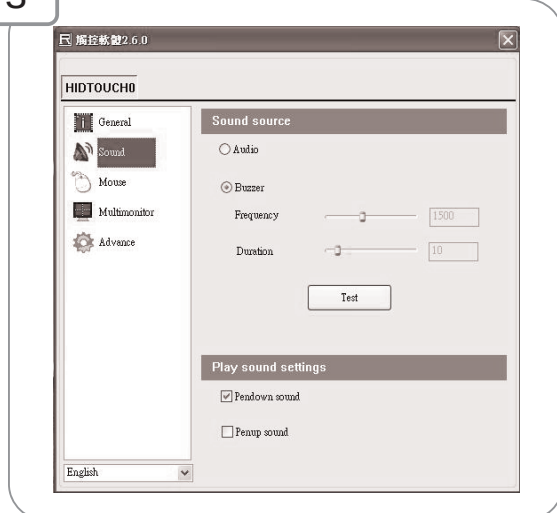


## 2 、 Sound page

The sound page supports user to set the items about sound settings (see Pic3).

1. Sound source : There are two sound sources, audio sound and buzzer sound. So, user can choice audio or buzzer radio button. If user selects buzzer mode, user can also adjust the frequency and duration to play the sound you like. The test button can try to play the sound you set.
2. Play sound settings : User can check first pen down to play sound or/and pen up to playsound. If both uncheck, it means that no sound to play.

# Touch Package User Guide

4

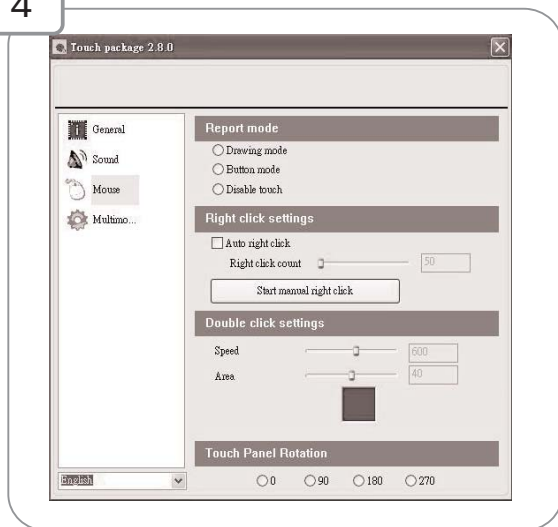


## 3 、 Mouse page

The mouse page has four main items, report mode, right click settings, double click settings, touch panel rotation ( see Pic4 ) .

1. Report mode item : User can select drawing mode to continue report all points that touch controller senses. Button mode only report two points, first pen down and lift up points. Disable touch will made touch device to not report any point, user must use mouse to return the others to work properly.
2. Right click settings : Our touch solution can generate right click in two ways.
  - I. Auto right click : If you pen down and no move for a while, touch device will generate right click event automatically.
  - II. Manual right click : User launch the "Start manual right click" button and touch solution will show a right click window at the right-bottom corner. If user want to generate a right click, user can hit this window once and then pen down and lift to have a right click.
3. Double click settings : These two parameters, speed and area, are used to change Windows OS parameters about generating double click conditions. The bottom of these two shows the test area and user can click to test the settings to feel your settings best.
4. Touch Panel Rotation : Cooperate with the picture of the display to rotate, touching and accusing of the function needs and then rotating too, very whirling angle is at present : 0° ( Default ) 、 90° 、 180° 、 270° 。

5

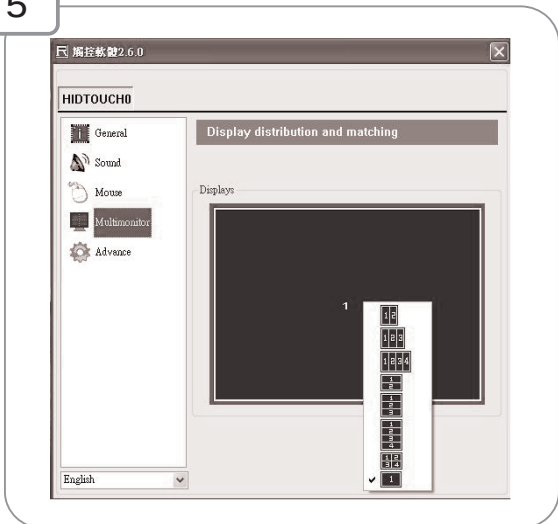


## 4 、 Multi-monitor page

This page function can be supported on the versions, Windows 2K, XP, and Vista. The multi-monitorpage shows the system display distribution in time. It also supports split display to fit some VGAcards. User can right click to pull down the split display type to match your VGA card (see Pic 5) andthen the page will show your settings. User can click display area to show a matching program to link the relation between touch device and display.

# Touch Package User Guide

6

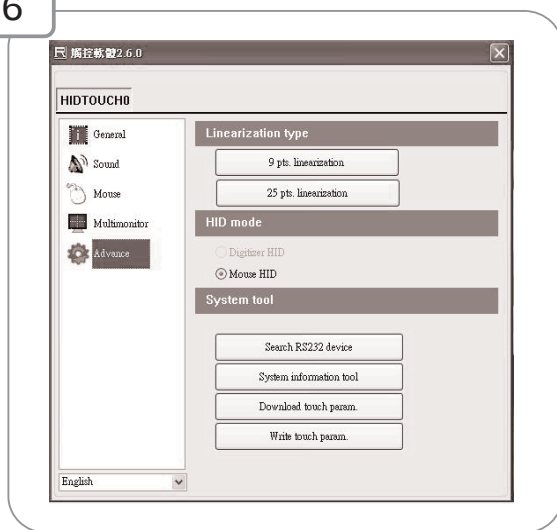

## 5 、 Advance page

In the advance page (see Pic6), there are three main item functions, Linearization, HID mode, and system tools.

1. Linearization : Some kind of touch sensor, special in 5-wires resistive sensor, need 9 points or 25 points reference points to precisely positioning. User can use the “9 pts linearization” tool or “25 pts linearization” to enhance your touch sensor.
2. HID mode : We support the digitizer HID mode for windows vista. This mode can operate gesture functions provided by windows vista home advance and upper. The mouse HID can work on any windows series versions. So, the touch device is default on the mouse HID mode.
3. System tools : The “search Rs232 device” button is used for search our none-plug and play RS232 device. The “system information tool” button will launch user’s installation computer information (see Pic7) to provide some information for analysis engineer to trace system problems. The “Download touch par am.” button provides user a tool to gather touch device’s parameters into a file and send to manufacture engineer to analysis when user meet some problems. If manufacture engineer find any wrong, he can fix and save as the other file and send back user. User can use the “Write touch param.” button to open above file andwrite into his touch device.

# iMON OEM Touch LCD

## H/W and S/W Installation Guide

### Connection Cables



D-SUB 15P M/M CABLE



USB CABLE



IR receiver connection




4-PIN/DC POWER CABLE



FRONT PANEL CONTROL CABLE

### Touch LCD Hardware Installation

For hardware installation, please connect each cables as below.

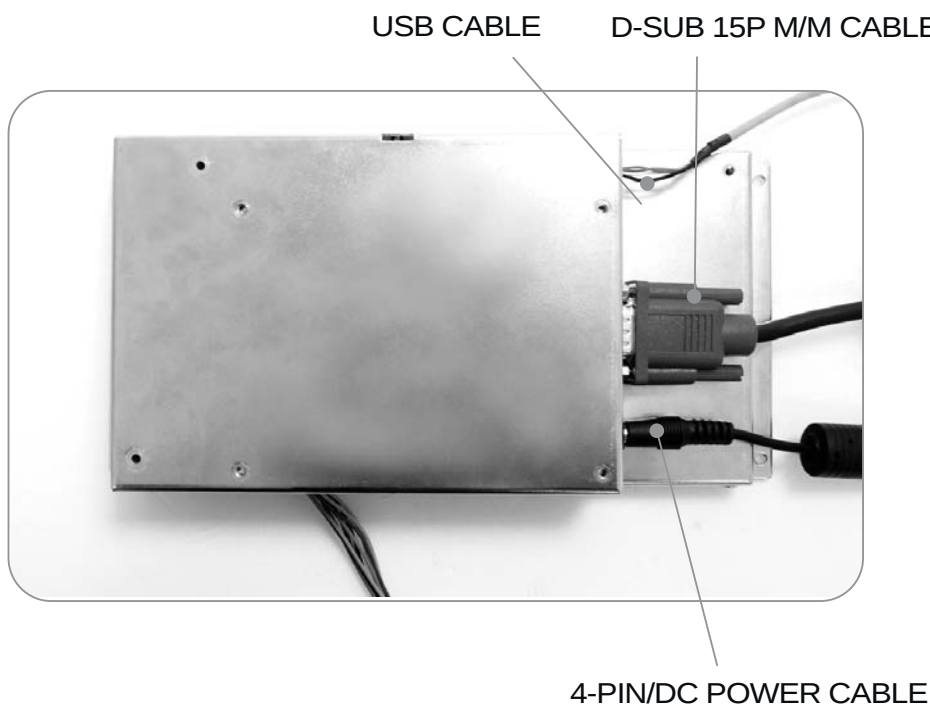

USB CABLE

D-SUB 15P M/M CABLE

4-PIN/DC POWER CABLE

# iMON OEM Touch LCD

## H/W and S/W Installation Guide

### Dual Monitor Setting for FrontView

In order to use iMON OEM Touch LCD and FrontView application properly, please make setting of your display as like below before you install the iMON/iMEDIAN software installation.

1. Connect VGA cable of iMON OEM Touch LCD to secondary VGA port on your computer.
2. Set iMON OEM Touch LCD display as your secondary monitor using Extended Desktop.
3. Set screen resolution of secondary monitor as 800\*600.
4. Set refresh rate of secondary monitor as 60Hz.

After you finish the dual monitor setting as like above, please install the iMON/iMEDIAN software as below.

### iMon / iMEDIAN Software Installation




1. Begin iMON/iMEDIAN software installation by clicking "iMONSetup.exe" and restart computer.
2. After restarting, iMON Manager will run automatically and launch "iMON Initial Setup Wizard" window.
3. In "Quick Launch", select application for Quick Launch button in iMON remote controller.




4. In "FrontView", select "Automatically" and finish "iMON Initial Setup Wizard".


## iMON OEM Touch LCD H/W and S/W Installation Guide

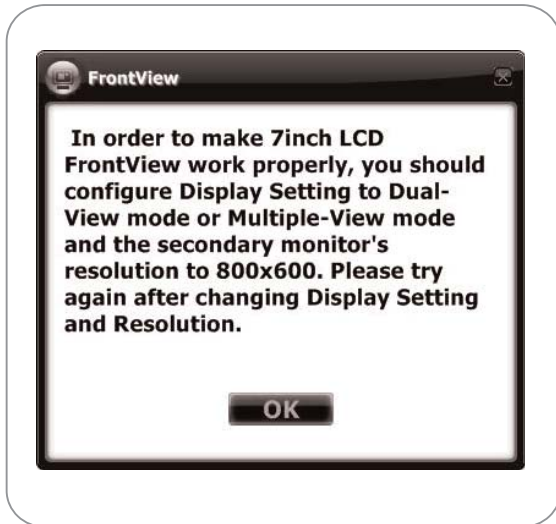

5. Unless secondary display is enabled, below warning window will be shown.  
User cannot use FrontView for 7" Touch LCD but only iMON remote controller.

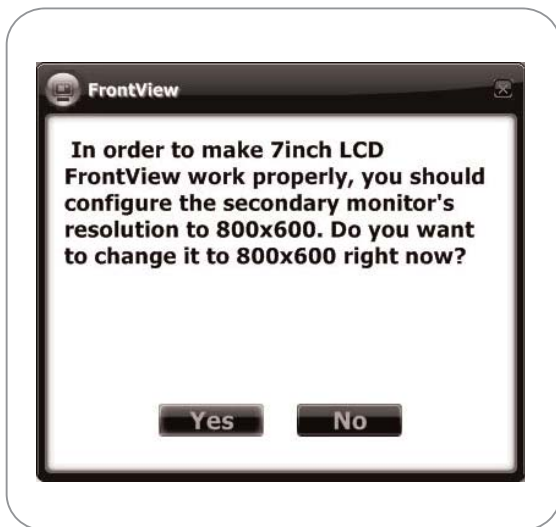

6. Make sure that iMON OEM Touch LCD is matched to secondary monitor with 800\*600 resolution in Dual-View mode. IF Touch LCD's resolution is not 800\*600, warning window pops up and advises you to change resolution to 800\*600(60Hz)

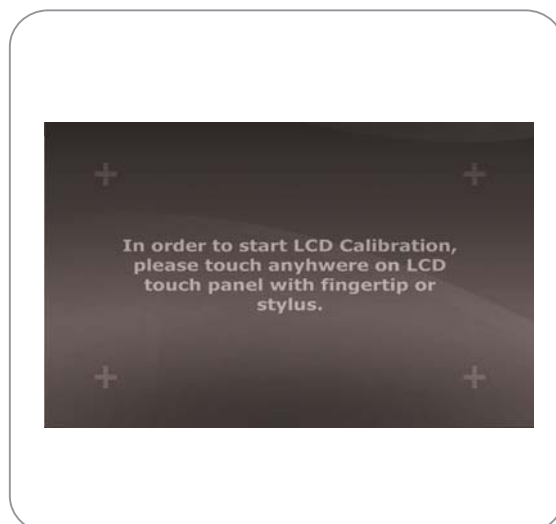

7. Once FrontView starts to work normally, Touch LCD will show calibration setup automatically.

## iMON OEM Touch LCD H/W and S/W Installation Guide



8. Calibration process will begin by touching on Touch LCD. Press white cross mark (+) in every corners (from left top > right top > left bottom > right bottom) for 1 or 2 seconds, then calibration is done.

### Check the Feature of FrontView

SoundGraph, Inc. provide FrontView for Touch LCD from Feb. of 2007. This new Graphical User Interface is designed for top level HTPC product on the market. Various system and media information are displayed through the big front LCD display. All these information can be controlled by finger or stylus Touch.



1. When installation is finished, FrontView starts 'Display Mode'. It will start to display various system information as left.

## iMON OEM Touch LCD H/W and S/W Installation Guide



2. While FrontView is running, user touches screen and FrontView will go to the 'Control Mode' and it shows the Media Control Buttons (Playback/Pause/Stop/Next/Prev and so on) as left.




3. When iMEDIAN, Media Center or WinAmp plays media files, FrontView automatically changes to the Media Display Mode. It will show the various media information. In case of music file playing, graphic EQ will be displayed though Touch LCD.

When graphic EQ is not working normally, check "EQ Source" setting in iMON Manager

## Warranty Information

During the warranty period, assistance for replacement or exchange of defective components is available at the place of purchase. Please bring your receipt and warranty certificate for the proof of purchase. The warranty does not cover repair or exchange of the product resulting from misuse, accident, modification, unsuitable physical or operating environment, improper maintenance by you, or failure caused by a product for which SilverStone is not responsible for. The warranty is voided by removal or alteration of product or parts identification labels.

Warranty period is region specific, please contact your reseller or SilverStone authorized distributor for more information

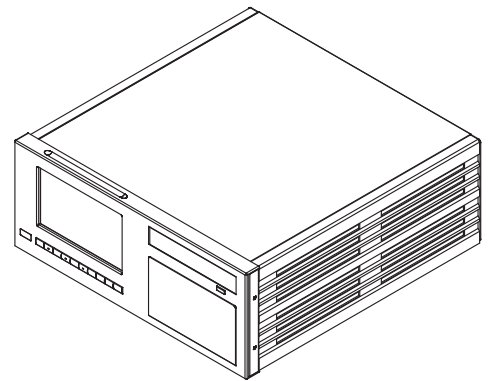

This instruction will help you to make the most out of your PC enclosure. Please read through it before installation. Also, please keep your PC enclosure receipt and this instruction in safe place for the future reference.

We, SilverStone Technology, hope you will enjoy our product. If you have any comments or suggestions, please email to [support@silverstonetek.com](mailto:support@silverstonetek.com). Thank you for choosing and supporting our product.

To be valid, this sheet must be filled out by  
your salesperson at the time of purchase.

Store :

Purchaser :

Purchase date :

Model No. :

Serial No. :

SILVERSTONE