



1.8L BLACK RICE COOKER

Product Instructions

Product No. 2000302

vonshef

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.


SCAN ME



Need further help?
support@vonhaus.com


See our full range at
www.vonhaus.com

Product Diagram

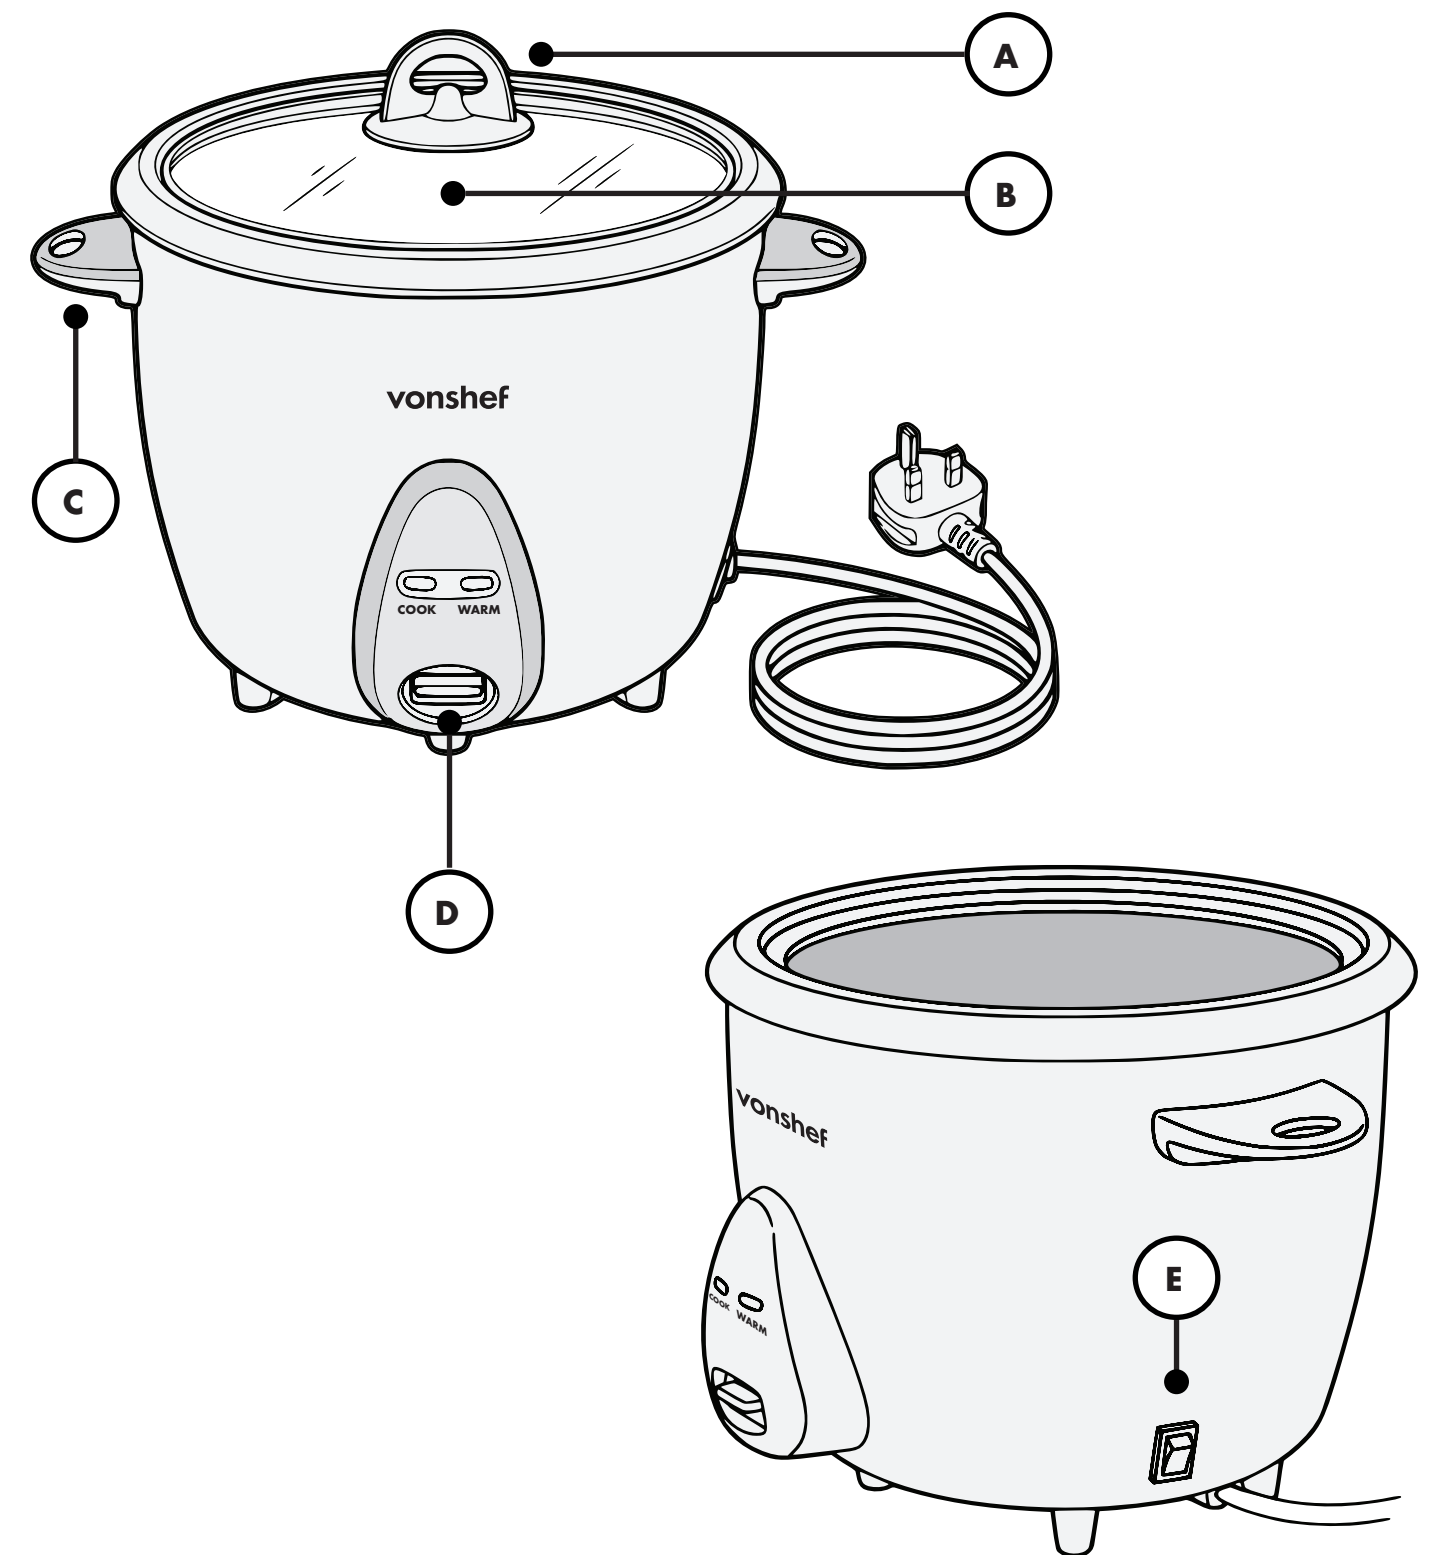

- A. Lid Handle
- B. Glass Lid
- C. Base Handles
- D. Switch Control (COOK / WARM)
- E. ON/OFF Switch

Components

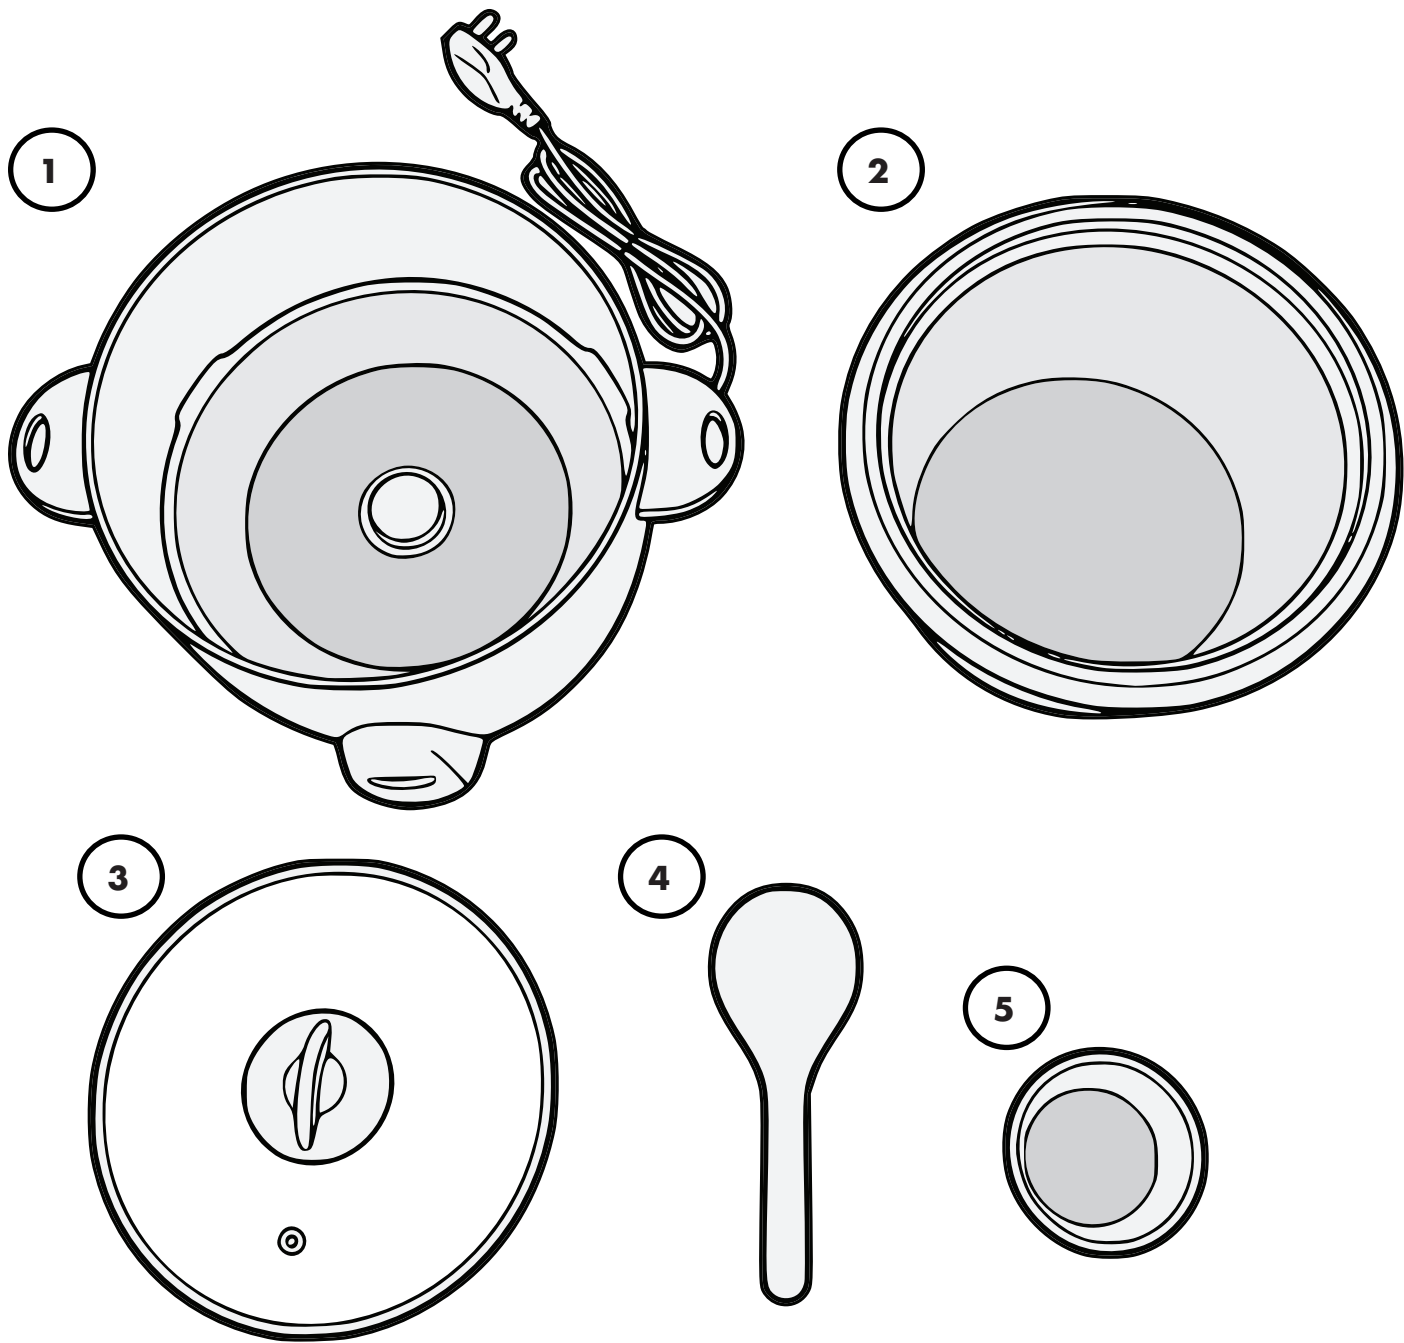

- 1. Main Unit
- 2. Removable Non-Stick Inner Pot
- 3. Glass Lid
- 4. Rice Spatula
- 5. Measuring Cup (180 ml)

Cooking Positions

Cooking Rice


- 1. Measure rice using the supplied cup (1 cup = 180 ml).
- 2. Rinse rice until the water runs clear to remove excess starch.
- 3. Place rice in the inner pot and add water to the corresponding level mark, or refer to the table below.
- 4. Close the lid, plug in, and press the switch down to **COOK**.
- 5. When the switch flips to **WARM**, let the rice rest for 10–15 minutes for best texture, then fluff with the spatula.

Uncooked Cups	Water Level	Cooking Time
3	3	20–25 min
5	5	22–27 min
8	8	25–30 min
10	10	28–32 min

Cooking times are measured from when the switch automatically flips to **WARM**.

Cooking Other Grains?

Use the same water-to-grain ratio as recommended for rice.

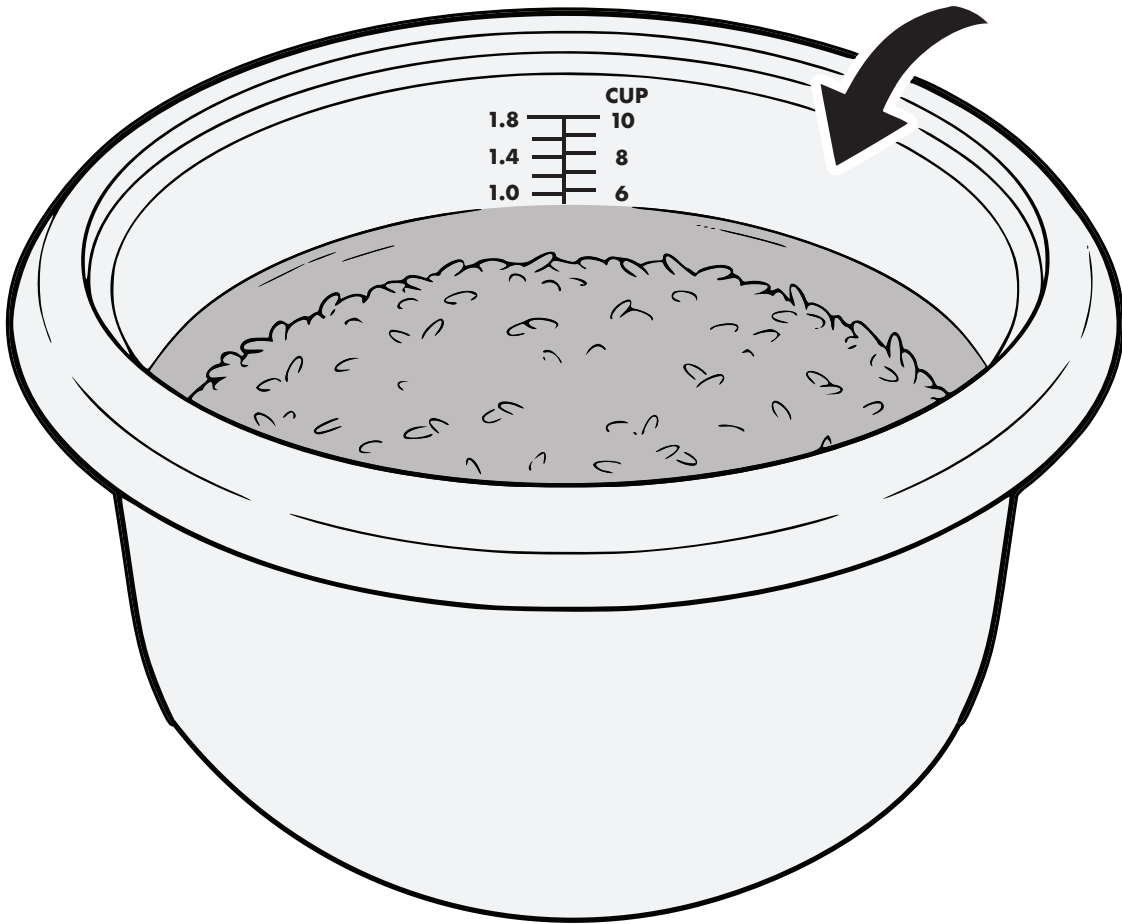

Information

Important Safety Notice

This product is not suitable for use by children or by individuals with physical, sensory, or mental impairments that may limit their ability to operate the equipment safely, unless they have been given supervision or instruction concerning the safe use of the product by a person responsible for their safety.

Improper use may result in serious injury. Always ensure the operator is capable of understanding and following all safety instructions provided in this manual.

Safety Warnings

- For household use only. Do not use outdoors.
- Do not immerse the heating base in water or any liquid.
- Place on a flat, heat-resistant surface away from flammable materials.
- Do not operate if the plug, cord, or inner pot is damaged.
- Unplug when not in use and before cleaning.
- Avoid contact with steam—use handles or knobs only.
- Do not cover vents or operate without the lid properly closed.

Before First Use

1. Remove all packaging.
2. Wash the lid, inner pot, and accessories in warm soapy water. Rinse and dry.
3. Wipe the heating base with a damp cloth. Do not immerse.

Cleaning and Maintenance

- Always unplug and allow the cooker to cool completely.
- Remove the inner pot and wash it, the lid, and accessories in warm soapy water, or place on the top rack of a dishwasher.
- Wipe the heating plate and outer body with a soft damp cloth. Never use abrasive pads.
- Ensure the safety thermostat and magnetic switch are free of food residue.
- Store with the lid slightly open to prevent odours.

Keep-Warm Function

The cooker automatically keeps rice warm at approximately 60–70°C for up to 12 hours. For best flavour and food safety, consume within 5 hours.

Troubleshooting

Switch does not stay at COOK

The inner pot is not in full contact with the heating plate. Clean the plate and the bottom of the pot.

Rice undercooked or too hard

Insufficient water. Add a little more and restart.

Rice overcooked or too soft

Too much water. Reduce the amount next time.

Water spills out

The pot is overfilled. Do not exceed $\frac{3}{4}$ of the pot height.

Usage & Safety



Please read all instructions carefully before use and retain for future reference.



CAUTION: Hot surfaces.



Keep all electrical components dry at all times. Water and electricity create serious safety hazards that can result in injury or death.

Information

Customer Service

If you are having difficulty using this product and require support, please contact support@vonhaus.com

Warranty

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at support@vonhaus.com

Vonhaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.
Unit 30, Stakehill Industrial Estate
Middleton, Manchester, M24 2RW

EU Authorised Representative

Authorised Representative Service
77 Camden Street Lower
Dublin, D02 XE80
Ireland



Environmental Protection

Do not dispose of electrical products with household waste. Recycle where facilities exist.

Contact your local authority or retailer for recycling advice.

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

