

UWJ
Model: K700

PORTABLE KARAOKE MACHINE OWNER'S MANUAL



OWNER'S MANUAL

TABLE OF CONTENTS

1.INTRODUCTION

2.WHAT'S IN THE BOX

3.PRODUCT OVERVIEW

3.1 TOP PANEL

3.2 WIRELESS MICROPHONE

4.PLACEMENT

5.POWER ON

6.USING YOUR KARAOKE MACHINE

6.1 BLUETOOTH CONNECTION

6.2 USB CONNECTION

6.3 TF CARD CONNECTION

6.4 AUX CONNECTION

6.5 MUSIC CONTROLS

6.6 WIRELESS MICROPHONE

6.7 MIC PRIORITY / MUSIC ONLY MODE

6.8 TWS MODE

6.9 LED LIGHT EFFECTS

6.10 WIRED MICROPHONE, INSTRUMENT &
SOUND MIXING

7. CARRYING YOUR KARAOKE MACHINE

8. COMPLIANCE

9. IMPORTANT SAFETY & CARE NOTES

10.TROUBLESHOOTING

 
11.FCC Statement

12.IMPORTANT SAFETY INSTRUCTIONS – BATTERY WARNING

1. INTRODUCTION

Congratulations on your purchase! This manual includes information about the Portable Karaoke Machine. Please take a few minutes to read this manual before use. It includes product information, setup instructions, operating guidance, Read and understand all safety instructions before using this product. If you have any questions about this product, setup, or operation, please contact our customer service team.


2. WHAT'S IN THE BOX

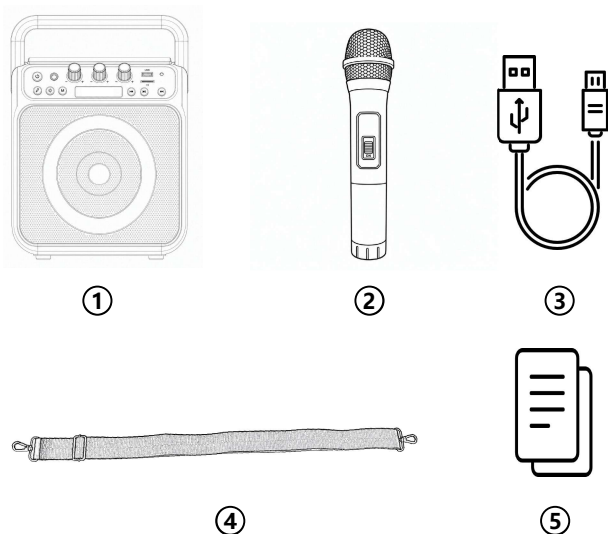

- ① Main Unit ×1
- ② Wireless Microphone ×2
- ③ USB-C Charging Cable ×1
- ④ Shoulder Strap ×1
- ⑤ User Manual ×1

3. PRODUCT OVERVIEW

3.1 Top Panel

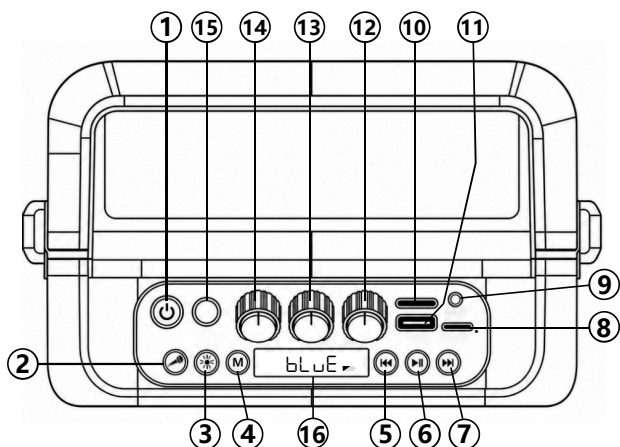

① Power Button

Press this button to turn the karaoke machine on or off. Once the wireless microphone is powered on, it will automatically pair with the karaoke machine with voice prompts.

② Mic Priority / Music Mode Button

Short-press to enable or disable Music-Only Mode. Long-press to enable or disable Mic Priority Mode.

③ LED Button

Short press to cycle through 6 lighting modes. LED lights flash in sync with music beats.

④ Mode Button

The karaoke machine enters Bluetooth mode by default when powered on, and "BLUE" flashes on the display. Short press the Mode button to switch between available input modes: Bluetooth, AUX, TF, and USB.

⑤ Previous Track Button

Short press to play the previous track. Press and hold to rewind.

⑥ Play / Pause Button

Short press to play or pause music. The LED display shows "PAUS" LED display when music is paused. In Bluetooth mode, press and hold to disconnect the Bluetooth connection.

⑦ Next Track Button

Short press to play the next track. Press and hold to fast forward.

⑧ DC 5V Charging Port

Charge the karaoke machine with the supplied USB-C charging cable or another standard USB-C cable. Power adapter is not included.

⑨ AUX Input

Connect an external audio device via an AUX cable, then press the Mode button to switch to AUX mode.

⑩ TF Card Slot

Insert a TF card and press the Mode button to select TF mode and play MP3 files.

⑪ USB Port

Insert a USB flash drive and press the Mode button to select USB mode and play MP3 files.

⑫ Master Volume Knob

Turn clockwise to increase master volume. Turn counterclockwise to decrease master volume. The display shows the master volume level from U00 to U32.

⑬ Mic Echo Knob

Rotate to adjust the microphone echo level. The display shows the echo level from E-00 to E-16.

⑭ Mic Volume Knob

Rotate to adjust the microphone volume. The display shows the microphone volume level from N-00 to N-16.

⑮ MIC / Instrument Jack

For connecting a wired microphone or musical instruments such as guitar.

⑯ LED Display Screen

Shows playback mode, elapsed play time, battery level, master volume, mic volume, and echo level.

3.2 Wireless Microphone LED display

• Wireless Mic Power Button

Press and hold to turn the wireless microphone on or off.

• Connection Indicator Light


Flashes while waiting to connect. Stays solid once the wireless microphone successfully connects to the karaoke machine.

4. PLACEMENT

Caution:

- Do not sit on the karaoke machine, press it with force, or place heavy objects on it. Otherwise, it may cause malfunction, personal injury, or property damage.
- Place the karaoke machine on a flat, stable surface and make sure the rubber feet side is facing down.

5. POWER ON

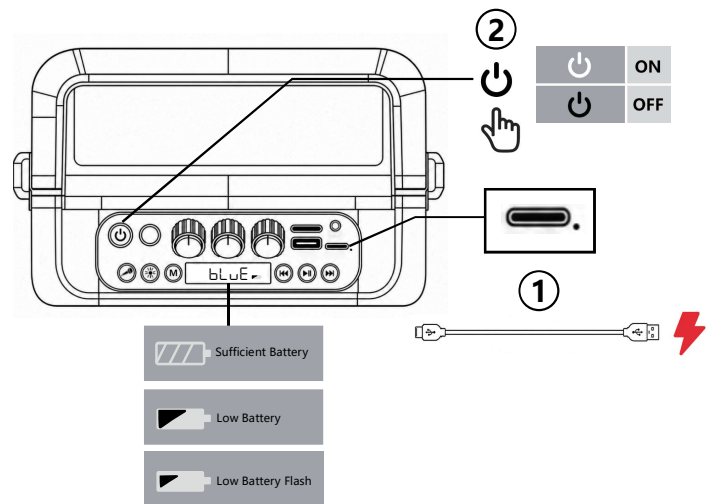

Caution:

- ① Use a standard 5V USB adapter to charge the karaoke machine.
 - Recommended adapter output: 5V/1A or higher current, such as 5V/2A.
 - Do not use fast chargers or adapters with output voltage higher than 5V.
 - Adapters with output lower than 5V/1A are not recommended, as charging may be slow or unstable.
 - The karaoke machine can be used while charging.
 - Use the supplied USB-C cable or another standard USB-C cable.
- ② Press to power on or off.

Tips:

- Fully charge the karaoke machine before first-time use to help protect the built-in battery.
- To protect battery life, fully charge the karaoke machine at least once every 3 months when not in use for a long time.
- Battery life will vary depending on usage patterns and environmental conditions.


6. USING YOUR KARAOKE MACHINE

Notes:

- Only one audio source can be played at a time.
- The karaoke machine starts in Bluetooth mode by default.
- Other modes will not be displayed or selected if a TF card, USB flash drive, is not connected.
- Press the Mode button to switch between available modes.
- For better Bluetooth performance, keep your Bluetooth device within the effective connection range of the karaoke machine and avoid walls or strong wireless interference.

6.1 Bluetooth Connection

You can connect the karaoke machine to Bluetooth-enabled smartphones, tablets, or other audio devices.

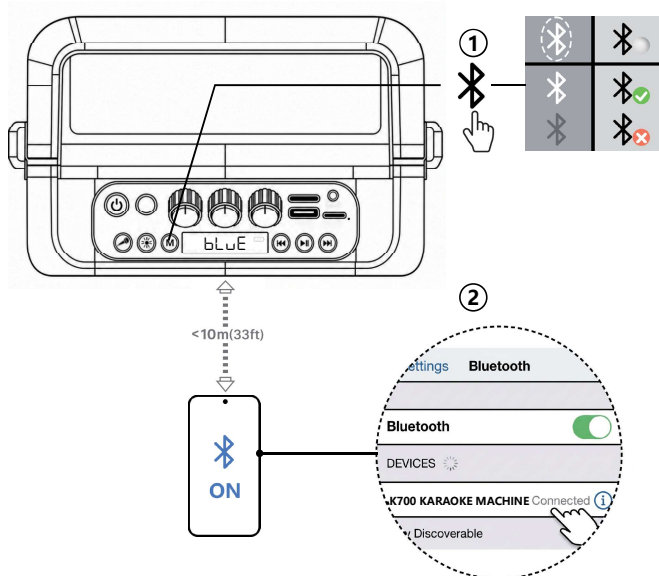

Pairing Status:

- ① When powered on, the karaoke machine enters Bluetooth mode by default, and "BLUE" flashes on the LED display.
- ② Turn on Bluetooth on your device and search for "K700 KARAOKE MACHINE".
 - Select "K700 KARAOKE MACHINE" to complete the connection.
 - Once connected successfully, the display stops flashing and a voice prompt will sound.
 - You can now play music from your Bluetooth device.


Notes:

- The karaoke machine will automatically reconnect to the last paired device after powering on again.
 - If the connection fails, turn Bluetooth off and back on your device, then reconnect.
- Bluetooth performance may be affected by distance, walls, or nearby wireless devices.

Disconnect Bluetooth:

- In Bluetooth mode, press and hold the Play / Pause button, or turn off Bluetooth on your device.

6.2 USB Connection

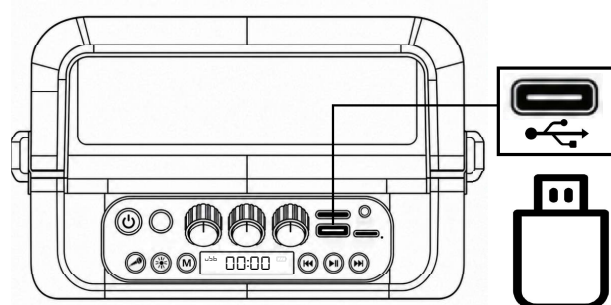


Insert a USB flash drive containing MP3 files into the USB port. "USB" appears on the LED display, and playback starts automatically.

Tips:

- The karaoke machine supports MP3 files stored on USB flash drives.
- The LED display shows the elapsed track time during playback.
- Press the Previous / Next Track button to change tracks.
- Press the Play / Pause button to pause or resume playback.

6.3 TF Card Connection


Insert a TF card containing MP3 files into the TF card slot. "TF" appears on the LED display, and playback starts automatically.

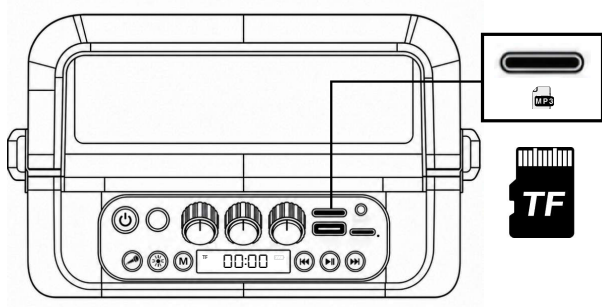

Tips:

- The karaoke machine supports MP3 files stored on TF cards.
- The LED display shows the elapsed track time during playback.
- Press the Previous / Next Track button to change tracks.
- Press the Play / Pause button to pause or resume playback.

6.4 AUX Connection

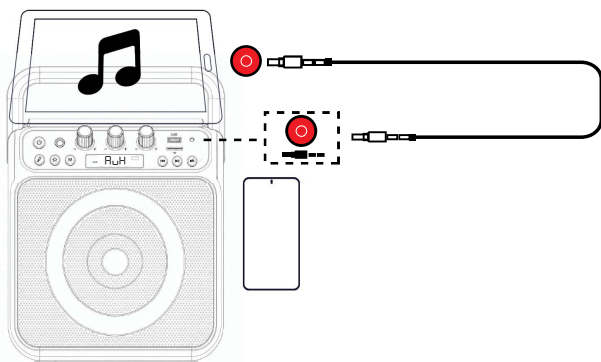


- Connect an external audio device to the AUX input using an AUX cable.
- Press the Mode button to select AUX mode. "AUX" appears on the LED display.
- Start playback on the connected device.

Note:


Track selection using the karaoke machine controls may not be available in AUX mode. Use the connected device to control playback.

6.5 Music Controls

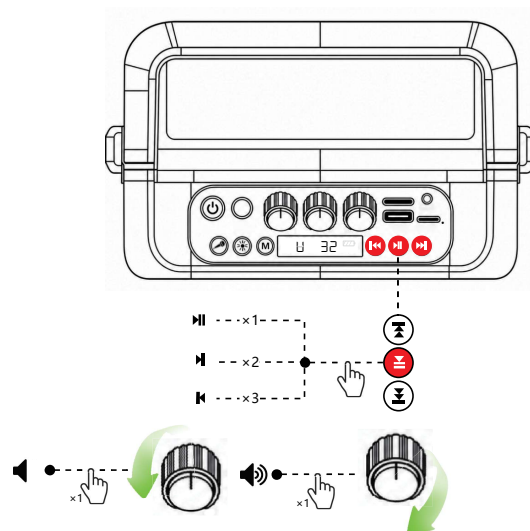


- Short press the Play / Pause button to play or pause music.
- Short press the Previous Track button to play the previous track. Press and hold to rewind.
- Turn MUSIC VOL knob: Clockwise = louder music volume; Counter-clockwise = quieter music volume. Screen shows U 00-U 32.

6.6 Wireless Microphone

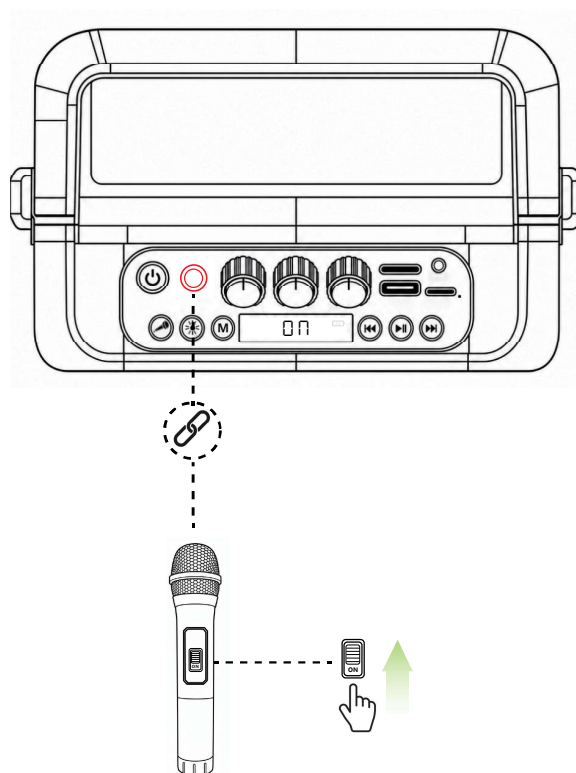

- The wireless microphone will automatically pair with the karaoke machine once both units are powered on.
- Turn on the karaoke machine.
- Slide the microphone power switch to OFF to power on the wireless microphone.
- The microphone indicator light flashes during connection.
- The indicator stays solid once connected successfully.
- Short-press: Enable/disable Music-Only Mode (Vocal cancel, screen shows ON/OFF with prompt tone).
- When activated, original vocals of songs are suppressed for karaoke sing-along.


Battery Installation: Install 2 × AA batteries as shown. Batteries are not included.

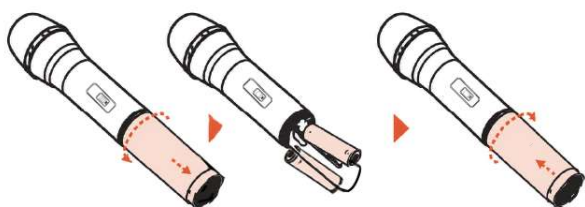

Notes:


- Keep the wireless microphone within the effective connection range of the karaoke machine.
- If the microphone does not connect, turn off both the karaoke machine and the microphone, then turn them on again.

6.7 Mic Priority / Music Only Mode

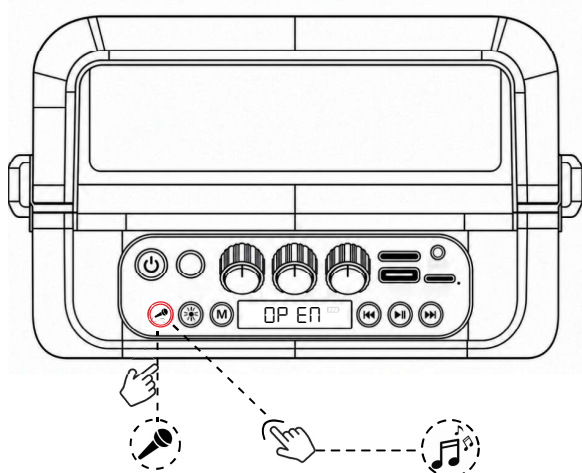

- Long-press: Enable/disable Mic Priority Mode (Mute background audio, mic-only output, screen shows OPEN/OFF with prompt tone).

6.8 TWS Mode

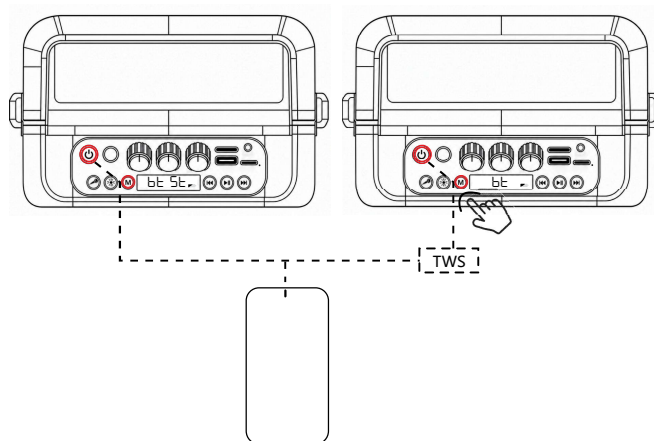


- Power on both karaoke machines and enter Bluetooth mode.
- Under Bluetooth mode, long-press the MODE button on **either unit** to activate the TWS function; the screen shows "btst".
- A prompt tone will sound upon successful connection.
- After connection, the first unit displays "btst" and the second unit displays "bt".
- Long-press MODE again to exit TWS mode.

6.9 LED Light Effects

- Short press the LED button to switch lighting modes.
- LED lights flash in sync with music beats.
- Press repeatedly to cycle through different light styles.
- Light effects may vary depending on the music rhythm and selected mode.

6.10 Wired Microphone, Instrument & Sound Mixing


Connect a wired microphone or compatible instrument to the MIC / Instrument jack.

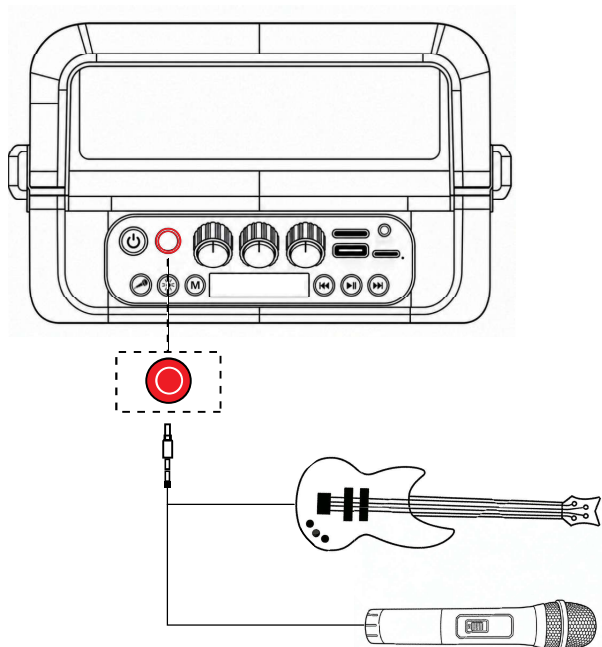

7. CARRYING YOUR KARAOKE MACHINE

Cautions:

- Before carrying the karaoke machine, disconnect all connecting cables.
- To avoid personal injury or property damage, hold the karaoke machine firmly while carrying it.
- Use the built-in handle or the supplied shoulder strap to carry the karaoke machine.
- When using the shoulder strap, make sure it is securely attached before carrying.
- Do not shake, drop, or strongly impact the karaoke machine.
- Keep the karaoke machine away from water, heat sources, and sharp objects.

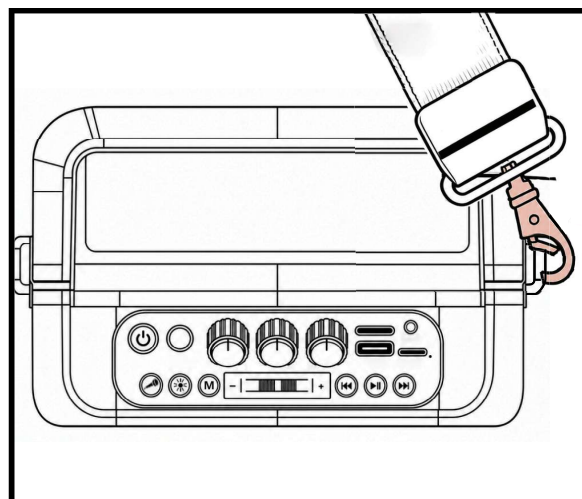

8. COMPLIANCE

This product is designed for personal audio playback and karaoke use only.

Wireless and Audio Functions

- This karaoke machine supports audio playback via Bluetooth, USB flash drive, TF card, and AUX input.
- Unavailable modes will not be displayed or selected if the corresponding device or cable is not connected.

Battery and Charging

Charge the karaoke machine through the USB-C charging port using the supplied USB-C charging cable or another standard USB-C cable.

- Use a standard 5V USB power adapter rated at 1A or higher (e.g., 5V/2A).
- Fast-charging adapters are not supported.
- Power adapters rated below 5V/1A are not recommended, as charging may be slow or unstable.
- Keep the charging port clean and dry before charging.

Battery Safety and Care

- Do not expose the battery or karaoke machine to excessive heat, open flames, water, rain, direct sunlight, or other wet locations.
- Do not disassemble, puncture, crush, burn, or modify the built-in lithium battery.
- If the karaoke machine will not be used for an extended period, fully charge it at least once every 3 months to help protect battery life.

Use and Care

- Avoid listening at high volume for long periods to help protect hearing.
- Adult supervision is recommended when children use the product.
- Clean the karaoke machine with a soft, dry cloth only. Do not rinse or immerse the unit in water.
- Store the karaoke machine in a cool, dry place away from heat, fire, moisture, and flammable materials.

9. IMPORTANT SAFETY & CARE NOTES

- Use only a standard 5V USB adapter and the supplied USB-C charging cable or another standard USB-C cable.
- Do not use fast chargers or adapters with output voltage higher than 5V.
- Do not use the karaoke machine near water, rain, sinks, bathtubs, wet floors, or other wet locations.
- Do not disassemble, puncture, crush, burn, or expose the built-in lithium battery to high temperature.
- Avoid listening at high volume for long periods to help protect hearing.
- Adult supervision is recommended when children use the product.
- Clean with a soft, dry cloth only. Do not rinse or immerse the unit in water.
- Store in a cool, dry place away from heat, fire, moisture, and flammable materials.

10. TROUBLESHOOTING

Note:

- Do not attempt to repair the product yourself. Check the following solutions before requesting service.

Power and Charging

Karaoke machine does not turn on

- Charge the karaoke machine through the DC 5V charging port using the supplied USB-C cable.
- If the battery is fully depleted, charge it for 30–60 minutes before turning it on.
- Make sure the charging cable and USB power adapter are working properly.

Karaoke machine does not charge

- Use a standard 5V USB power adapter.
- Make sure the charging cable is securely connected.
- Use the DC 5V charging port only. Do not use the USB playback port for charging.
- Keep the charging port clean and dry.

Buttons do not respond

- Turn the karaoke machine off, then turn it on again.
- Make sure the battery level is sufficient.
- Some controls may not be available in USB, TF, or AUX mode.

Sound

No sound or low volume

- Make sure the karaoke machine is turned on and the correct mode is selected.
- Increase the volume on both the karaoke machine and the connected device.
- Make sure the audio source is playing and not muted.
- Check that all cables are securely connected.

Excessive echo or feedback

- Reduce the Mic Echo and Mic Volume levels.
- Keep the microphone away from the karaoke machine, walls, and other reflective surfaces.

Bluetooth

Bluetooth pairing fails

- Make sure the karaoke machine is in Bluetooth mode and "BLUE" is flashing on the LED display.
- Turn on Bluetooth on your device and select "K700 Karaoke Machine" .
- If the karaoke machine is connected to another device, press and hold the Play / Pause button to disconnect it.
- Move the Bluetooth device closer to the karaoke machine and try again.

Bluetooth audio is unstable

- Reduce the distance between the Bluetooth device and the karaoke machine.
- Remove obstacles and avoid strong wireless interference.
- Disconnect Bluetooth, then reconnect.

USB / TF Card

USB drive or TF card does not play

- Make sure the USB drive or TF card contains supported MP3 files.
- Select the correct USB or TF mode.
- Remove and reinsert the USB drive or TF card.
- Try another USB drive or TF card if necessary.

USB or TF mode appears, but playback does not start

- Press the Play / Pause button.
- Remove unsupported or corrupted audio files.

AUX

No sound in AUX mode

- Make sure the AUX cable is fully inserted. Select AUX mode and start playback on the connected device.
- Increase the volume on both the karaoke machine and the connected device.

Previous / Next buttons do not work in AUX mode

This is normal in AUX mode. Use the connected device to change tracks.

Wireless Microphone

Wireless microphone does not connect

- Press and hold the microphone power button to turn it on.
- Move the microphone closer to the karaoke machine. Turn off both the karaoke machine and the microphone, then turn them on again.

No microphone sound

- Make sure the microphone is powered on and connected.
- Increase the Mic Volume level.
- For a wired microphone, check the MIC / Instrument connection.

Microphone indicator keeps flashing

- The microphone is still waiting to connect.
- Move the microphone closer to the karaoke machine.
- Restart both the karaoke machine and the microphone if necessary.

TWS

Two karaoke machines do not connect

- Make sure both karaoke machines are the same model and both are in Bluetooth mode.
- Long-press the MODE button on either unit to activate TWS pairing.
- Restart both karaoke machines and try again if pairing fails.

TWS connection is unstable

- Keep the two karaoke machines close to each other.
- Avoid strong wireless interference.
- Restart both karaoke machines and reconnect TWS.

11. FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

12.IMPORTANT SAFETY INSTRUCTIONS – BATTERY WARNING

WARNING

Risk of fire or burns. Do not disassemble, crush or puncture the battery pack. Do not expose the battery to high-temperature environments, open flame or direct sunlight. Do not short-circuit external battery contacts. Keep this device and battery away from young children. Do not discard the battery in fire or household trash. If battery leakage occurs, avoid contact with skin and eyes. Rinse affected area with plenty of water if contact happens. Only use the original supplied charging cable for charging. Do not store the device in extreme hot or cold places.