 





# Voice Amplifier User Manual

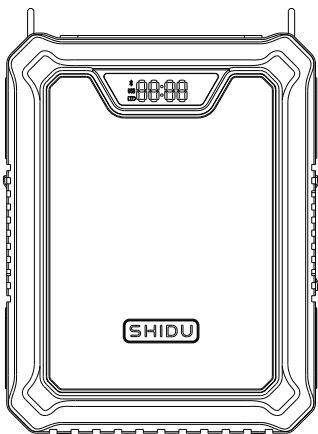

**SD-M900**

---
 
## Function Illustration:

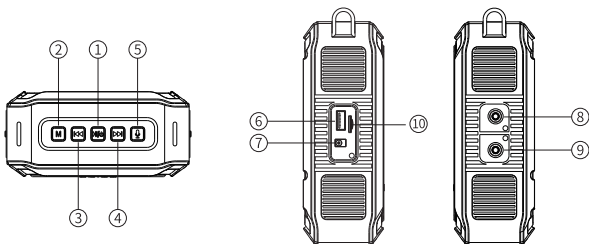

## Keys and Buttons Instructions:

### ① Power switch / play & pause Button:

- A. Long Press the button for 3 seconds to turn on/off
- B. In music playing mode, short press it to pause, short press it again to play



### ② Mode Key:

- A. Short press **[M]** to select a working mode:

Bluetooth, USB flash drive, TF card, AUX

- B. Loop: (When play music on TF card/USB flash driver)



- Long press **[M]** for about 3s to switch to single song repeat, and the characters "ONE" will display on the screen;
-

- 
- Long press  for about 3s again to switch to random play and the screen will appear "RAN";
  - Long press  for about 3s again to switch to all repeat and the screen shows "ALL"

### **Tips:**

1. The above operations are not supported when playing music via Bluetooth
2. After the speaker is turned on, the default state is "all repeat"

### **③&④ Previous/Volume – & Next /Volume +:**

In music playing mode, short press /  for previous/next song, long press for volume down/ up

### **⑤ Recording:**

Please insert a Micro SD/ TF card/ USB flash driver (due to the speaker without any storage space) and a plug-in microphone before recording

### **⑥&⑩ Micro SD/ TF card/ USB flash driver slot:**

---

---

For inserting a Micro SD/ TF card/ USB flash driver to play mp3. It is compatible with most brands, the maximum capacity is 32GB

**Notice:**

It may be unreadable when the file is large or complex

⑦ **DC 9V charging port**

⑧ **Ø3.5mm Microphone Jack:**

For plugging in microphone, the speaker supports to playback music and amplify voice simultaneously

**Noted:**


Please do not point the microphone toward the speaker to avoid howling

⑨ **AUX input:**

The speaker will enter into AUX mode automatically after plugging audio cable. You can connect with computer, mobile phone, MP3/MP4 by AUX cable to paly audio files

(Please be sure the AUX cable has been inserted)

---

and short press  to switch to audio mode if your speaker on other modes)

## Technical Parameters:

Max output power:	25W	Frequency response:	80Hz-18KHz
Output Impedance:	4Ω	Work temperature:	-10°C-45°C
Charging voltage:	DC 9V 1.2A	Amplify time:	4-6 hours
Music-play time:	5-7 hours	Charging time:	3-5 hours

 **Audio Format** supported:

MP3

WAV

WMA

APE

FLAC

## How to Play USB drive or TF card ?

Just insert a USB drive or TF card, then speaker will play music automatically. Please make sure your USB or TF card have music files




USB  
flash drive



micro  
SD card

## How to Connect Bluetooth ?

- 1 Switch the speaker, Bluetooth is the default mode with a voice prompt **Bluetooth is waiting for connection;** and the Bluetooth characters flashes on the display. (If your speaker on other modes, please short press **M** to enter into Bluetooth mode)

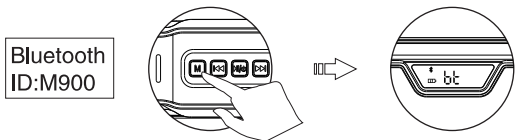



- 2 Turn on the Bluetooth function on your mobile phone, search and click "M900". Then, it with a voice prompt **"Bluetooth is connected"** after connected successfully and the Bluetooth characters stop flashing and lasts on

### Tip:

Please keep the distance between the speaker with your smartphone within 10m to keep the signal stable when playing audio files. Otherwise, the Bluetooth signal will be disconnected

---

## How to Recording?

- 1 Insert a Micro SD/ TF card/ USB flash driver into TF card slot or USB port
- 2 Plug the wired headset microphone into "MIC" port
- 3 Long press  key to start recording
- 4 Short press  again to stop recording (the files will be automatically saved in the USB flash disk/ TF card) and start to play the present recording files automatically

## How to charge the portable voice amplifier?

Low battery: The battery symbol flashes on the screen, please use the DC 9V 1.2A+ output charger in the box to charge the speaker



In charging: The battery symbol will flash, charging time is 3–5 hours

Fully charged: The battery symbol stop flashing

Note: Please fully recharge the amplifier before using it at the first time and unplug after fully charged timely

---

## How to wear voice speaker and microphone:

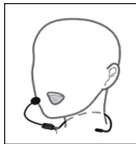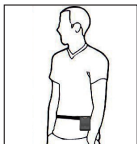

### Warm Reminder:

- 1 Take out the amplifier, fasten the waist belt to metal hooks on both sides; Then tie it on the waist or hung on your shoulder, the belt is adjustable
- 2 Wear the headset microphone and adjust the position, stay 1 – 2cm away from the mouth. Insert the other end of the 3.5mm connector into the voice amplifier' s MIC port

---

## Trouble shooting:

- 1 No sound after powered on the speaker
    - A. Turn up the voice volume up on the voice amplifier
    - B. No response after any operation: please press the switch button and hold for about 10s to reset the speaker. Then, try to switch on the voice amplifier again
  - 2 Speak with wired headset microphone, but the amplifier has no sound
    - A. Please make sure the volume of the speaker is turn up
    - B. Please confirm whether the wired microphone has been connected with the amplifier in a good condition or not
  - 3 The voice amplifier has distinct howling
    - A. Do not point the microphone toward the speaker
    - B. Wear the microphones correctly: put the microphone in front of the mouth
    - C. In a small room, please turn down the volume properly to avoid howling
-

---

## Package includes:

- 1 \* Main Machine
- 1 \* Adjustable Waistband
- 1 \* Wired Microphone
- 1 \* AUX Cable
- 1 \* User Manual
- 1 \* DC 9V 1.2A Charger



## After-sale service

---

We provides 1 year warranty and Lifelong Technical Support

 [enhongplus@163.com](mailto:enhongplus@163.com)



**RoHS**

Please be confident that Seller support is just a mail away from you in case you find any difficulty. Kindly do not hesitate to write back to us if you need any clarification or any kind of support

---