




4.65 inches

7 inches

True Wireless Earbuds

5 Hour Playtime

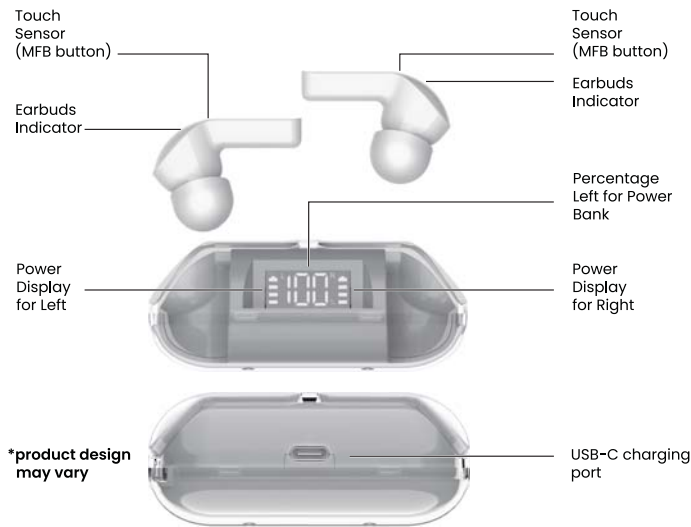

What's Included:

- Wireless Earbuds and Charging Case
- USB-A to USB-C Charging Cable

Charging:

Charging the Case

- Plug USB-C end of the charging cable into the case, plug USB-A end into a power supply of at least DC 5V 1A. **Warning:** Please use UL compliant power supply.
- Digital display will flash to show the battery capacity of charging case.
- When the battery is fully charged, 100% will show on the digital display.
- A full charge requires approximately 2 hours. When it is fully charged, it can recharge the earbuds twice.

Charging the Earbuds

- Place both earbuds back into the case, the LED light indicator on the earbuds will be red and the power digital display on the front of the charging case will show the remaining battery capacity.
- When the battery is fully charged, the red LED light will turn off, and the digital display on the charging case will also turn off soon.
- Full charge requires approximately 1.5 hours and will provide 3 hours of use.

Pairing:

Pairing:

- To pair the earbuds to your device for the first time, remove both earbuds from the case.
- After removing the earbuds from the charging case, the left earbud acts as the primary and the right as the secondary. One earbud flashes while the other turns off when both earbuds successfully enter pairing mode.
- Use the Bluetooth settings on your device to pair with **Wireless Earbuds**. When the earbuds have successfully paired, both earbuds' LEDs turn off.

Re-enter Pairing: To re-enter pairing use your device to disconnect from the earbuds.

Touch Sensor:

Quick Tip: The touch sensor is located in the center of the earbud, be sure to press here so inputs register.

Left Earbud	or	Right Earbud
Play/Pause Answer/End call	• Press	Play/Pause Answer/End call
Reject call/Voice Assistant(single using)	• Hold 2 sec.	Reject call/Voice Assistant(single using)
Turn On/Off	• Hold 5-7 sec.	Turn On/Off
Prev.Track/	• • 2 taps	Next Track
Volume Up	• • • 3 taps	Volume Down

Single Earbud Use:

- After pairing to your device, remove either earbud from the case to enter single earbud use. **Note:** Next track and volume down functions are available.

Troubleshooting:

- If one earbud is not playing music after pairing or if the earbuds are not working correctly, place both earbuds into the charging case to restart.
- If the earbuds won't turn on, recharge the battery and try again.
- If the earbuds won't charge, make sure the power supply works, is 5V 1A, not damaged and that the case is charged.
- If the earbuds still won't charge, make sure the charge pins are clear of debris as this may cause a connection issue; if they are, use a soft dry cloth to clean them.
- If the earbuds make no sound or do not show as an available device, make sure they are not paired with another device, if so unpair the device and repair to the desired device.

Safety:

- Do not use near any water source.
- Do not modify or repair this device.
- Do not use chemical detergents to clean your device, use a soft dry cloth.
- **WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

SAVE THESE INSTRUCTIONS

FCC ID: 2AC23-TWSIP Model: TWSIP Input: 5V=1A Earbud Battery Capacity: 3.7V/30mAh/0.11Wh Case Battery Capacity: 3.7V/ 250mAh/ 0.925Wh Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. gemfindyours.com 7157 Shady Oak RD, Eden Prairie, MN 55344 Distributed by Chug, Inc. For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemfindyours.com

FRONT

BACK