

 


Air Fryer



Convection Oven + Pizza Oven
+ Grill + Dehydrator

Model - AF 500

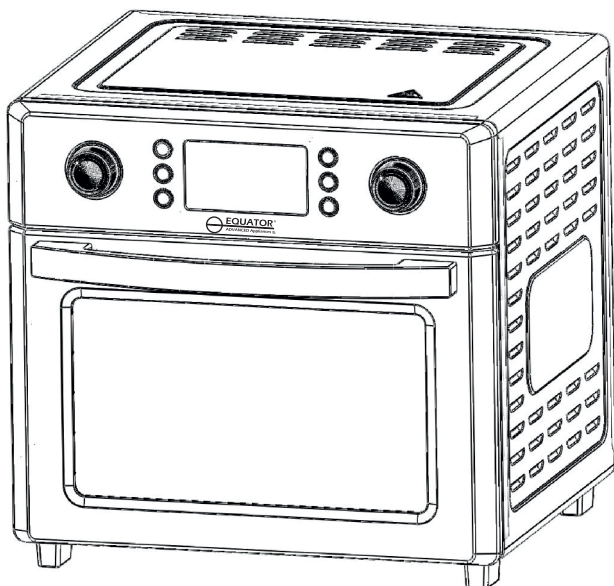

OWNER'S MANUAL

Please read the instructions carefully and keep for future reference. Information may be updated from time to time so please refer to the manual online for the latest version of the manual.

Warranty

Equator Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in USA and Canada, for a period of one year from the date of original purchase. For commercial use, the product is warranted for a period of 90 Days. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been Installed and operated in accordance with the written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner. Services would be provided from Monday to Friday between normal business hours.

Exclusions

In no event shall Equator Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

Specifically, the following work is not covered under warranty and does not constitute warranty work:

Installation - e.g. Insufficient spacing around appliance

Maintenance - e.g. Cleaning the appliance using solvents

Mishandling - e.g. Breakage of knobs, accessories or handle

Most work is covered. The defining factor is, has the machine malfunctioned (Equator Appliances is responsible) or has the customer omitted or done something to cause the machine to malfunction (customer is responsible). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you.

WARRANTY SERVICE

This warranty is given by:

Equator Appliances

10222 Georgibelle Drive, Suite 200
Houston, Texas 77043-5249

For Service:

Call: 1-800-776-3538

Email: service@ApplianceDesk.com

Web: www.ApplianceDesk.com

Business hours: 9:00 am to 5:00 pm weekdays

You can register your Warranty by either of the following methods:

1. Scan QR Code

QR Code



1. Open Smart Phone
2. Open Photo
3. Scan QR Code
4. Click the Link

2. Register online at ApplianceDesk.com/Warranty

GENERAL

Since it is a responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Equator Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

 
This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

All rights reserved. Manual subject to change without notice.

Safety

- To prevent electric shock, unplug from the outlet when not in use and before cleaning. Allow cooling before cleaning or handling.
- Do not touch hot surfaces.
- To protect against electric shock, do not place any part of the appliance in water or other liquids.
- Do not use if cord, plug or appliance is damaged.
- Do not let the cord hang over the edge of the table or countertop, where it could be pulled.
- Do not place appliance on or near a hot gas or electric burner.
- Use only oven safe cookware.
- To avoid burns, use extreme caution when removing items from appliance or disposing of hot grease.
- Do not place any of the following materials in the appliance: paper, cardboard, plastic, and similar products.
- Do not cover the drip/crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- To prevent fire, do not operate around flammable materials and keep away from items such as curtains. Do not store any items on top of the appliance when in operation.
- Do not use the outdoors.
- Do not operate under wall cabinets.
- NEVER leave the appliance unattended during use.
- Do not place cooking utensils or baking dishes on the glass door.
- Do not move the appliance if it contains any cooked items.
- Always unplug the unit from the electrical outlet prior to storing.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Parts and Accessories

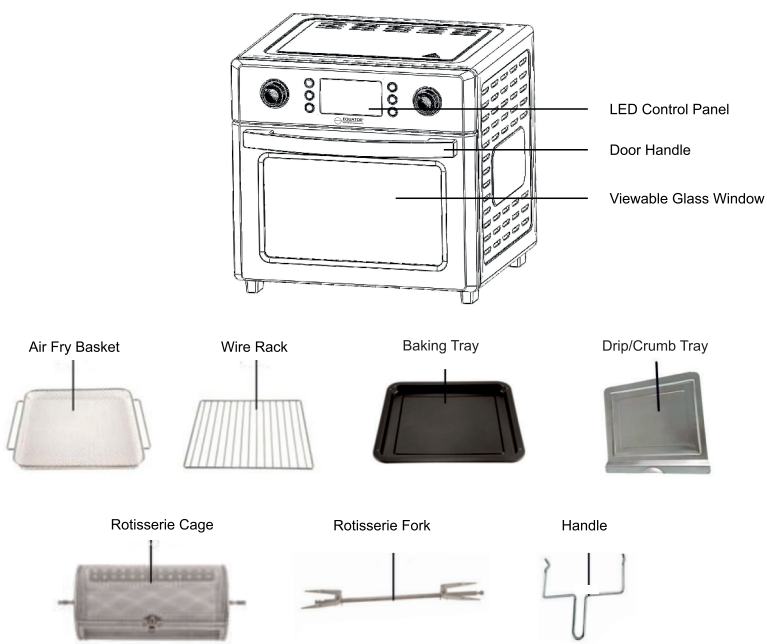

Suggested Uses

 
- Air Fry Basket: Use for french fries, chicken wings, onion rings.
- Wire Rack: Use for barbecue, bread slices, pizza.
- Baking Tray: Use for baking cookies, roasting vegetables.
- Drip/Crumb Tray: Removable tray collects food debris.
- Rotisserie Cage: Use for small bite-size food (shrimp, meatballs).
- Rotisserie Fork: Use for chicken, and other meat that requires turning.
- Handle: Use to lift and remove the Fork.

There are 3 grooves for the Air Fry Basket, Wire Rack and Baking Tray. The Rotisserie Fork and Rotisserie Cage are positioned in the middle slots on the sides.




Installation


Place the appliance on a smooth flat surface, and ensure the top, back and sides of the appliance are at least 4 inches (10 cm) away from the walls and cabinets.

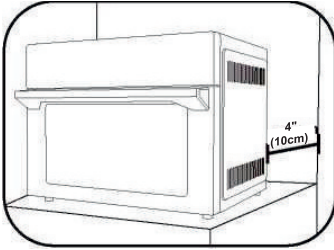

 Peel off the film from the front of the appliance.

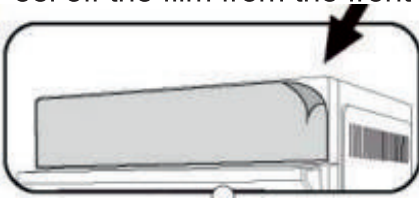

 Check the power supply, socket, etc. Confirm it meets the requirements and then connect the power supply.

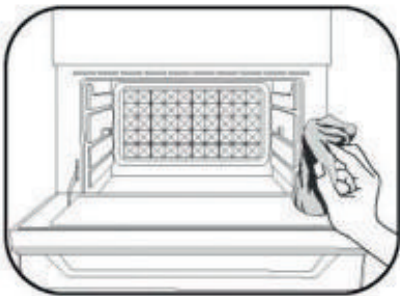

The first time in use, the appliance may emit odor or smoke. This is a normal phenomenon. It is suggested that the appliance is empty when used for the first time. Set the maximum temperature of 400°F for about 20 minutes to sterilize and remove the odor.

ControlPanel



Left Knob:

Turn the left knob to adjust the temperature or time.

Right Knob:

Turn the right knob to select the food to be cooked.

Press the knob to start cooking. To pause cooking, press again and press one more time to resume cooking.

Temperature Button:

Press the TEMP button to set the temperature. The display will flash. Turn the Left Knob to select the desired temperature.

Time Button:

Press the TIME button to set the time. The display will flash. Turn the Left Knob to select the desired time.

Rotate Button:

The ROTATE button is lit and activated automatically only when the Air Fry mode is selected along with the “Chicken” icon. The Rotate function turns the Rotisserie Fork when cooking the whole chicken.

Air Fry Button:

Press the AIR FRY button to choose from 7 pre-set items.

Oven Button:

Press the OVEN button to choose from 7 pre-set items.

Light Button:

Press the LIGHT button to turn on or off the light in the appliance. The light is on when the door is open. After 3 minutes the light automatically goes off. When the door is closed, the light goes off automatically after 30 seconds.

Setting the Time/Clock

Press the TIME button to set the time. The display will flash A for am and P for pm. Turn the Left Knob to select either A or P, then press the TIME button again.

The display will then flash the hour. Turn the Left Knob to select the desired hour, then press the TIME button again.

The display will then flash the minutes. Turn the Left Knob to select the desired minutes, then press the TIME button again.
The clock is now set.

Operation

Air Fryer:

Press the AIR FRY button to choose from 7 pre-set items. The panel with a row of 7 Air Fry icons lights up.

Rotate the Right Knob to select the item. The selected icon flashes. The time and temperature are already pre-set. Press the Right Knob to start cooking.

To manually set the time and temperature, press AIR FRY for 3 secs. Select the time and temperature using the Left Knob. If not manually set, the default time is 10 minutes, and the default temperature is 392°F.

Oven:

Press the OVEN button to choose from 7 pre-set items. The panel with a row of 7 Oven icons lights up.

Rotate the Right Knob to select the item. The selected icon flashes. The time and temperature are already pre-set.
Press the Right Knob to start cooking.

To manually set the time and temperature, press OVEN for 3 seconds. Select the time and temperature using the Left Knob. If not manually set, the default time is 15 minutes, and the default temperature is 347°F.

The fan continues to operate for 20 seconds after the oven and air fry cooking is completed.

Cooking Guide

The time and temperature guide are only for reference and can be adjusted according to different ingredients, recipes and taste requirements.

Food	Default Temperature Fahrenheit (°F)	Adjustable Temperature	Default Time (minutes)	Adjustable Time (minutes)
Fries	400°F	(120-400°F)	25 min	1-90
Wings	400°F	(120-400°F)	12 min	1-90
Chicken	360°F	(120-400°F)	30 min	1-90
Fish	360 °F	(120-400°F)	12 min	1-90
Meat	400°F	(120-400°F)	10 min	1-90
Shrimp	360°F	(120-400°F)	7 min	1-90
Dehydrate	140°F	(120-160°F)	9 hours	1-10 hours (30-minute increments)
Cake	340°F	(120-400°F)	30 min	1-90
Cookies	340°F	(120-400°F)	30 min	1-90
Bread	380°F	(120-400°F)	18 min	1-90
Pizza	400°F	(120-400°F)	8 min	1-90
Grill	340°F	(120-400°F)	30 min	1-90
Broil	450°F	(120-400°F)	5 min	1-90
Thaw	120°F	(50-120°F)	15 min	1-90

Specification Table

Model	AF 500
Capacity	0.93 cu.ft (26L)
Electrical	120V - 60Hz
Power Rating	1700W
Temperature	68° F - 428° F
Net Weight	19 lbs
Product Dimensions (HxWxD)	15.74" x 17" x 15.15"



Cleaning and Maintenance

Before cleaning, ensure the oven is turned off by removing the power plug from the power outlet. Allow the oven and all accessories to cool completely before disassembling and cleaning.

The outer surface of the appliance, the door, interior, drip tray and other accessories should all be cleaned after each use.

Do not clean with metal scouring pads or abrasive materials.

Wipe the outer surface with a soft, damp sponge. A non-abrasive liquid cleaner or mild spray solution may be used to avoid the build-up of stains. Apply the cleaner to the sponge, not the appliance surface, before cleaning.

To clean the glass door, use a glass cleaner or mild detergent and a soft, damp sponge or soft plastic scouring pad. Do not use an abrasive cleaner or metal scouring pad.

Wipe the control panel with a soft damp cloth.

The walls on the inside of the oven feature a non-stick coating for easy cleaning. To clean any splattering that may occur while cooking, wipe the walls with a soft, damp sponge. Avoid touching the heating elements.

To remove baked-on grease from the accessories or drip tray, soak the item in warm soapy water then wash with a soft sponge or soft plastic scouring pad. Rinse and dry thoroughly.

To extend the life of your accessories, we do not recommend that these be placed in the dishwasher.

Let all surfaces dry thoroughly before inserting the power plug into a power outlet and turning the appliance on.

 
Replacement of light bulb

Note: Before changing the light, make sure the appliance has been unplugged and fully cooled before it can be replaced. Use a 25-watt bulb.


Step 1: Rotate the light cover counter clockwise and remove



Step 2: Twist and pull out the old light bulb

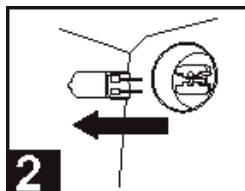

 Step 3: Insert the new 25-watt light bulb

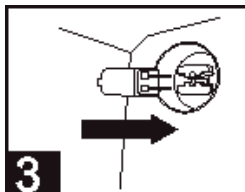

Step 4: Replace the light cover by turning it clockwise until tightened



Safe Disposal

Before discarding the appliance, remove the door.

Please dispose of this appliance in accordance with local regulations.

California Proposition 65

WARNING: This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

Troubleshooting

Problem	Possible reason	Solution
Appliance cannot be started	Not connected to power	Connect to power supply
	Right Knob not pressed	Press the Right Knob
	Door not closed	Ensure the door is closed
Steam escapes from the top of the door	Cooking food with a lot of liquid or moisture content	This is a normal phenomenon in which the appliance releases steam from high-moisture foods, such as frozen bread
White smoke emitted from the appliance	First time use	This is a normal phenomenon. During the first use some white smoke is emitted. It is recommended to set the maximum temperature without putting food into the oven for 18-20 minutes to eliminate smoke
	Cooking high-fat foods	This is a normal phenomenon. Fried greasy food can leak or spill on to the drip tray, which will produce white smoke. Remove excess oil and grease
	The Baking tray or Drip tray or other accessory still contains grease residue or previously used oil	Ensure the accessories are completely cleaned after each use
Black smoke emitted from the appliance	The food has been burnt	Close the oven immediately and carefully remove the food
Food remains uncooked	Too much food	Reduce the amount of food
	Set the temperature too low or too short time	Set a higher temperature and longer time
	The wrong function selected	Make sure the right function has been selected
Food is not cooked evenly	Food is not evenly spread when cooking	Make sure the food is cut evenly and spread evenly on the accessories.
	The baking tray, the grill, are not in the right position.	Put the accessories in the right place before cooking
Food is not crisp enough	Too much water in food	Spray evenly or brush a small amount of oil on food to increase crispness
Screen display error code E3	The temperature in the appliance is too high	Wait for it to cool down before using it again
Screen display error code E1, E2	Circuit error	Unplug the power, reconnect and operate again. If unable to resolve, contact customer service



Equator Advanced Appliances USA was established in 1991 for providing the most Efficient, Highest Quality and Innovative household appliances.

Equator's mission is to provide Innovative, Practical, Top-Quality appliances that Save Time, Space and Energy and Simplify domestic chores.

Equator's vision is to Improve the Quality of Life for our Customers!

 
Equator Appliances USA

www.EquatorAppliances.com



WINE REFRIGERATOR

MODEL - WR 09 SL

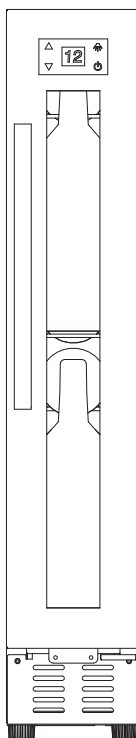

OWNER'S MANUAL

Please read the instructions carefully and keep for future reference. Information may be updated from time to time so please refer to the manual online for the latest version of the manual.

Warranty

Equator Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in USA and Canada, for a period of one year from the date of original purchase. For commercial use, the product is warranted for a period of 90 Days. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been Installed and operated in accordance with the written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner. Services would be provided from Monday to Friday between normal business hours.

Exclusions

In no event shall Equator Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

Specifically, the following work is not covered under warranty and does not constitute warranty work:

Installation - e.g. Insufficient spacing around appliance

Maintenance - e.g. Cleaning the appliance using solvents

Mishandling - e.g. Breakage of shelves

Most work is covered. The defining factor is, has the machine malfunctioned (Equator Appliances is responsible) or has the customer omitted or done something to cause the machine to malfunction (customer is responsible). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you.

WARRANTY SERVICE

This warranty is given by:

Equator Appliances

10222 Georgibelle Drive, Suite 200
Houston, Texas 77043-5249

For Service:

Call: 1-800-776-3538

Email: service@ApplianceDesk.com

Web: www.ApplianceDesk.com

Business hours: 9:00 am to 5:00 pm weekdays

You can register your Warranty by either of the following methods:

1. Scan QR Code

QR Code



1. Open Smart Phone
2. Open Photo
3. Scan QR Code
4. Click the Link

2. Register online at ApplianceDesk.com/Warranty

GENERAL

Since it is a responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Equator Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

All rights reserved. Manual subject to change without notice.

Safety

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Refrigerant and foaming material is flammable. Take precautions during handling, installation, and maintenance.

Ensure that the refrigerant circuit is not damaged.

Keep ventilation openings clear of obstructions.

When positioning the appliance, ensure the electrical cord is not trapped or damaged.

Do not place multiple portable socket-outlets at the rear of the appliance.

Never unplug the appliance by pulling on the power cord. Grip the plug firmly and pull straight out to remove from wall socket.

Do not use a damaged power cord.

Do not use an extension cord.

Children should be supervised to ensure that they do not climb on or play with the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Safe Disposal

Before discarding the appliance, remove the door in order to prevent risk of child entrapment.

Please dispose of this appliance in accordance with local regulations.

Installation

Do not tilt the Wine Refrigerator at an angle of more than 45° when moving it.

Do not move the appliance while it is loaded with bottles.

Place the appliance away from sources of heat and high humidity, and also away from areas of moisture and exposure to cold temperatures.

After moving the Wine Refrigerator in place, let it stand upright for 10 minutes before turning it on.

Plug the appliance into a dedicated, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord.

Check the plug and cable before you connect the power and ensure the correct voltage is 115V / 60Hz.

Ensure that the plug is accessible.

Place the Wine Refrigerator on a flat level surface, leaving 2 inches (5 cm) on either side and at least 3 inches (8 cm) between back of appliance and the wall.

The feet of the appliance can be adjusted to make it level.

Before use, clean the outside and inside surfaces with a damp soft cloth.

Operation

 
This appliance is intended for storage of wine and for household use only.

General Use

Store wine in sealed bottles.

Do not overload the cabinet and ensure that the door can be closed firmly.

Temperature Setting

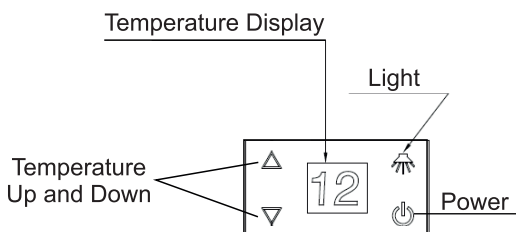


Press the Power ON/OFF button to turn the appliance on.
Press the Light ON/OFF button to turn on the LED light inside the appliance.

The appliance should be placed in a room where the temperature is between 32°F-101°F (0 to 38°C).

The temperature range of the appliance is 41°F-64.4°F (5°C-18°C).
Increase or decrease the temperature by pressing the Up and Down arrows.

Pressing the temperature Up and Down buttons for 5 seconds will display the temperature as °C or °F.

 Door Reversal

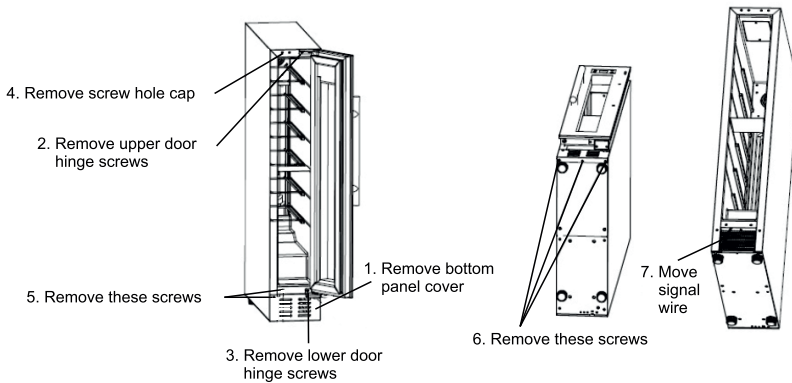

Use a screwdriver to remove the bottom panel cover and disconnect the signal wire.

 
Use a screwdriver to remove the upper and lower hinges of the door and remove the door.

Turn the unit sideways and reinstall the front panel.

Move the signal wire from the right side to the left side and reinstall the bottom panel.

Remove the handle, hole cap and door stopper.

Install them on the other side of the cabinet as shown below:

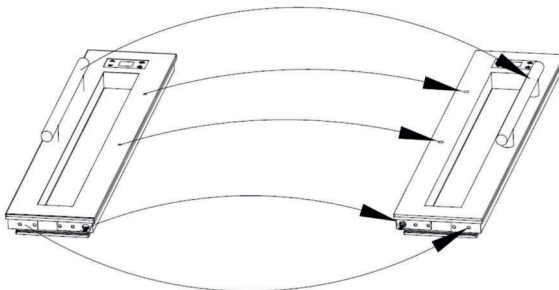


Take out the upper and lower door hinges from the accessory bag and install the door in the corresponding position on the other side.

Ensure the hinge holes and screws are aligned and tighten the screws to complete the door reversal process.

Installing Door Handle

 Install the handle according to the following four steps:

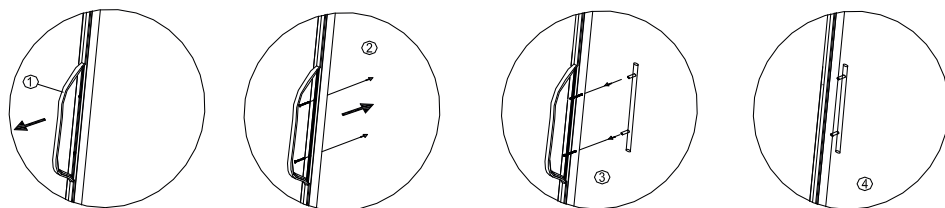


1. Move door seal
2. Insert screws
3. Using screwdriver fasten door handle
4. Replace door seal to original position

Loading and Storage of Wine Bottles

Shelf capacity: 1 bottles per shelf

 Ensure bottles are spread evenly, so that weight is not concentrated in one area of the unit. Ensure bottles do not touch the back of the cabinet.

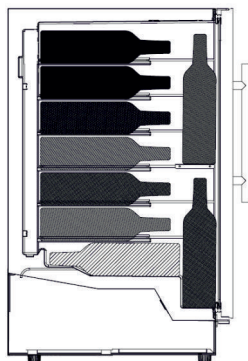

Maintenance

Make sure the power cord is unplugged before moving or cleaning the back of the appliance.

Clean the outside and inside of the appliance regularly, using water and mild detergent.

Troubleshooting

Problem	Possible Cause and Solution
Not Working	Check the power source. Check if it is plugged in correctly to the power source.
Not Cooling	Temperature is not set correctly. Adjust the temperature. Move unit if it is near heat source or direct sunlight Check for proper ventilation and that air inlet or outlet is not blocked. Door opened frequently or not shut properly. Door seal is damaged. Too many bottles stored on the same shelf.
Too much noise	Appliance not placed on flat surface or not level. Adjust the feet to level it. Some parts are loose causing rattling. The appliance is against a wall.
Door does not close properly	Check the seal. Shelves are not positioned properly. Adjust the shelves. Check that bottles are stored correctly and fit in the cabinet.

The following are normal:

- Moisture on the glass door – wipe with dry cloth
- Sound of fluid is the compressor when it is starting or stopping
- Flowing sound of refrigerant in the refrigeration system
- Condensation forming inside the cabinet – wipe with dry cloth

Installing Door Lock

The wine Refrigerator comes with an optional latch which can be attached to the side of the door. This will secure the door and ensure that it remains closed.



- 1. Align the latch position
- 2. Remove the sticker
- 3. Affix latch part ① first, then part ②


Specification Table

Model	WR 09
Capacity	9 Bottles (0.77 cu.ft)
Electrical	110V / 60Hz
Refrigerant	R600a
Temperature	41° F - 71.6° F
Net Weight	42 lbs
Product Dimensions (HxWxD)	32.28" x 5.90" x 20.66"

California Proposition 65

 WARNING: This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



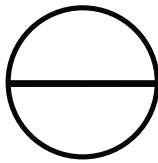

EQUATOR[®]

ADVANCED Appliances ≡



Equator Advanced Appliances USA was established in 1991 for providing the most Efficient, Highest Quality and Innovative household appliances.

Equator's mission is to provide Innovative, Practical, Top-Quality appliances that Save Time, Space and Energy and Simplify domestic chores.

Equator's vision is to Improve the Quality of Life for our Customers!

Equator Appliances USA

www.EquatorAppliances.com