

 
Product Description

1. Product Overview :

1.1 This Mobile Bluetooth Karaoke Microphone sing For the lovers For Portable As a device High quality sing Experience and high quality of stable Bluetooth speakers I present to you .

1.2 Part Description :

Sound Mixer MP-TG100

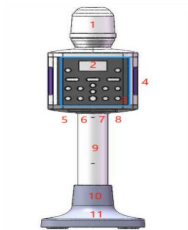

- 1) High performance coil mike
- 2) 128 X 64 Blue On the background White The writing present display
- 3) function Button
- 4) 2 X 10W bass unit + 2 X 10W treble unit
- 5) Type C charging port
- 6) AUX input jack
- 7) Earphone output jack
- 8) TF - CARD insert
- 9) 21700 5000mA Battery & Handle
- 10) USB-A insert jack ,
- 11) pedestal

2 、 Product specifications

1.1 basic Parameters information :

Product Name : Mobile Bluetooth Karaoke Microphone

Product Model Number : MP-TG100

Equipment name : TG 100 (Mobile phone Bluetooth Connection device name)

Bluetooth version : Bluetooth V5.0


Bluetooth Broadcasting : Auracast

Operating temperature and humidity : T : 10–80 Celsius , RH humidity < 90%


number	function	standard	unit
1	Charging voltage	5	V
2	Charging current	2.5	A
3	Battery volume	5000	mAH
4	Bass speaker output of power	10 X 2	W
5	High-frequency speaker output of power	10 X 2	W
6	Function Control method	Button control	
7	Base Passive tympanum	X2	
8	L CD	Blue background	

		white Font 128X64	
--	--	----------------------	--

3 、 Button and Screen Guide :

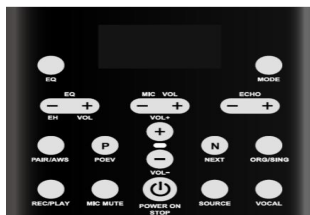

1.1 Display Interface and function control

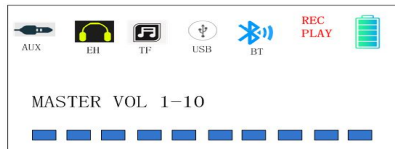

1.1.1 Charging:

Charger (DC5V 2.0A) Type C By inserting To charge at the time battery The symbol is immediately Power Show and battery The symbol is 5 notes charge city corresponding Section of battery The symbol Blinking charge After that battery The symbol completely is displayed  , charge The indicator light (red light) is always Turned on charge I'm in the middle of it Charging When completed Blue Fire always It turns on . Battery The display more more Don't blink No

1.1.2 volume


Main The volume is A total of 10 spaces Main screen In the mode, press the VOL+/- button Press "+" to increase volume to 10 Increasing music The volume is also set to 10 Increase (maximum), "-" volume to 0 Reduced (minimum - silent)
*headphone Volume :

EH VOL +/- keys short When you press Eavesdropping The earphones Volume Adjust and listen To protect for The earphones When inserted into the earphone jack The earphones The volume Automatically Volume "5 " Because it is regulated In need according to To myself Correct Volume By adjusting Please use it .

*(The volume too If it's big Hearing To damage number Because there is appropriate Volume Level Adjusting That thing Recommended)

1.1.3 EQ


EQ button Press High notes or Bass Selected After +/- Press desirous By effect Adjust it .

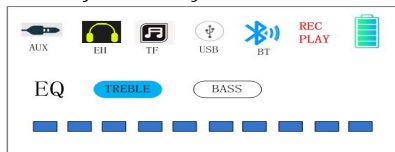

1.1.4 ECHO


ECHO+, - keys short Press Reverberation The intensity Adjust it .

Sound Mixer MP-TG100

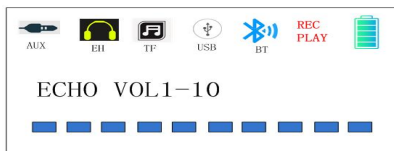

1.1.5 MIC volume

the MIC VOL +, - keys briefly mike Volume Adjustment .

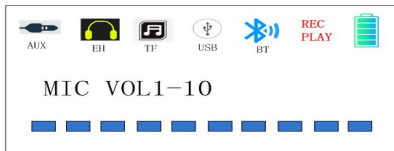

2.0 Sound Genre select :

SING (song Mode) ---- Default)


VOC(Speech mode)

ACC (Animation voice)

M(Singer (Male voice)


F(Singer female voice)

ROB (Singer) (robot sound)

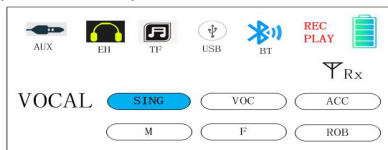

VOCAL button short Press corresponding Audio Mode Select and one th Press From the left To the right one th Converted after At the end point Reached after First The second By effect Go back in turn It circulates .

3.0 music Genre select :

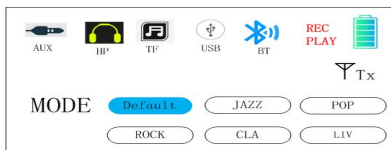

MODE button short Press Applicable Audio The scene Select and , th
By pressing From the left To the right one th Converted Well , finally
Skip First The second By effect I'm going back .

4 、 Button function introduction

4.1 SOURCE Button :

SOURCE key is basic Bluetooth To the channel Set device Audio
conversion Key and TF card Insert TF card To the channel automatic
Converted The music Automatically Play and USB When inserted into

the USB channel automatic Converted The music Automatically Plays and AUX When inserted, it goes to the AUX channel Manually It is converted Above In mode desirous Mode Manually To switch number There is . It is To the channel conversion city corresponding The icon is always Turned on There is different The icon is Turn off , no Bluetooth In mode conversion city Bluetooth is Automatically With mobile phone The connection Disconnected , Bluetooth In mode conversion city Bluetooth again Need to connect do .

4.2 PAIR/AWS Button :

Bluetooth broadcast mode Button and Bluetooth Matching It's a button .

4. 2. 1

Bluetooth is Not connected If not Bluetooth The icon Blinking Pairing Successful and Bluetooth is When paired ' TG100' Bluetooth on your phone device Name Looking for device Name Select and When you click Pairing It's a success .

4. 2. 2

PAIR/AWS key double Click to broadcast Transmission In mode do broadcast Transmission Status day at the time Red light Turn on Υ_{Tx} The icon too at the same time It is displayed At this time copy The machine Auracast transmitter It's a mod .

4 . 2. 3

PAIR/AWS key short When you press broadcast Receiving Become short
When you press broadcast reception In the state Red light Turning
on  The icon too together It is displayed , and at this time
Auracast receiving set It's a mode In the receiver With a mobile phone
Bluetooth The connection Because it is impossible cell phone
Bluetooth Need to connect will do case broadcast reception Mode
Terminate . PAIR/AWS key long When you press With a mobile phone
Bluetooth's Pairing Cut off number There is , and this case different
On the phone About Korea Pairing it's possible .
(Caution : In broadcast mode In case , same In the environment One
Transmitter only Main body number There are 2 more more Turn on number
No. There are up to N receivers . Turn on number Yes . USB/TF/
Bluetooth In the operating mode, the Rx receiving mode Turn on number
No. There is no SOURCE key . Press Bluetooth In mode Need to switch
Bluetooth broadcast Transmit / receive mode Turn on number there is)

4.3 REC/PLAY button :

4.3.1

REC/PLAY key long By pressing In the recording When you enter,
there is a REC Blinking recording The file is on TF card /U disk Saved
and recorded complete **After REC key short** When you press today
recording The content Automatically Playing and recording
reproduction City **PLAY** Turn on and press the **SOURCE key** . Press
Recording Exit . (Bluetooth Only in mode recording Possible ,
when playing via USB/TF card /AUX recording Impossible)

4.3.2 Power button POWER ON / STOP:

2 seconds long When you press Power It turns on . Shortly . When you press Play / pause music . AUX mode is on TG100. Play / pause music , previous / next The track Control number doesn't exist .

4. 4 MIC MUTE button :

this button short Press the MIC Turn on, When it turns off , the MIC icon appears when it turns on. at the same time Turn on and MIC When you turn it off, the MIC icon It turns off .

4. 5 P OEV Previous song button :

this Key short When you press The music before By song It changes

4. 6 NEXT Next song button :

this Key short When you press The music next By song It changes

4. 7 ORG/SING Button

Short press Original song featuring a small voice / Original song Switch to voice

5 、 Packaging BOM:

number	Product name	quantity	unit
1	MP-TG100Master	1	dog
2	FM Transmitter	1	dog
3	FM receiver	1	dog
4	earphone	1	dog
5	Type C connector	1	dog
6	USB Charger	1	dog
7	pedestal	1	dog
8	Manual	1	wealth
9	Quality Assurance Card	1	wealth
10	Certificate of passing	1	wealth

11	Storage box	1	dog
12	Color box	1	dog

announcement : The product is For indoor use The usage environment
If it's poor The product be damaged number There is The appearance
is Final The real thing As a standard And Function improvement and
For upgrade About Korea Final The right of interpretation Our company
have There is . Quality-wise The problem is There will be case local To
the distributor Contact us Repair Receive it and repair it within the
warranty period. No Won't case Same Quality of copy As a product
Exchange I will do it for you.

Warranty

Warranty

1: This The warranty is repair With supporting documents Use
it I hope so .

2 : copy The product is __1 year from the date of purchase It's
guaranteed .

3: Warranty repair period Inside Normal Use and Maintenance
will do at the time machine Of its own part ingredient and In the
process The problem is It happened Breakdown Occurred case ,

fact check after We are Free of charge repair and part Replace Provides .

4: Warranty Period middle Next same Matters Will occur case We are Service Reject or Materials and service fees At your discretion To collect The right there is .

1) This Warranty and valid purchase Evidence To provide number If not available .

2) User's inapposite By use Due to product In case of damage .

3) Artificial Abnormal External force In case of damage .

4) Our company Certified repair service The provider No People dissolution Repair it In case of damage .

5) Natural disaster or etc Force majeure As a factor Because of Breakdown and In case of damage .

6) Other People on purpose In case of damage .

5: We every In the content About Korea Right to amend Right to interpretation I have it .

product information

Repair details	date	Cause of failure and processing status
Customer name		
Contact person		
phone number		
Customer Address		
Product Name		
Date of purchase		

Product Model Number :

Sound Mixer MP-TG100

Factory number :

Dealer discount

Date : Year Month Day

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.