


DREO

Smart Outdoor Fan
711S

USER MANUAL

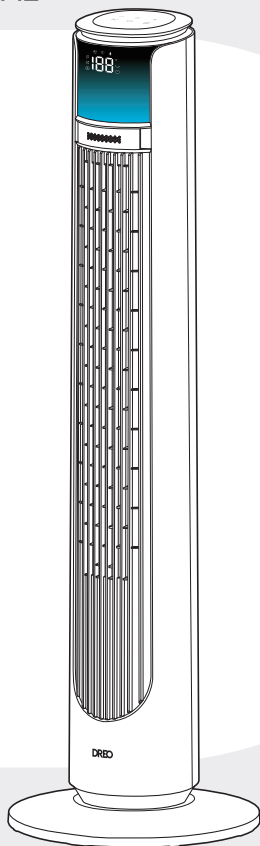

”

Thanks for Choosing **DREO!**

Your support means the world to us.
We hope you enjoy our product as much as
we did creating it.

CONTENTS

01

ASSEMBLING YOUR APPLIANCE

1-3

02

KNOWING YOUR APPLIANCE

4

03

CONNECTING TO YOUR APPLIANCE

5-6

04

USING YOUR APPLIANCE

7-11

05

CLEANING AND MAINTENANCE

12-14

06

TROUBLESHOOTING

15


ASSEMBLING YOUR APPLIANCE

01

Assembly Instructions


When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

1

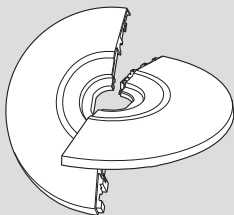


Intersect the two base halves diagonally.

2

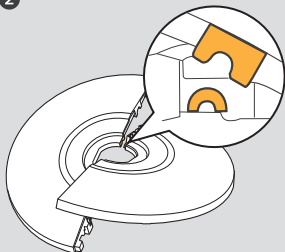


Match the arched cutout with the arched support on the base. Then, hook them together.

3

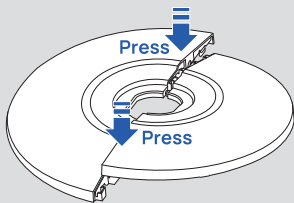


Press down on the edge until you hear a **click** to securely snap the two base halves together.

4

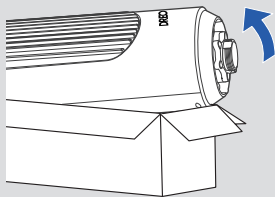


Place the appliance on the carton box with the front side facing upwards.

5

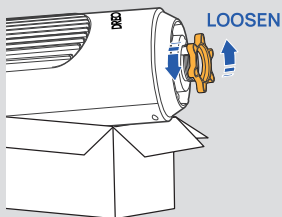


Remove the screw nut on the bottom of the fan by rotating it counterclockwise.

6

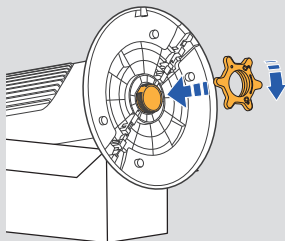


Fit the base onto the fan and secure by screwing the nut back on.

7

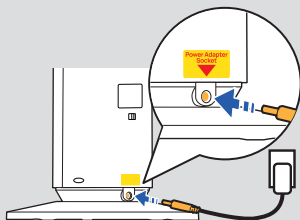

 
Put the fan upright, then plug the power adapter into the power input (located at the back of the fan), and into the power outlet.



! CAUTION

Do not operate the tower fan if the base has not been installed.

Package Contents

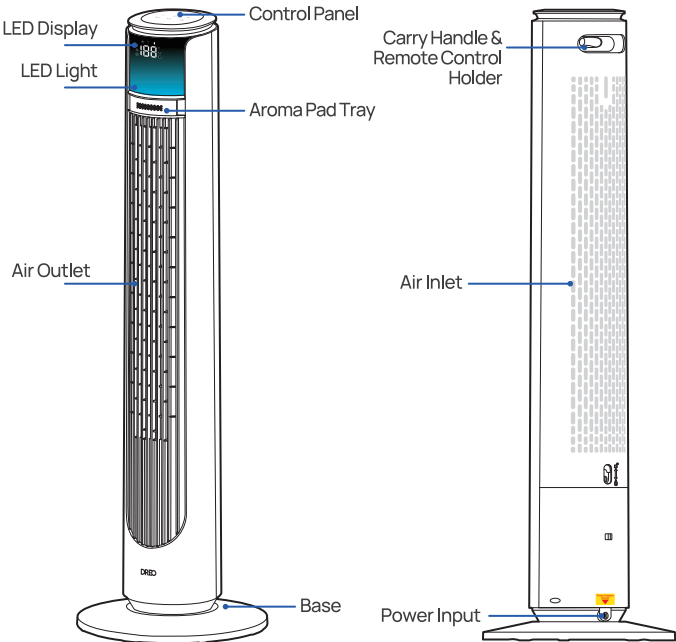


User Guide



Remote Control



 2x AAA Batteries



Power Adapter



Aroma Pad

KNOWING YOUR APPLIANCE

02

Control Panel



Power Button

- Turn power on/off



Mode Button

- Switch between Normal/Natural/Sleep/Auto Mode
- Long press for 3 seconds to mute/unmute



Increase Button

- 1-12 speed levels



Decrease Button

- 1-12 speed levels



Timer Button


- Select to set a timer (0-12h)
- Long press for 3 seconds to turn on/off the LED light.



Oscillation Button

- Adjust airflow direction (0°/30°/60°/90°/120°/150°).
- Long press for 5 seconds to start network settings and device pairing.

LED Display

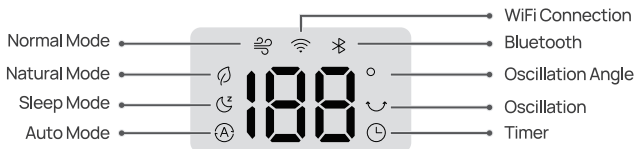

CONNECTING TO YOUR APPLIANCE

03



Before connecting the appliance to your mobile device, please scan the QR code on the left or go to the app store and search "DREO", then select and download the app.



Look for "Smart Outdoor Fan 711S" when connecting your new appliance.



This appliance supports **WiFi** or **Bluetooth** control through the DREO app.

When the appliance disconnects from an active WiFi connection, it will automatically switch to Bluetooth connection.



You can use the DREO app to connect your appliance to **Amazon Alexa** or **Google Home**. Please follow the in-app instructions to set up your voice assistant.

NOTE: You must create a DREO account to access voice assistants.

When using Bluetooth connection, some smart features may be disabled:

Feature	WiFi	Bluetooth
Wireless Control	✓	✓
Smart Schedules	✓	—
Temp Display	✓	—
Voice Control	✓	—

- 1 Launch the DREO app.
 - To use  Wifi Connection, sign in or create account by following in-app instructions.
 - If WiFi connection is not available, the appliance will automatically switch to  Bluetooth connection.
- 2 Enable WiFi and Bluetooth on your mobile device and plug in your appliance.
- 3 Hold  for 5 seconds to start connection settings.
(Tip: The WiFi icon  or Bluetooth icon  will keep flashing when pairing.)
- 4 Tap + **Add Device** and select **Smart Outdoor Fan 711S**.
- 5 Follow in-app instructions to complete the connection.
- 6 You're now ready to control the appliance on your app.
(Tip: To restart connection settings, hold  again for 5 seconds)
Long press  and  for 10 seconds to unpair your appliance and restore factory settings.

USING YOUR APPLIANCE

04

Working Modes



Normal Mode

Fan runs at the fixed speed.



Natural Mode

Fan speed goes up and down intermittently to replicate the natural breeze.



Auto Mode

Fan automatically increases speed when room temp is higher and decreases speed when temp is lower.



Sleep Mode

(Mute Auto On)


Balance comfort and noise by automatically decreasing fan speed as you fall sleep.

If the fan speed is 4 or higher, it will decrease two times at most, one speed every 30 minutes, then it will remain constant.

If the fan speed is 3 or lower it will remain constant.


Adding Essential Oil

1

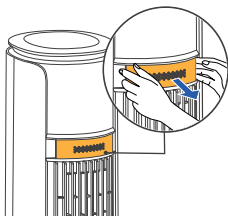


Pull out the aroma pad tray.

2

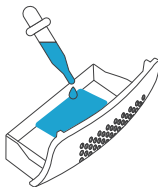

Add the essential oil to the aroma pad.

3

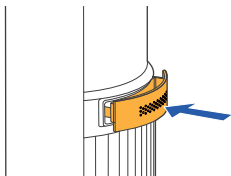

Put the aroma pad tray back in place.

Additional Features



Mute

Long press  on the control panel to turn on/off the button sounds.



Firmware Update

Check the firmware version on the DREO app and update regularly for the fan to work more efficiently.



Display will show “UP” during the update process. Do not operate until the update is completed.



Timer

When the fan is ON/OFF, touch the timer button repeatedly to set a timer (0-12 h). When the timer ends, the fan will stop/start running automatically. To cancel, set the time to 0 hour.

Note: Display will return to fan speed after 3 seconds.



Memory

If the fan is turned OFF or disconnected from power, it will operate under the previous settings (except the timer setting) when it is turned ON again.




Display Auto Off


- Display turns off after 5 seconds in Sleep Mode.
- Wake up the display with any button.

Getting the Most out of Your Tower Fan

1. Remove any tall obstacles that might block the airflow from the fan.
2. Combine with your AC unit to get cooler air throughout the room.
3. Position the tower fan closer to you to get more direct airflow.
4. Place a bucket of ice in front of the fan for an extra cooling boost.

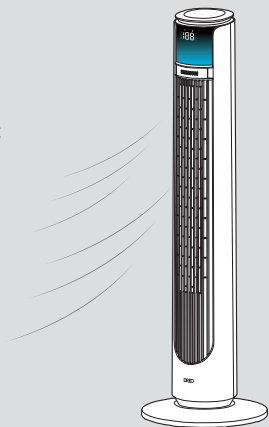

Remote Control

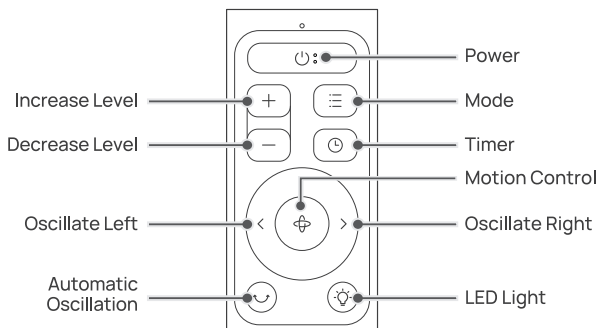


Motion Controls


Your new remote control comes with the Motion Control feature. It can make the fan oscillate horizontally in the direction of your motion. To use this feature:

1. Aim the remote control towards the LED display. Then, hold down the  button.
2. Gently move the remote control horizontally to oscillate the fan in the same direction as your movement.

The LED light also moves!
It will slide with the controller to indicate the oscillation direction.

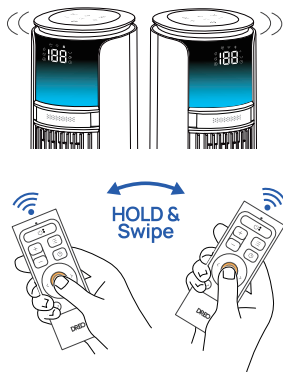

Additionally, you can hold down either < or > to manually oscillate the fan in horizontal directions.

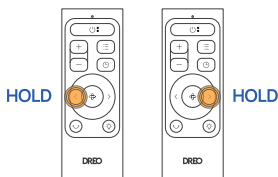

Remote Control Pairing

The remote control that shipped with your fan is already paired.

Pairing a new remote control to an existing appliance

If you lose your remote control or purchase a new one, please follow the steps below to pair the remote control to your appliance.

- Long press  and  **ON YOUR REMOTE CONTROL** to initiate pairing.
- If pairing is successful, there will be a long beep, and the LED lights will flash and stay on for 1 second.

Pairing multiple remote controls to an existing appliance

To pair multiple remote controls to an existing appliance, you must pair each additional remote control separately. The remote control that shipped with your fan is already paired.

- For each additional control, long press  and  **ON YOUR REMOTE CONTROL** to initiate pairing.
- If pairing is successful, there will be a long beep, and the LED lights will flash and stay on for 1 second.
- To unpair all the remote controls and restore factory settings, long press  and  for 10 seconds **ON THE CONTROL PANEL**.


Pairing one remote control to multiple appliances

To pair one remote control to multiple appliances, you must pair each additional appliance separately. The remote control that shipped with your fan is already paired.

- For each additional appliance, long press  and  **ON YOUR REMOTE CONTROL** to initiate pairing.
- If pairing is successful, there will be a long beep, and the LED lights will flash and stay on for 1 second.
- For each appliance, to unpair the remote control and restore factory settings, long press  and  for 10 seconds **ON THE CONTROL PANEL**.

CLEANING AND MAINTENANCE

05

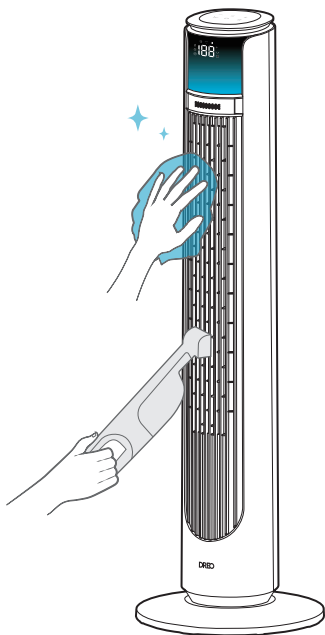

Outer Surface

Gently wipe off the dust with a soft, dry cloth.

Grilles & Blades

Remove the dust using a vacuum or air duster.

Base

The base can be disassembled in the reverse order of assembly.

CAUTION



1. Always unplug the fan before any cleaning or maintenance.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.


Rear Grille



WARNING


Turn off the appliance and unplug before any cleaning and maintenance.

1

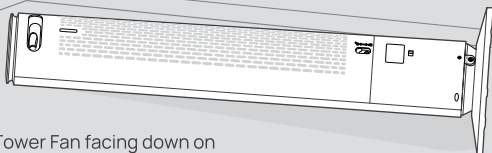


Lay the Tower Fan facing down on a flat surface.

2

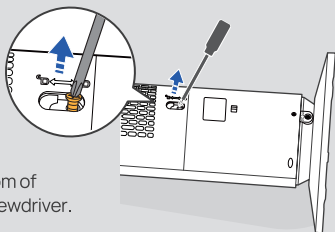

Remove the screw at the bottom of the rear grille with a Phillips screwdriver.

3

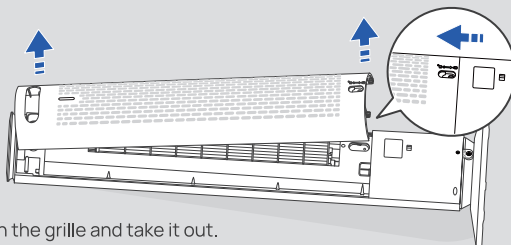


Pull down the grille and take it out.

4



Clean the dust on blades using a vacuum cleaner or air duster. Rinse the rear grille under running water with a clean, damp cloth.

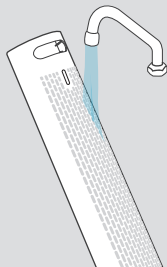


5

Dry up, then install the grille and the screw back by following the reverse order of disassembly.

Cleaning the Aroma Pad Tray


RECOMMENDED ONCE A WEEK

1

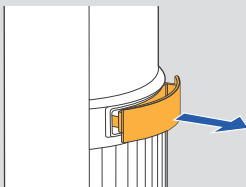

Pull out the aroma pad tray below the LED display.

2

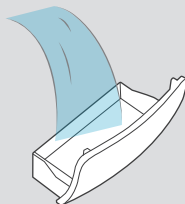

Rinse with water and place back into the base.

My appliance won't turn on!

Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the appliance.

My appliance is shaky and wobbling!

1. Place the appliance on a flat, level surface.
2. Incorrect installation might also cause shakiness. Please refer to the assembly instructions in page 1-2. Note that the power cord must be run through all rear keepers.

My appliance is making vibration and noise!

1. Place the appliance on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.

If your problem is not listed or still persists, please contact our Customer Support (see page 15)

Model No.: DR-HTF021S
Rev_1.0_EN

We're Here to Help!

 (888) 290-1688 (Mon - Fri, 9:00 am-5:00 pm PST/PDT)

 support@dreco.com

 www.dreco.com

www.dreo.com

Looking for help?

Contact us to get expert support.



support@dreo.com



[\(888\) 290-1688](tel:(888)290-1688)



www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT