



SHARP®

Mini Sound Machine Alarm Clock

Instruction Manual & Warranty

ALARM CLOCK INSTRUCTION MANUAL & WARRANTY

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

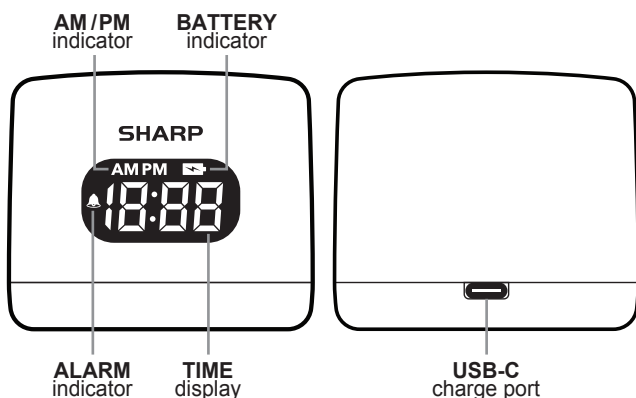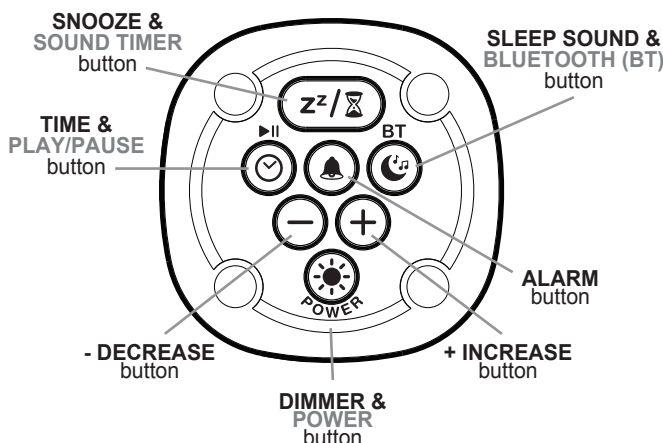

TURNING THE POWER ON - ☀

- Press & hold the **DIMMER/POWER** button for 2 seconds to power the clock ON.

SET TIME - ⌚

- Press & hold the **TIME** button for 2 seconds to activate time setting, **HOURL** will flash.
- Press the "+" or "-" button to the correct **HOURL**, the **AM** or **PM** indicator will light when the **HOURL** is advanced into the **AM** or **PM** time.
- Press the **TIME** button to confirm the **HOURL**, **MINUTES** will begin to flash.
- Press the "+" or "-" button to the correct **MINUTE**.
- Press the **TIME** button to confirm and save the time setting. Display will stop flashing.

SET ALARM - 🔔

- Press & hold the **ALARM** button for 2 seconds to activate alarm time setting, **HOURL** will begin to flash.
- Press the "+" or "-" button to the correct **HOURL**, the **AM** or **PM** indicator will light when the **HOURL** is advanced into the **AM** or **PM** time.
- Press the **ALARM** button to confirm the **HOURL**, **MINUTES** will begin to flash.
- Press the "+" or "-" button to the correct **MINUTE**.
- Press the **ALARM** button to confirm the **MINUTE**, **ALARM VOLUME** will begin to flash and sound.
- Press the "+" or "-" button to the desired **ALARM VOLUME**.
- Press the **ALARM** button to confirm and save the alarm setting. Display will stop flashing.

NOTE: If there is no operation within 8 seconds, it will automatically confirm and jump back to time mode.

USING THE ALARM - 🔔

- Press the **ALARM** button to turn the alarm ON, the "🔔" **ALARM** indicator will light on the display.
- Press the **ALARM** button again to turn the alarm OFF, the "🔔" **ALARM** indicator will no longer be visible on the display.

NOTE: While the alarm is sounding pressing any of the round buttons will turn the alarm OFF.

SNOOZE ALARM - Zz

- While the alarm is sounding, press the **SNOOZE** button to pause the alarm for 9 minutes. This will happen each time the **SNOOZE** button is pressed.

SLEEP SOUNDS - 🎧

- Press the **SLEEP SOUND /BT** button to cycle through the 12 built-in sleep sounds (S01~S12).
- VOLUME:** Press the "+" or "-" button to increase or decrease the volume while a sleep sound is playing.
- Press & hold the **SLEEP SOUND /BT** button for 2 seconds to turn OFF.

BLUETOOTH SPEAKER - 🎧 /BT

- Press the **SLEEP SOUND /BT** button to cycle until you've selected Bluetooth (BT, S01~S12), "bT" will show on the display when in Bluetooth mode. Using the native controls on your Bluetooth device select "SPC5169BT" in your Bluetooth settings to pair.
- When successfully paired, the alarm clock will sound "**CONNECTED**".
- PLAY or PAUSE:** Press the **PLAY/PAUSE** button to play or pause the current track.
- SKIP TRACKS:** Press the "+" or "-" button.
- VOLUME:** Press & hold "+" or "-" button for 2 seconds, the volume interface will show on the display, short press the "+" or "-" button to adjust the volume.
- Press and hold the **SLEEP SOUND /BT** button for 2 seconds to turn OFF.

NOTE: You can also reference your Bluetooth device for play/pause, skipping tracks and adjusting volume while connected to the clock.

SLEEP SOUNDS & BLUETOOTH TIMER - ⌚

- While playing a Sleep Sound or Bluetooth, press the **SOUND TIMER** button to cycle through a 15min, 30min, 60min, 120min timer. The timer will show on the display for 3 seconds.

USING THE DIMMER - 🌟

- Press the **DIMMER** button to adjust the display brightness. There are 3 levels of brightness;
High 100%, Medium 50%, Low 5%

RECHARGING CLOCK

- When the "🔋" **CHARGING** indicator blinks the clock requires charging.
- Connect a USB-C end of the included cord to a 5V USB-C charge port.
- Connect other USB-C end of the included cord to the USB-C port of the clock.
- The "🔋" **CHARGING** indicator will turn solid and stop blinking, indicating the clock is charging.
- When fully charged, the "🔋" **CHARGING** indicator will disappear from the display.

NOTE: If the clock is powered OFF from being fully drained of battery power, charge the clock, then press and hold the **POWER** button for 2 seconds to turn the clock back ON. Check the time to make sure it is accurate and adjust if necessary. You can continue to use all functions while the clock is ON and charging.

SPECIFICATIONS

- USB-C port input (IN) voltage and current: 5V/2A (MAX)
- Rechargeable Battery Capacity: 1200mAh 3.7V 4.44Wh
- Charging Cord (included): USB-C to USB-C

CARE OF YOUR CLOCK

- A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

FCC INFORMATION

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 This lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.
--	---	---

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Please read this before operating your unit.

One Year Limited Warranty

MZB & CO., LLC warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase or delivery date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If customer service is needed, please contact us by telephone or email:

 **1-800-221-0131 ask for Customer Service**

 **custserv_clocks@mzb.com**

 **Monday - Friday 9:00AM - 4:00 PM EST**

Having the model number and your receipt will help us provide you faster service. M.Z. Berger will not be liable for any loss or damages of any kind; from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, this limitation may not apply to you.

Printed in China

Model : SPC5169BT

SHARP, registered in the U.S. Patent and Trademark Office.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions - All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions - The safety and operating instructions should be retained for future reference.
3. Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operating and use instructions should be followed.
5. Do not use this apparatus near water - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings, Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip - over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Please keep the unit in a good ventilation environment.
16. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.



WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

WARNING: All above markings were located on the external enclosure of the apparatus, except for label of Date Code was pasted inside the battery compartment. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: The battery shall not be exposed to excessive heat such as sunshine, fire or the like.