

SENCOR®

SPT 4200

OPERATING INSTRUCTIONS

NÁVOD K OBSLUZE

POUŽÍVATEĽSKÁ PRÍRUČKA

HASZNÁLATI ÚTMUTATÓ

INSTRUKCJA UŻYTKOWNIKA

CD/ CD-MP3-BT-USB-SD-PLL FM TUNER

CD/ CD-MP3-BT-USB-SD-PLL FM TUNER

CD/ CD-MP3-BT-USB-SD-PLL FM TUNER

CD/ CD-MP3-BT-USB-SD-PLL FM TUNER

CD/ CD-MP3-BT-USB-SD-PLL FM TUNER

EN **CZ** **SK** **HU** **PL**




MP3
DIGITAL
PLAYBACK


USB
FLASH MEMORY
MP3 PLAYBACK

SD
MEMORY CARD
MP3 PLAYBACK


6-WAY
SPEAKER
SYSTEM

 PLL
DIGITAL
TUNING

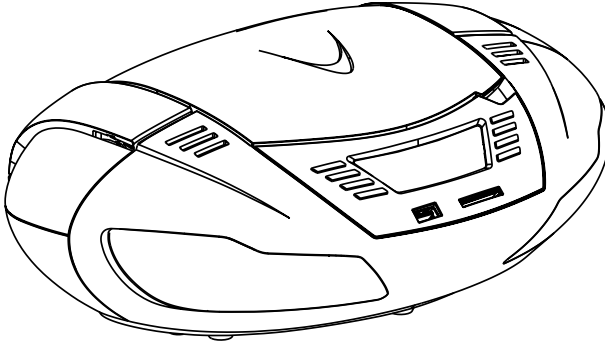

	The lightning flash and arrowhead within the triangle is a warning sign alerting you of „dangerous voltage“ inside the product.
CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.
CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	CAUTION: The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.	
THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO COMPLETELY DISCONNECT THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS MUST BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.	
PLEASE NOTE: YOU WILL FIND THE RATING LABEL FOR THIS PRODUCT LOCATED ON THE BOTTOM OF THE UNIT.	 CAUTION DO NOT EXPOSE TO DRIPPING OR SPLASHING LIQUIDS!
CAUTION: GROUNDING OR POLARIZATION. THE PRECAUTIONS SHOULD BE TAKEN SO THAT THE WIDER BLADE OF THE AC PLUG MUST MATCH THE SLOT IN RECEPTACLE „WALL SOCKET“.	
NOTE: CAUTION SYMBOLS ARE PRINTED ON BOTTOM OF UNIT. PLEASE REFER TO INSTRUCTION MANUAL.	

 **CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED.
AVOID EXPOSURE TO BEAM.**

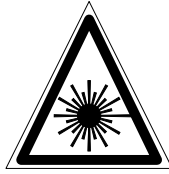


CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LASER DE CLASSE
LASER DI PRIMA CLASSE
KLASSE 1 LASER
LASER PRIMERA CLASE
LASER CLASSE 1
KLASSE 1 LASER PRODUKT

CLASS 1 LASER PRODUCT

THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE APPARATUS.
UNDER THE INFLUENCE OF ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND USER TO POWER RESET.
BATTERY SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.
CAUTION DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

 LOCATION OF CONTROLS

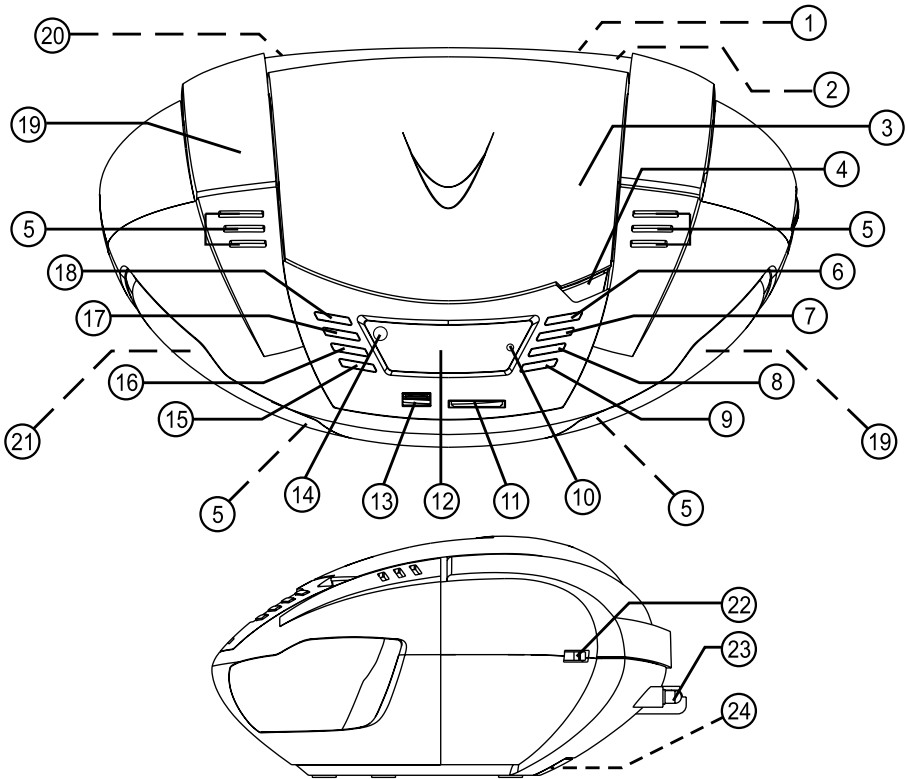


LOCATION OF CONTROLS

- | | |
|---|---|
| 1. HEADPHONE (EARPHONE) SOCKET (REAR OF UNIT) | 14. REMOTE CONTROL SENSOR |
| 2. AUX INPUT SOCKET (REAR OF UNIT) | 15. REPEAT/ RANDOM/ MEM. UP KEY |
| 3. CD DOOR | 16. BACK/ TUNE - KEY |
| 4. CD DOOR FINGER GRIP | 17. NEXT/ TUNE + KEY |
| 5. TWEETER SPEAKERS × 4 | 18. ON/ STANDBY/ FUNCTION KEY |
| 6. PLAY/ FM MODE/ PAUSE/ PAIRING KEY | 19. HANDLE |
| 7. STOP/ MEM./ PROG./ CLOCK SET KEY | 20. AC SOCKET (REAR OF UNIT) |
| 8. VOLUME UP KEY | 21. MAIN SPEAKERS (LEFT & RIGHT) |
| 9. VOLUME DOWN KEY | 22. BATTERY SAVER (ON/ OFF) SWITCH |
| 10. BLUETOOTH® PAIRING LED INDICATOR | 23. TELESCOPIC ANTENNA |
| 11. SD CARD SOCKET | 24. BATTERY DOOR COMPARTMENT (UNDER THE UNIT) |
| 12. LCD DIGITAL DISPLAY | |
| 13. USB DRIVE SOCKET | |

REMOTE CONTROL


 
1. ON/ STANDBY KEY
2. FUNCTION KEY
3. FM MODE KEY
4. PROG./ MEM. KEY
5. REPEAT/ RANDOM KEY
6. BACK/ TUNE- KEY
7. PLAY/ PAUSE/ PAIR KEY
8. NEXT/ TUNE+ KEY
9. M+/ +10/ FOLDER+ KEY
10. STOP KEY
11. VOL+ KEY
12. M-/ -10/ FOLDER- KEY
13. CLOCK SET KEY
14. VOL- KEY
15. BATTERY COMPARTMENT

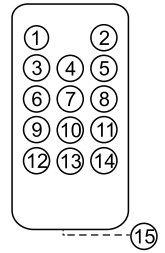

POWER SUPPLY

BATTERY OPERATION

  - OPEN THE BATTERY DOOR AND INSERT 6 PCS "C-CELL" (UM-2/ LR14 TYPE) BATTERIES. PLEASE OBSERVE CORRECT BATTERY POLARITIES OR THE SET WILL NOT WORK.
- IMPORTANT: WHEN THE SET IS ONLY USED WITH AC, OR IS NOT USED FOR 4 WEEKS OR MORE, PLEASE REMOVE THE BATTERIES, TO AVOID DAMAGE TO THE SET FROM LEAKAGE OF BATTERIES.

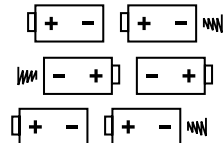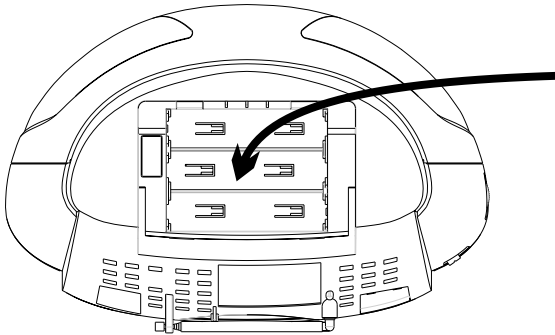

UM-2/"C"/LR14
(1.5V) SIZE x6 PCS

NOTE:

THIS UNIT HAS A "BATTERY SAVER" FUNCTION. IF YOU WISH TO PRESERVE THE BATTERY LIFE USE THIS SWITCH (20). THE UNIT WILL NOT DRAW ANY POWER FROM THE BATTERY WHICH WILL ENHANCE BATTERY LIFE WHEN NOT IN USE. PLEASE REMEMBER THAT WHEN THE BATTERY SAVER IS USED, THE CLOCK (TIME SETTING) & RADIO (PRESET STATION) MEMORY WILL BE LOST.

BATTERY OPERATION

- MAKE SURE THE SET VOLTAGE OF THE UNIT MATCHES YOUR LOCAL HOUSEHOLD VOLTAGE.
- THE AC-CORD IS A DETACHABLE TYPE & CAN BE FOUND EITHER INSIDE THE ORIGINAL BOX OR WITHIN THE BATTERY COMPARTMENT UNDER THE UNIT.
- INSERT THE PLUG OF THE AC-CORD INTO A WALL OUTLET WITH AC-POWER.
- INSERT THE TAIL END OF THE AC-CORD FIRMLY INTO THE AC-SOCKET BEHIND THE UNIT. (PLEASE ENSURE THE TAIL END IS FIRMLY CONNECTED TO THE SOCKET).

INTELLIGENT POWER SAVING SYSTEM

 
Switching On The Unit

- THIS SET HAS A BUILT-IN POWER SAVING SYSTEM WHICH WILL AUTOMATICALLY PUT THE SET INTO A "STANDBY MODE" TO REDUCE POWER CONSUMPTION WHEN IT DETECTS THAT THE SET IS NOT IN USE.
- THIS AUTOMATIC SWITCHING TO "STANDBY MODE" WILL HAPPEN APPROXIMATELY 10-15 MINUTES AFTER THE FOLLOWING CIRCUMSTANCES:
 - (A) "CD" MODE: CD PLAYBACK HAS STOPPED (eg. AT THE END OF A DISC).
 - (B) "USB" MODE: USB PLAYBACK HAS STOPPED.
 - (C) "CARD" MODE: CARD PLAYBACK HAS STOPPED.
 - (D) "AUX" MODE: NO INPUT SIGNAL IS DETECTED BY THE AUX INPUT JACK.
 - (E) "BT" MODE: BLUETOOTH® PLAYBACK HAS STOPPED.
- TO RE-ACTIVATE THE UNIT AFTER IT HAS AUTOMATICALLY SWITCHED TO "STANDBY MODE", SIMPLY PRESS THE "ON/STANDBY" KEY TO SWITCH ON THE UNIT.

DIGITAL CLOCK FUNCTION

- THE SET HAS A BUILT-IN DIGITAL CLOCK, WHICH IS DISPLAYED WHEN THE SET IS IN "STANDBY MODE". (THE DISPLAY WILL CONTINUOUSLY SHOW THE CURRENT TIME). IN THIS SITUATION THE BLUE BACKLIGHT IS NORMALLY DIMMED (TO SAVE ELECTRICITY).

HOW TO SET CORRECT TIME:

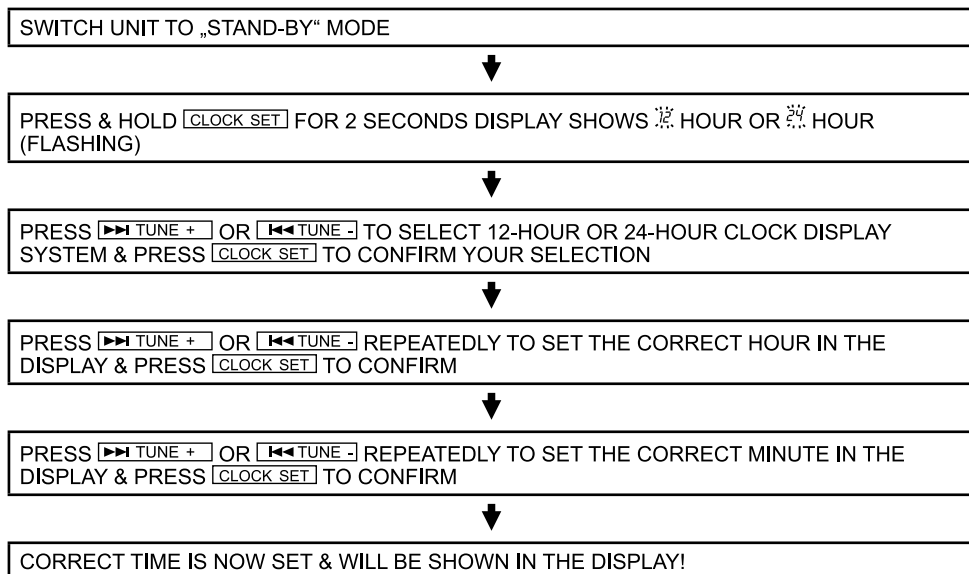

*NOTE: THAT WHEN THE DIGITAL CLOCK IS NOT SET, THE DIGITAL CLOCK DISPLAY SHALL CONTINUOUSLY FLASH TO INDICATE THAT THE CORRECT TIME HAS NOT YET BEEN SET.

ELECTRONIC VOLUME CONTROL

- THIS UNIT USES AN ELECTRONIC VOLUME CONTROL (PUSH BUTTON TYPE).
- TO INCREASE OR DECREASE THE LOUDNESS OF UNIT, PRESS THE VOLUME UP (VOL +) OR VOLUME DOWN (VOL -) KEYS RESPECTIVELY.
- RELEASE THE KEY WHEN VOLUME LEVEL IS AT THE DESIRED LOUDNESS.
- SOMETIMES, ESPECIALLY DURING LISTENING TO THE RADIO, YOU MAY NOTICE A "CLICK-CLICK-CLICK" (REPEATING) SOUND WHEN YOU ARE INCREASING OR DECREASING THE VOLUME. THIS IS A NORMAL CONDITION & THE SOUND WILL DISAPPEAR WHEN YOU RELEASE THE VOLUME KEY (WHEN YOU REACH THE DESIRED VOLUME LEVEL).

OPERATION OF RADIO

- PRESS THE "ON/STANDBY" KEY ONCE TO SWITCH ON THE UNIT.
- PRESS THE **[FUNCTION]** KEY REPEATEDLY UNTIL THE DISPLAY SHOWS "FM" AND THE RADIO FREQUENCY.
- ADJUST THE TELESCOPIC ANTENNA AND POSITION OF THE SET TO OBTAIN THE BEST RECEPTION.
- USE THE "PLAY/ PAUSE/ FM MODE" KEY TO SELECT THE DESIRED MODE (FM MONO/ STEREO).
- IN SOME CASES, WHERE RECEPTION IS POOR, IT MAY BE ADVISABLE TO SELECT "MONO" MODE, TO IMPROVE CLARITY OF THE RADIO SIGNAL.

AUTOMATIC SCAN AND STORED (STATION MEMORY AUTO STORE)

- PRESS AND HOLD (FOR 2 SECONDS) THE "FM MODE" KEY, THIS UNIT WILL AUTOMATICALLY SCAN ALL STATIONS AND AUTOMATICALLY STORE THE FIRST 30 STATIONS FOUND INTO THE MEMORY PRESETS.

MANUAL FREQUENCY ADJUSTMENT (SCAN MODE)

- PRESS (AND IMMEDIATELY RELEASE) THE **[NEXT]** KEY OR **[BACK]** KEY TO "SCAN" (MANUALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" BY 1-STEP AT A TIME.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY AT EACH STEP'S POSITION.
- WHEN A DESIRED FREQUENCY OR STATION IS REACHED, IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).

AUTOMATIC FREQUENCY ADJUSTMENT (SEEK MODE)

- PRESS AND HOLD (FOR 2 SECONDS) THE **[NEXT]** OR **[BACK]** KEYS TO "SEEK" (AUTOMATICALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" TO THE NEXT AVAILABLE RADIO STATION.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY OF THE NEXT STATION THAT IS FOUND.
- WHEN A DESIRED STATION IS REACHED, IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).







RADIO MEMORY (STATION PRESET MEMORY STORAGE)

- AT ANY TIME, THE CURRENTLY DISPLAYED STATION OR FREQUENCY CAN BE STORED INTO ONE OF THE MEMORY POSITION.
- PRESS **[MEM/PROG]** KEY ONCE.
- PRESS **[MEM UP]** KEY (ON UNIT) TO SELECT DESIRED MEMORY POSITION. (THERE ARE 30 MEMORY POSITIONS FOR FM BAND).
- PRESS **[MEM/PROG]** KEY ONCE TO SAVE THE SELECTED STATION INTO THE SELECTED MEMORY POSITION.
- TO RECALL ANY SAVED MEMORY, SIMPLY PRESS **[MEM UP]** KEY, THE SAVED RADIO-BAND WILL BE RECALLED.
- TO CLEAR THE MEMORY OF ANY POSITION, SIMPLY SAVE A NEW STATION TO THE SAME MEMORY POSITION.




INSERTION & REMOVAL OF DISCS

- WHEN OPENING THE CD-DOOR, ALWAYS ENSURE THE DISC IS NOT IN MOTION (NOT SPINNING) WHEN YOU OPEN THE CD-DOOR. ALWAYS PRESS "STOP" KEY TO STOP THE DISC SPINNING FIRST.
- PLACE A CD INTO THE COMPARTMENT WITH THE LABEL-SIDE (PRINTED SIDE OF DISC) FACING UPWARDS. PRESS DOWN IN THE CENTER PART OF DISC UNTIL THE DISC "LOCKS" ONTO THE CENTER SPINDLE.
- WHEN THE CD HAS BEEN PLACED ONTO THE CENTER SPINDLE, GENTLY LOWER THE CD-DOOR DOWNWARDS UNTIL IT LOCKS SHUT.
- THE CD IS NOW READY TO BE PLAYED.
- TO REMOVE A DISC, FOLLOW THE SAME PROCEDURE AS DESCRIBED ABOVE, EXCEPT TO REMOVE THE CD INSTEAD OF INSERTING IT INTO THE COMPARTMENT, BY PLACING ONE FINGER AT THE MIDDLE OF DISC (CENTER SPINDLE) & THE OTHER AT THE EDGE OF THE DISC & GENTLY PULLING UPWARDS.
- IMPORTANT: ALWAYS HOLD A CD BY ITS EDGES. AVOID GETTING ANY FINGER PRINTS, SMUDGES OR DIRT ONTO THE SURFACE OF A DISC.
IN CASE THIS HAPPENS, USE A SPECIAL CD-CLEANING CLOTH OR CLEANING KIT TO REMOVE THE DIRT OR SMUDGES.




NORMAL CD OPERATION

- TURN THE UNIT ON BY PRESS THE "ON/ STANDBY" KEY.
- INSERT A CD AS DESCRIBED.
- PRESS THE FUNCTION KEY UNTIL DISPLAY SHOW "CD".
- THE CD WILL SPIN MOMENTARILY AND THE FIRST TRACK (SONG) WILL START PLAYING AUTOMATICALLY. THE DISPLAY WILL INDICATE THE CURRENT TRACK NO. ("01" IF IT IS THE FIRST TRACK).
- AT ANYTIME DURING PLAYBACK, PRESS THE "PLAY/ PAUSE" KEY  TO PAUSE OPERATION OF THE UNIT. PRESS THE "PLAY/ PAUSE" KEY AGAIN TO RESUME OPERATION AT THE SAME TRACK & POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS THE "STOP" KEY  TO STOP OPERATION OF THE SET THE DISPLAY SHOW THE TOTAL NUMBER OF TRACKS (SONG) OF THE DISC. THIS WILL RESET THE CD PLAYER TO THE FIRST TRACK (IF YOU PRESS PLAY AFTER STOP, THE FIRST TRACK WILL ALWAYS START PLAYING).
- AT ANYTIME DURING PLAYBACK, "PRESS AND RELEASE" THE BACK OR NEXT KEYS:  OR  TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK, AS DESIRED.
- AT ANYTIME DURING PLAYBACK, "PRESS AND HOLD" THE KEYS:  OR  TO FAST-REVERSE (REVIEW) OR FAST-FORWARD (CUE) THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.

HOW TO PLAY MP3 DISCS

- INSERT A MP3 CD DISC, CLOSE THE DOOR.
- PRESS THE "FUNCTION" KEY TO SELECT "CD".
- THE DISC WILL SPIN AND THE FIRST TRACK (SONG) WILL START PLAYING AUTOMATICALLY, THE DISPLAY WILL INDICATE THE CURRENT TRACK NO.: (001).
- AT ANYTIME DURING PLAYBACK, PRESS AND RELEASE  OR  TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK.
- AT ANYTIME DURING PLAYBACK, PRESS THE "STOP" KEY  TO STOP OPERATION OF THE SET AND THE DISPLAY SHOW THE TOTAL NUMBER OF TRACKS (SONG) OF THE DISC.

USB- DRIVE & SD-CARD MP3 PLAYBACK

- THIS UNIT IS EQUIPPED WITH A USB SOCKET WHICH CAN ACCEPT AND PLAY MP3 FILES STORED ON STANDARD USB FLASH DRIVES (ALSO KNOWN AS “PEN DRIVES”) WHICH ARE FOR MEMORY STORAGE. (COMPATIBLE WITH USB VERSION 1.1 & 2.0).
- THIS UNIT ALSO HAS A BUILT-IN SD-CARD SOCKET WHICH CAN ACCEPT AND PLAY MP3 FILES STORED ON STANDARD “SD” TYPE FLASH MEMORY CARDS (OF MAXIMUM CAPACITY = 16 GB) WHICH ARE COMMONLY AVAILABLE.
- TO UTILIZE THIS FACILITY, FIRST INSERT EITHER A USB-DRIVE OR AN SD-CARD INTO THE CORRECT SLOT (PORT).
- PRESS THE FUNCTION KEY REPEATEDLY UNTIL THE DISPLAY SHOWS “SD” OR “USB”.
- THE FIRST MP3 SONG WILL START PLAYING AUTOMATICALLY. THE DISPLAY WILL INDICATE THE CURRENT FILE NO.: (001).
- AT ANYTIME DURING PLAYBACK, PRESS AND RELEASE  OR  TO SKIP BACKWARDS OR FORWARDS BY ONE FILE.
- AT ANYTIME DURING PLAYBACK, PRESS THE “STOP” KEY  TO STOP OPERATION OF THE SET AND THE DISPLAY SHOW THE TOTAL NUMBER OF MP3 SONGS OF THE DEVICE.
- ALL FUNCTIONS FOR USB-DRIVE & SD-CARD MP3 PLAYBACK ARE EXACTLY THE SAME AS IN CD-MP3 MODE (AS PREVIOUSLY DESCRIBED).

NOTE: ALTHOUGH THIS PRODUCT IS FULLY COMPATIBLE WITH USB 1.1 & 2.0 STANDARDS, A SMALL PERCENTAGE (ABOUT 5%) OF USB FLASH DRIVES MIGHT NOT BE READABLE, DUE TO THOSE USB-DRIVE MANUFACTURERS NON-COMPLIANCE WITH THE FULL (OFFICIAL) USB 1.1 / 2.0 STANDARDS.

THE READING TIME FOR A USB-DRIVE OR SD-CARD VARIES DEPENDING ON THE SPEED OF THE MEMORY DEVICE AND THE NUMBER OF SONGS AND FOLDERS. IN SOME CASES THE READING TIME MAY BE AS LONG AS 60 SECONDS.

IMPORTANT

ALWAYS SWITCH OFF THE UNIT OR CHANGE MODE TO “CD” OR “RADIO” BEFORE REMOVING A USB FLASH DRIVE OR SD-CARD, TO PREVENT DAMAGE TO YOUR USB DEVICE OR MEMORY CARD.

THIS UNIT DOES NOT SUPPORT USB-MP3 PLAYER, DUE TO THEIR INHERENT LACK OF SOFTWARE COMPATIBILITY. ONLY USB „PEN DRIVES“ (FLASH MEMORY USB DRIVES) CAN BE USED, FOR MP3 PLAYBACK.

IMPORTANT POINT

**Please do NOT use a USB Extension Cable to connect your USB FLASH DRIVE to the USB PORT of this unit.
Such cables can pick up additional interference which can corrupt the data flow, preventing normal operation and usage of the USB port. Always connect your USB Flash Drive DIRECTLY to the USB PORT without any USB extension cables.**

NOTE: THIS UNIT SUPPORTS UP TO MAXIMUM MEMORY SIZE OF 16 GB USB FLASH DRIVE & SD CARD.

PROGRAM FUNCTION

- THE CD PLAYER CAN BE PROGRAMMED TO PLAY ANY SEQUENCE OF UP TO 20 TRACKS FOR AUDIO-CD / 99 TRACKS FOR MP3, AS DESIRED.
- ALWAYS PRESS THE STOP [■] KEY BEFORE STARTING THE PROGRAMMING.
- PRESS AND HOLD (FOR 2 SECONDS) THE "PROG./ MEM" KEY ,THE DISPLAY WILL SHOW "P-01" TO INDICATE THAT THE SET IS NOW IN "MEMORY PROGRAMMING MODE", AT THE FIRST MEMORY POSITION.
- PRESS THE BACK OR NEXT KEYS [◀] OR [▶] TO SELECT THE TRACK (SONG) NUMBER YOU WISH TO BE STORED IN THE FIRST MEMORY (PROGRAM) POSITION, AND PRESS THE "PROG./ MEM KEY TO CONFIRM YOUR SELECTION.
- WHEN YOU PRESS THE DISPLAY WILL ADVANCE TO THE NEXT MEMORY POSITION (eg. "P02").
- THE "PROG./ MEM" KEY
- REPEAT THE PREVIOUS 2 STEPS, EACH TIME SELECTING ANY TRACK NUMBER OF YOUR CHOICE TO BE STORED IN THE SUCCESSIVE MEMORY (PROGRAM) POSITIONS.
- AFTER EACH TRACK NUMBER, REMEMBER TO PRESS THE "PROG./ MEM" KEY.
- AFTER A MAXIMUM OF SONGS (OR LESS) HAVE BEEN SELECTED AS DESCRIBED ABOVE.
- ALSO, THE "MEMORY" SYMBOL WILL REMAIN "ON" TO INDICATE THAT YOU HAVE SAVED A PROGRAM-MEMORY (SEQUENCE).
- PRESSING PLAY [▶] WILL NOW PLAY BACK THE "SAVED SEQUENCE" IN THE PROGRAM MEMORY.
- TO CLEAR (CANCEL) THE ENTIRE PROGRAM WHICH IS STORED IN THE MEMORY, SIMPLY PRESS "STOP" [■], OR SWITCH "OFF" THE SET.

PLAY MODE FUNCTION

- AT ANYTIME DURING PLAYBACK:
- PRESS [REP/RAND./MEM UP] KEY REPEATEDLY TO SELECT THE FOLLOWING OPTIONS:
 1. REPEAT: TO REPEAT THE CURRENT TRACK (DISPLAY SHOWS "↔")
 2. REPEAT FOLDER: TO REPEAT THE CURRENT FOLDER (DISPLAY SHOWS "↔ FOLDER") (ONLY AVAILABLE IN MP3 PLAYBACK WITH FOLDER)
 3. REPEAT ALL: TO REPEAT ALL TRACK (DISPLAY SHOWS "↔ ALL")
 4. RANDOM: TO SHUFFLE ALL SONGS IN RANDOM ORDER (DISPLAY SHOWS "↔")

USING THE AUDIO LINE IN CONNECTION (AUX-INPUT)

- YOU CAN CONNECT THE AUDIO OUTPUT OF AN EXTERNAL DEVICE SUCH AS A MP3 PLAYER OR A TV TO THIS UNIT, TO LISTEN TO THE SOUND OF THAT DEVICE THROUGH THE HIGH QUALITY AMPLIFIER OF THIS MUSIC SYSTEM.
- TO CONNECT THE EXTERNAL DEVICE PLEASE USE A STANDARD STEREO HEADPHONE (3.5MM TO 3.5MM PLUGS) CABLE TO CONNECT THE "HEADPHONE-OUT OR AUDIO LINE-OUT" OF THE DEVICE TO THE AUX-INPUT SOCKET OF THIS UNIT.
- PRESS THE FUNCTION KEY TO "AUX".
- SWITCH ON THE UNIT AND THE EXTERNAL DEVICE (eg. MP3-PLAYER OR TV).
- START PLAYBACK OF THE EXTERNAL DEVICE AND ADJUST THE VOLUME CONTROL OF THE MAIN UNIT TO THE DESIRED LEVEL.
- REMEMBER TO SWITCH OFF THE UNIT WHEN YOU ARE FINISHED USING THE EXTERNAL DEVICE.

BLUETOOTH® WIRELESS PLAYBACK

THE UNIT CAN WIRELESSLY STREAM AUDIO FROM ANY BLUETOOTH® DEVICE WITHIN 30 FEET. SIMPLY PAIR THE DEVICE AND ENJOY WIRELESS PLAYBACK AND CONTROL FROM YOUR BLUETOOTH® DEVICE.

PREPARE THE UNIT:

- PRESS THE FUNCTION KEY REPEATEDLY UNTIL THE DISPLAY SHOWS “BT”.
 - THE BT LIGHT WILL BE FLASHING TO INDICATE PAIRING IS PENDING. THE BT LIGHT WILL FLASH TWICE PERIODICALLY WHEN CONNECTING. THE BT LIGHT WILL ON WHEN PAIRED.
- *NOTE ONLY ONE DEVICE CAN BE PAIRED AND HAVE PLAYBACK FROM AT ANY GIVEN TIME.**

PREPARE YOUR PHONE OR OTHER BLUETOOTH® DEVICE:

- TURN ON THE BLUETOOTH® FUNCTION, THIS IS USUALLY FOUND UNDER GENERAL SETTINGS OR OPTIONS.
- *PLEASE REFER TO YOUR BLUETOOTH DEVICE’S MANUAL FOR FURTHER DETAILS.**

MAKE THE CONNECTION:

- GO TO YOUR DEVICE’S BLUETOOTH® SETTINGS
 - ADD OR SEARCH FOR DEVICES
 - IF ASKED FOR A PASS CODE, ENTER “0000”
- *THIS IS A ONE-TIME EVENT PER DEVICE. TO PAIR YOUR UNIT TO ANOTHER DEVICE, REPEAT THE ABOVE PREPARATION AND CONNECTION STEPS.**

DISABLING THE CONNECTION:


TO UNPAIR A BLUETOOTH® DEVICE THAT IS ALREADY PAIRED, PRESS AND HOLD THE PAIRING / PLAY/ PAUSE KEY FOR A FEW SECONDS.

VOLUME CONTROL:

INCREASE AND DECREASE VOLUME USING THE VOL. + AND VOL. - KEYS ON THE UNIT AND USING THE VOLUME CONTROLS ON YOUR BLUETOOTH®.

***NOTE THAT IF THERE IS NO PLAYBACK, ENSURE THAT NEITHER THE UNIT NOR YOUR BLUETOOTH® DEVICE ARE SET TO ZERO VOLUME AND THE RIGHT DEVICE FOR PLAYBACK IS PAIRED.**

SPECIFICATIONS

POWER SUPPLY:	AC 230 V ~ 50 Hz DC 9V  (6 × C-CELL/ UM-2/ LR14 SIZE) (BATTERIES NOT INCLUDED)
POWER CONSUMPTION:	15W
OUTPUT POWER PER CHANNEL:	1.8W × 2
FREQUENCY:	FM 87.5 - 108 MHz

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.



DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.


For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

 The product meets EU requirements.

Hereby, FAST ČR a.s. declares that the radio equipment type SPT 4200 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.sencor.eu

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.