


The Warming Tray

by Megachef

Warming Tray

MCWT-9200

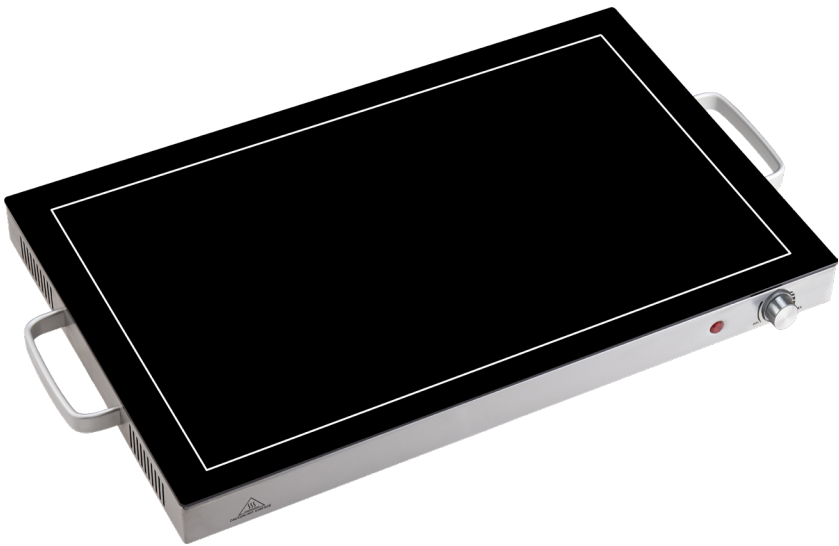

OWNER'S MANUAL

SAVE THESE INSTRUCTIONS. FOR HOUSEHOLD USE ONLY.

Megachef MCWT-9200 1

Thank you for purchasing the MCWT-9200 warming tray. Please read this manual carefully before using your new appliance to familiarize yourself with all its features. In the following pages, you will learn how to properly care for and safely operate your appliance, helping it to perform at peak efficiency for years to come. Please read these instructions before use and save them for future reference.

This manual provides important information on the initial setup, safe operation, intended use, care and cleaning of the appliance. It also includes a helpful troubleshooting section to address common questions that may arise during operation.

This appliance is intended for use in enclosed spaces for keeping food warm. The bowls and plates go directly on the warming tray.

- IMPORTANT SAFEGUARDS 4
- HOW TO USE THE WARMING TRAY 5
- CLEANING AND MAINTENANCE 6

IMPORTANT SAFEGUARDS

When using the warming tray, basic safety precautions should always be followed:

1. Read all instructions before operation.
2. Check that the voltage of your outlet matches to the cord of the warming tray.
3. Do not leave the appliance unattended while connected to the power supply.
4. Do not immerse the appliance in water or any other liquids.
5. It is important to unplug the power cord after the appliance has been used, before it is cleaned and while being repaired.
6. Close supervision is required when using this appliance near children.
7. Never leave the appliance within reach of children..
8. This appliance is intended for household use only and should not be used for commercial purposes.
9. Do not operate the appliance with a damaged plug or cord, after a malfunction, or after being dropped or damaged in any way.
10. Do not use the appliance for anything other than its intended use.
11. Do not touch hot surfaces, use handle or knobs when working with the unit.
12. Never place your hand over the surface when the appliance is in operation.
13. Ensure the appliance is on a flat, heat resistant surface.
14. The warmer is meant to keep the food warm only. Make sure the food on plates are thoroughly cooked.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. **Children should be supervised to ensure that they do not play with the appliance.**
16. If the supply cord is damaged, it must be replaced by the manufacturer.
17. This appliance is intended to be used in a household setting and is not intended for commercial use.

How to use the Warming Tray

Note: *There will be a faint smell when using the warming tray for the first time but this is quite normal and will fade with use.*

WARNING: *This appliance will get hot during use, please use extreme caution.*

- Place the warming tray on a flat surface, making sure the warming tray does not wobble and sits firmly on the flat surface.
- Plug the warming tray in the power supply and switch **ON** by turning the knob. The red light will turn on indicating the warming tray is operational.
- The warming tray will stay on and the light will turn off once the desired heat temperature is reached.
- Place the prepared food on the plate or bowl onto the warming tray and adjust the temperature to the desired heat. The indicator light will turn **ON** and **OFF** while maintaining the correct temperature.
- Please make sure the Warming Tray is not left on for more than 6-8 hours at any one time.
- Preheat the warming tray for 10 minutes prior to usage.
- Food warmed on the warming tray must be precooked or already hot as this appliance is not designed for cooking, heating from which are cold or frozen. Rather it is meant to keep foods which are already hot or warm.
- When you have finished using the warming tray, unplug from the power supply and allow the tray to cool down for approximately 90 minutes before storing.
- **MAKE SURE PLATES OR DISHES ON THE WARMING TRAY ARE OVEN SAFE.**
- **DO NOT USE PLASTIC OR MELAMINE ON THE WARMING PLATE.**

Cleaning and Maintenance

- To clean the warming tray make sure not to use any surface cleaning detergent or abrasive pads.
- The best way to clean the warming tray is with some soap water and a soft moist cloth.
- Make sure not to allow water to spill or seep into the frame
- To polish use a non-abrasive glass cleaner. Any food residue on the warming tray can be wiped away with a soft sponge. Rinse and wipe dry.
- Do not submerge the warming tray base or let the heat elements come in contact with water.
- ***CAUTION: Always ensure the appliance is unplugged from the power supply and has thoroughly been cooled before cleaning or storing.***
- Warming tray should be stored in a cool, dry place.
- When storing the warming tray, make sure not to have any heavy items on the warming tray.

FOR WARRANTY INFORMATION AND FEEDBACK,
PLEASE CONTACT
Support & Warranty
(424) 543-1628