

Avantree Boombyte

USER MANUAL



Avantree®

Model No.: BTSP-870

EN

Button Functions

No.	Button	Functions
1	FM	Press to enter FM mode
		Press and hold to start auto searching for all available FM channels
2	<SEEK SEEK>	Press for previous / next channel / track
		Press and hold to search up / down for the next clear FM channel
3	1 - 9	Directly input the FM channel, e.g., for 102.5, press the number sequence 1-0-2-5
		Press and hold to save FM channel to desired number button
		Press to play saved FM channel
	0	Press and hold to lock / unlock the buttons
4	<TUNE TUNE>	Press once to adjust channel up / down by 0.1 MHz(FM mode)
5	MODE	Press to switch between Bluetooth speaker / micro SD card / U disk player modes
6	>	Press once to mute / unmute (FM mode) or play / pause (other modes)
7	⚙️/OK	Press to enter menu settings
		Press and hold to enter system settings
		Press to confirm your selection

Contact Us

🎫	Support Tickets	avantree.com/submit-a-ticket
✉️	Support Email	support@avantree.com
📞	USA / CA	+1800 232 2078 (9am-6pm PST, Mon-Fri)
	UK	+44 20 8068 2023 (9am-6pm, GMT, Mon-Sat)
	DE	+49 32221097297 (11am-9pm, CET, Mon-Sat)
	FR	+ 33 176340312 (11am-9pm, CET, Mon-Sat)
	IT	+39 06 9480 3330 (9am-6pm, CET, Mon-Sat)
	ES	+ 34 931786261 (9am-6pm, CET, Mon-Sat)
	AU	+ 61 2 8310 9897 (11am-7pm, AEST, Mon-Fri)
💬	Live Chat	avantree.com (18/h weekday)
📺	Video Guide	avantree.com/boombyte/video
📖	FAQ	avantree.com/support/boombyte
🏷️	Product Registration	avantree.com/product-registration

Use as an FM Radio

Step1: Turn on the Boombyte

Rotate the volume control clockwise to ON; the LCD screen will light up.

For 1st time use, it will start auto-scanning for channels. If not, press and hold the FM button to start auto-scanning. Please wait until the auto-scanning complete.

Step 2: Tune into channels

Press the <SEEK / SEEK> buttons to choose your desired channel.

Or you can directly input the channel frequency using the number pad, e.g., for FM102.5, press the number sequence 1-0-2-5.

Or press and hold the <SEEK / SEEK> button, it will scan up / down for the next clear channel.

Step 3: Save and play your favorite channels

Save channels to the number pad for quick access - Find local FM channels as described above, then save any channel for quick access by pressing and holding the number pad until the screen displays “Channel Saved”. You can save up to 9 channels.

Play the saved channels - Click the corresponding number pad button once.

Use as a Bluetooth Speaker

Pair and connect - Turn the speaker on, press the MODE button once to enter Bluetooth speaker mode, and then activate Bluetooth on your device (i.e., phone, tablet, laptop etc.) and search for “Avantree Boombyte” to pair and connect.

To reconnect - Each time you turn it on and enter Bluetooth mode, the speaker should automatically reconnect to the last connected device. If not, select “Avantree Boombyte” on your device.

Use as a MicroSD Card Player

When you insert a microSD card (not included) while the radio is on, it will automatically switch to microSD mode. If you insert the card when the radio is off, you'll need to press the MODE button to switch to microSD mode.

The Boombyte supports MP3 / WMA / WAV file formats, and the max storage capacity of the SD card is 32GB.

Repeat / shuffle settings - Press the ⚙️/OK button to enter the settings menu and press the ⚙️/OK again to enter “Repeat / Shuffle”. Press the <SEEK / SEEK> to select your desired option and press ⚙️/OK once to confirm.

Use as a U Disk Player

Follow the instructions for the MicroSD card player above, swapping "microSD card" with "U Disk". Make sure to press the "MODE" button to switch to U disk mode.

Charging

A 🔋 icon will flash on the Boombyte's screen to indicate low battery. You can charge the radio using any USB adapter with a 5V/0.5-1A output (i.e., your phone charger or similar) via the included USB C charging cable.

The 🔌 icon on the LCD screen will flash while charging and stop once charging is complete. It takes about 3 hours to fully charge the radio.

Configuring the System Settings

Turn on the device and press & hold the ⚙️/OK button to enter the system settings.

Press the <SEEK / SEEK> to select the desired option (Backlight, language, contrast, factory reset...) and press ⚙️/OK once to confirm.

FAQ

Below are some of the most common questions people have during setup.

Why is my FM reception so bad?

Why is my microSD card not working?

For answers to questions like these and for a full FAQ list, you can visit avantree.com/support/boombyte, or you can contact us directly for additional assistance.

Product Overview

