


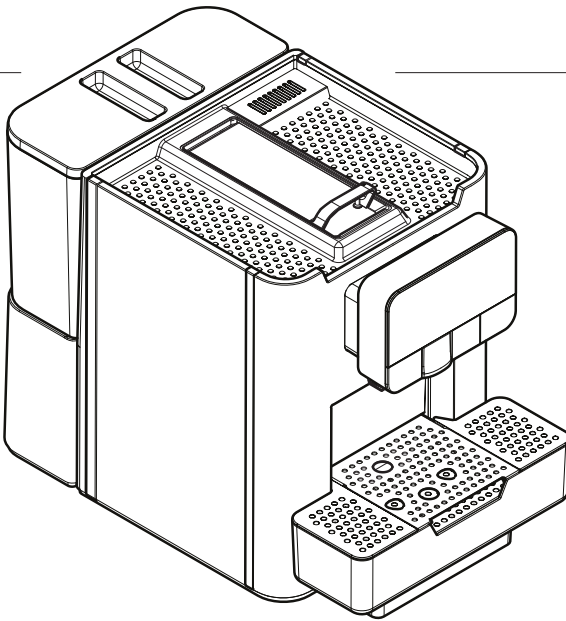

BIALETTI

Automatic machine for espresso coffee and hot beverages

AREA



Code: 012200010

CE


ATTENTION: Read this user manual carefully before using the machine.

OPERATION AND MAINTENANCE

UK

Dear customer, thank you for purchasing Bialetti Espresso Coffee Machine! Thank you for choosing one of our products. We hope that this choice will fully meet your expectations. The Bialetti Espresso System is the result of years of passion and deep research into coffee and its different ways to prepare it. Thanks to the invention and release of Moka Express, the little man with moustache has been doubtlessly the synonym and icon of the authentic Italian espresso coffee since 1933. Your machine only operates with original Bialetti capsules, perfectly dosed and made of aluminium. These capsules have been designed to have you enjoy a bar-like coffee even at home. Please read the following instruction booklet before using the appliance. Best regards from Bialetti Industrie, we hope you will enjoy your cup.



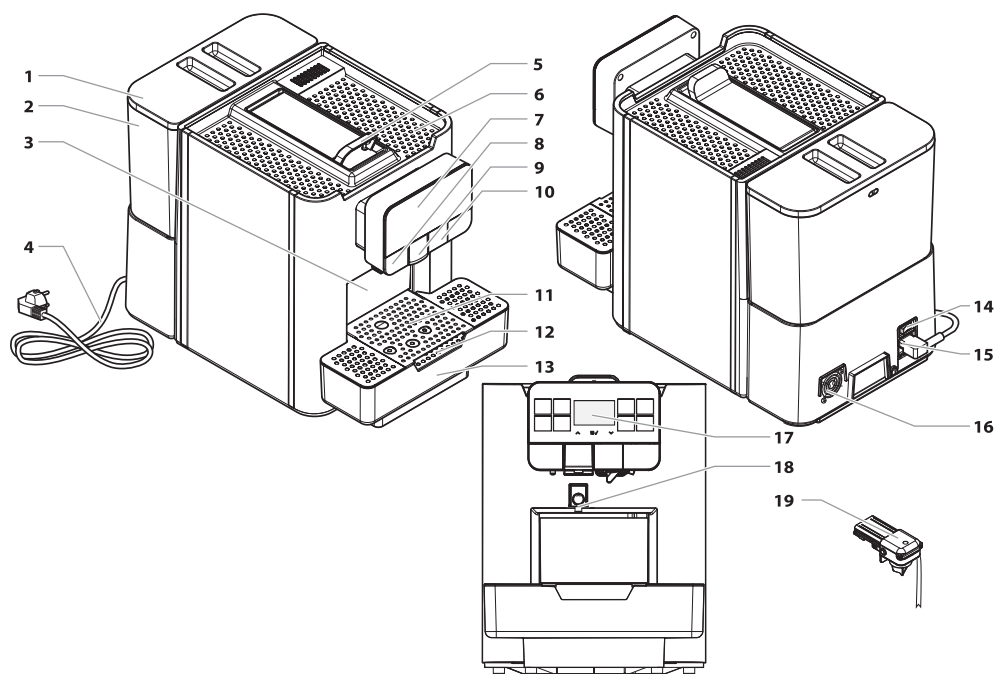




MAIN PARTS




1	Water tank lid
2	Water tank
3	Used capsule drawer
4	Power cord
5	Capsule loading tray
6	Cup holder surface
7	Touch control panel
8	Hot water dispensing spout
9	Moving coffee dispensing spout
10	Cappuccinatore cover

11	Cup holder (small cups)
12	Cup holder (mugs)
13	Drip tray
14	Power button
15	Chassis plug
16	Ventilation fan
17	Display
18	Coffee dispensing spout
19	Cappuccinatore


SAFETY INSTRUCTIONS


-  **Never allow water to come into contact with any of the electrical parts of the machine: danger of short circuit! Hot water and steam may cause scalding!**
-  **Intended Use**
-  The machine is intended to be used in small offices/organisations only.
-  Do not make any technical changes or use the machine for unauthorised purposes since this would create serious hazards!
-  The machine may be used by children older than 8 or by persons with reduced physical, mental or sensory abilities or lacking sufficient experience and/or skills, provided that they are supervised or instructed on how to use the appliance correctly and understand the hazards involved.
-  Children must never play with the appliance.
-  Children must not carry out any cleaning and maintenance operations without being monitored.


Power Supply


 The machine must be connected to the power supply by the service provider, in accordance with its specifications.


Power cord

 Never use power defective cords.


 Report any defects in the cord and/or plug to the service provider immediately.

 Do not pass the power cord around corners, over sharp edges or over hot objects and keep it away from oil.


 If the power cord is damaged, it must be replaced by the manufacturer, its service centre or by adequately qualified personnel in order to avoid any risks.

 Do not use the power cord to carry or pull the machine. Do not pull out the plug by the power cord or touch it with wet hands or feet. Do not let the power cord hang freely from tables or shelves.


Safety of Persons

 Ensure that children cannot play with the machine and/or the packaging materials.


Danger of Burning


 Do not touch the hot water dispensing spout or the coffee/beverage dispensing spout.


Fire Safety Precautions


 In case of fire, use carbon dioxide (CO₂) extinguishers. Do not use water or dry powder extinguishers.


Suitable Location for Operation and Maintenance


 The machine should be installed by the service provider in accordance with the safety regulations in force at the time of installation.


 The machine may only be moved by the service provider.


 Do not use the machine outdoors.

 Do not install the machine in a location where water jets may be used.


 Do not use open flames and/or incandescent objects near the machine so as not to damage or melt the machine housing.


 Do not use the coffee machine in an environment with temperature values lower and/or equal to 2°C or higher than 32°C; If the machine has been exposed to such conditions, alert the service provider, who will carry out a safety check.


 The appliance must be installed on a horizontal surface.


 The machine must only be installed in places where it can be checked by qualified staff.


Cleaning the machine

 Before cleaning the machine, switch OFF (0) the power button and the remove the plug from the power socket. Wait for the machine to cool down.


 Never immerse the machine in water!


 It is strictly forbidden to tamper with the internal parts of the machine.


 Do not clean the machine using jets of water.


 The appliance and its components must be cleaned and washed after a period of inactivity.

Using Milk


 Milk must be used and stored in accordance with the instructions given on the manufacturer's original packaging.

 We accept no liability for use of milk unsuitable for human consumption.


 Milk must be kept cold, as high temperatures will make it turn sour - this is a natural characteristic of milk. For this reason, the Cappuccinatore must be cleaned after each use, as described in the manual.

 Clean the Cappuccinatore following the instructions described in this manual.


Milk Dosage


 The machine has a default dose set-up for all milk beverages. However, the dose of beverage in the cup may vary according to the type of milk used. Therefore it is recommended to check the doses - using a milk type which is normally used - and, if necessary, to set them again according to the user needs.


Storing the Machine


 When the machine will not be used for a long period of time, turn it off and unplug it from the outlet. Store the machine in a dry place, out of the reach of children. Keep it protected from dust and dirt.

Servicing Maintenance /

 In case of failures, defects or suspected faults resulting from a fall, immediately unplug the machine from power socket and alert the service provider or specialised technician.

 Never attempt to operate the machine if it is faulty.

 Only the service provider and/or technician may service or repair the machine.


 Only skilled and experienced people - with particular reference to safety and hygiene - are allowed to access the service area.


CONTENTS


NOTITOLO	2		
MAIN PARTS	3		
1 INTRODUCTION TO THE MANUAL	10		
1.1 PREAMBLE	10		
1.2 ICONS USED	11		
2 INFORMATION ABOUT THE APPLIANCE	12		
2.1 INFORMATION FOR THE MAINTENANCE TECHNICIAN	12		
2.2 DESCRIPTION AND INTENDED USE	12		
2.3 APPLIANCE IDENTIFICATION	13		
2.4 ASSISTANCE SERVICE	13		
2.5 TECHNICAL SPECIFICATIONS	14		
3 SAFETY	15		
3.1 PREAMBLE	15		
3.2 GENERAL SAFETY INSTRUCTIONS	15		
3.3 OPERATOR REQUIREMENTS	16		
4 HANDLING AND STORAGE	17		
4.1 UNLOADING AND HANDLING	17		
4.2 STORAGE	17		
5 INSTALLATION	18		
5.1 CAUTIONS	18		
5.2 UNPACKING AND POSITIONING	19		
5.3 CONNECTION TO THE ELECTRIC NETWORK	20		
6 DESCRIPTION OF CONTROLS	21		
6.1 POWER BUTTON	21		
6.2 DISPLAY	21		
6.3 KEYPAD	21		
6.4 BUTTON DESCRIPTION DURING NORMAL OPERATION	21		
7 SUPPLY AND START UP	23		
7.1 FILLING THE WATER TANK	23		
7.2 MEASURING AND ADJUSTING WATER HARDNESS	24		
7.3 WATER FILTER	24		
7.4 ADJUSTING THE COFFEE DISPENSING SPOUT	30		
7.5 TURNING ON/OFF THE MACHINE	31		
7.6 FIRST USE - USE AFTER A LONG PERIOD OF INACTIVITY	31		
7.7 WASHING THE PARTS COMING INTO CONTACT WITH FOOD	32		
7.8 USING THE APPLIANCE	32		
8 PROGRAMMING MENU	33		
8.1 BUTTON DESCRIPTION IN PROGRAMMING MODE	33		
8.2 USER PROGRAMMING	33		
8.3 MAINTENANCE PROGRAMMING	37		
8.4 TECHNICAL PROGRAMMING	43		
9 OPERATION AND USE	53		
9.1 WARM-UP AND RINSING	53		
9.2 RINSING AND SELF-CLEANING	54		
9.3 LOADING CAPSULES	54		
9.4 BREWING A SINGLE COFFEE/PRODUCT	56		
9.5 DISPENSING HOT WATER	60		
9.6 EMPTYING THE CAPSULE DRAWER AND THE DRIP TRAY	61		
10 CLEANING AND MAINTENANCE	64		
10.1 GENERAL NOTES FOR CORRECT OPERATION	64		
		10.2 CLEANING AND SCHEDULED MAINTENANCE	65
		11 TROUBLESHOOTING	75
		11.1 WARNING SIGNALS	75
		11.2 PROBLEMS - CAUSES - SOLUTIONS	78
		12 STORAGE - DISPOSAL	79
		12.1 LOCATION CHANGE	79
		12.2 INACTIVITY AND STORAGE	79
		13 INSTRUCTIONS FOR END OF OPERATIONAL LIFE DISPOSAL	80

I INTRODUCTION TO THE MANUAL


I.1 Preamble


 This publication is an integral part of the machine and has to be read carefully to ensure its correct use in accordance with the essential health and safety requirements.


 This manual contains the technical information necessary to properly perform the operating, installation, cleaning and maintenance procedures.

 Always refer to this manual before carrying out any operation.

This product has been manufactured by SaGa Coffee S.p.A. and sold under its own responsibility. SaGa Coffee S.p.A. is the guarantor of the product. Saeco is a registered trademark of Koninklijke Philips N.V. and its use is licensed by Koninklijke Philips N.V.

 This publication should be carefully kept with the machine throughout its service life, including transfers of ownership.

 If this manual is damaged or lost, a copy may be requested from the manufacturer or the technical service by indicating the data contained on the data plate on the rear side of the machine.

 The manufacturer reserves the right to make changes without prior notice.

Manufacturer: SaGa Coffee S.p.A.
Località Casona, 1066 - 40041 Gaggio Montano
Bologna, Italy
www.saecoprofessional.com

1.2 Icons Used

Various kinds of warnings are contained in this manual to highlight the different hazard or competence levels.

Each icon is followed by a message suggesting operating and behaviour procedures and providing useful information for the correct operation of the machine.

Warning

It is used to highlight danger situations for the persons in charge of using, refilling and servicing the machine.

Prohibition

It is used to highlight actions/operations not to be performed.

Important

It is used to indicate operations that, if correctly performed, preserve machine performance.

Suggested solutions

It is used to indicate alternative procedures which make programming and/or maintenance operations quicker.

User

It is used to indicate the user of the machine. Users are not allowed to perform any cleaning or maintenance operations.

Supply operator

It is used to indicate those operations that must be performed only by the person in charge of refilling and cleaning the machine.


Supply operators can not perform any operations requiring a Maintenance Technician.

Maintenance technician

It is used to signal those operations that must be performed only by the specialised maintenance technicians.

2 INFORMATION ABOUT THE APPLIANCE

2.1 Information for the Maintenance Technician

 The appliance must be installed in a well-lit, sheltered and dry place and on a table suitable to bear its weight.

To ensure its correct operation and reliability over time, comply with the following recommendations:

- ambient temperature: from +2°C to +32°C;
- maximum humidity allowed: 80% (non-condensed).

For special installations, not covered by this manual, please contact the dealer or the local importer. If this is not possible, please contact the Manufacturer.

The technical service is available for any explanation or information regarding the correct operation of the machine and to satisfy any request for spare parts supply or technical assistance.

The Maintenance Technician must carefully read and observe the safety warnings contained in this manual to ensure that installation, start-up, use and maintenance operations are performed in complete safety.

This manual is an essential part supplied with the machine and should always be available for reference before any operation on the machine.


2.2 Description and Intended Use

This machine is automatically used to brew:

- coffee and espresso coffee brewed exclusively from BIALETTI PROFESSIONAL capsules.
- hot water to prepare beverages;
- milk-based beverages using the Cappuccinatore supplied.

The elegant machine housing has been designed for use in small offices, businesses and institutions.

Using the machine for any other purpose is considered dangerous and as a misuse.

 Misuse voids all forms of warranty, releasing the Manufacturer from any responsibility for damage to property and/or personal injury.


 The following are also considered misuse:

- any use other than the intended use and/or employing methods other than those described in this manual;
- any operation on the machine in breach of the instructions provided in this manual;
- any tampering with parts and/or safety devices not previously authorised by the Manufacturer and performed by unauthorised personnel;
- use of non-original BIALETTI PROFESSIONAL capsules.
- machine installation in an outdoor environment.

In such cases the customer will be charged with the machine repair cost.


2.3 Appliance Identification


The appliance is identified by the model name and serial number shown on the special plate.

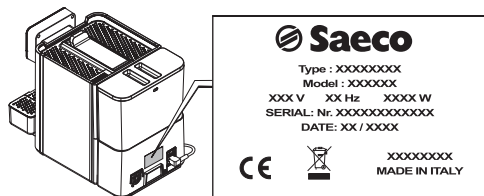

The plate contains the following data:

- name of the Manufacturer;
- marks of conformity;
- model;
- serial number;
- year and month of manufacture;
- supply voltage (V);
- supply frequency (Hz);
- electrical power consumption (W);
- appliance code.


 It is strictly forbidden to tamper with or modify the data plate.

 When contacting the technical service, always refer to this plate by indicating the technical data shown on it.

2.4 Assistance service


In the event of a failure or malfunction that can not be solved, please contact:

Revolvo srl
 Tel: +39 800124588 (from landline)
 Tel +39 0221116486
 info@revolvo.it
<http://www.revolvo.it/index.aspx>

 The warranty is valid exclusively within Italian territory.

2.5 Technical Specifications

Size (w x h x d)	280 x 380 x 480 mm
Weight	approx. 9 kg
Machine housing material	Thermoplastic material
Power Rating	See the data plate
Supply Voltage	See the data plate
Power cord length	approx. 1,200 mm
Capacity	Water tank 4 litres Used capsule drawer BIALETTI PROFESSIONAL 50 capsules
Capsule Type	BIALETTI PROFESSIONAL
Control panel	Front panel
A-weighted sound pressure level	less than 70 dB
Pump pressure	Max 1,9MPa (19,0 bar)
Operating conditions	Minimum temperature: above 2°C Maximum temperature: less than 32°C Maximum humidity: less than 80%
Safety devices	Boiler pressure safety valve Safety thermostat

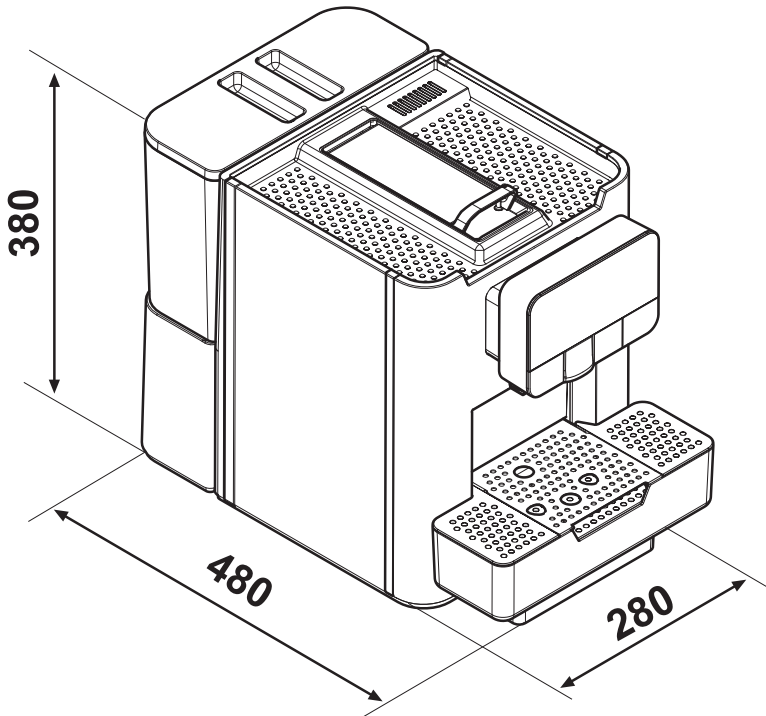

Subject to engineering and manufacturing changes due to technological improvements.
Machine compliant with EU Directive 2014/30/EU.

3 SAFETY

3.1 Preamble


In accordance with the applicable standards and regulations, the manufacturer has compiled a technical file relating to the appliance at its design stage, in compliance with the following standards:

- | | |
|----------------|-----------------|
| - EN 55014-1 | - EN 55014-2 |
| - EN 6100-3-2 | - EN 60335-2-75 |
| - EN 61000-3-3 | - EN 60335-1 |

3.2 General Safety Instructions

It is forbidden to:

- tamper with or disable the safety systems installed on the machine;
- service the machine prior to unplug the power cord;
- install the appliance outdoors. It is advisable to place it in a dry place where the temperature does not drop below 2°C, in order to prevent any possible freezing.
- use the appliance for purposes other than those indicated in the sale contract and in this manual;
- electrically connect the appliance using multi-sockets or adapters;
- use jets of water for cleaning operations.

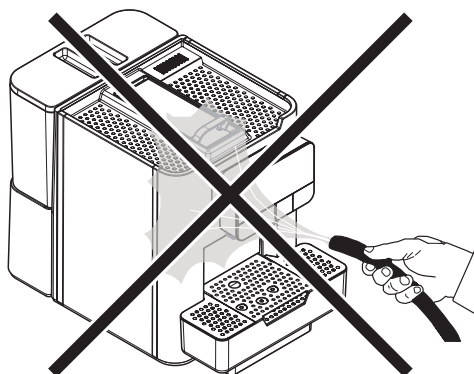



It is mandatory to:


- check conformity of the power supply;
- use original spare parts;
- carefully read the instructions contained in this manual and in the attached documents;
- use personal protective equipment when performing installation, testing and maintenance operations.


Precautionary measures to prevent human errors:

- make the operator aware of safety issues;
- handle the appliance, either packaged or unpackaged, in complete safety;
- deeply know the installation procedures, its correct operation and its limits;
- dismantle the appliance in complete safety, in accordance with the workers' health and environmental protection regulations in force.

 To prevent machining residues from coming into contact with the beverages, dispense about 0.5 l of water for each dispensing path before definitely starting the appliance. The dispensed beverages can be drunk only after performing this operation.


 In case of failure or malfunctioning, please refer only to the qualified personnel of the technical service.

 The manufacturer is not liable for damage to persons or property resulting from failure to follow the safety instructions provided in this section.

 The Supply operator is not allowed to carry out operations indicated in this manual as competence of the Maintenance Technician.

 Maintenance technician

The maintenance technician is the only person authorised to service the machine, start the programming procedures and perform the adjustment, set up and maintenance operations.

 Access to the internal area is restricted to persons having knowledge and practical experience of the appliance, in particular as far as safety and hygiene are concerned.

3.3 Operator Requirements

Three operators with different skills are required in order to guarantee the appliance's safety:


 User

The user is not allowed to access the internal parts of the machine.

 Supply operator


Only the Maintenance Technician is in charge of refilling the machine with products, cleaning the outside of the appliance, turning it on and off.

4 HANDLING AND STORAGE

 All the operations described in this chapter must be performed exclusively by the service provider or a specialised technician, who shall organise all the operating steps and use only suitable means to ensure strict compliance with the safety regulations in force.

4.1 Unloading and Handling

Unloading from the transport vehicle and handling operations of the appliance must be carried out by qualified personnel only and using suitable equipment.

 The appliance must always be kept in upright position.

 Do not:


- drag the appliance;
- overturn or lay down the appliance during transport and handling;
- shake the appliance;
- lift the appliance by using ropes or cranes;
- leave the appliance exposed to bad weather, in humid areas or close to heat sources.


4.2 Storage

The machine is packed in cardboard and expanded polystyrene packaging.


If the appliance is not immediately installed, it shall be kept in a sheltered place according to the following instructions:

- the packaged appliance shall be stored in a closed, dry area at a temperature between 1°C and 40°C;
- maximum humidity below 90% (non-condensed);
- do not put other appliances or boxes on the appliance;
- in any case, it is good practice to protect the appliance from possible deposits of dust or other substances.

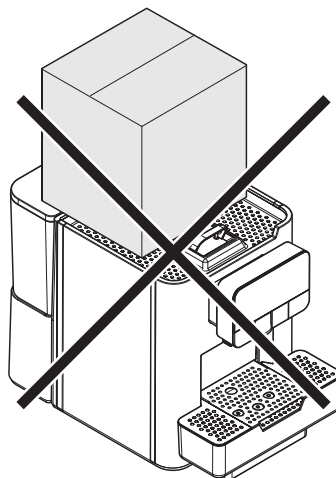


 Due to the total weight, do not stack more than three machines on top of each other. The machine should be stored in its original packaging, in a dry and/or dust-FREE place.

5 INSTALLATION


 All the operations described in this chapter must be performed exclusively by the service provider or a specialised technician, who shall organise all the operating steps and use only suitable means to ensure strict compliance with the safety regulations in force.

5.1 Cautions

 The appliance cannot be installed in external areas. Avoid placing it in areas where the temperature is lower than 2°C or higher than 32°C and in particularly humid or dusty places. It should neither be installed in places where water jets are used for cleaning operations nor where there is a risk of fire or explosion.

Make sure that the installation place is compatible with the following specifications, before unpacking the appliance:

- the power socket which the appliance is connected to should be easily accessible and at a distance not higher than 1.2 metres;
- the gradient of the supporting surface should NOT exceed 2°;
- the socket voltage must correspond to that indicated on the appliance data plate.

 The appliance must be installed on a horizontal surface.


⚠ The supporting surface must be adequate to bear the machine weight and clean.

⚠ Access to the machine and the plug should be kept clear at all times in order to allow users to easily reach them and to leave the area immediately if required.

⚠ The presence of magnetic fields or proximity to electrical machines which generate interference could cause the electronic controls of the machine to malfunction. At temperatures close to 0°C, internal parts containing water are at risk of freezing. Do not use the machine under these conditions.

The following illustration shows the required access distances:

- to the keypad on the front of the appliance;
- to the service units in the event of failure.

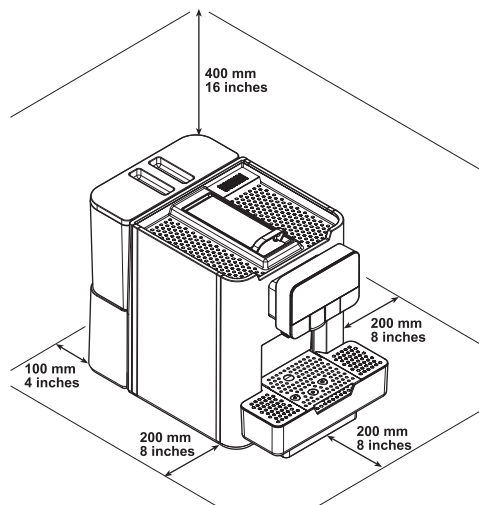


5.2 Unpacking and Positioning

On receipt of the appliance, make sure that it has not suffered any damage during transport or that the packaging has not been unduly opened with consequent stealing of the components contained in it. If damage of any kind is found, the courier must be informed and notice must be immediately given to the importer or to the seller. If these are not in the purchaser's country, please contact the manufacturing company directly.

List of Standard Accessories

Manual: instructions on how to use the machine.

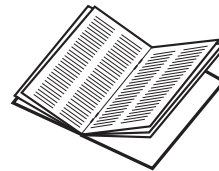

Power cord: to connect the machine to the mains.



Silicone hose: once connected to the Cappuccinatore it allows to suck the milk from the container.



List of Optional Accessories (not included)


Descaling solution: to remove limescale build-up in the water circuit caused by normal use.




Water filter: to remove any unpleasant flavours in the water and reduce water hardness. This will improve machine use.





5.3 Connection to the Electric Network


 This operation must only be performed by specialised technical personnel or by the service provider.


 The Maintenance Technician, who is in charge of the appliance's installation, shall make sure that:

- the power supply system complies with the safety instructions in force;
- the voltage corresponds to that indicated on the appliance data plate.

 In case of doubt, do not proceed with the installation and ask qualified and authorised personnel to accurately check the system.

 Do not use adapters or multi-sockets.

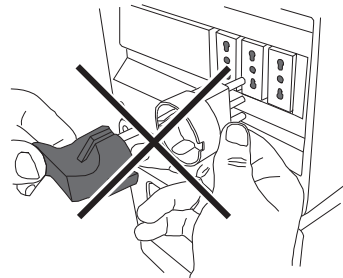

 Make sure that the power cord plug is easily reachable after installation.


6 DESCRIPTION OF CONTROLS

6.1 Power button

It is located in the lower left part in the rear of the machine.

If set to the "I" position the machine turns on (electrical functions enabled).


If set to the "O" position the machine turns off (electrical functions disabled).

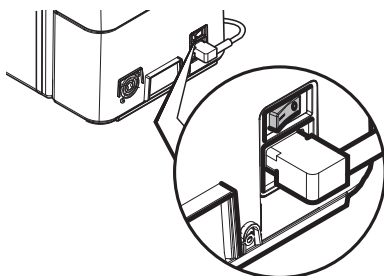


6.2 Display

The display shows the messages during normal operation and during the programming and maintenance phase.

6.3 Keypad

 The function of each key changes according to the change of the appliance phase (ordinary dispensing or programming phase).

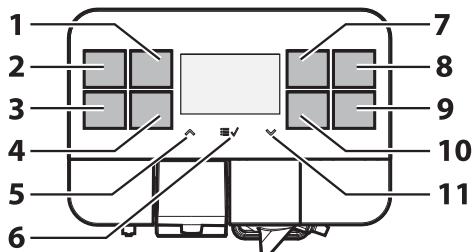

1	"Espresso Long" button
2	"Espresso" button
3	"Manual Brewing" button
4	"Hot Water" button
5	"Up" button
6	"MENU/OK" button
7	"Espresso Macchiato" button
8	"Cappuccino" button
9	"Latte Macchiato" button
10	"Milk" button
11	"Down" button

6.4 Button Description during Normal Operation

"Espresso Long" button

When this button is pressed, a long espresso coffee is brewed.

"Espresso" button

When this button is pressed, an espresso coffee is brewed.

"Manual Brewing" button

When this button is pressed, a coffee product is brewed and the user is able to choose the length of the product.

"Hot Water" button

Press this button to dispense hot water.

"Up" button

Press this button to scroll up the user menu options.

"MENU/OK" button

Press this button to access the user menu, which allows you to perform a few machine washing cycles (Cappuccinatore and brew group) and to access the maintenance menu. Once entered the menu, this button allows you to confirm the selected menu option.

"Espresso Macchiato" button

Press this button to start brewing an Espresso Macchiato.

"Cappuccino" button

When this button is pressed, a cappuccino is brewed.

"Latte Macchiato" button

When this button is pressed, a Latte Macchiato is brewed.

"Milk" button


When this button is pressed, a cup of milk is dispensed.

"Down" button


Press this button to scroll down the user menu options.

7 SUPPLY AND START UP


7.1 Filling the Water Tank

 Before using the machine for the first time, wash the water tank carefully. Fill the water tank with fresh drinking water only. Hot or carbonated water, as well as other liquids, will damage the machine.


Remove the lid from the water tank.

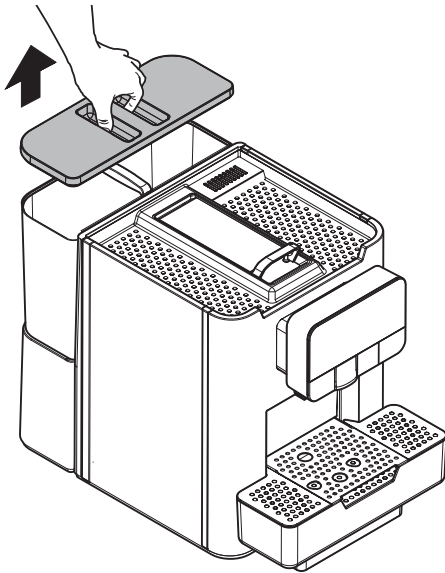


Remove the tank; lift it using the inside handle.

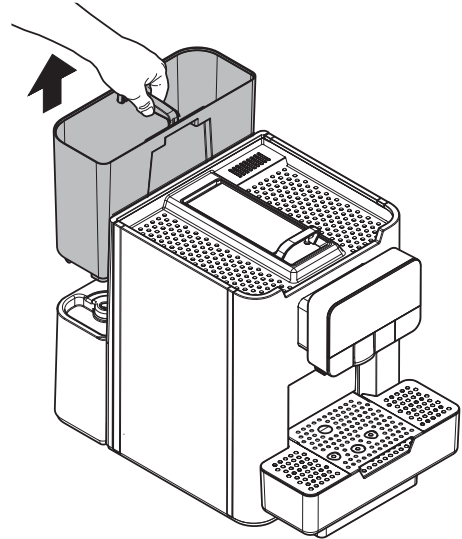

Rinse and fill it with fresh water; do not exceed the level (MAX) indicated on the tank.

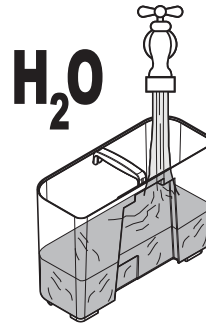



 When filling the water tank, use sterile disposable gloves to prevent bacteriological contamination.

Insert the water tank back into its seat and refit the lid.


7.2 Measuring and Adjusting Water Hardness

Measuring water hardness is very important in order to correctly manage the anti-scale filter and the frequency with which the machine must be descaled. Immerse the water hardness test strip (not included) in water for 1 second.

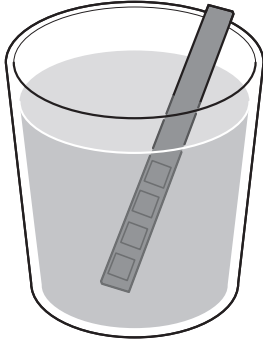

 the test strip is only valid for one measurement.

Check how many squares change their colour and then consult the table.

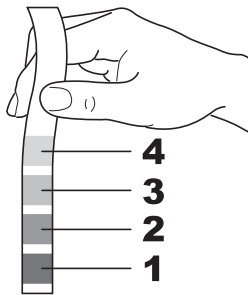

The numbers correspond to the settings indicated in the following machine adjustments.

1	HARDNESS 1 (very soft)
2	HARDNESS 2 (soft)
3	HARDNESS 3 (medium)
4	HARDNESS 4 (hard)

Switch to machine programming mode as described in section "Access to the Technical Menu".

Scroll the menu until you reach the "Settings" option.




Press the "OK" button to confirm.

Scroll the menu until you reach the "Water hardness" option.



Press the "OK" button to confirm.


 The machine is supplied with standard adjustments, suitable for most uses.


Press the "Up" button to increase the value or the "Down" button to decrease the value. Press the "OK" button to confirm the selected change.


After adjusting the water hardness, install the anti-scale filter as described in the following section.

7.3 Water filter


Water is a key element for a good espresso coffee. Therefore, it should always be filtered in a professional manner. The water filter is designed to reduce limescale build-up inside the machine and to provide filtered water in order to preserve the coffee aroma and flavour in each cup. By using the series of 8 water filters as indicated in this manual, you will not need to descale the machine for the next 5000 cups (with 100-ml capacity). This filter is easy to use and its sophisticated technology is effective in preventing limescale build-up. This way, water will always be perfect and will give a much more intense aroma to your espresso coffee.

 Descal the machine completely before using the water filter.

 In case you did not activate the filter upon first use and you already prepared more than 50 cups (with 100-ml capacity), descale the machine before activating the filter.

 Replace the water filter as soon as its capacity drops to 0% and the filter icon blinks quickly. Replace the water filter at least every 3 months, even if the machine has not yet indicated the need to replace it.

 We recommend to buy a new filter when its capacity drops to 10% and the filter icon starts blinking slowly. In this way you can replace the filter when its capacity drops at 0%.

 The anti-scale filter should be replaced whenever indicated by the machine. Before descaling, remove the anti-scale filter from the water tank.

7.3.1 Preparing and installing the water filter


You can install the water filter when first installing the machine as part of the installation procedure. If you did not install the water filter upon first use, you can install it later by accessing the menu as described below. Remove the water filter from its packaging. Shake it for about 5 seconds. Immerse the water filter upside down in a carafe full of cold water and wait for the air bubbles to come out completely.



Switch to machine programming mode as described in section "Access to the Maintenance Menu". Scroll the menu until you reach the "Water filters management" option.

WATER FILTERS
MANAGEMENT

Press the "OK" button. The display shows the number of water filters previously installed, from 0 to 8.

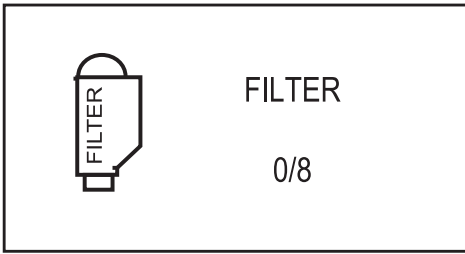

Press the "OK" button to confirm. In case 5 litres of water have been dispensed since the last descaling cycle with no filters installed in the machine, or a water filter has been used up or the water filter is the eighth of its sequence, it is necessary to descale the machine and the following screen is displayed. Otherwise activate the filter as described below, skipping the descaling operations.



Select "OK" and press the "OK" button. The following screen is displayed:




Select "YES" and press the "OK" button. The following screen is displayed:



Open the capsule loading lever. The following screen is displayed:


 Do not insert the capsule.

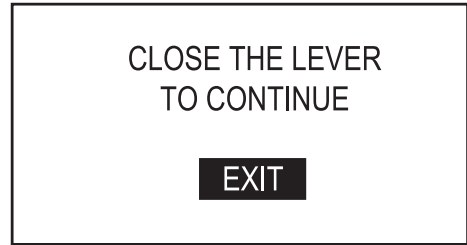


Close the capsule loading lever. The following screen is displayed:




Remove the tank from the machine and empty it. Remove the small white filter from the tank and store it in a dry place sheltered from dust.

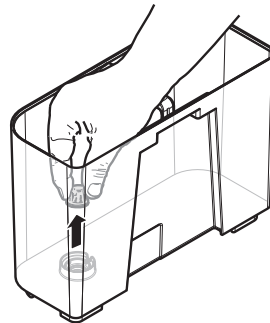


Select "OK" and press the "OK" button. The following screen is displayed:

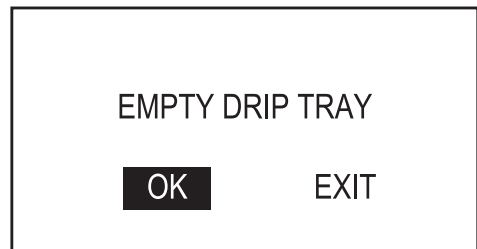


Remove and empty the drip tray.

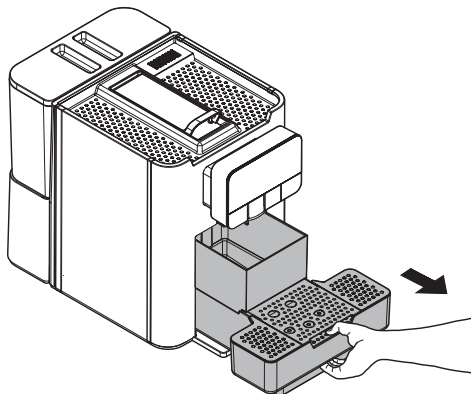


After emptying it put the drip tray back into place. Select "OK" and press the "OK" button. The following screen is displayed:

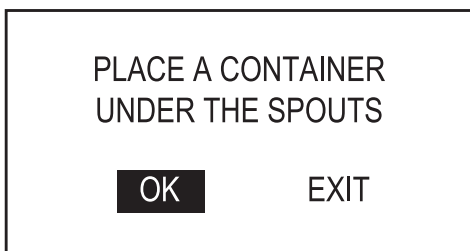


Place a large container under the dispensing spouts (hot water, coffee and cappuccino).

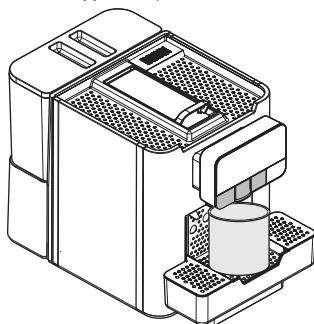


Select "OK" and press the "OK" button. The following screen is displayed:

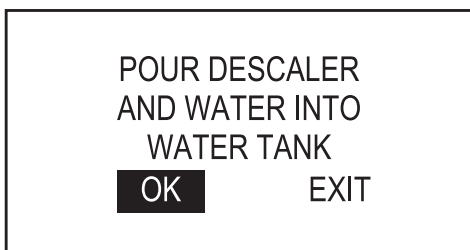


Pour 250 ml of descaling solution and 750 ml of water into the water tank. Select "OK" and press the "OK" button. The following screen is displayed:

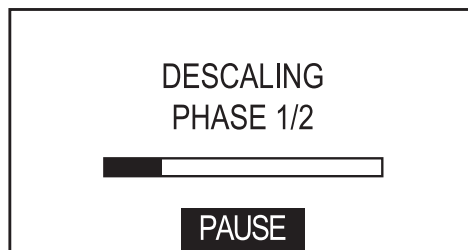


The first descaling phase starts. Press the "OK" button to pause the operation. Press the "OK" button again to resume the operation. When the descaling solution in the tank is finished, the machine requests to rinse the tank with fresh drinking water.

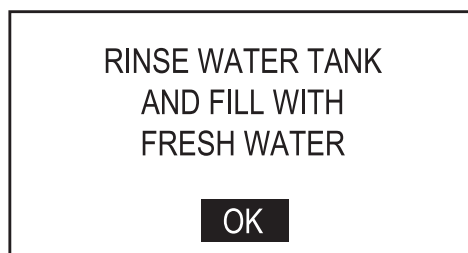


Rinse the water tank thoroughly and fill it with fresh drinking water up to the MAX level. Press the "OK" button. The following screen is displayed:

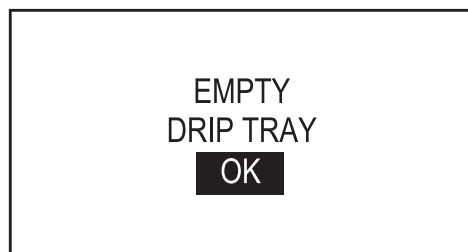

Remove the drip tray. After emptying it put the drip tray back into place. Press the "OK" button. The following screen is displayed:

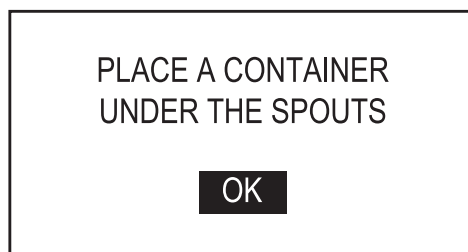

Place a large container under the dispensing spouts (hot water, coffee and cappuccino). Press the "OK" button. The following screen is displayed:

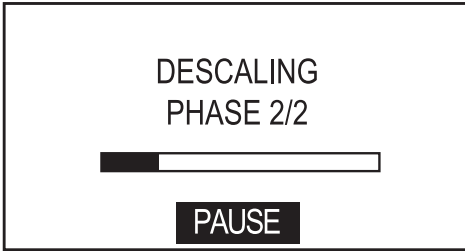

Press the "OK" button to pause the operation. Press the "OK" button again to resume the operation. Once the operation is complete the following screen is displayed:



The following screen is displayed:


In case machine descaling is not necessary or when replacing one of the 8 filters, the activation procedure starts from this point.




Select "YES" and press the "OK" button. The following screen is displayed:




Put the filter into the empty tank. Press it to its limit stop.

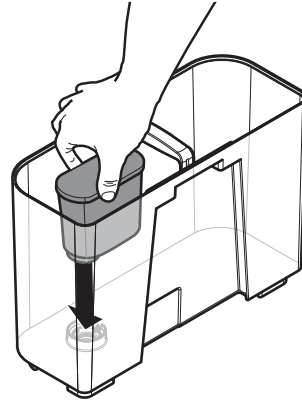


Fill the water tank again up to the MAX level with fresh drinking water. Select "OK" and press the "OK" button. The following screen is displayed:

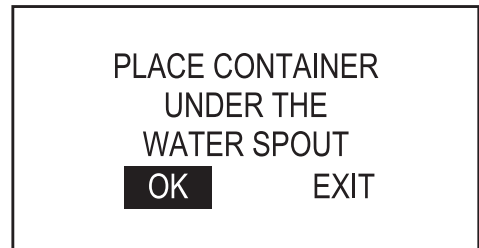


Place a container under the hot water dispensing spout. Select "OK" and press the "OK" button. The filter activates. The following screen is displayed:

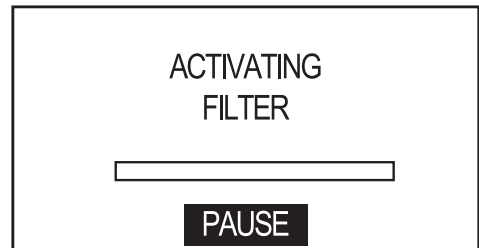


Press the "OK" button to pause the operation. Once the operation is complete the machine exits the "Water filters management" menu. To exit, scroll the menu using the "Up" or "Down" buttons until option "Exit". Fill the water tank again up to the MAX level with fresh drinking water. The water filter icon with 100% appears on the machine-ready screen to indicate that the filter has been installed.

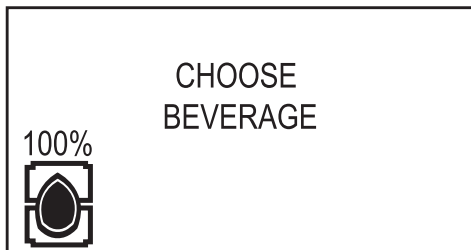

7.3.2 Replacing the water filter

 Replace the water filter as soon as its capacity drops to 0% and the filter icon blinks quickly.

 Replace the water filter at least every 3 months, even if the machine has not yet indicated the need to replace it.

Pull out the water filter. Follow the steps described under "Preparing and Installing the Water Filter". The operations relating to the descaling phase are not requested. You just need to replace the filter and activate the new one. The display automatically updates the number of filters used. Fill the water tank again up to the MAX level with fresh drinking water.

Replacing the Filter after Using 8 Filters

Pull out the water filter. Follow the steps described under "Preparing and Installing the Water Filter". All operations relating to the descaling phase are requested as well. The display automatically updates the number of filters used. Fill the water tank again up to the MAX level with fresh drinking water.

7.3.3 Remove water filter

If the filter is installed in the machine and you want to remove it, follow the steps below.

Remove the water filter. Descal the machine as described in section "Descaling". You do not need to remove the small white filter, since it was removed previously. Once descaled, the machine requests to press a button.



Once the button is pressed the following screen is displayed:






Select "NONE" and press the "OK" button. Exit the programming mode.

Put the small white filter back into place. Fill the water tank again up to the MAX level with fresh drinking water.

7.4 Adjusting the Coffee Dispensing Spout


Most of the cups and mugs available on the market can be used with this coffee machine. The height of the dispensing spout can be adjusted to better fit the dimensions of the cups that you wish to use.

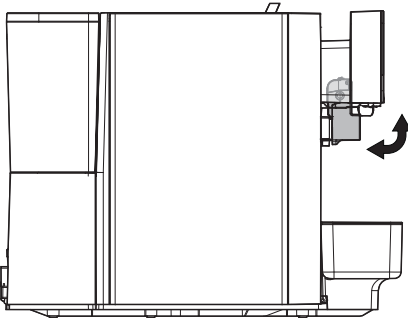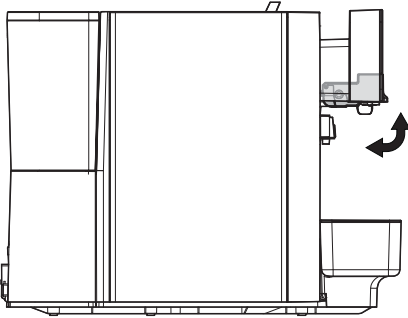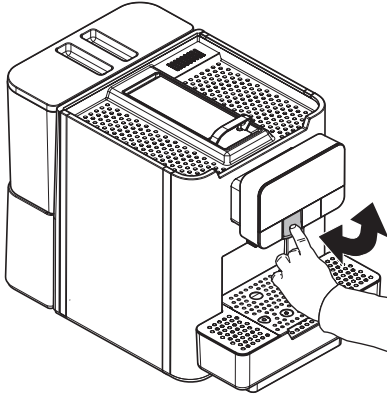



Manually move the dispensing spout up or down to adjust its height. Lift or lower the central grill.

The recommended positions are:

- When using small cups.

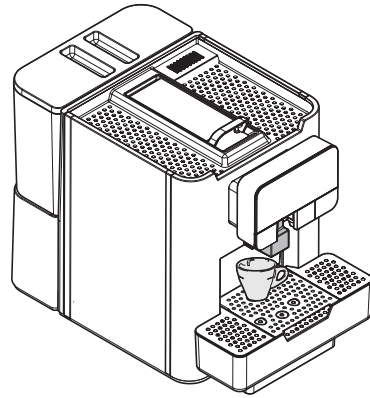


- When using large cups and/or Latte Macchiato cups.

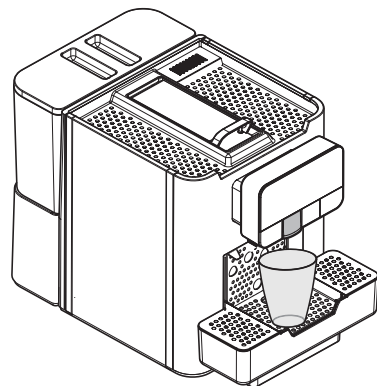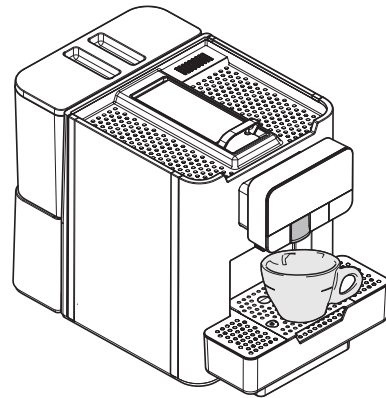

7.5 Turning on/off the machine

The machine can be turned on/off by pressing the button located to the rear of the machine.

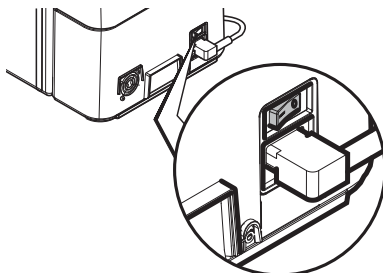

7.6 First Use - Use after a Long Period of Inactivity

Refill the machine. Fill the water tank (see section "Filling the Water Tank"). Connect the plug of the appliance to the mains (see section "Connection to the Electric Network").

For a perfect Espresso: rinse the coffee circuit if using the machine for the first time or after a long period of inactivity.

Upon the first start up brew at least 0.5 litres of water with no capsules. Open and close the capsule loading tray and press the "Long Coffee" button - with no capsule inserted - to start brewing. Repeat the procedure until the specified quantity is reached.

Do not leave water inside the tank for more than 3 days. Do not leave water in the circuit for more than 3 days or, in case this happens, dispense water (with no capsules) before brewing coffee.


These simple operations will allow you to always brew excellent coffee.

They have to be performed:



- at first start-up;
- when the machine remains inactive for a long time (more than 2 weeks).

7.6.1 At First Start-up


Press the power button on the back of the machine to turn it on. The control panel display shows the wording "SYSTEM BOOT". Then you are requested to press a button.

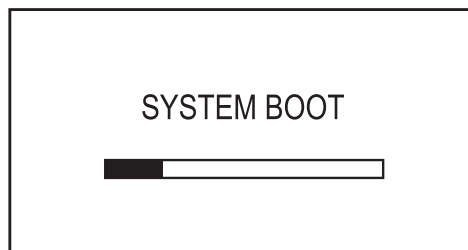

Once you have pressed a button the control panel display shows the wording "Start water circuit priming?". The "Espresso" button is steady on.

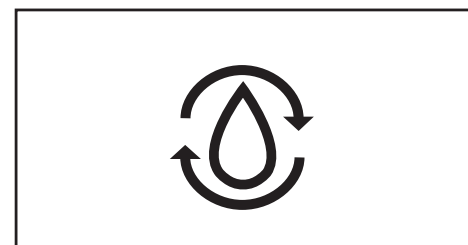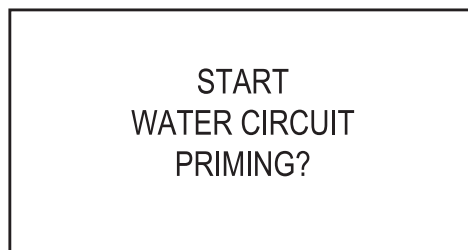


Press the espresso button and the machine starts priming the circuit. The following screen is displayed:

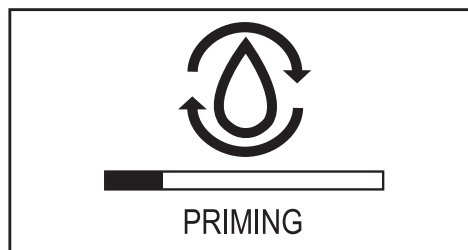


It will then carry out the warm-up and rinse cycle as described in section "Warm-up and Rinsing".

7.6.2 After a Period of Inactivity

Empty the water tank, wash and rinse it and fill it with fresh water (see section "Filling the Water Tank"). Place a large container under the coffee dispensing spout.

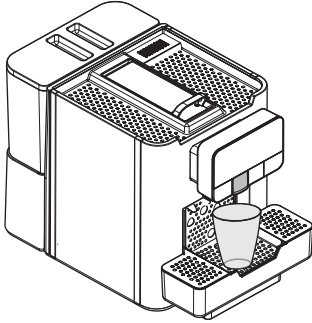

Open and close the capsule loading tray and press the "Long Coffee" button - with no capsule inserted - to start brewing. The machine starts brewing coffee from the dispensing spout. Wait until brewing has been completed and empty the container. Repeat the brewing cycles 3 times, opening and closing the capsule loading tray each time. Place a container under the hot water dispensing spout.

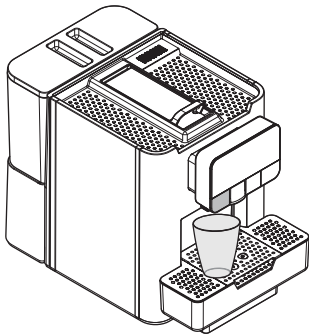

Press the "Hot Water" button. The machine starts dispensing hot water. Then it stops automatically. Continue dispensing water until the no water icon is displayed.




When the hot water dispensing procedure has been completed, empty the container. Fill the water tank again up to the MAX level. The machine is now ready for use.


7.7 Washing the Parts coming into Contact with Food

Rinse all the parts coming into contact with food.

- Thoroughly wash your hands.
- Prepare a chlorine-based, antibacterial disinfecting solution (the products can be purchased at the chemist's) following the concentrations indicated on the product.
- Remove all product containers from the appliance.
- Remove the container lids and product chutes.
- Immerse all these parts in the previously prepared solution.


7.8 Using the Appliance


 Before using the machine, read this manual carefully and make sure users are familiar with the machine.


 After the machine has not been used for a certain time, it is recommended to read section "First Use - Use after a Long Period of Inactivity" again, before using the module again.

The beverage selection modes are indicated in chapter "Operation and Use".

8 PROGRAMMING MENU

 This chapter contains instructions on how to set and change the programming parameters of the appliance.


 Therefore it is necessary to carefully read it and to understand the exact sequence of operations before performing them.

 All the operations described in this chapter must be performed exclusively by the service provider or a specialised technician, who shall organise all the operating steps and use only suitable means to ensure strict compliance with the safety regulations in force.

The specialised technician or the service provider can change some of the machine operating parameters to suit the needs of the users.

8.1 Button Description in Programming Mode

Use the buttons described below to scroll the appliance menus.

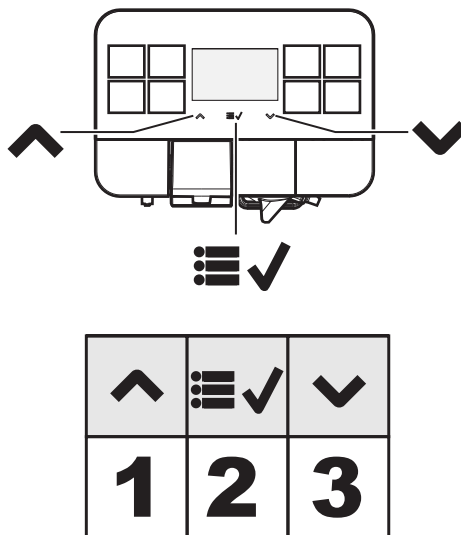

Button 1: Up

This button allows the parameters to be changed when they are displayed. (+) increases the value

Button 2: OK

It allows to confirm the parameter/value after changing it.

Button 3: Down

This button allows the parameters to be changed when they are displayed. (-) decreases the value


8.2 User Programming

The structure of the user menu is indicated in section "Structure of the User Menu".


Section "Description of Messages in the User Menu" describes all options in the user menu.

8.2.1 Access to the User Menu

When the machine is "ready for use", access the main menu by pressing the "OK" button.

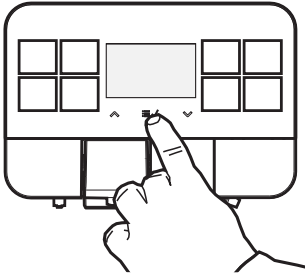


The following screen is displayed:

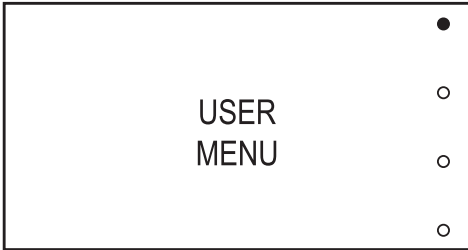

Select the "USER MENU" option and press the "OK" button.


⚠ The menu should be PASSWORD-protected.

⚠ The PASSWORD will not be requested if set on the default value (0000). It should be changed upon first use to prevent unauthorised access. After this change, the password must be entered each time the display shows:

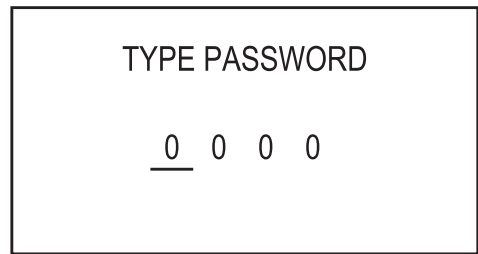

👉 In case you do not enter the password within 4 seconds the machine goes back to the previous screen.

Refer to section "Password Setting" to set the PASSWORD; this section describes how to set it.

 If the PASSWORD is forgotten, you can reset it by entering a PUK code. The PUK code must be requested from the authorized service department as indicated in the “Assistance Service” section.

8.2.2 Structure of the User Menu

The main options of the user menu are:

MENU ITEM
CLEAN BREWING UNIT
CLEAN CAPPUCCINATORE
Cappuccinatore Light Clean
Cappuccinatore Complete Clean
Exit
Back to Main Screen

8.2.3 Description of Messages in the User Menu

MENU ITEM	Description
CLEAN BREWING UNIT	This function allows the user to wash the brew group using hot water
CLEAN CAPPUCCINATORE	This function allows the user to wash the Cappuccinatore using hot water
Cappuccinatore Light Clean	This function allows to wash the Cappuccinatore using hot water passing through the frothing device system
Cappuccinatore Complete Clean	This function allows to wash the Cappuccinatore, the milk suction tube and the brew group. Immerse the milk suction hose in clean water for this function.
Exit	This function takes you back to the main menu
Back to Main Screen	Through this function the machine goes back to the "ready for use" mode.

8.3 Maintenance Programming

The structure of the maintenance menu is indicated in section "Structure of the Maintenance Menu".


The section "Description of Messages in the Maintenance Menu" describes all the options in the maintenance menu.


8.3.1 Access to the Maintenance Menu


Proceed as follows to access the machine maintenance menu.


- Press the "OK" button to access the main menu.
- Scroll the main menu until you reach the "Service Menu" option.
- Press the "OK" button.


Enter the password "1234"


 The above mentioned procedure can only be used to access the maintenance menu when the machine has reached operating temperature;

 The menus should be PASSWORD-protected.


 The PASSWORD will not be requested if set on the default value (0000). It should be changed upon first use to prevent unauthorised access.

 After this change, the password must be entered each time the display shows:

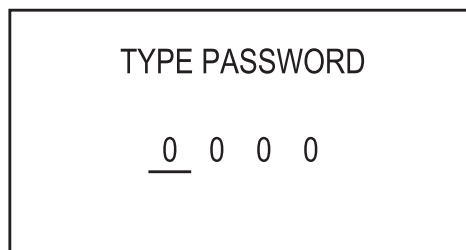

 In case you do not enter the password within 4 seconds the machine goes back to the previous screen.

Refer to section "Password Setting" to set the PASSWORD; this section describes how to set it.

 If the PASSWORD is forgotten, you can reset it by entering a PUK code. The PUK code must be requested from the authorized service department as indicated in the "Assistance Service" section.

8.3.2 Structure of the Maintenance Menu

This menu allows you to manage certain machine operation parameters.

The main options of the maintenance menu are:

MENU ITEM
Statistics
Product Counters
Product Quantities
Descaling counters
Warning Active
Descalings Executed
Tot Desc Refused
Last Desc Refused
(LT) Since Last Desc
Tot Brewed (LT)
Brewed Water (CC)
Brewed Steam Pulses
Pulses To Desc
Exit
Rinsing Counters
Tot BU Rinses
Brews since Last
Total Cappucc Cleans
Brews since Last
Exit
Exit
Coffee temperature
Request clean Cappuccinatore
Brew group cleaning request
Descaling cycle
Remove water filter
Empty Drip Tray
Insert Cappuccinatore
Place a Container Under the Spouts
Pour Descaler and Water into Water Tank
Water filters management
filter
Descal Before Activating Filter
Activate Filter?
Insert Filter Fill Water Tank
Place Container Under the Water Spout
Exit
Errors management
Errors list
Reset errors
Exit
Exit
Back to Main Screen

8.3.3 Description of Messages in the Maintenance Menu

MENU ITEM	Description
Statistics	This function allows the user to view: <ul style="list-style-type: none"> - Product Counters - Product Quantities - Descale counters - Rinsing Counters
Product Counters	Through this function the user can view the number of products brewed by the machine, distinguished according to the beverage type
Product Quantities	Through this function the user can view the doses of product, which are stored according to the beverage type. The dose is indicative of the quantity of water processed by the turbine and does not indicate the dose dispensed from the dispensing spout
Descale counters	This function allows the user to view counters and warnings relating to descaling: <ul style="list-style-type: none"> - Warning Active - Descales Executed - Tot Desc Refused - Last Desc Refused - (LT) Since Last Desc - Tot Brewed (LT) - Brewed Water (CC) - Brewed Steam Pulses - Pulses To Desc
Warning Active	Indicates that the function informing that it is necessary to perform the descaling cycle is active
Descales Executed	Indicates the total number of descaling cycles performed by the machine
Tot Desc Refused	Indicates the total number of descaling cycles refused by the user when the machine is running
Last Desc Refused	Indicates the total number of descaling cycles refused by the user since when the warning has been
(LT) Since Last Desc	Indicates the number of litres processed since the last descaling cycle
Tot Brewed (LT)	Indicates the number of litres processed since when the machine started running
Brewed Water (CC)	Indicates the number of litres processed while dispensing water: capsule products and hot water; washing cycles
Brewed Steam Pulses	Indicates the number of litres processed while dispensing milk products and of complete washing cycles of the Cappuccinatore
Pulses To Desc	Indicates the number of pulses remaining before the next descaling cycle
Exit	Through this option the user can go back to the menu top level.
Rinsing Counters	Through this function the user can view the counters relating to the brew group and Cappuccinatore washing cycles performed: <ul style="list-style-type: none"> - Tot BU Rinses - Brews since Last - Total Cappucc Cleans
Tot BU Rinses	Indicates the number of brew group washing cycles performed
Brews since Last	Indicates the number of coffee products brewed since the last washing cycle of the BU
Total Cappucc Cleans	Indicates the number of Cappuccinatore washing cycles performed
Brews since Last	Indicates the number of milk products dispensed since the last Cappuccinatore washing cycle
Exit	Through this option the user can go back to the menu top level.
Exit	Through this option the user can go back to the menu top level.

MENU ITEM	Description
Coffee temperature	<p>This function allows you to adjust the capsule product temperature (excluded instant products):</p> <ul style="list-style-type: none"> - MAX - MED - MIN <p>Press the OK button on the EXIT option to go back to the top level.</p>
Request clean Cappuccinatore	<p>Through this function you can enable the request for the Cappuccinatore cleaning cycle at the end of each milk product dispensing:</p> <ul style="list-style-type: none"> - OFF: The function is disabled - ON: The function is enabled: after dispensing each milk product the machine will prompt the user to perform a Cappuccinatore washing cycle. <p>In case you ignore this warning the request will disappear after 5 seconds</p> <p>Press the OK button on the EXIT option to go back to the top level.</p>
Brew group cleaning request	<p>This function allows you to enable the brew group cleaning request once dispensed the "Manual brewing" product:</p> <ul style="list-style-type: none"> - OFF: The function is disabled - ON: The function is enabled: the machine will request the user to wash the brew group after every "Manual brewing" product. <p>In case you ignore this warning the request will disappear after 5 seconds</p> <p>Press the OK button on the EXIT option to go back to the top level.</p>
Descaling cycle	<p>This function allows you to run the descaling cycle.</p>
Remove water filter	<p>A preliminary instruction is provided when starting descaling</p> <ul style="list-style-type: none"> - OK: go to the next step - EXIT: descaling cancelled; go back to the menu top level
Empty Drip Tray	<p>A preliminary instruction is provided when starting descaling</p> <ul style="list-style-type: none"> - OK: go to the next step - EXIT: descaling cancelled; go back to the menu top level
Insert Cappuccinatore	<p>A preliminary instruction is provided when starting descaling</p> <ul style="list-style-type: none"> - OK: go to the next step - EXIT: descaling cancelled; go back to the menu top level <p>Warning: in case the Cappuccinatore is not properly installed, it will not be possible to proceed with the next step</p>
Place a Container Under the Spouts	<p>A preliminary instruction is provided when starting descaling</p> <ul style="list-style-type: none"> - OK: go to the next step - EXIT: descaling cancelled; go back to the menu top level

MENU ITEM	Description
Pour Descaler and Water into Water Tank	<p>A preliminary instruction is provided when starting descaling</p> <ul style="list-style-type: none"> - OK: start descaling - EXIT: descaling cancelled; go back to the menu top level <p>Warning: in case there is no water in the tank, it will not be possible to proceed with the next step</p>
Water filters management filter	<p>This function allows you to manage the water filter.</p> <p>This function allows you to manage installation and maintenance of the water filter. Available options depend on the presence of an already installed filter.</p> <p>If there are no water filters installed:</p> <ul style="list-style-type: none"> - OFF: the water filter status is kept unaltered - ON: the activation procedure of the water filter can be started by going to the "Activate Filter?" page. - EXIT: back to the "Filter" screen <p>In case a water filter is already active and not used up: water filter can be deactivated</p> <p>If water filter is already active but it is used up:</p> <ul style="list-style-type: none"> - RESET: a new water filter can be installed by going to the "Activate Filter?" page <p>In case a water filter is already active, the screen "Descale Before Activating Filter" is shown</p>
Descale Before Activating Filter	This screen is shown for 3 seconds, then it automatically redirects to the "Filter" page
Activate Filter?	<p>Confirmation to proceed is requested upon the water filter activation:</p> <ul style="list-style-type: none"> - YES: the filter activation procedure starts - None: goes back to the "Water Filters Management" page
Insert Filter Fill Water Tank	<p>A preliminary instruction is provided when activating the filter:</p> <ul style="list-style-type: none"> - OK: go to the next step - EXIT: goes back to the "Water Filters Management" page
Place Container Under the Water Spout	<p>A preliminary instruction is provided when activating the filter:</p> <ul style="list-style-type: none"> - OK: filter activation start - EXIT: goes back to the "Water Filters Management" page
Exit	Through this option the user can go back to the menu top level.
Errors management	<p>This function allows you to manage and view the machine errors: - Errors log</p> <ul style="list-style-type: none"> - Reset Errors <p>Press the OK button on the EXIT option to go back to the top level.</p>
Errors list	<p>This function allows you to view the machine errors: - Error code: displays the number code relating to the error occurred</p> <ul style="list-style-type: none"> - Error index: displays the position of the error in a circular list of 20 positions. Each error is ordered based on the time it occurred (the most recent on top, the oldest below) - Error text: text description of the type of error
Reset errors	This function resets the error list

MENU ITEM	Description
Exit	Through this option the user can go back to the menu top level.
Exit	This function takes you back to the main menu
Back to Main Screen	Through this function the machine goes back to the "ready for use" mode.

8.4 Technical Programming


The structure of the programming menu is indicated in section "Structure of the Programming Menu". The section "Description of Messages in the Programming Menu" describes all the items in the programming menu.


8.4.1 Access to the Technical Menu


Proceed as follows to access programming mode.


- Press the "OK" button to access the main menu.
- Scroll the main menu until you reach the "Tech Menu" option.
- Press the "OK" button.


Enter the password "5678"


 The above mentioned procedure can only be used to access the programming menu when the machine has reached operating temperature.

 The menus should be PASSWORD-protected.

 After this change, the password must be entered each time the display shows:

 The PASSWORD will not be requested if set on the default value (0000). It should be changed upon first use to prevent unauthorised access.

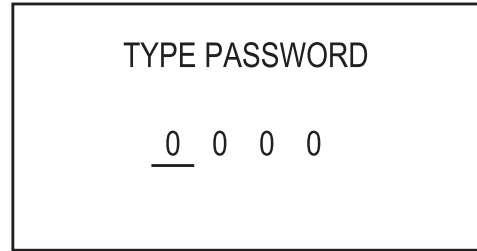

 In case you do not enter the password within 4 seconds the machine goes back to the previous screen.

Refer to section "Password Setting" to set the PASSWORD; this section describes how to set it.



If the PASSWORD is forgotten, you can reset it by entering a PUK code. The PUK code must be requested from the authorized service department as indicated in the “Assistance Service” section.

8.4.2 Structure of the Technical Menu

This menu allows you to manage certain machine operation parameters.

The main items of the programming menu are:

MENU ITEM
Machine Data
Memo Doses
Settings
Recipes management
Coffee Temperature Range
Prebrewing
Language
Stop Brewing Out of Credits
High Speed Milk
Power-on BU rinsing request
WATER HARDNESS
Descalc Warning
Display contrast
Capsules warning
Exit
Maximum Pressure
CREDIT MANAGEMENT
Set Credits Alarm Threshold
Set Credits
Confirm Set Credits
Exit
Stand-by Time
Safety
Technical Menu Password
Set
Confirm Password
Disable
Change
Service Menu Password
Set
Confirm Password
Disable
Change
User Menu Password
Set
Confirm Password
Disable
Change
Exit
Restore Factory Settings
Reboot and Update from SerProg
Exit
Back to Main Screen

8.4.3 Description of Messages in the Technical Menu

MENU ITEM	Description
Machine Data	<p>Through this function you can view:</p> <ul style="list-style-type: none"> - Machine Model - Voltage and Network Frequency - Version of the Firmware installed on the CPU <p>Press the OK button on the EXIT option to go back to the top level.</p>
Memo Doses	<p>This feature allows you to access the functions for setting the dose for each product. select the desired product and press the OK button to start dispensing it. Once the desired dose has been reached, press the OK button again to confirm the operation.</p> <p>Press the OK button on the EXIT option to go back to the top level.</p>
Settings	<p>This function allows to access certain machine configuration parameters.</p>
Recipes management	<p>This function allows the user to individually enable or disable all recipes indicated with an icon on the keypad.</p> <p>By pressing the OK button the enabled recipes are signalled by the corresponding LED light turning on on the keypad.</p> <p>The user can enable or disable the recipe by pressing the single buttons. The operation is confirmed by the LED light turning on or off, respectively.</p> <p>Press the OK button on the EXIT option to go back to the top level.</p>
Coffee Temperature Range	<p>This function allows you to select the temperature range within which the beverages with capsule must be brewed (excluded instant products):</p> <p>--> -2: 2°C less than the default temperature</p> <p>--> 0: default temperature</p> <p>-->+2: 2°C more than the default temperature</p> <p>Press the OK button on the EXIT option to go back to the top level.</p>
Prebrewing	<p>Pre-brewing entails soaking the coffee tablet before brewing, in order to bring out the full aroma.</p> <ul style="list-style-type: none"> - None: pre-brewing disabled - Brief: 1 sec. pre-brewing - Medium: 2.5 sec. pre-brewing - Long: 3 sec. pre-brewing <p>Press the OK button on the EXIT option to go back to the top level.</p>

MENU ITEM	Description
. Language	<p>This option allows the user to select the desired language among:</p> <ul style="list-style-type: none"> - ITALIAN - ENGLISH - GERMAN - FRENCH - SPANISH - PORTUGUESE - POLISH - RUSSIAN - SLOVENIAN <p>Press the OK button on the EXIT option to go back to the top level.</p>
Stop Brewing Out of Credits	<p>This function allows the user to adjust machine operation when the credits have been used up.</p> <ul style="list-style-type: none"> - OFF: the user can dispense products even when there are no more credits - ON: the user cannot dispense products if there are no more credits. The products cannot be selected. <p>Press the OK button on the EXIT option to go back to the top level.</p>
High Speed Milk	<p>This function allows the user to dispense mixed products (milk and coffee) quicker, by simultaneously enabling the milk and coffee preparation:</p> <ul style="list-style-type: none"> - OFF function not enabled - ON: function enabled. <p>Press the OK button on the EXIT option to go back to the top level.</p>
Power-on BU rinsing request	<p>Through this setting you can decide whether to enable or not the request to rinse the brew group when the machine is started after a standby:</p> <ul style="list-style-type: none"> - OFF: function not enabled. - ON: function enabled. <p>Press the OK button on the EXIT option to go back to the top level.</p>
WATER HARDNESS	<p>This function allows you to adjust water hardness:</p> <ul style="list-style-type: none"> - LEVEL 1: very soft water - LEVEL 2: soft water - LEVEL 3: hard water - LEVEL 4: Very hard water. <p>For more details, see the "Measuring and Adjusting Water Hardness" chapter.</p> <p>Press the OK button on the EXIT option to go back to the top level.</p>
Descale Warning	<p>Through this function you can set the alarm indicating the need of machine descaling. Damage resulting from failure to descale the machine is not covered by warranty.</p> <ul style="list-style-type: none"> - OFF: function not enabled. - ON: function enabled. <p>Press the OK button on the EXIT option to go back to the top level.</p>

MENU ITEM	Description
Display contrast	<p>This function allows you to adjust the contrast of the display to better view the messages.</p> <p>The user, by means of the navigation arrows, can change the display contrast settings. The modification of the contrast level is shown by the bar.</p> <p>The user must press the OK button to confirm the choice and go back to the menu top level.</p>
Capsules warning	<p>This function allows you to enable/disable the alarm warning the user that the capsule drawer needs to be emptied.</p> <ul style="list-style-type: none"> - OFF: function not enabled. - ON: function enabled. <p>Press the OK button on the EXIT option to go back to the top level.</p> <p>NOTE: disabling this alarm may cause machine malfunctions, since the capsules may block the brew group.</p>
Exit	Through this option the user can go back to the menu top level.
Maximum Pressure	<p>This function allows to modify the management of the pump power when brewing coffee products in order to brew the selected product at a higher pressure:</p> <ul style="list-style-type: none"> - OFF: function not enabled. - ON: function enabled. <p>Press the OK button on the EXIT option to go back to the top level.</p>
CREDIT MANAGEMENT	<p>This menu option allows to use the credit management functions for:</p> <ul style="list-style-type: none"> - Setting the activation threshold of credit alarms - Setting the available credits.
Set Credits Alarm Threshold	<p>This function allows to set a threshold below which the machine warns the user that the credits are running out.</p> <p>The thresholds that can be set are:</p> <ul style="list-style-type: none"> - 0 CREDITS: the alarm is disabled - < 5 CREDITS: the machine warns the user when there are only 5 credits available - < 10 CREDITS: the machine warns the user when there are only 10 credits available - < 20 CREDITS: the machine warns the user when there are only 20 credits available - < 50 CREDITS: the machine warns the user when there are only 50 credits available. <p>Press the OK button on the EXIT option to go back to the top level.</p>
Set Credits	<p>This function allows credit charging in the machine.</p> <p>The user must set the indicated number, increasing or decreasing it by means of the navigation buttons.</p> <p>By pressing the OK button the cursor under the digit is moved towards right.</p> <p>By pressing the OK button, after the third digit, you access the "Confirm Set Credits" screen.</p>

MENU ITEM	Description
Confirm Set Credits	<p>Press OK on one of the following options:</p> <ul style="list-style-type: none"> - YES: confirming and saving the set credits - None: resetting the number of credits and going back to the loading screen. <p>Press the OK button on the EXIT option to go back to the top level.</p>
Exit	Through this option the user can go back to the menu top level.
Stand-by Time	<p>This function allows you to adjust the time after which the machine must go into the "stand-by" mode. In case it is not used:</p> <ul style="list-style-type: none"> - NO STANDBY: the machine is always active - 30 MIN: the machine goes into the standby mode after 30 minutes of inactivity - 60 MIN: the machine goes into the standby mode after 60 minutes of inactivity - 180 MIN: the machine goes into the standby mode after 180 minutes of inactivity. <p>Press the OK button on the EXIT option to go back to the top level.</p>
Safety	<p>This function allows you to manage the passwords used to access different machine menus:</p> <ul style="list-style-type: none"> - Tech. Menu Password - Service Menu Password - User Menu Password.
Technical Menu Password	<p>By means of this option the user can manage the password of the technical menu:</p> <ul style="list-style-type: none"> - SET: you can access this option if the password is not set - DISABLE: this option is only displayed if a password is already set - CHANGE <p>Press the OK button on the EXIT option to go back to the top level.</p>
Set	<p>This function allows to set the 4-digit code to access the technical menu.</p> <p>The user must set the desired number, increasing or decreasing it by means of the navigation buttons.</p> <p>By pressing the OK button the cursor under the digit is moved towards right.</p> <p>By pressing the OK button, after the fourth digit you access the screen "Confirm Password".</p> <p>Press the OK button on the EXIT option to go back to the top level.</p>
Confirm Password	<p>Press OK on one of the following options:</p> <ul style="list-style-type: none"> - YES: confirming and saving the set password - None: going back to the password entering screen. <p>Press the OK button on the EXIT option to go back to the top level.</p>
Disable	<p>By means of this option the user can disable the set password.</p> <p>In this case the password is set to "0000" by default.</p>
Change	By means of this option the user can change the set password.
Service Menu Password	<p>By means of this option the user can manage the password of the maintenance menu:</p> <ul style="list-style-type: none"> - SET: you can access this option if the password is not set - DISABLE: this option is only displayed if a password is already set - CHANGE <p>Press the OK button on the EXIT option to go back to the top level.</p>

MENU ITEM	Description
Set	<p>This function allows to set the 4-digit code to access the maintenance menu. The user must set the desired number, increasing or decreasing it by means of the navigation buttons.</p> <p>By pressing the OK button the cursor under the digit is moved towards right.</p> <p>By pressing the OK button, after the fourth digit you access the screen "Confirm Password".</p> <p>Press the OK button on the EXIT option to go back to the top level.</p>
Confirm Password	<p>Press OK on one of the following options:</p> <ul style="list-style-type: none"> - YES: confirming and saving the set password - None: going back to the password entering screen. <p>Press the OK button on the EXIT option to go back to the top level.</p>
Disable	<p>By means of this option the user can disable the set password.</p> <p>In this case the password is set to "0000" by default.</p>
Change	<p>By means of this option the user can change the set password.</p>
User Menu Password	<p>By means of this option the user can manage the password of the user menu.</p> <ul style="list-style-type: none"> - SET: you can access this option if the password is not set - DISABLE: this option is only displayed if a password is already set - CHANGE: <p>Press the OK button on the EXIT option to go back to the top level.</p>
Set	<p>This function allows to set the 4-digit code to access the user menu. The user must set the desired number, increasing or decreasing it by means of the navigation buttons.</p> <p>By pressing the OK button the cursor under the digit is moved towards right.</p> <p>By pressing the OK button, after the fourth digit you access the screen "Confirm Password".</p> <p>Press the OK button on the EXIT option to go back to the top level.</p>
Confirm Password	<p>Press OK on one of the following options:</p> <ul style="list-style-type: none"> - YES: confirming and saving the set password - None: going back to the password entering screen. <p>Press the OK button on the EXIT option to go back to the top level.</p>
Disable	<p>By means of this option the user can disable the set password.</p> <p>In this case the password is set to "0000" by default.</p>
Change	<p>By means of this option the user can change the set password.</p>
Exit	<p>Through this option the user can go back to the menu top level.</p>
Restore Factory Settings	<p>This function resets the factory configuration settings when a malfunction occurs.</p> <p>By means of the OK button the user can confirm this choice.</p>
Reboot and Update from SerProg	<p>By means of this option the user can download the firmware using the SerProgr SAECO Vending kit.</p> <p>By selecting this option by means of the OK button you can restart the machine.</p>
Exit	<p>This function takes you back to the main menu</p>
Back to Main Screen	<p>Through this function the machine goes back to the "ready for use" mode.</p>

8.4.4 Password setting

The PASSWORD must be set by the service provider in order to prevent access by unauthorised personnel who could change the machine settings and cause malfunctions.

Three passwords can be set to access the three different machine menus.

To set the PASSWORD, proceed as follows:

Switch to machine programming mode as described in section "Access to the Technical Menu".


Press the "Down" button until the following menu is displayed:




Press the "OK" button to enter the submenu of the selected option. The following screen is displayed:



Press the "Down" or "Up" button to select the menu for which the password must be set. Press the "OK" button to confirm. The following screen is displayed:

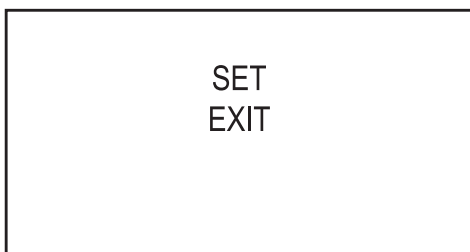


Press the "Down" or "Up" button to select the option "Set". Press the "OK" button to confirm and access the password programming. The following screen is displayed:

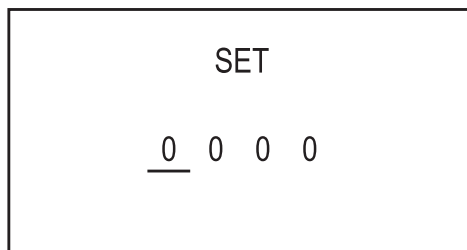

To enter the password:


Press the "Up" button or the "Down" button to set the desired number. Press the "OK" button to move to the next number.

Repeat the steps until the set password has been entered. Once the last number has been inserted the following screen is displayed:

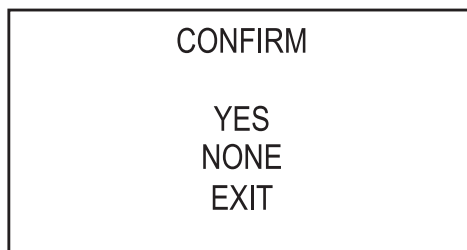

Press the "Up" or "Down" button to select the option "Yes" and confirm the password.

In case you want to change an already set password follow the same procedure. The following screen will be displayed:

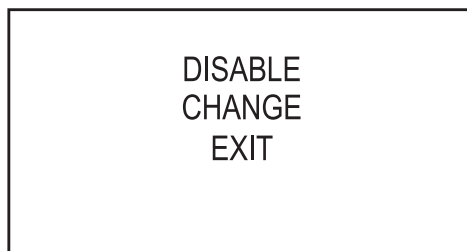

Select "Disable" to cancel the previously set password, or select "Change" to modify the previously set password.

8.4.5 Setting Credits

Credits can be set to control sales. To set the credits, proceed as follows:


Switch to machine programming mode as described in section "Access to the Technical Menu".

Press the "Down" button or the "Up" button until the following menu is displayed:



Press the "OK" button to confirm and access the menu.

Press the "Down" button or the "Up" button until the following menu is displayed:

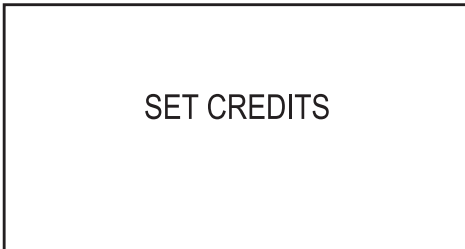

The option "SET CREDITS" is displayed, which will allow the number of credits to be manually entered.

Press the "OK" button to confirm and access the credit charging page.




To charge credits:

Press the "Up" button or the "Down" button to set the desired number.

Press the "OK" button to move to the next number.


Repeat the steps until the desired number of credits has been entered. Once the last number has been inserted the following screen is displayed:

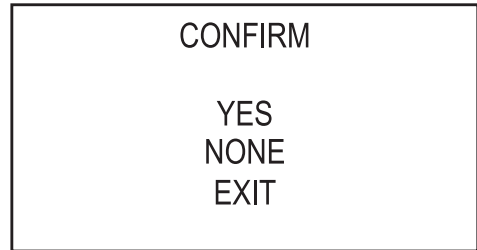



Press the "Up" or "Down" button to select the option "Yes" and confirm.

To exit, scroll the menu using the "Up" or "Down" buttons until option "Exit".

9 OPERATION AND USE

 The use by children older than 8 years or by persons with reduced physical, mental or sensory abilities or with lack of experience and skills is allowed, provided that they are supervised or instructed on how to use the appliance correctly and that they understand the hazards involved.

 Children must not play with the appliance. Children must not carry out any cleaning and maintenance operations without being monitored.

 For hygienic reasons, after the machine has not been used for a long time, it is recommended to thoroughly rinse the circuit.

9.1 Warm-up and Rinsing

When turned on, the machine asks the user whether it has to perform a rinse cycle or not. The display will show:



If you select Yes, the machine will request to open and close the capsule loading tray. The display will show:




You can cancel the rinse operation by pressing the "OK" button.

Open the capsule loading tray. The display will show:




The rinse operation can still be cancelled by pressing the "OK" button.

Close the capsule loading tray. The machine activates the warm-up phase to perform the cleaning cycle. The display will show:

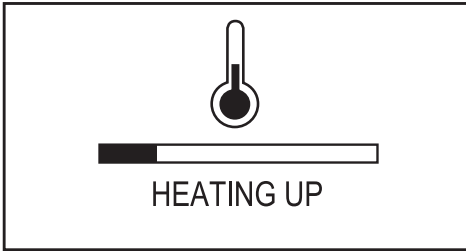


The following message is displayed:

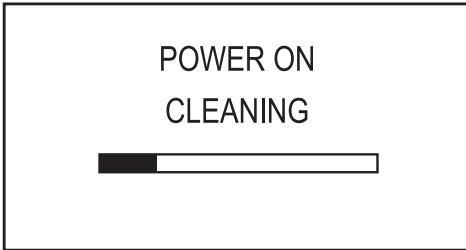

The brew group and the Cappuccinatore - if it is inserted - will dispense hot water. The cycle cannot be interrupted. Then the machine is ready for use.

If you select No, the machine activates the warm-up phase and - once completed - it will be ready for operation.

Upon product dispensing the machine may perform a warm-up cycle, if necessary. The display will show:

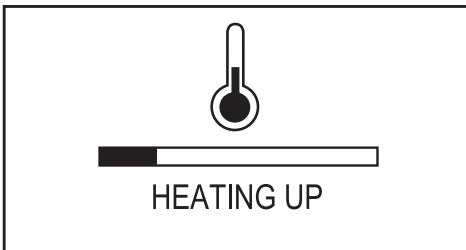


9.2 Rinsing and Self-cleaning


The cycle allows the coffee and milk circuits to be rinsed with fresh water.


The machine requests to perform this cycle during the warm-up phase only, in the following cases:


- Upon machine start-up, when it is cold.
- During the stand-by preparation phase, if at least one coffee-based or milk-based product has been brewed.

9.3 Loading Capsules


 Only BIALETTI PROFESSIONAL capsules should be used to brew the desired products.

 Capsules other than non-original BIALETTI PROFESSIONAL capsules, coffee beans, ground and/or freeze-dried coffee should never be used.

 The capsules supplied for this machine are single-use capsules and each of them should be used for one brewing cycle only.


 Capsules should not be reused to brew two or more products.

To insert the capsule, the loading tray must be opened by pushing it upwards as far as it will go.

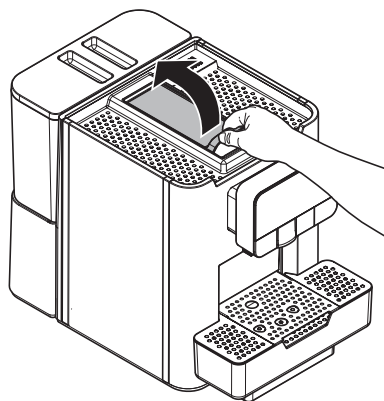


⚠ Do not force the tray further than its limit.

Pick up a single capsule and insert it into its seat.

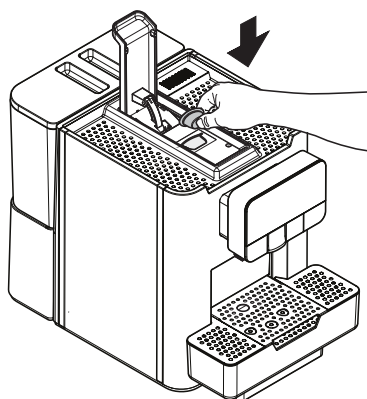

⚠ The capsule should be inserted as shown in the figure.


Correct capsule positioning

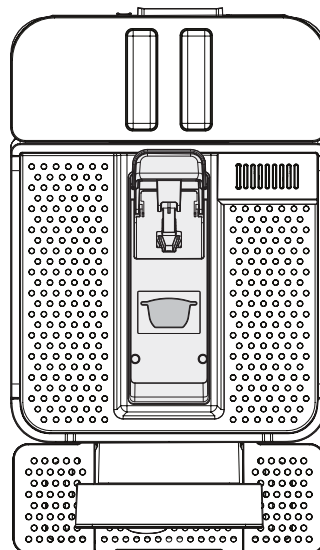



☞ The capsule must be inserted into place without the use of any tools.

☞ The capsule cannot be removed once it has been inserted into the compartment.

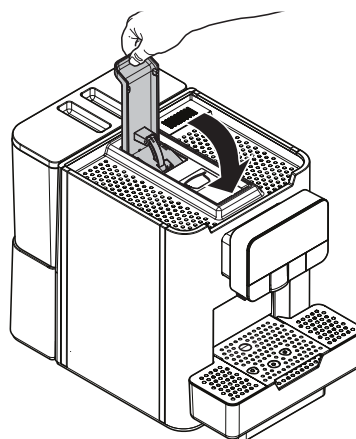When the capsule is correctly placed, close the tray.



 If you encounter resistance when closing the tray, check the positioning of the capsule.


 Do not put your fingers or any other object different than BIALETTI PROFESSIONAL capsules inside the door.

The capsule is now inserted, and the user may select the desired beverage.


9.4 Brewing a Single Coffee/Product

Before brewing the coffee/product, ensure that:

- the machine is ready for use;
- the capsule is correctly placed;
- a cup and/or mug suitable for the desired product is placed under the dispensing spout.


 In case you press a beverage button when the capsule tray is open, the display will indicate to close the tray.

CLOSE
MANUAL
LEVER

 If the door is opened after pressing a beverage button, dispensing will be cancelled and the message “BREWING CANCELLED” is displayed.

BREWING
CANCELLED


The machine checks whether a capsule is inserted by detecting the opening and closing of the capsule tray. In case no capsule is inserted, a display message will prompt the user to insert one. After closing the capsule tray, press the button again to dispense the selected product. The user can stop product dispensing when the blinking LED light of the selected product becomes steady on.

 Once brewing is completed, the machine does not automatically dispose of the capsule into the capsule drawer! At the end of the brewing cycle, it is therefore necessary to manually open and close the lever to discharge the capsule into the capsule drawer.

Brewing an Espresso

To brew an espresso, we recommend using the moving coffee dispensing spout in the low position and placing the cup on the hole in the rear part of the grill.

Press the "Espresso" button. The machine automatically brews an espresso.

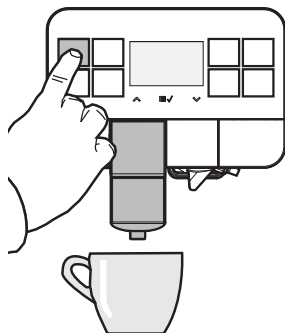

The display shows the brewing stage.




Product brewing stops automatically when the preset level is reached.

How to Brew a Long Espresso

To brew a Long Espresso, we recommend your using of the moving coffee dispensing spout in low position, making sure you place the cup on the hole in the rear part of the grill.

Press the "Long Coffee" button. The machine automatically brews a long coffee.

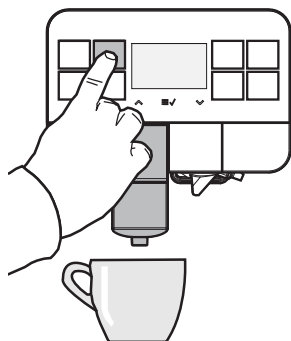


The display shows the brewing stage.



Product brewing stops automatically when the preset level is reached.

"Manual Brewing"

Press the "Manual Brewing" button. The machine brews a coffee product.

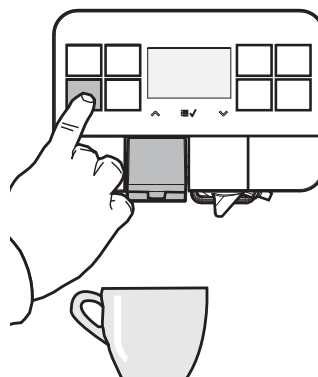

The display shows the brewing stage.




To stop brewing press the "Manual Brewing" button again.

How to Brew an Espresso Macchiato


⚠ Danger of burning!
Dispensing may be preceded by small jets of hot water.

Insert the suction tube into the milk container.

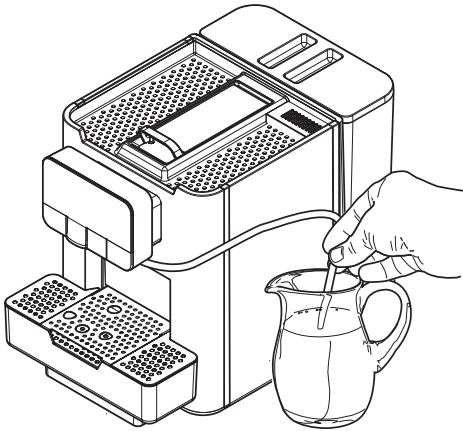

👉 For hygienic reasons, make sure that the outer surface of the suction tube is clean.

By pressing the "Espresso Macchiato" button, the machine will automatically start brewing the product.

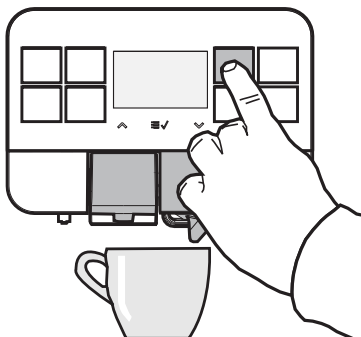

The display shows the brewing stage.




Product brewing stops automatically when the preset level is reached.


If the option "Request Clean Cappuccinatore" in the maintenance menu has been set to "ON", the display shows the wording "Quick Clean? YES - NONE" once the milk-based product has been dispensed to remind you that the Cappuccinatore should be rinsed. Refer to section "Cleaning the Cappuccinatore (After each Use)" to carry out this operation.

Brewing Cappuccino


⚠ Danger of burning!
Dispensing may be preceded by small jets of hot water.

Insert the suction tube into the milk container.

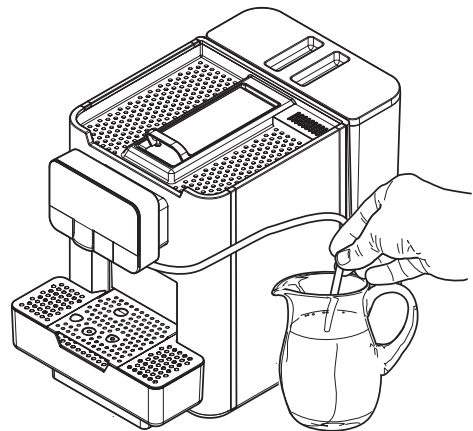

 For hygienic reasons, make sure that the outer surface of the suction tube is clean.

Press the "Cappuccino" button. The machine automatically brews the beverage.

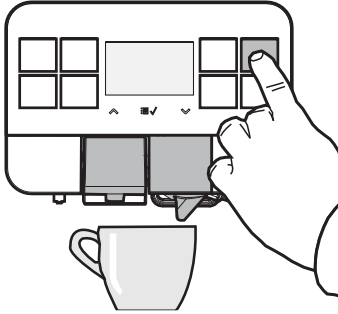

The display shows the brewing stage.




Product brewing stops automatically when the preset level is reached.


If the option "Request Clean Cappuccinatore" in the maintenance menu has been set to "ON", the display shows the wording "Quick Clean? YES - NONE" once the milk-based product has been dispensed to remind you that the Cappuccinatore should be rinsed.


Refer to section "Cleaning the Cappuccinatore (After each Use)" to carry out this operation.

Milk dispensing


 Danger of burning! Dispensing may be preceded by small jets of hot water.

Insert the suction tube into the milk container.

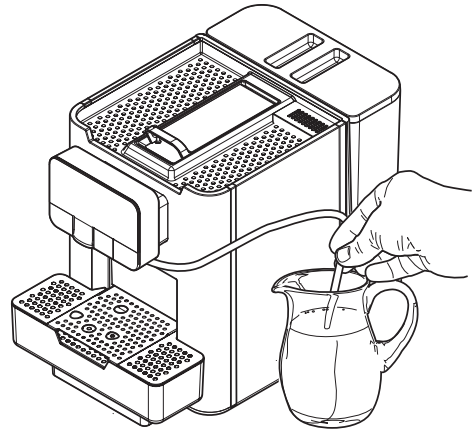


 For hygienic reasons, make sure that the outer surface of the suction tube is clean.

Press the "Milk" button. The machine automatically dispenses the product.

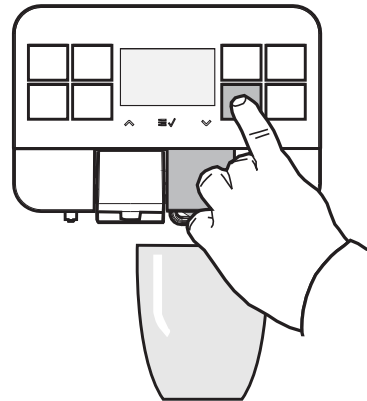

The display shows the brewing stage.

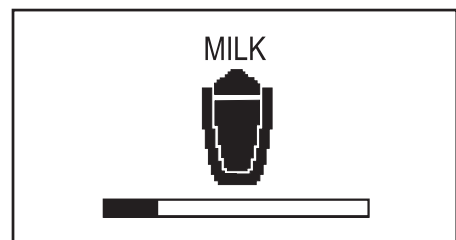


Product brewing stops automatically when the preset level is reached.


If the option "Request Clean Cappuccinatore" in the maintenance menu has been set to "ON", the display shows the wording "Quick Clean? YES - NONE" once the milk-based product has been dispensed to remind you that the Cappuccinatore should be rinsed.


Refer to section "Cleaning the Cappuccinatore (After each Use)" to carry out this operation.

Brewing Latte Macchiato


 **Danger of burning!**
Dispensing may be preceded by small jets of hot water.

Insert the suction tube into the milk container.

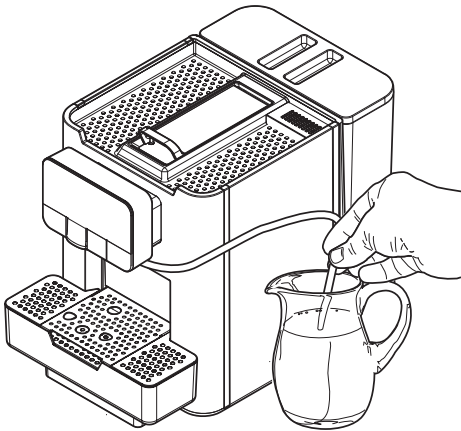


 For hygienic reasons, make sure that the outer surface of the suction tube is clean.

Press the "Latte Macchiato" button. The machine automatically brews the beverage.

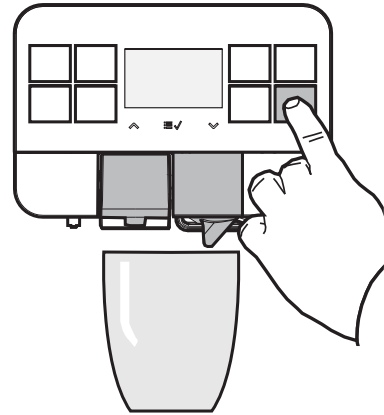

The display shows the brewing stage.

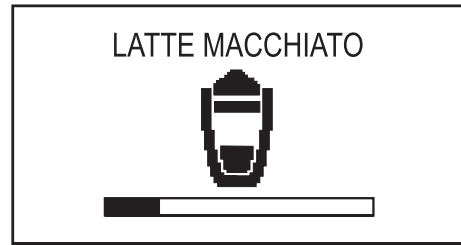



Product brewing stops automatically when the preset level is reached.

If the option "Request Clean Cappuccinatore" in the maintenance menu has been set to "ON", the display shows the wording "Quick Clean? YES - NONE" once the milk-based product has been dispensed to remind you that the Cappuccinatore should be rinsed.


Refer to section "Cleaning the Cappuccinatore (After each Use)" to carry out this operation.

9.5 Dispensing hot water


 **Danger of burning!**
Dispensing may be preceded by small jets of hot water and steam.

 The hot water dispensing spout may reach high temperatures: never touch it with bare hands.


Ensure the machine is ready for use before dispensing hot water. Place a container under the hot water dispensing spout.

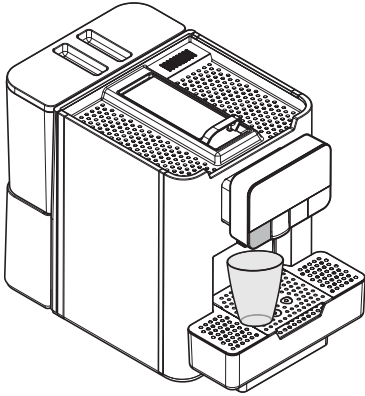

Press the "Hot Water" dispensing button. After a few moments hot water will be dispensed from the hot water dispensing spout.

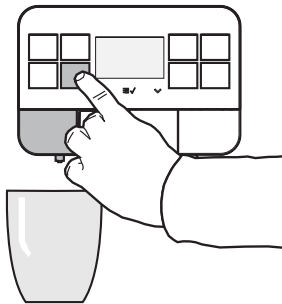


The display will show:

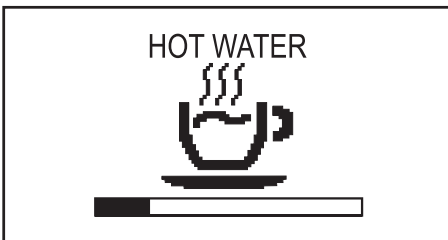


Product brewing stops automatically when the preset level is reached. The user can stop product brewing once the desired quantity is reached by pressing the "Hot Water" button again.



9.6 Emptying the Capsule Drawer and the Drip Tray

 This operation must be performed with the machine turned on.


The machine will indicate when the capsule drawer has reached its maximum capacity for holding capsules. The first warning alerts the user that the capsule drawer must be emptied, but the machine can still be used to brew coffee. The display will show:

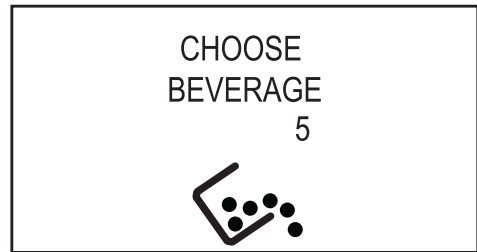


If the capsules are not removed from the drawer after several brewing cycles, the machine will stop. The display will show:

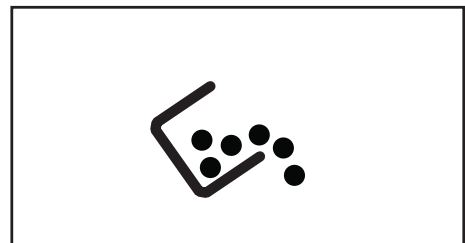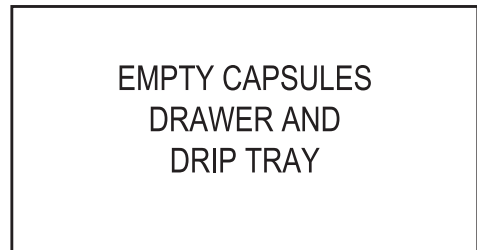



In order to brew coffee, the capsule drawer must be emptied of used capsules. Remove the drip tray and the capsule drawer.

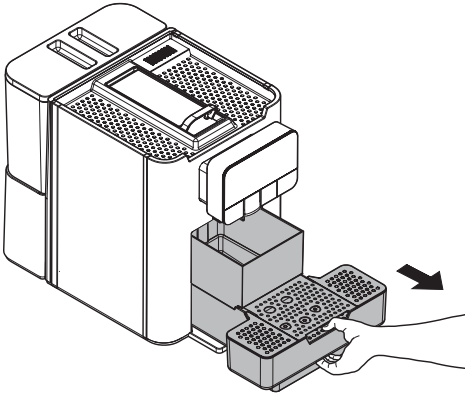


When removing the capsule drawer the machine will inform the user that the alarm will be reset within 5 seconds.

 If the capsule drawer is inserted during this time frame, the machine will not brew coffee.


After 5 seconds the machine prompts the user to insert the capsule drawer back into place. When the drip tray and the capsule drawer are removed and emptied, the display will show:

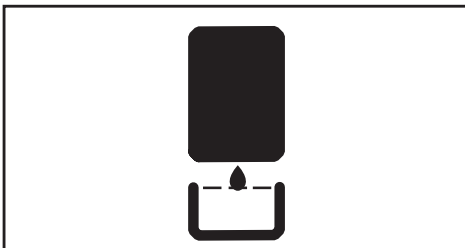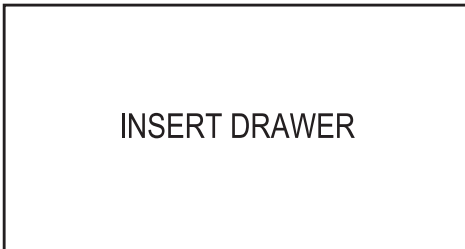

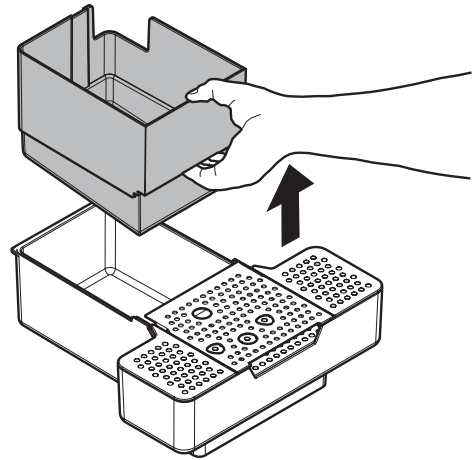

Lift the capsule drawer.




Empty the capsule drawer and the drip tray.


 The capsule drawer also contains liquid residues as a result of dripping after coffee or other beverages have been brewed.

 Liquids and capsules must be disposed of separately, as appropriate.

 Before reinserting the capsule drawer into the machine, ensure that it is correctly placed and that the grill is properly arranged.


 If the drip tray is inserted without the capsule drawer the machine will not brew products.


After emptying, insert the capsule drawer. The display will show:

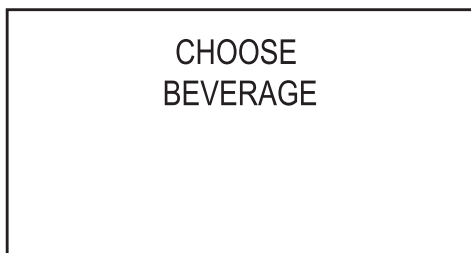


The machine is now ready to brew coffee.


10 CLEANING AND MAINTENANCE


 Before performing any maintenance and/or cleaning operation, unplug the power cord.

 The Manufacturer is not liable for damage or malfunctions caused by a wrong or lack of maintenance.

 Avoid using chlorine-based tablets so as to prevent oxidation phenomena inside the appliance.

10.1 General Notes for Correct Operation








 Non-removable components and the machine itself must be cleaned, when not differently specified, only by using cold or lukewarm water, with a non-abrasive sponge and a damp cloth.

 Never use direct jets of water onto the appliance and/or its components.

Periodic maintenance and cleaning will keep the machine in good working order for a longer time and ensure compliance with basic hygienic standards.

Follow the instructions and timing indicated in the "MAINTENANCE SCHEDULE" to ensure correct operation of the appliance.


10.2 Cleaning and Scheduled Maintenance


-  All parts requiring cleaning are easily accessible, so no tools are needed.
-  All parts must be washed with lukewarm water only and without using detergents or solvents that could change their shape or performance.
-  All removable parts - except for the Cappuccinatore - can not be washed in the dishwasher.
-  After properly disassembling it, the milk Cappuccinatore can be washed in the dishwasher no more than once in a week and at a temperature not higher than 70°.
-  Do not clean the electric parts with wet cloths and/or with degreasing detergents. Remove any dust residues with a jet of dry compressed air or with an antistatic cloth.
-  Wash the Cappuccinatore every day, after each use. Use a detergent specifically designed for milk to wash it. Remove the Cappuccinatore once the washing cycle is complete. Once you have disassembled it, wash each single part and make sure to remove any milk residues.
-  The espresso dispensing spout can not be removed!

10.2.1 Maintenance Schedule

Operation to be carried out	A	B	C	D
Emptying and cleaning the capsule drawer:	yes	yes	-	yes
Cleaning the capsule loading tray.	-	yes	-	-
Cleaning the water tank.	-	yes	-	yes
Rinsing.	-	-	yes	-
Thorough cleaning of the Cappuccinatore.	-	-	-	yes
Descaling.	yes	-	-	-

- A** When an alert is shown
- B** When the water tank is filled, or every week
- C** As required
- D** Every day

 The machine and its parts should in any case be cleaned every week.

 The appliance and its parts should be cleaned and washed following a period of inactivity.

10.2.2 Cleaning the Drip Tray and the Capsule Drawer


The capsule drawer is to be emptied and cleaned whenever indicated by the machine. However, it is recommended to empty it daily. To carry out this operation, refer to section "Emptying the Capsule Drawer and the Drip Tray".


In any event, whenever servicing the machine, it is a good idea to remove and clean the capsule drawer.

At this time, it is also advisable to clean the cup and mug holder grills.

10.2.3 Cleaning the Capsule Loading Tray

Check the state of the capsule loading tray, and if necessary clean it with a damp cloth.


 Do not use detergents to clean the tray since it might be difficult to remove possible residues.

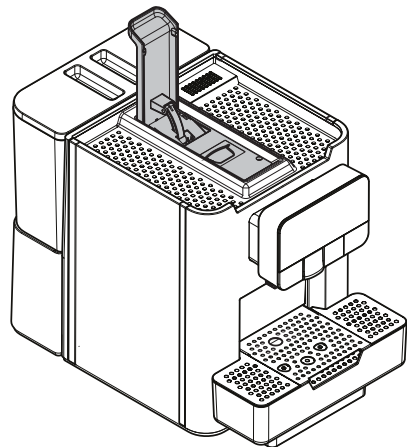


Check that the tray can freely rotate.

10.2.4 Cleaning the Water Tank

Remove the lid from the water tank.

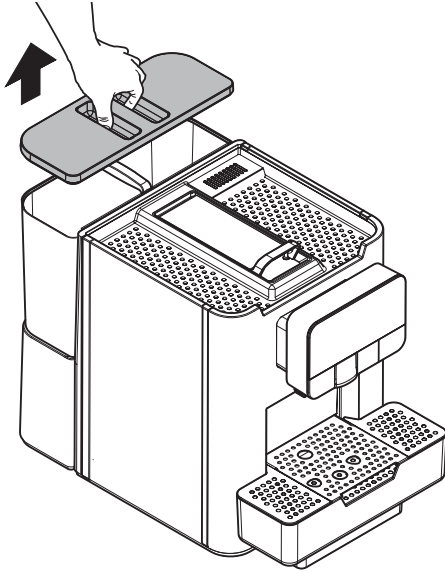

Remove the tank; lift it using the inside handle.

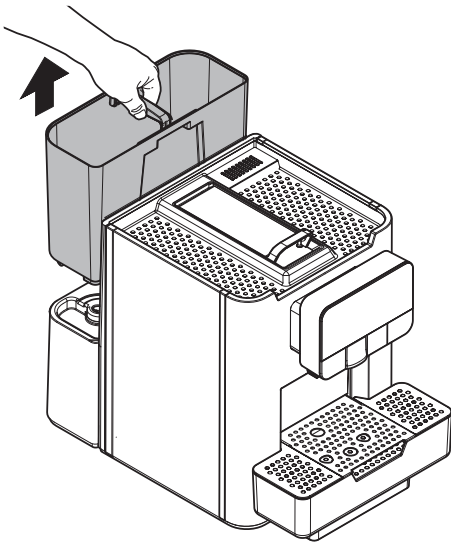



Use a non-abrasive detergent to wash it, rinse with fresh water and dry carefully.

10.2.5 Rinsing the Internal Circuits


The internal circuits should be rinsed at least once daily. In order to perform this operation, refer to section "Rinsing and Self-cleaning".

10.2.6 Cleaning the Cappuccinatore (After Each Use)


 Failure to clean the Cappuccinatore after use with milk may cause proliferation of bacteria which may be harmful for the user.

 The milk circuit must be quickly rinsed after use to always ensure proper hygiene.


The Cappuccinatore must be washed and cleaned every time it is used. The lack of cleaning before and after each use can affect the correct operation of the machine.

 Danger of burning! Dispensing may be preceded by small jets of hot water.


After each milk dispensing, the display shows the following screen for a few seconds.

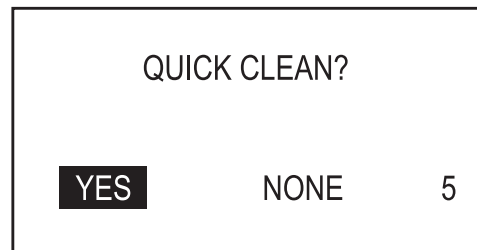


Proceed as follows to perform the rinse cycle:
 Select "YES" and press the "OK" button. The following screen is displayed:

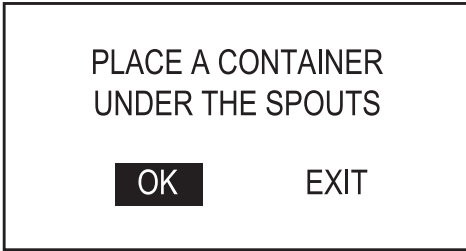

Place a container under the Cappuccinatore spout.

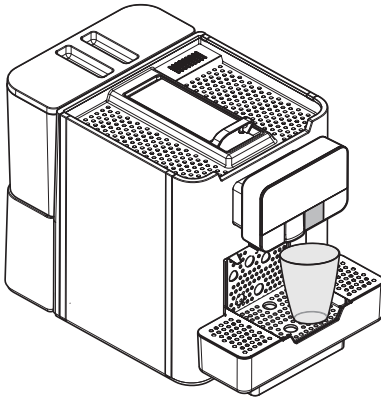


Select "OK" and press the "OK" button. The machine dispenses a quantity of water sufficient to rinse the milk circuit. The following screens are displayed:

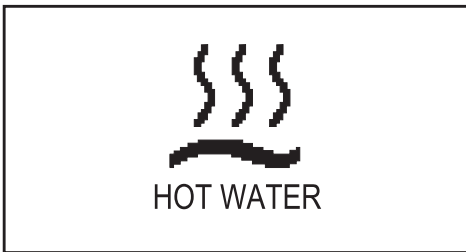


Remove the container.

In case you do not want to perform the rinse cycle, select "NONE" using the arrow key. Press the "OK" button. After a certain time, this rinse request screen automatically disappears and the machine goes back to the ready for use mode.


 Always remember to store milk in the fridge when not used.

This function allows the machine to preserve proper hygiene and operating conditions, but in no case should it be considered sufficient as the only way of cleaning the milk circuit.


The Cappuccinatore quick cleaning cycle can be performed any time by following the procedure below:
 With the machine on, press the "OK" button.

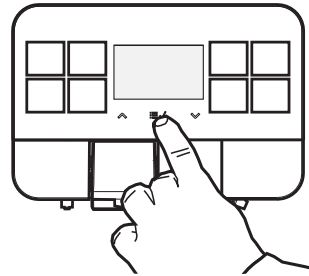

The following screen is displayed:

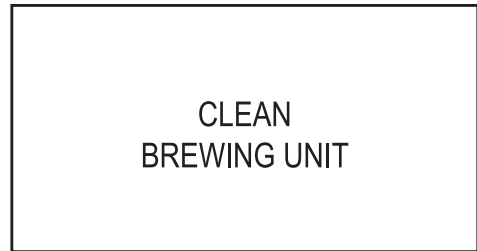

Press the "Down" button to select "CLEAN CAPPUCCINATORE" and press the "OK" button to confirm.

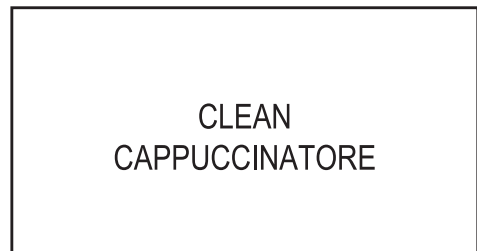

Select the option "CAPPUCCINATORE LIGHT CLEAN" and confirm with the "OK" button.

CAPPUCCINATORE
LIGHT CLEAN


The cleaning cycle starts. The following screen is displayed:

PLACE A CONTAINER
UNDER THE SPOUTS

OK

EXIT

Place a container under the Cappuccinatore spout.

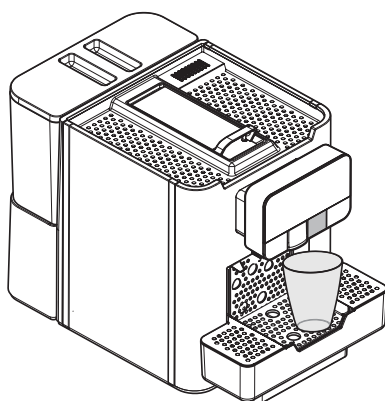

Select "OK" and press the "OK" button. The machine dispenses a quantity of water sufficient to rinse the milk circuit. The following screens are displayed:


HOT WATER


CLEAN
CAPPUCCINATORE

In this case, the washing cycle is performed with hot water only and the suction tube is not used. At the end of the cleaning cycle, it must be compulsorily washed under running water. Wait until the cycle stops automatically. The machine will go back to the ready for use state.


10.2.7 Thorough Cleaning of the Cappuccinatore

Clean all the Cappuccinatore parts thoroughly every day by using a specific detergent available on the market.

The lack of cleaning before and after each use can affect the correct operation of the machine.


 Danger of burning!
Dispensing may be preceded by small jets of hot water.

Make sure that the Cappuccinatore complete with all its parts is correctly inserted. Pour a solution bag into a container and let it dissolve in fresh water (refer to the water quantity indicated by the manufacturer).

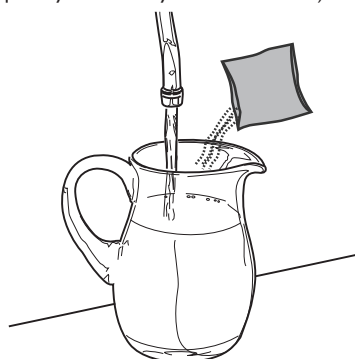


Wait for the contents of the bag to dissolve completely.


Insert the clean tube directly into the container.

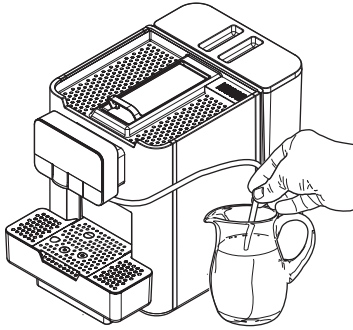


Make sure that the dispensing spout is in the high position. Place a container under the dispensing spouts (coffee and milk).

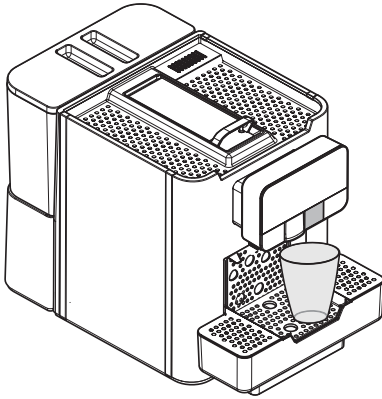


With the machine on, press the "OK" button.

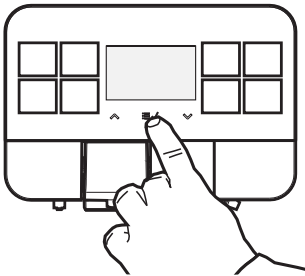

The following screen is displayed:

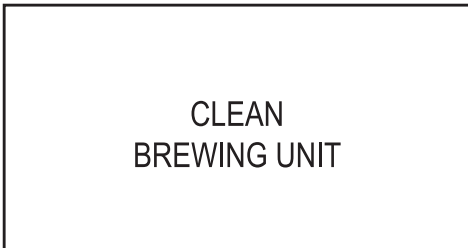

Press the "Down" button to select "CLEAN CAPPUCCINATORE" and press the "OK" button to confirm.

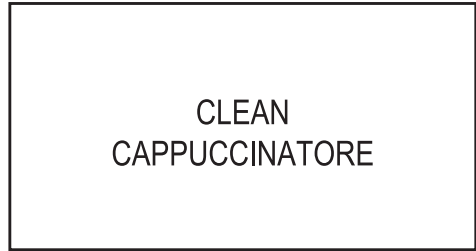

Select the option "CAPPUCCINATORE COMPLETE CLEAN" and confirm with the "OK" button.




After a warm-up phase - if necessary - the cleaning cycle automatically starts and the same screen sequence shown for the quick wash cycle is displayed to warn the user about the process.




Wait until the cycle stops automatically. The machine will go back to the normal operating cycle. Remove the container only once the cycle has been completed.


The steps below describe how to disassemble and wash the Cappuccinatore.

Lower the coffee dispensing spout.

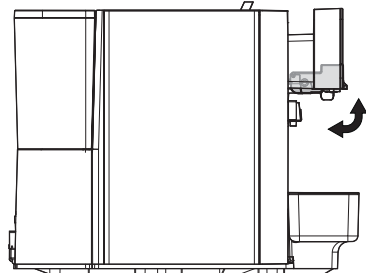


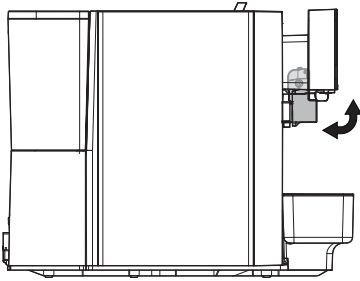


Remove the Cappuccinatore cover from the machine.

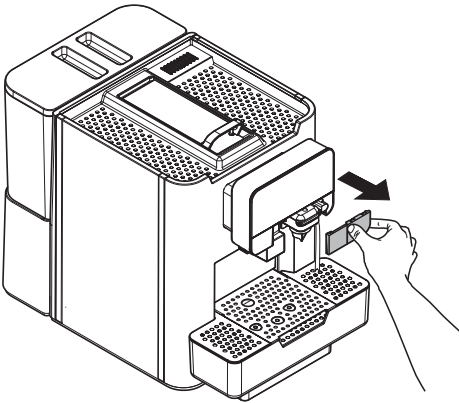


Push the button on the left side and remove the Cappuccinatore.

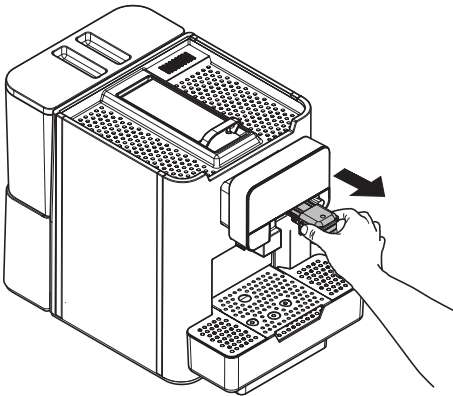


Remove the suction tube from the Cappuccinatore.

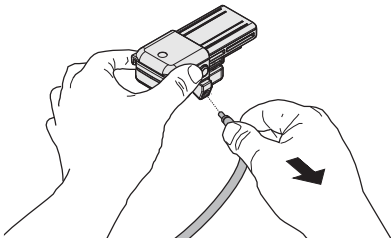


Remove the ring from the Cappuccinatore.

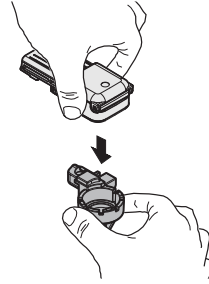


Rotate the Cappuccinatore cover and remove it from the Cappuccinatore body.

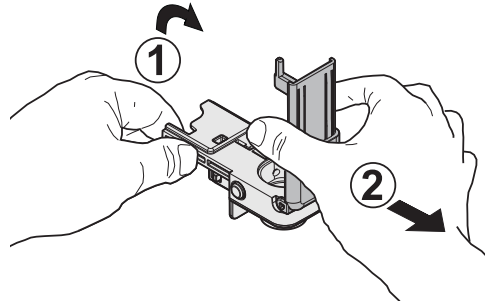

Remove the valve from the Cappuccinatore.

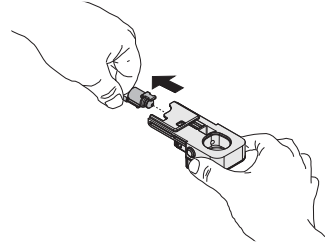

Wash the parts under running water. Make sure any milk deposits/residues are removed. After washing, reassemble the parts following the same procedure used for disassembly, but in reverse order.

 After washing and reassembling the Cappuccinatore, it can be installed back in the machine.

⚠ After properly disassembling it, the milk Cappuccinatore can be washed in the dishwasher no more than once in a week and at a temperature not higher than 70°.

Turn on the machine by pressing the ON/OFF button. Wait for the machine to complete the rinse and warm-up process.

⚠ Make sure that the Cappuccinatore is inserted, remove the suction tube from the Cappuccinatore.

⚠ Remove the anti-scale filter before adding the descaling solution.

10.2.8 Descaling

Limescale is a natural part of the water used for machine operation. It needs to be removed regularly as it may clog the water and coffee circuit of your appliance. The advanced electronics shows on the machine display when descaling is needed.




Just follow the steps described below. This operation needs to be carried out before the appliance stops working properly, as in this case repair is not covered by warranty. The descaling solution and the complete "Maintenance Kit" may be purchased at your local dealer or at authorised service centres.

⚠ Never drink the descaling solution.

⚠ Never use vinegar as a descaling solution.

Switch to machine programming mode as described in section "Access to the Maintenance Menu". Scroll the menu until you reach the "Descaling Cycle" option.

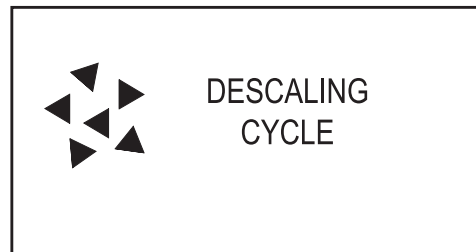

Press the "OK" button. The following screen is displayed:



Open the capsule loading lever. The following screen is displayed:

⚠ Do not insert the capsule.

CLOSE THE LEVER
TO CONTINUE

EXIT

Close the capsule loading lever. The following screen is displayed:

REMOVE
WATER FILTER

OK

EXIT

Remove the tank from the machine and empty it. Remove the anti-scale filter.


Select "OK" and press the "OK" button. The following screen is displayed:

EMPTY DRIP TRAY

OK

EXIT

Remove and empty the drip tray.

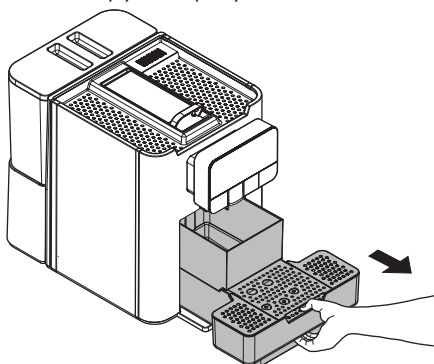

After emptying it put the drip tray back into place. Select "OK" and press the "OK" button. The following screen is displayed:

INSERT
CAPPUCCINATORE

OK

EXIT


Check that the Cappuccinatore is correctly positioned. Press the "OK" button. The following screen is displayed:

PLACE A CONTAINER
UNDER THE SPOUTS

OK

EXIT

Place a large container under the dispensing spouts (hot water, coffee and cappuccino).

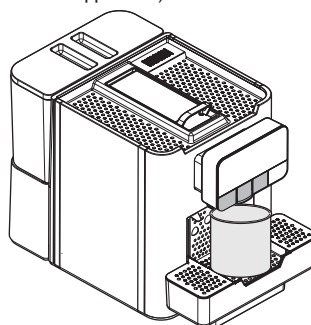


Select "OK" and press the "OK" button. The following screen is displayed:

POUR DESCALER
AND WATER INTO
WATER TANK


OK

EXIT

Pour 250 ml of descaling solution and 750 ml of water into the water tank. Select "OK" and press the "OK" button. The following screen is displayed:

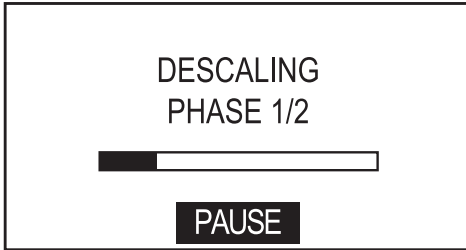

The first descaling phase starts. Press the "OK" button to pause the operation. Press the "OK" button again to resume the operation. When the solution in the tank is finished, the machine requests to empty and rinse the tank with fresh drinking water.

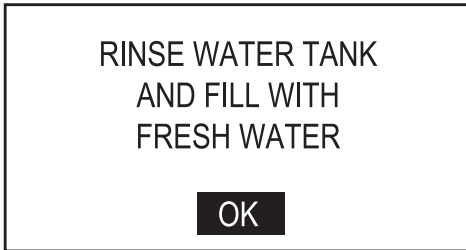


Rinse the water tank thoroughly and fill it with fresh drinking water up to the MAX level. Press the "OK" button. The following screen is displayed:




Remove and empty the drip tray. After emptying it put the drip tray back into place. Press the "OK" button. The following screen is displayed:



Check that the Cappuccinatore is correctly positioned. Press the "OK" button. The following screen is displayed:

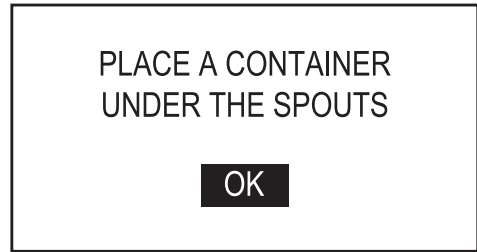

Place a large container under the dispensing spouts (hot water, coffee and cappuccino). Press the "OK" button. The following screen is displayed:

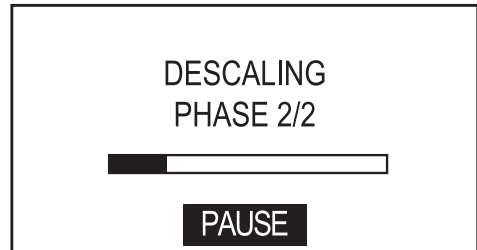

Press the "OK" button to pause the operation. Press the "OK" button again to resume the operation. Once the operation is complete the following screen is displayed:












Put the small white filter back into place. Fill the water tank again up to the MAX level with fresh drinking water.





After performing the descaling cycle, rinse the Cappuccinatore under running water. Empty the containers used to collect the liquids during descaling. The descaling solution must be disposed of according to the manufacturer's instructions and/or regulations in force in the country of use. Empty the drip tray and place it back.



II TROUBLESHOOTING



II.1 Warning signals

This chapter describes all the warning messages that the machine may display to the user and the actions that can and/or must be performed by the user.

Warning Signals	How to reset the message
<p>SYSTEM BOOT</p> 	The machine is starting up.
<p>PRESS A BUTTON</p>	Machine in Stand-by. Press a button.
<p>START RINSING?</p> <p><input checked="" type="checkbox"/> YES <input type="checkbox"/> NONE</p>	When turning it on, the machine asks whether to perform a rinsing cycle or not. Select the desired option.
<p>POWER ON CLEANING</p> 	The machine is performing the cleaning cycle.
  <p>HEATING UP</p>	The machine is warming up to brew beverages or dispense hot water.
  <p>RINSING</p>	The machine is performing the rinse cycle. Wait until the machine has completed the cycle.
<p>CHOOSE BEVERAGE</p> 	The water filter must be replaced with a new one.
  <p>PRIMING</p>	The machine is priming the circuit.

Warning Signals	How to reset the message
	<p>The machine is out of credits. To brew products, contact the service provider to restore the credits.</p>
<p>CHOOSE BEVERAGE</p> 	<p>The machine reminds that after a few cycles it will be necessary to perform a descaling cycle.</p>
 <p>CALC CLEAN NEEDED</p>	<p>The machine requires a descaling cycle. When this message is displayed, it is still possible to use the machine, but its correct operation might be affected. Damage caused by failure to descale the machine is not covered by warranty. Upon machine start up, a warning message is displayed for 5 seconds. The descaling cycle can be performed through the maintenance menu only.</p>
<p>CHOOSE BEVERAGE 5</p> 	<p>The machine indicates that after a few cycles it will be necessary to empty the capsule drawer (see section "Emptying the Capsule Drawer and the Drip Tray"). The machine still allows to dispense products.</p>
<p>OPEN THE LEVER DONT INSERT CAPSULE</p> <p>EXIT</p>	<p>The machine requests to open the capsule tray.</p>
<p>CLOSE THE LEVER TO CONTINUE</p> <p>EXIT</p>	<p>The machine requests to close the capsule tray.</p>

Warning Signals	How to reset the message
<p>INSERT DRAWER</p>	<p>Insert the drip tray and the capsule drawer into the machine.</p>
	
<p>EMPTY CAPSULES DRAWER AND DRIP TRAY</p>	<p>Empty the capsule drawer.</p>
	

Warning Signals	How to reset the message
 ADD WATER	Fill the water tank.
CLOSE MANUAL LEVER	The machine requests to close the capsule tray.
INSERT CAPPUCCINATORE XX	The selected operation requires milk dispensing. Ensure that the Cappuccinatore is correctly and fully assembled. Insert the Cappuccinatore in the machine as specified in the manual.
 3 SUPPORT REQUIRED	Turn off the machine. Turn it back on after 30 seconds. Try this 2 or 3 times. If this signal appears again, contact the service provider and provide the code shown in the display.

11.2 Problems - Causes - Solutions

The following table indicates the possible error or alarm causes which may lead to a partial or total shutdown of the appliance.

Error code	Description
E5	Error 5: COD_WATER_CIRCUIT_FAILURE Indicates a fault regarding the water circuit for hot water/coffee: the pump has performed the three attempts of priming the circuit
E6	Error 6: COD_EV_DRV_FAILURE Indicates that one or more solenoid valves are in short-circuit and therefore they cannot be used
E8	Error 8: COD_STEAM_CIRCUIT_FAILURE Indicates a fault regarding the water circuit for steam: the pump has performed the three attempts of priming the circuit
E10	Error 10: COD_NTC_C_SHORT_FAILURE Indicates that the NTC temperature sensor of the coffee boiler is in short-circuit
E11	Error 11: COD_NTC_C_OPEN_FAILURE Indicates that the NTC temperature sensor of the coffee boiler is not connected
E12	Error 12: COD_NTC_S_OPEN_FAILURE Indicates that the NTC temperature sensor of the steam boiler is not corrected
E13	Error 13: COD_NTC_S_SHORT_FAILURE Indicates that the NTC temperature sensor of the steam boiler is in short-circuit
E14	Error 14: COD_HC_TIMEOUT_FAIL Indicates that the coffee boiler supply is not connected
E15	Error 15: COD_HS_TIMEOUT_FAIL Indicates that the steam boiler supply is not connected
E19	Error 19: COD_Z_CROSSING_FAILURE
E20	Error 20: COD_HC_OVER_TEMP_FAILURE Indicates that the coffee boiler is overheated
E21	Error 21: COD_HS_OVER_TEMP_FAILURE Indicates that the steam boiler is overheated

12 STORAGE - DISPOSAL

12.1 Location Change

Should the machine be placed in a different location, it is necessary to:

- disconnect the appliance from the supply network;
- carry out the general cleaning of the appliance as indicated in chapter "Cleaning and Maintenance";
- put the parts back into place and close the doors;
- Lift and position the appliance in the assigned location.

12.2 Inactivity and Storage

If the appliance needs to be stored or remains inactive for a long period, carry out the same operations as described in section "Location Change", therefore:

- wrap the appliance with a cloth to protect it from dust and humidity;
- make sure that the appliance is installed in a suitable place (temperature must be lower than 1°C) and be careful not to put cartons or appliances on it.

13

**INSTRUCTIONS FOR END OF OPERATIONAL LIFE
DISPOSAL****INFORMATION TO THE USER**

in compliance with art. 13 of the Italian Legislative Decree dated 25 July 2005, no. 151 "Implementation of Directives 2002/95/EC, 2002/96/EC and 2003/108/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment, as well as waste disposal".

The crossed-out wheeled bin icon on the appliance or its packaging indicates that the product must be disposed of separately from other waste at the end of its operational life.

Separate collection of the appliance at the end of its operational life is organised and managed by the manufacturer. Therefore, for an appropriate disposal, the user must contact the manufacturer and observe its separate collection management adopted for this appliance at the end of its operational life.

Separating this product for subsequent recycling, treatment and environmental-friendly disposal will help prevent potential environmental and health risks, and allow the materials which make up the appliance to be re-used and/or recycled.

Specific administrative sanctions provided for by current regulations will be applied for illicit disposal of the product by the user.

