 


Nobis

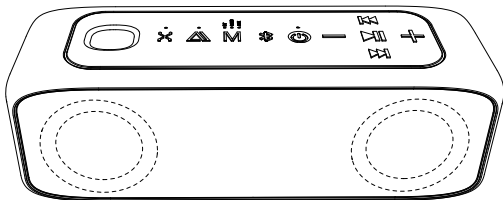

NOBIS SOUND N1
Wireless Speaker
User Manual
Model No. : N6311

Packing List



NOBIS SOUND N1 * 1



USB-C Charging Cable * 1



3.5mm line-in audio cable * 1

 


Lanyard * 1




User Manual * 1

At a Glance

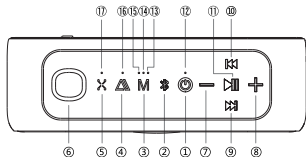

- | | |
|-----------------------|--------------------|
| ① Power Key | ⑦ Volume Down Key |
| ② Bluetooth Pair Keys | ⑧ Volume Up Key |
| ③ Music Mode Key | ⑨ Fast-Forward Key |
| ④ AI Key | ⑩ Fast-Rewind Key |
| ⑤ Beat Mode Key | ⑪ Play/Pause Key |
| ⑥ Beat Touch Key | ⑫ Power LED |

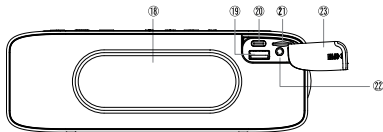 

Note: The rubber flap must be closed to maintain the speaker's waterproof performance.

- | | |
|--------------------|-------------------------|
| ⑬ AUX Mode LED | ⑲ USB-A Power Bank Port |
| ⑭ Card Mode LED | ⑳ Type-C Charging Port |
| ⑮ BT Mode LED | ㉑ MicroSD Card Port |
| ⑯ AI LED | ㉒ AUX Audio Line-in |
| ⑰ Beat LED | ㉓ Rubber Flap |
| ⑱ Passive Radiator | |


Specifications

• Speaker Output Power	10W*2 RMS
• Audio Output Mode	2.1 Stereo
• Frequency Response	90Hz-20KHz
• Signal-to-Noise Ratio	>90dB
• Battery	Lithium Battery 19.24Wh
• Battery Charging Time	Approx. 2.5hours (5V/2.5A)
• Music Play Time	Up to 24 hours (may vary depending on volume and audio content)
• Bluetooth Version	6.0
• Wireless Range	20 meters
• Waterproof & Dustproof	IP68
• Dimensions (W*H*D)	196 x 61.8 x 66.1mm
• Weight	530g

Specifications are subject to change without notice.


Speaker User Instructions

 1. Power On/Off




Note :
If there is no audio playback or the volume is set to 0, and no button is pressed during this time, the speaker will automatically power off after 2 hours of inactivity.

 2. Charging the Speaker

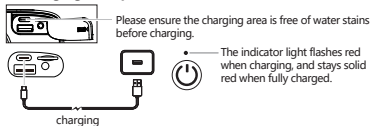

 3. Power Bank Function

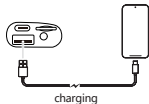

Note :

The power bank function is only available when the speaker is on and working properly. The power bank function will not work when the speaker is turned off.

4. Bluetooth Pairing

 


- ① Short press the Bluetooth button, and a prompt "Pairing" will sound, entering Bluetooth pairing mode. The BT indicator light will flash green rapidly.
- ② On the phone, go to Settings - Bluetooth - enable Bluetooth, search for "NOBIS SOUND N1", and tap to connect. Once connected successfully, a prompt "Connected" will sound, and the BT indicator light will stay solid green.

Note :

- This speaker can save up to 6 paired devices in its list. It will automatically connect to the nearest paired device when turned on. If you need to pair a new device, follow the above steps.
- The speaker can only connect to one device at a time.
- To clear the paired device list, press and hold both the Volume Up and Volume Down buttons for 2 seconds. Once completed, the speaker will re-enter pairing mode.

5. TWS Mode

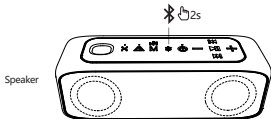

- This speaker supports TWS mode with two devices. In the powered-on state, press and hold the Bluetooth button on both speakers for 2 seconds to enter TWS pairing mode. You will hear a prompt sound "TWS Pairing". After successful pairing, you will hear "TWS Connected" to indicate the TWS mode is successfully paired. After connecting via Bluetooth on your phone or other devices, you can form true wireless stereo sound.
- To exit TWS mode, press and hold the Bluetooth button for 2 seconds while both speakers are connected.

Note :

- After successfully pairing in TWS mode, the next time you use it after powering off, to ensure the correct left and right channels, first power on the speaker placed on the left side. After Bluetooth connects to the phone, the left speaker will become the master, then power on the right speaker to ensure correct channel positioning.
- In TWS mode, the beat mode will be disabled.

6. About the NOBIS GO App

Download the NOBIS GO App for an enhanced product experience.

- View product information.
- Display battery status.
- Remotely control volume and play/pause.
- Remotely control the beat tapping.
- Customize beat mode sound effects.
- Customize EQ settings.
- Set auto power-off time.



You can get the app by scanning the QR code, or by searching "NOBIS GO" in the Google Play Store or Apple App Store.

7. Music Mode

Short press the music mode button to cycle through Bluetooth Mode - MicroSD Card Mode - AUX Mode, with corresponding voice prompts: "Bluetooth Mode" - "MicroSD Card Mode" - "AUX Mode".

 
Note :

- In memory card and AUX modes, Bluetooth will automatically disconnect.
- When switching to MicroSD Card mode without a card inserted, the prompt "Please insert the MicroSD Card" will be played.
- When switching to AUX mode without the AUX cable inserted, the prompt "Please insert the Audio Line-in cable" will be played.

In Bluetooth mode, the indicator light will show the BT symbol.



In memory card mode, the indicator light will show the CARD symbol.

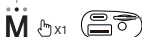

Insert a MicroSD card with audio files into the slot on the back of the speaker, and switch to that mode to start playing audio. MP3, WAV, FLAC, and M4A audio formats are supported.

Note : To ensure the memory card is recognized, format it to FAT, FAT32, or exFAT format.

In AUX mode, the indicator light will show the AUX symbol.



Insert one end of the AUX cable into the 3.5mm headphone jack on the back of the speaker and connect the other end to a device with a 3.5mm headphone jack, such as a phone, computer, or music player.

8. Control

Button	Operation	Function
	 X1	Previous track
	 X1	Next track
	 X1  Press and hold	Tapping Sound Volume + Music Volume +
	 X1  Press and hold	Tapping Sound Volume - Music Volume -
	 X1	Music Play/Pause

Note :

- The button operations for Bluetooth and MicroSD Card modes are as shown above.
- In AUX mode, only volume up and down operations are supported.
- The tapping sound volume can only be adjusted when the device is powered on.

9. Incoming Call Mode

▶▶	 X1	Answer/End Call
	 1s	Reject Call
	 X2	Multi-Call/Switching

When the speaker is connected to the phone via Bluetooth and there's an incoming call, the speaker will sound a prompt "Master, Someone is calling you". Short press the play button to answer/end the call hands-free; long press the play button for 1 second to reject the call.

 
Multi-Party Call

When another call comes in during an ongoing call, you can do the following to answer/end/reject/switch calls:

- Short press the play button to answer the new call hands-free and keep the previous call on hold; press the play button again to end the current call and return to the previous one.
- Long press the play button for 1 second to reject the current incoming call and return to the previous one.
- After answering the new call hands-free with a short press, double-press the play button to freely switch between the two calls.

10. Beat Function

The indicator light has 5 colors corresponding to 5 sound effects, and turns off when the beat mode is turned off.

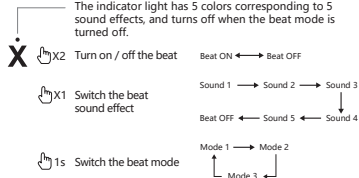

 Touch After enabling the beat function, touch this button to play the beat sound.

Beat function on/off and beat sound switching.

- Double-click the beat button **X** to turn the beat function on or off.
- By continuously pressing the beat button **X**, you can switch between different beat sounds or turn off the beat function.
- When the beat function is on, touch the beat touch key **O** to play the corresponding sound.
- When music is playing, the beat sound will blend with the music. When no music is playing, the beat sound will play on its own.
- Download the Nobis GO app to add more percussion sounds.

Beat mode switch

- When the beat function is on, press and hold the beat button **X** for 1 second to switch between different beat modes.
- Different beat modes include common music beats such as 2/4, 3/4, 4/4, 3/8, 6/8, etc.


Recommended beat modes are as follows :

Mode No.	Music Beat	Music style
Beat Mode 1	4/4	Latin, Jazz, Hip-hop, Blues, Rock, Pop, Funk, Country, R&B
Beat Mode 2	3/4, 3/8, 6/8, 9/8, 12/8	Waltz, Polka, Mazurka, Minuet, Classical, Jazz (some styles)
Beat Mode 3	2/4	Hip-hop, Electronic Dance Music, Techno, House, Pop, Rock and Roll, Tango, March

Note :

- The above music beats are only suggestions.
- Feel free to experiment and find the mode that best suits your music.
- The beat mode is designed to work with most common music beats, but it may not cover all beats.
- Beat volume can be controlled with the volume buttons.

11. Wake up the phone's AI assistant

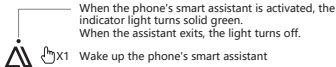

- When connected to the phone via Bluetooth, short press the AI button and a prompt will sound, indicating the smart assistant has been activated. If Bluetooth is not connected, pressing the button will result in no response.
- iPhones will activate Siri, while Android or HarmonyOS phones will trigger the built-in smart assistant.
- During a voice interaction, if the phone is in paused recording state, short press the AI button again to continue the conversation via voice input.

 
12. Factory Reset

Factory reset clears connected devices and other settings from your speaker and returns it to the original factory setting.

- Press and hold down the beat button for 8 seconds.
- Make sure the speakers is powered on.
- Once the reset is complete, you'll hear "Pairing" from the speaker.

13. IP68 Waterproof and Dustproof

Perfect for taking to the lake, the beach, listening by the pool, listening in the shower.

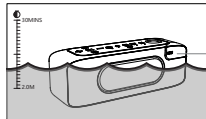

The rubber flap needs to be closed to keep the speaker waterproof and dustproof.

Important Safety Precaution: When the speaker is plugged into a charging source with the USB-C charging cable, never use the speaker in the shower, bath, or near water to prevent risk of electric shock.

IMPORTANT SAFETY INSTRUCTIONS

1. Please read and keep these instructions.
2. Heed all warnings and follow all instructions.
3. Do not charge the speaker when wet. Make sure the connector port is fully dried out before charging.
4. To prevent damage, keep the speaker away from all heat sources, including naked flames like candles, and devices such as radiators, stoves, and amplifiers.
5. Refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way.
6. Do not make alterations to this speaker.
7. The battery in the speaker is not replaceable. Do not attempt to change it.
8. Use this speaker only with an agency approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) in accordance with the manufacturer's specifications.
9. Do not expose this speaker to excessive heat (e.g. from storage in direct sunlight, fire or the like) .
10. If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.



SVVR LIMITED hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The complete declaration of conformity can be found at: www.nobisound.com



This product complies with the radio interference requirements of the United Kingdom. SVVR LIMITED hereby declares that this product is in compliance with the essential requirements per Radio Equipment Regulations 2017. The complete declaration of conformity can be found at: www.nobisound.com

RF WARNING Statement

The device has been evaluated to meet RF exposure requirements.
The device can be used in portable exposure conditions without restriction.

This product is RoHS compliant.

This product is in compliance with Directive 2011/65/EU and UK The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, and its amendments, on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

REACH

REACH (Regulation No 1907/2006) addresses the production and use of chemical substances and their potential impacts on human health and the environment. Article 33(1) of REACH Regulation requires suppliers to inform the recipients if an article contains more than 0.1 % (per weight per article) of any substance(s) on the Substances of Very High Concern (SVHC) Candidate List (REACH candidate list). This product contains the substance "lead" (CAS-No. 7439-92-1) in a concentration of more than 0.1% per weight. At the time of release of this product, except for the lead substance, no other substances of REACH candidate list are contained in a concentration of more than 0.1% per weight in this product.

Note: On June 27, 2018, lead was added to the REACH candidate list. The inclusion of lead in the REACH candidate list does not mean that lead-containing materials pose an immediate risk or results in a restriction of permissibility of its use.

For Products That Include Batteries

Instructions for Users on Removal, Recycling and Disposal of Used Batteries

To remove the batteries from your equipment or remote control, reverse the procedure described in the owner's manual for inserting batteries. For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers. In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste-management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

Correct disposal of this product (Waste Electrical & Electronic Equipment)



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop



WARNING: Danger of explosion if battery is incorrectly replaced. To reduce risk of fire, explosion or leakage of flammable liquid/gas, don't disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), sunshine or like, expose to extremely low air pressure or dispose of in fire or water. Replace only with specified batteries. The symbol indicating 'separate collection' for all batteries and accumulators shall be the crossed-out wheeled bin.

CAUTION FCC FOR USERS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device must not cause harmful interference, and (2) The device must accept any interference received, including interference that may result in unintended operation.

FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY

SVVR LIMITED hereby declares that this equipment is in compliance with the FCC Part 15 Subpart B.

The complete declaration of conformity can be found at: www.nobisound.com

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Caution:

RSS-Gen Issue 3 December 2010" & "CNR-Gen 3e édition Décembre 2010:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

le dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.

l'appareil peut être utilisé dans des conditions d'exposition portatif sans restriction.

Customer Service

For FAQs and more information:

Please send an email to: service@nobisound.com

www.nobisound.com

 
nobis



www.nobisound.com



service@nobisound.com

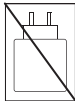

Made In China